GE Fanuc Automation

Computer Numerical Control Products

Series 21i / 210i—MB for Machining Center

Operator's Manual

GFZ-63614EN/01 *July 2001*

Warnings, Cautions, and Notes as Used in this Publication

Warning

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.

Caution

Caution notices are used where equipment might be damaged if care is not taken.

Note

Notes merely call attention to information that is especially significant to understanding and operating the equipment.

This document is based on information available at the time of its publication. While efforts have been made to be accurate, the information contained herein does not purport to cover all details or variations in hardware or software, nor to provide for every possible contingency in connection with installation, operation, or maintenance. Features may be described herein which are not present in all hardware and software systems. GE Fanuc Automation assumes no obligation of notice to holders of this document with respect to changes subsequently made.

GE Fanuc Automation makes no representation or warranty, expressed, implied, or statutory with respect to, and assumes no responsibility for the accuracy, completeness, sufficiency, or usefulness of the information contained herein. No warranties of merchantability or fitness for purpose shall apply.

©Copyright 2001 GE Fanuc Automation North America, Inc.
All Rights Reserved.

SAFETY PRECAUTIONS

This section describes the safety precautions related to the use of CNC units. It is essential that these precautions be observed by users to ensure the safe operation of machines equipped with a CNC unit (all descriptions in this section assume this configuration). Note that some precautions are related only to specific functions, and thus may not be applicable to certain CNC units.
Users must also observe the safety precautions related to the machine, as described in the relevant manual supplied by the machine tool builder. Before attempting to operate the machine or create a program to control the operation of the machine, the operator must become fully familiar with the contents of this manual and relevant manual supplied by the machine tool builder.

Contents

1. DEFINITION OF WARNING, CAUTION, AND NOTE s–2

2. GENERAL WARNINGS AND CAUTIONS s–3

3. WARNINGS AND CAUTIONS RELATED TO PROGRAMMING s–5

4. WARNINGS AND CAUTIONS RELATED TO HANDLING s–7

5. WARNINGS RELATED TO DAILY MAINTENANCE s–9

1 DEFINITION OF WARNING, CAUTION, AND NOTE

This manual includes safety precautions for protecting the user and preventing damage to the machine. Precautions are classified into Warning and Caution according to their bearing on safety. Also, supplementary information is described as a Note. Read the Warning, Caution, and Note thoroughly before attempting to use the machine.

WARNING

Applied when there is a danger of the user being injured or when there is a danger of both the user being injured and the equipment being damaged if the approved procedure is not observed.

CAUTION

Applied when there is a danger of the equipment being damaged, if the approved procedure is not observed.

NOTE

The Note is used to indicate supplementary information other than Warning and Caution.

❍ **Read this manual carefully, and store it in a safe place.**

2 GENERAL WARNINGS AND CAUTIONS

WARNING

1. Never attempt to machine a workpiece without first checking the operation of the machine. Before starting a production run, ensure that the machine is operating correctly by performing a trial run using, for example, the single block, feedrate override, or machine lock function or by operating the machine with neither a tool nor workpiece mounted. Failure to confirm the correct operation of the machine may result in the machine behaving unexpectedly, possibly causing damage to the workpiece and/or machine itself, or injury to the user.

2. Before operating the machine, thoroughly check the entered data.
   Operating the machine with incorrectly specified data may result in the machine behaving unexpectedly, possibly causing damage to the workpiece and/or machine itself, or injury to the user.

3. Ensure that the specified feedrate is appropriate for the intended operation. Generally, for each machine, there is a maximum allowable feedrate. The appropriate feedrate varies with the intended operation. Refer to the manual provided with the machine to determine the maximum allowable feedrate. If a machine is run at other than the correct speed, it may behave unexpectedly, possibly causing damage to the workpiece and/or machine itself, or injury to the user.

4. When using a tool compensation function, thoroughly check the direction and amount of compensation.
   Operating the machine with incorrectly specified data may result in the machine behaving unexpectedly, possibly causing damage to the workpiece and/or machine itself, or injury to the user.

5. The parameters for the CNC and PMC are factory–set. Usually, there is not need to change them. When, however, there is not alternative other than to change a parameter, ensure that you fully understand the function of the parameter before making any change.
   Failure to set a parameter correctly may result in the machine behaving unexpectedly, possibly causing damage to the workpiece and/or machine itself, or injury to the user.

6. Immediately after switching on the power, do not touch any of the keys on the MDI panel until the position display or alarm screen appears on the CNC unit.
   Some of the keys on the MDI panel are dedicated to maintenance or other special operations. Pressing any of these keys may place the CNC unit in other than its normal state. Starting the machine in this state may cause it to behave unexpectedly.

7. The operator’s manual and programming manual supplied with a CNC unit provide an overall description of the machine’s functions, including any optional functions. Note that the optional functions will vary from one machine model to another. Therefore, some functions described in the manuals may not actually be available for a particular model. Check the specification of the machine if in doubt.

WARNING

8. Some functions may have been implemented at the request of the machine–tool builder. When using such functions, refer to the manual supplied by the machine–tool builder for details of their use and any related cautions.

NOTE

Programs, parameters, and macro variables are stored in nonvolatile memory in the CNC unit. Usually, they are retained even if the power is turned off. Such data may be deleted inadvertently, however, or it may prove necessary to delete all data from nonvolatile memory as part of error recovery.
To guard against the occurrence of the above, and assure quick restoration of deleted data, backup all vital data, and keep the backup copy in a safe place.

3 WARNINGS AND CAUTIONS RELATED TO PROGRAMMING

This section covers the major safety precautions related to programming. Before attempting to perform programming, read the supplied operator's manual and programming manual carefully such that you are fully familiar with their contents.

WARNING

1. Coordinate system setting

If a coordinate system is established incorrectly, the machine may behave unexpectedly as a result of the program issuing an otherwise valid move command.
Such an unexpected operation may damage the tool, the machine itself, the workpiece, or cause injury to the user.

2. Positioning by nonlinear interpolation

When performing positioning by nonlinear interpolation (positioning by nonlinear movement between the start and end points), the tool path must be carefully confirmed before performing programming.
Positioning involves rapid traverse. If the tool collides with the workpiece, it may damage the tool, the machine itself, the workpiece, or cause injury to the user.

3. Function involving a rotation axis

When programming polar coordinate interpolation or normal–direction (perpendicular) control, pay careful attention to the speed of the rotation axis. Incorrect programming may result in the rotation axis speed becoming excessively high, such that centrifugal force causes the chuck to lose its grip on the workpiece if the latter is not mounted securely.
Such mishap is likely to damage the tool, the machine itself, the workpiece, or cause injury to the user.

4. Inch/metric conversion

Switching between inch and metric inputs does not convert the measurement units of data such as the workpiece origin offset, parameter, and current position. Before starting the machine, therefore, determine which measurement units are being used. Attempting to perform an operation with invalid data specified may damage the tool, the machine itself, the workpiece, or cause injury to the user.

5. Constant surface speed control

When an axis subject to constant surface speed control approaches the origin of the workpiece coordinate system, the spindle speed may become excessively high. Therefore, it is necessary to specify a maximum allowable speed. Specifying the maximum allowable speed incorrectly may damage the tool, the machine itself, the workpiece, or cause injury to the user.

WARNING

6. Stroke check

After switching on the power, perform a manual reference position return as required. Stroke check is not possible before manual reference position return is performed. Note that when stroke check is disabled, an alarm is not issued even if a stroke limit is exceeded, possibly damaging the tool, the machine itself, the workpiece, or causing injury to the user.

7. Tool post interference check

A tool post interference check is performed based on the tool data specified during automatic operation. If the tool specification does not match the tool actually being used, the interference check cannot be made correctly, possibly damaging the tool or the machine itself, or causing injury to the user.
After switching on the power, or after selecting a tool post manually, always start automatic operation and specify the tool number of the tool to be used.

8. Absolute/incremental mode

If a program created with absolute values is run in incremental mode, or vice versa, the machine may behave unexpectedly.

9. Plane selection

If an incorrect plane is specified for circular interpolation, helical interpolation, or a canned cycle, the machine may behave unexpectedly. Refer to the descriptions of the respective functions for details.

10. Torque limit skip

Before attempting a torque limit skip, apply the torque limit. If a torque limit skip is specified without the torque limit actually being applied, a move command will be executed without performing a skip.

11. Programmable mirror image

Note that programmed operations vary considerably when a programmable mirror image is enabled.

12. Compensation function

If a command based on the machine coordinate system or a reference position return command is issued in compensation function mode, compensation is temporarily canceled, resulting in the unexpected behavior of the machine.
Before issuing any of the above commands, therefore, always cancel compensation function mode.

4 WARNINGS AND CAUTIONS RELATED TO HANDLING

This section presents safety precautions related to the handling of machine tools. Before attempting to operate your machine, read the supplied operator's manual and programming manual carefully, such that you are fully familiar with their contents.

WARNING

1. Manual operation

When operating the machine manually, determine the current position of the tool and workpiece, and ensure that the movement axis, direction, and feedrate have been specified correctly. Incorrect operation of the machine may damage the tool, the machine itself, the workpiece, or cause injury to the operator.

2. Manual reference position return

After switching on the power, perform manual reference position return as required. If the machine is operated without first performing manual reference position return, it may behave unexpectedly. Stroke check is not possible before manual reference position return is performed. An unexpected operation of the machine may damage the tool, the machine itself, the workpiece, or cause injury to the user.

3. Manual numeric command

When issuing a manual numeric command, determine the current position of the tool and workpiece, and ensure that the movement axis, direction, and command have been specified correctly, and that the entered values are valid.
Attempting to operate the machine with an invalid command specified may damage the tool, the machine itself, the workpiece, or cause injury to the operator.

4. Manual handle feed

In manual handle feed, rotating the handle with a large scale factor, such as 100, applied causes the tool and table to move rapidly. Careless handling may damage the tool and/or machine, or cause injury to the user.

5. Disabled override

If override is disabled (according to the specification in a macro variable) during threading, rigid tapping, or other tapping, the speed cannot be predicted, possibly damaging the tool, the machine itself, the workpiece, or causing injury to the operator.

6. Origin/preset operation

Basically, never attempt an origin/preset operation when the machine is operating under the control of a program. Otherwise, the machine may behave unexpectedly, possibly damaging the tool, the machine itself, the tool, or causing injury to the user.

WARNING

7. Workpiece coordinate system shift

Manual intervention, machine lock, or mirror imaging may shift the workpiece coordinate system. Before attempting to operate the machine under the control of a program, confirm the coordinate system carefully.
If the machine is operated under the control of a program without making allowances for any shift in the workpiece coordinate system, the machine may behave unexpectedly, possibly damaging the tool, the machine itself, the workpiece, or causing injury to the operator.

8. Software operator's panel and menu switches

Using the software operator's panel and menu switches, in combination with the MDI panel, it is possible to specify operations not supported by the machine operator's panel, such as mode change, override value change, and jog feed commands.
Note, however, that if the MDI panel keys are operated inadvertently, the machine may behave unexpectedly, possibly damaging the tool, the machine itself, the workpiece, or causing injury to the user.

9. Manual intervention

If manual intervention is performed during programmed operation of the machine, the tool path may vary when the machine is restarted. Before restarting the machine after manual intervention, therefore, confirm the settings of the manual absolute switches, parameters, and absolute/incremental command mode.

10. Feed hold, override, and single block

The feed hold, feedrate override, and single block functions can be disabled using custom macro system variable #3004. Be careful when operating the machine in this case.

11. Dry run

Usually, a dry run is used to confirm the operation of the machine. During a dry run, the machine operates at dry run speed, which differs from the corresponding programmed feedrate. Note that the dry run speed may sometimes be higher than the programmed feed rate.

12. Cutter and tool nose radius compensation in MDI mode

Pay careful attention to a tool path specified by a command in MDI mode, because cutter or tool nose radius compensation is not applied. When a command is entered from the MDI to interrupt in automatic operation in cutter or tool nose radius compensation mode, pay particular attention to the tool path when automatic operation is subsequently resumed. Refer to the descriptions of the corresponding functions for details.

13. Program editing

If the machine is stopped, after which the machining program is edited (modification, insertion, or deletion), the machine may behave unexpectedly if machining is resumed under the control of that program. Basically, do not modify, insert, or delete commands from a machining program while it is in use.

5 WARNINGS RELATED TO DAILY MAINTENANCE

WARNING

1. Memory backup battery replacement

Only those personnel who have received approved safety and maintenance training may perform this work.
When replacing the batteries, be careful not to touch the high–voltage circuits (marked ⚠ and fitted with an insulating cover).
Touching the uncovered high–voltage circuits presents an extremely dangerous electric shock hazard.

NOTE

The CNC uses batteries to preserve the contents of its memory, because it must retain data such as programs, offsets, and parameters even while external power is not applied.
If the battery voltage drops, a low battery voltage alarm is displayed on the machine operator's panel or screen.
When a low battery voltage alarm is displayed, replace the batteries within a week. Otherwise, the contents of the CNC's memory will be lost.
Refer to the maintenance section of the operator's manual or programming manual for details of the battery replacement procedure.

WARNING

2. Absolute pulse coder battery replacement

Only those personnel who have received approved safety and maintenance training may perform this work.
When replacing the batteries, be careful not to touch the high–voltage circuits (marked ⚠ and fitted with an insulating cover).
Touching the uncovered high–voltage circuits presents an extremely dangerous electric shock hazard.

NOTE

The absolute pulse coder uses batteries to preserve its absolute position.
If the battery voltage drops, a low battery voltage alarm is displayed on the machine operator's panel or screen.
When a low battery voltage alarm is displayed, replace the batteries within a week. Otherwise, the absolute position data held by the pulse coder will be lost.
Refer to the FANUC SERVO MOTOR α series for details of the battery replacement procedure.

WARNING

3. Fuse replacement

Before replacing a blown fuse, however, it is necessary to locate and remove the cause of the blown fuse.
For this reason, only those personnel who have received approved safety and maintenance training may perform this work.
When replacing a fuse with the cabinet open, be careful not to touch the high–voltage circuits (marked ⚠ and fitted with an insulating cover).
Touching an uncovered high–voltage circuit presents an extremely dangerous electric shock hazard.

Table of Contents

SAFETY PRECAUTIONS **s–1**

I. GENERAL

1. GENERAL **3**

1.1 GENERAL FLOW OF OPERATION OF CNC MACHINE TOOL 6
1.2 CAUTIONS ON READING THIS MANUAL 8
1.3 CAUTIONS ON VARIOUS KINDS OF DATA 8

II. PROGRAMMING

1. GENERAL **11**

1.1 TOOL MOVEMENT ALONG WORKPIECE PARTS FIGURE–INTERPOLATION 12
1.2 FEED–FEED FUNCTION 14
1.3 PART DRAWING AND TOOL MOVEMENT 15
1.3.1 Reference Position (Machine–Specific Position) 15
1.3.2 Coordinate System on Part Drawing and Coordinate System Specified by CNC – Coordinate System 16
1.3.3 How to Indicate Command Dimensions for Moving the Tool – Absolute, Incremental Commands 19
1.4 CUTTING SPEED – SPINDLE SPEED FUNCTION 20
1.5 SELECTION OF TOOL USED FOR VARIOUS MACHINING – TOOL FUNCTION 21
1.6 COMMAND FOR MACHINE OPERATIONS – MISCELLANEOUS FUNCTION 22
1.7 PROGRAM CONFIGURATION 23
1.8 TOOL FIGURE AND TOOL MOTION BY PROGRAM 26
1.9 TOOL MOVEMENT RANGE – STROKE 27

2. CONTROLLED AXES **28**

2.1 CONTROLLED AXES 29
2.2 AXIS NAME 29
2.3 INCREMENT SYSTEM 30
2.4 MAXIMUM STROKE 30

3. PREPARATORY FUNCTION (G FUNCTION) **31**

4. INTERPOLATION FUNCTIONS **36**

4.1 POSITIONING (G00) 37
4.2 SINGLE DIRECTION POSITIONING (G60) 39
4.3 LINEAR INTERPOLATION (G01) 41
4.4 CIRCULAR INTERPOLATION (G02,G03) 43
4.5 HELICAL INTERPOLATION (G02,G03) 47
4.6 CYLINDRICAL INTERPOLATION (G07.1) 48
4.7 THREAD CUTTING (G33) 51
4.8 SKIP FUNCTION (G31) 53
4.9 HIGH SPEED SKIP SIGNAL (G31) 55

5. FEED FUNCTIONS 56
5.1 GENERAL 57
5.2 RAPID TRAVERSE 59
5.3 CUTTING FEED 60
5.4 CUTTING FEEDRATE CONTROL 63
5.4.1 Exact Stop (G09, G61) Cutting Mode (G64) Tapping Mode (G63) 64
5.4.2 Automatic Corner Override 65
5.4.2.1 Automatic Override for Inner Corners (G62) 65
5.4.2.2 Internal Circular Cutting Feedrate Change 68
5.5 DWELL (G04) 69

6. REFERENCE POSITION 70
6.1 REFERENCE POSITION RETURN 71

7. COORDINATE SYSTEM 76
7.1 MACHINE COORDINATE SYSTEM 77
7.2 WORKPIECE COORDINATE SYSTEM 78
7.2.1 Setting a Workpiece Coordinate System 78
7.2.2 Selecting a Workpiece Coordinate System 79
7.2.3 Changing Workpiece Coordinate System 80
7.2.4 Workpiece coordinate system preset (G92.1) 83
7.2.5 Adding Workpiece Coordinate Systems (G54.1 or G54) 85
7.3 LOCAL COORDINATE SYSTEM 87
7.4 PLANE SELECTION 89

8. COORDINATE VALUE AND DIMENSION 90
8.1 ABSOLUTE AND INCREMENTAL PROGRAMMING (G90, G91) 91
8.2 POLAR COORDINATE COMMAND (G15, G16) 92
8.3 INCH/METRIC CONVERSION (G20,G21) 95
8.4 DECIMAL POINT PROGRAMMING 96

9. SPINDLE SPEED FUNCTION (S FUNCTION) 97
9.1 SPECIFYING THE SPINDLE SPEED WITH A CODE 98
9.2 SPECIFYING THE SPINDLE SPEED VALUE DIRECTLY (S5–DIGIT COMMAND) 98
9.3 CONSTANT SURFACE SPEED CONTROL (G96, G97) 99

10.TOOL FUNCTION (T FUNCTION) 102
10.1 TOOL SELECTION FUNCTION 103
10.2 TOOL LIFE MANAGEMENT FUNCTION 104
10.2.1 Tool Life Management Data 105
10.2.2 Register, Change and Delete of Tool Life Management Data 106
10.2.3 Tool Life Management Command in a Machining Program 109
10.2.4 Tool Life 112

11.AUXILIARY FUNCTION 113
11.1 AUXILIARY FUNCTION (M FUNCTION) 114
11.2 MULTIPLE M COMMANDS IN A SINGLE BLOCK 115

11.3 THE SECOND AUXILIARY FUNCTIONS (B CODES) 116

12.PROGRAM CONFIGURATION 117

12.1 PROGRAM COMPONENTS OTHER THAN PROGRAM SECTIONS 119
12.2 PROGRAM SECTION CONFIGURATION 122
12.3 SUBPROGRAM (M98, M99) 128

13.FUNCTIONS TO SIMPLIFY PROGRAMMING 132

13.1 CANNED CYCLE 133
13.1.1 High–speed Peck Drilling Cycle (G73) 137
13.1.2 Left–handed Tapping Cycle (G74) 139
13.1.3 Fine Boring Cycle (G76) 141
13.1.4 Drilling Cycle, Spot Drilling (G81) 143
13.1.5 Drilling Cycle Counter Boring Cycle (G82) 145
13.1.6 Peck Drilling Cycle (G83) 147
13.1.7 Small–hole peck drilling cycle (G83) 149
13.1.8 Tapping Cycle (G84) 153
13.1.9 Boring Cycle (G85) 155
13.1.10 Boring Cycle (G86) 157
13.1.11 Back Boring Cycle (G87) 159
13.1.12 Boring Cycle (G88) 161
13.1.13 Boring Cycle (G89) 163
13.1.14 Canned Cycle Cancel (G80) 165
13.2 RIGID TAPPING 168
13.2.1 Rigid Tapping (G84) 169
13.2.2 Left–handed Rigid Tapping Cycle (G74) 172
13.2.3 Peck Rigid Tapping Cycle (G84 or G74) 175
13.2.4 Canned Cycle Cancel (G80) 177
13.3 OPTIONAL ANGLE CHAMFERING AND CORNER ROUNDING 178
13.4 EXTERNAL MOTION FUNCTION (G81) 181
13.5 INDEX TABLE INDEXING FUNCTION 182

14.COMPENSATION FUNCTION 185

14.1 TOOL LENGTH OFFSET (G43,G44,G49) 186
14.1.1 General 186
14.1.2 G53, G28, G30, and G30.1 Commands in Tool Length Offset Mode 191
14.2 AUTOMATIC TOOL LENGTH MEASUREMENT (G37) 194
14.3 TOOL OFFSET (G45–G48) 198
14.4 OVERVIEW OF CUTTER COMPENSATION C (G40 – G42) 203
14.5 DETAILS OF CUTTER COMPENSATION C 209
14.5.1 General 209
14.5.2 Tool Movement in Start–up 210
14.5.3 Tool Movement in Offset Mode 214
14.5.4 Tool Movement in Offset Mode Cancel 228
14.5.5 Interference Check 234
14.5.6 Overcutting by Cutter Compensation 239
14.5.7 Input Command from MDI 242
14.5.8 G53,G28,G30,G30.1 and G29 Commands in Cutter Compensation C Mode 243
14.5.9 Corner Circular Interpolation (G39) 262
14.6 TOOL COMPENSA–TION VALUES, NUMBER OF COMPENSATION VALUES, AND ENTERING VALUES FROM THE PROGRAM (G10) 264

14.7 SCALING (G50,G51) 266
14.8 COORDINATE SYSTEM ROTATION (G68, G69) 271
14.9 NORMAL DIRECTION CONTROL (G40.1, G41.1, G42.1 OR G150, G151, G152) 277
14.10 PROGRAMMABLE MIRROR IMAGE (G50.1, G51.1) 282

15.CUSTOM MACRO 284
15.1 VARIABLES 285
15.2 SYSTEM VARIABLES 289
15.3 ARITHMETIC AND LOGIC OPERATION 298
15.4 MACRO STATEMENTS AND NC STATEMENTS 303
15.5 BRANCH AND REPETITION 304
15.5.1 Unconditional Branch (GOTO Statement) 304
15.5.2 Conditional Branch (IF Statement) 305
15.5.3 Repetition (While Statement) 306
15.6 MACRO CALL 309
15.6.1 Simple Call (G65) 310
15.6.2 Modal Call (G66) 314
15.6.3 Macro Call Using G Code 316
15.6.4 Macro Call Using an M Code 317
15.6.5 Subprogram Call Using an M Code 318
15.6.6 Subprogram Calls Using a T Code 319
15.6.7 Sample Program 320
15.7 PROCESSING MACRO STATEMENTS 322
15.7.1 Details of NC statements and macro statements execution 322
15.7.2 Caution for using system variables 324
15.8 REGISTERING CUSTOM MACRO PROGRAMS 327
15.9 LIMITATIONS 328
15.10 EXTERNAL OUTPUT COMMANDS 329
15.11 INTERRUPTION TYPE CUSTOM MACRO 333
15.11.1 Specification Method 334
15.11.2 Details of Functions 335

16.PATTERN DATA INPUT FUNCTION 343
16.1 DISPLAYING THE PATTERN MENU 344
16.2 PATTERN DATA DISPLAY 348
16.3 CHARACTERS AND CODES TO BE USED FOR THE PATTERN DATA INPUT FUNCTION 352

17.PROGRAMMABLE PARAMETER ENTRY (G10) 354

18.MEMORY OPERATION USING FS10/11 TAPE FORMAT 356

19.HIGH SPEED CUTTING FUNCTIONS 357
19.1 FEEDRATE CLAMPING BY ARC RADIUS 358
19.2 ADVANCED PREVIEW CONTROL (G08) 359
19.3 HIGH–SPEED REMOTE BUFFER 361
19.3.1 High–speed remote buffer A (G05) 361
19.3.2 High–speed remote buffer B (G05) 364

19.4 AI ADVANCED PREVIEW CONTROL 365

20.AXIS CONTROL FUNCTIONS 381

20.1 SIMPLE SYNCHRONOUS CONTROL 382
20.2 ROTARY AXIS ROLL–OVER 385

III. OPERATION

1. GENERAL 389

1.1 MANUAL OPERATION 390
1.2 TOOL MOVEMENT BY PROGRAMMING– AUTOMATIC OPERATION 392
1.3 AUTOMATIC OPERATION 393
1.4 TESTING A PROGRAM 395
1.4.1 Check by Running the Machine 395
1.4.2 How to View the Position Display Change without Running the Machine 396
1.5 EDITING A PART PROGRAM 397
1.6 DISPLAYING AND SETTING DATA 398
1.7 DISPLAY 401
1.7.1 Program Display 401
1.7.2 Current Position Display 402
1.7.3 Alarm Display 402
1.7.4 Parts Count Display, Run Time Display 403
1.7.5 Graphic Display 403
1.8 DATA INPUT / OUTPUT 404

2. OPERATIONAL DEVICES 405

2.1 SETTING AND DISPLAY UNITS 406
2.1.1 7.2″/8.4″ LCD–Mounted Type CNC Control Unit 407
2.1.2 9.5″/10.4″ LCD–Mounted Type CNC Control Unit 407
2.1.3 Stand–Alone Type Small MDI Unit 408
2.1.4 Stand–Alone Type Standard MDI Unit 409
2.1.5 Stand–Alone Type 61 Full–Key MDI Unit 410
2.2 EXPLANATION OF THE KEYBOARD 411
2.3 FUNCTION KEYS AND SOFT KEYS 413
2.3.1 General Screen Operations 413
2.3.2 Function Keys 414
2.3.3 Soft Keys 415
2.3.4 Key Input and Input Buffer 431
2.3.5 Warning Messages 432
2.3.6 Soft Key Configuration 433
2.4 EXTERNAL I/O DEVICES 434
2.4.1 FANUC Handy File 436
2.4.2 FANUC Floppy Cassette 436
2.4.3 FANUC FA Card 437
2.4.4 FANUC PPR 437
2.4.5 Portable Tape Reader 438
2.5 POWER ON/OFF 439
2.5.1 Turning on the Power 439
2.5.2 Screen Displayed at Power–on 440
2.5.3 Power Disconnection 441

3. MANUAL OPERATION 442
3.1 MANUAL REFERENCE POSITION RETURN 443
3.2 JOG FEED 445
3.3 INCREMENTAL FEED 447
3.4 MANUAL HANDLE FEED 448
3.5 MANUAL ABSOLUTE ON AND OFF 451
3.6 MANUAL LINEAR/CIRCULAR INTERPOLATION 456

4. AUTOMATIC OPERATION 461
4.1 MEMORY OPERATION 462
4.2 MDI OPERATION 465
4.3 DNC OPERATION 469
4.4 PROGRAM RESTART 472
4.5 SCHEDULING FUNCTION 479
4.6 SUBPROGRAM CALL FUNCTION (M198) 484
4.7 MANUAL HANDLE INTERRUPTION 486
4.8 MIRROR IMAGE 489
4.9 MANUAL INTERVENTION AND RETURN 491
4.10 DNC OPERATION WITH MEMORY CARD 493
4.10.1 Specification 493
4.10.2 Operations 494
4.10.2.1 DNC operation 494
4.10.2.2 Subprogram call (M198) 495
4.10.3 LIMITATION and NOTES 496
4.10.4 PARAMETER 496
4.10.5 Connecting PCMCIA Card Attachment 497
4.10.5.1 Specification number 497
4.10.5.2 Assembling 497
4.10.6 Recommended Memory Card 499

5. TEST OPERATION 500
5.1 MACHINE LOCK AND AUXILIARY FUNCTION LOCK 501
5.2 FEEDRATE OVERRIDE 503
5.3 RAPID TRAVERSE OVERRIDE 504
5.4 DRY RUN 505
5.5 SINGLE BLOCK 506

6. SAFETY FUNCTIONS 508
6.1 EMERGENCY STOP 509
6.2 OVERTRAVEL 510
6.3 STORED STROKE CHECK 511

7. ALARM AND SELF–DIAGNOSIS FUNCTIONS 515
7.1 ALARM DISPLAY 516
7.2 ALARM HISTORY DISPLAY 518
7.3 CHECKING BY SELF–DIAGNOSTIC SCREEN 519

8. DATA INPUT/OUTPUT 522

8.1 FILES 523
8.2 FILE SEARCH 525
8.3 FILE DELETION 527
8.4 PROGRAM INPUT/OUTPUT 528
8.4.1 Inputting a Program 528
8.4.2 Outputting a Program 531
8.5 OFFSET DATA INPUT AND OUTPUT 533
8.5.1 Inputting Offset Data 533
8.5.2 Outputting Offset Data 534
8.6 INPUTTING AND OUTPUTTING PARAMETERS AND PITCH ERROR COMPENSATION DATA 535
8.6.1 Inputting Parameters 535
8.6.2 Outputting Parameters 536
8.6.3 Inputting Pitch Error Compensation Data 537
8.6.4 Outputting Pitch Error Compensation Data 538
8.7 INPUTTING/OUTPUTTING CUSTOM MACRO COMMON VARIABLES 539
8.7.1 Inputting Custom Macro Common Variables 539
8.7.2 Outputting Custom Macro Common Variable 540
8.8 DISPLAYING DIRECTORY OF FLOPPY CASSETTE 541
8.8.1 Displaying the Directory 542
8.8.2 Reading Files 545
8.8.3 Outputting Programs 546
8.8.4 Deleting Files 547
8.9 OUTPUTTING A PROGRAM LIST FOR A SPECIFIED GROUP 549
8.10 DATA INPUT/OUTPUT ON THE ALL IO SCREEN 550
8.10.1 Setting Input/Output–Related Parameters 551
8.10.2 Inputting and Outputting Programs 552
8.10.3 Inputting and Outputting Parameters 557
8.10.4 Inputting and Outputting Offset Data 559
8.10.5 Outputting Custom Macro Common Variables 561
8.10.6 Inputting and Outputting Floppy Files 562
8.10.7 Memory Card Input/Output 567
8.11 DATA INPUT/OUTPUT USING A MEMORY CARD 576

9. EDITING PROGRAMS 588

9.1 INSERTING, ALTERING AND DELETING A WORD 589
9.1.1 Word Search 590
9.1.2 Heading a Program 592
9.1.3 Inserting a Word 593
9.1.4 Altering a Word 594
9.1.5 Deleting a Word 595
9.2 DELETING BLOCKS 596
9.2.1 Deleting a Block 596
9.2.2 Deleting Multiple Blocks 597
9.3 PROGRAM NUMBER SEARCH 598
9.4 SEQUENCE NUMBER SEARCH 599
9.5 DELETING PROGRAMS 601
9.5.1 Deleting One Program 601
9.5.2 Deleting All Programs 601
9.5.3 Deleting More Than One Program by Specifying a Range 602

9.6 EXTENDED PART PROGRAM EDITING FUNCTION 603
9.6.1 Copying an Entire Program 604
9.6.2 Copying Part of a Program 605
9.6.3 Moving Part of a Program 606
9.6.4 Merging a Program 607
9.6.5 Supplementary Explanation for Copying, Moving and Merging 608
9.6.6 Replacement of Words and Addresses 610
9.7 EDITING OF CUSTOM MACROS 612
9.8 BACKGROUND EDITING 613
9.9 PASSWORD FUNCTION 614

10. CREATING PROGRAMS 616
10.1 CREATING PROGRAMS USING THE MDI PANEL 617
10.2 AUTOMATIC INSERTION OF SEQUENCE NUMBERS 618
10.3 CREATING PROGRAMS IN TEACH IN MODE (PLAYBACK) 620

11. SETTING AND DISPLAYING DATA 623
11.1 SCREENS DISPLAYED BY FUNCTION KEY [POS] 630
11.1.1 Position Display in the Work Coordinate System 631
11.1.2 Position Display in the Relative Coordinate System 632
11.1.3 Overall Position Display 634
11.1.4 Presetting the Workpiece Coordinate System 635
11.1.5 Actual Feedrate Display 636
11.1.6 Display of Run Time and Parts Count 638
11.1.7 Operating Monitor Display 639
11.2 SCREENS DISPLAYED BY FUNCTION KEY [PROG] (IN MEMORY MODE OR MDI MODE) 641
11.2.1 Program Contents Display 642
11.2.2 Current Block Display Screen 643
11.2.3 Next Block Display Screen 644
11.2.4 Program Check Screen 645
11.2.5 Program Screen for MDI Operation 647
11.3 SCREENS DISPLAYED BY FUNCTION KEY [PROG] (IN THE EDIT MODE) 648
11.3.1 Displaying Memory Used and a List of Programs 648
11.3.2 Displaying a Program List for a Specified Group 652
11.4 SCREENS DISPLAYED BY FUNCTION KEY [OFFSET SETTING] 655
11.4.1 Setting and Displaying the Tool Offset Value 656
11.4.2 Tool Length Measurement 659
11.4.3 Displaying and Entering Setting Data 661
11.4.4 Sequence Number Comparison and Stop 663
11.4.5 Displaying and Setting Run Time, Parts Count, and Time 665
11.4.6 Displaying and Setting the Workpiece Origin Offset Value 667
11.4.7 Direct Input of Measured Workpiece Origin Offsets 668
11.4.8 Displaying and Setting Custom Macro Common Variables 670
11.4.9 Displaying Pattern Data and Pattern Menu 671
11.4.10 Displaying and Setting the Software Operator's Panel 673
11.4.11 Displaying and Setting Tool Life Management Data 675
11.4.12 Displaying and Setting Extended Tool Life Management 678

11.5 SCREENS DISPLAYED BY FUNCTION KEY [SYSTEM] 683
11.5.1 Displaying and Setting Parameters 684
11.5.2 Displaying and Setting Pitch Error Compensation Data 686
11.6 DISPLAYING THE PROGRAM NUMBER, SEQUENCE NUMBER, AND STATUS, AND WARNING MESSAGES FOR DATA SETTING OR INPUT/OUTPUT OPERATION 689
11.6.1 Displaying the Program Number and Sequence Number 689
11.6.2 Displaying the Status and Warning for Data Setting or Input/Output Operation 690
11.7 SCREENS DISPLAYED BY FUNCTION KEY [MESSAGE] 692
11.7.1 External Operator Message History Display 692
11.8 CLEARING THE SCREEN 694
11.8.1 Erase Screen Display 694
11.8.2 Automatic Erase Screen Display 695

12.GRAPHICS FUNCTION 696
12.1 GRAPHICS DISPLAY 697
12.2 DYNAMIC GRAPHIC DISPLAY 703
12.2.1 Path Drawing 703

13.HELP FUNCTION 712

14.SCREEN HARDCOPY 717

IV. MAINTENANCE

1. METHOD OF REPLACING BATTERY 723
1.1 REPLACING BATTERY FOR LCD–MOUNTED TYPE *i* SERIES 724
1.2 REPLACING THE BATTERY FOR STAND–ALONE TYPE *i* SERIES 727
1.3 BATTERY IN THE PANEL *i* (3 VDC) 730
1.4 BATTERY FOR SEPARATE ABSOLUTE PULSE CODERS (6 VDC) 732
1.5 BATTERY FOR BUILT–IN ABSOLUTE PULSE CODERS (DC6V) 733

APPENDIX

A. TAPE CODE LIST 741

B. LIST OF FUNCTIONS AND TAPE FORMAT 744

C. RANGE OF COMMAND VALUE 750

D. NOMOGRAPHS 753
D.1 INCORRECT THREADED LENGTH 754
D.2 SIMPLE CALCULATION OF INCORRECT THREAD LENGTH 756
D.3 TOOL PATH AT CORNER 758
D.4 RADIUS DIRECTION ERROR AT CIRCLE CUTTING 761

E. STATUS WHEN TURNING POWER ON, WHEN CLEAR AND WHEN RESET 762

F. CHARACTER–TO–CODES CORRESPONDENCE TABLE 764

G. ALARM LIST 765

I. GENERAL

1 GENERAL

About this manual

This manual consists of the following parts:

I. GENERAL
Describes chapter organization, applicable models, related manuals, and notes for reading this manual.

II. PROGRAMMING
Describes each function: Format used to program functions in the NC language, characteristics, and restrictions. When a program is created through conversational automatic programming function, refer to the manual for the conversational automatic programming function (Table 1).

III. OPERATION
Describes the manual operation and automatic operation of a machine, procedures for inputting and outputting data, and procedures for editing a program.

IV. MAINTENANCE
Describes procedures for replacing batteries.

APPENDIX
Lists tape codes, valid data ranges, and error codes.

Some functions described in this manual may not be applied to some products. For detail, refer to the DESCRIPTIONS manual(B–63522EN).

This manual does not describe parameters in detail. For details on parameters mentioned in this manual, refer to the manual for parameters (B–63610EN).

This manual describes all optional functions. Look up the options incorporated into your system in the manual written by the machine tool builder.

The models covered by this manual, and their abbreviations are:

Product name	Abbreviations	
FANUC Series 21*i*–MB	21*i*–MB	Series 21*i*
FANUC Series 210*i*–MB	210*i*–MB	Series 210*i*

Special symbols

This manual uses the following symbols:

- **IP_** Indicates a combination of axes such as X__ Y__ Z (used in PROGRAMMING.).

- **;** Indicates the end of a block. It actually corresponds to the ISO code LF or EIA code CR.

Related manuals of Series 16*i*/18*i*/21*i*/160*i*/180*i*/210*i*–MODEL B

The following table lists the manuals related to Series 16*i*, Series 18*i*, Series 21*i*, Series 160*i*, Series 180*i*, Series 210*i*–MODEL B. This manual is indicated by an asterisk(*).

Manual name	Specification number	
DESCRIPTIONS	B–63522EN	
CONNECTION MANUAL (HARDWARE)	B–63523EN	
CONNECTION MANUAL (FUNCTION)	B–63523EN–1	
OPERATORS MANUAL (16*i*/18*i*/160*i*/180*i*–TB)	B–63524EN	
OPERATOR'S MANUAL (16*i*/18*i*/160*i*/180*i*–MB)	B–63534EN	
OPERATOR'S MANUAL (21*i*/210*i*–TB)	B–63604EN	
OPERATOR'S MANUAL (21*i*/210*i*–MB)	B–63614EN	*
MAINTENANCE MANUAL	B–63525EN	
PARAMETER MANUAL (16*i*/18*i*/160*i*/180*i*–MODEL B)	B–63530EN	
PARAMETER MANUAL (21*i*/210*i*–MODEL B)	B–63610EN	
PROGRAMMING MANUAL		
Macro Compiler/Macro Executor PROGRAMMING MANUAL	B–61803E–1	
FAPT MACRO COMPILER (For Personal Computer) PROGRAMMING MANUAL	B–66102E	
C Language Executor PROGRAMMING MANUAL	B–62443EN–3	
CAP (T series)		
FANUC Super CAP*i* T OPERATORS MANUAL	B–63284EN	
FANUC Symbol CAP*i* T OPERATOR'S MANUAL	B–63304EN	
MANUAL GUIDE For Lathe PROGRAMMING MANUAL	B–63343EN	
MANUAL GUIDE For Lathe OPERATOR'S MANUAL	B–63344EN	
CAP (M series)		
FANUC Super CAP*i* M OPERATOR'S MANUAL	B–63294EN	
MANUAL GUIDE For Milling PROGRAMMING MANUAL	B–63423EN	
MANUAL GUIDE For Milling OPERATOR'S MANUAL	B–63424EN	

Manual name	Specification number	
PMC		
PMC Ladder Language PROGRAMMING MANUAL	B–61863E	
PMC C Language PROGRAMMING MANUAL	B–61863E–1	
Network		
FANUC I/O Link–II CONNECTION MANUAL	B–62714EN	
Profibus–DP Board OPERATOR'S MANUAL	B–62924EN	
DeviceNet Board OPERATOR'S MANUAL	B–63404EN	
Ethernet Board/DATA SERVER Board OPERATOR'S MANUAL	B–63354EN	

Related manuals of SERVO MOTOR α series

The following table lists the manuals related to SERVO MOTOR α series

Manual name	Specification number
AC SERVO MOTOR α series DESCRIPTIONS	B–65142E
AC SERVO MOTOR α series PARAMETER MANUAL	B–65150E
AC SPINDLE MOTOR α series DESCRIPTIONS	B–65152E
AC SPINDLE MOTOR α series PARAMETER MANUAL	B–65160E
SERVO AMPLIFIER α series DESCRIPTIONS	B–65162E
SERVO MOTOR α series MAINTENANCE MANUAL	B–65165E

1.1 GENERAL FLOW OF OPERATION OF CNC MACHINE TOOL

When machining the part using the CNC machine tool, first prepare the program, then operate the CNC machine by using the program.

1) First, prepare the program from a part drawing to operate the CNC machine tool.
   How to prepare the program is described in the Chapter II. PROGRAMMING.

2) The program is to be read into the CNC system. Then, mount the workpieces and tools on the machine, and operate the tools according to the programming. Finally, execute the machining actually.
   How to operate the CNC system is described in the Chapter III. OPERATION.

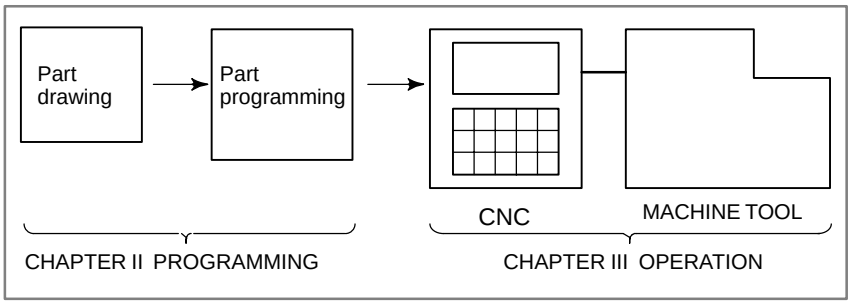

Before the actual programming, make the machining plan for how to machine the part.
Machining plan

1. Determination of workpieces machining range
2. Method of mounting workpieces on the machine tool
3. Machining sequence in every machining process
4. Machining tools and machining

Decide the machining method in every machining process.

Machining process / Machining procedure	1	2	3
	Feed cutting	Side cutting	Hole machining
1. Machining method : Rough Semi Finish			
2. Machining tools			
3. Machining conditions : Feedrate Cutting depth			
4. Tool path			

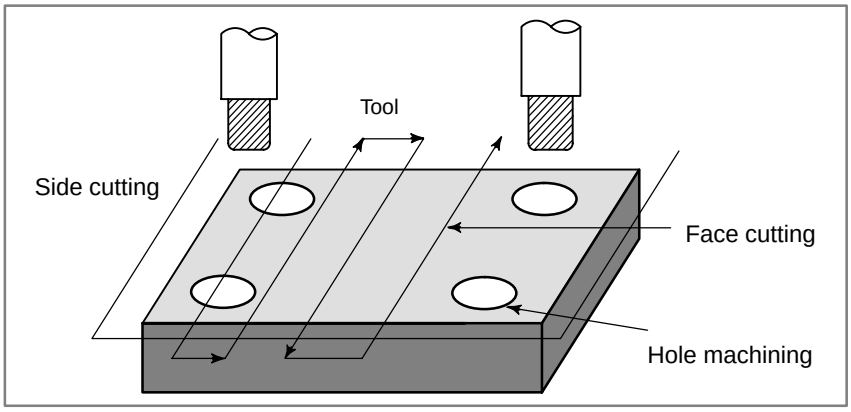

Prepare the program of the tool path and machining condition according to the workpiece figure, for each machining.

1.2 CAUTIONS ON READING THIS MANUAL

CAUTION

1 The function of an CNC machine tool system depends not only on the CNC, but on the combination of the machine tool, its magnetic cabinet, the servo system, the CNC, the operator's panels, etc. It is too difficult to describe the function, programming, and operation relating to all combinations. This manual generally describes these from the stand–point of the CNC. So, for details on a particular CNC machine tool, refer to the manual issued by the machine tool builder, which should take precedence over this manual.

2 Headings are placed in the left margin so that the reader can easily access necessary information. When locating the necessary information, the reader can save time by searching though these headings.

3 This manual describes as many reasonable variations in equipment usage as possible. It cannot address every combination of features, options and commands that should not be attempted.
If a particular combination of operations is not described, it should not be attempted.

1.3 CAUTIONS ON VARIOUS KINDS OF DATA

CAUTION

Machining programs, parameters, variables, etc. are stored in the CNC unit internal non–volatile memory. In general, these contents are not lost by the switching ON/OFF of the power. However, it is possible that a state can occur where precious data stored in the non–volatile memory has to be deleted, because of deletions from a maloperation, or by a failure restoration. In order to restore rapidly when this kind of mishap occurs, it is recommended that you create a copy of the various kinds of data beforehand.

II. PROGRAMMING

1 GENERAL

1.1 TOOL MOVEMENT ALONG WORKPIECE PARTS FIGURE– INTERPOLATION

The tool moves along straight lines and arcs constituting the workpiece parts figure (See II–4).

Explanations

The function of moving the tool along straight lines and arcs is called the interpolation.

- **Tool movement along a straight line**

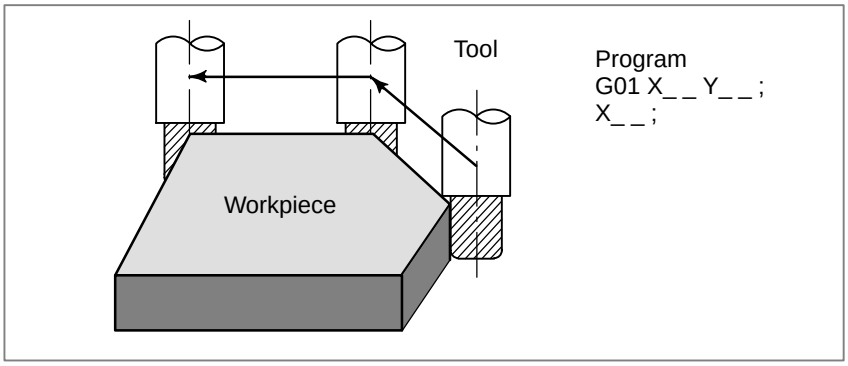

Fig. 1.1 (a) Tool movement along a straight line

- **Tool movement along an arc**

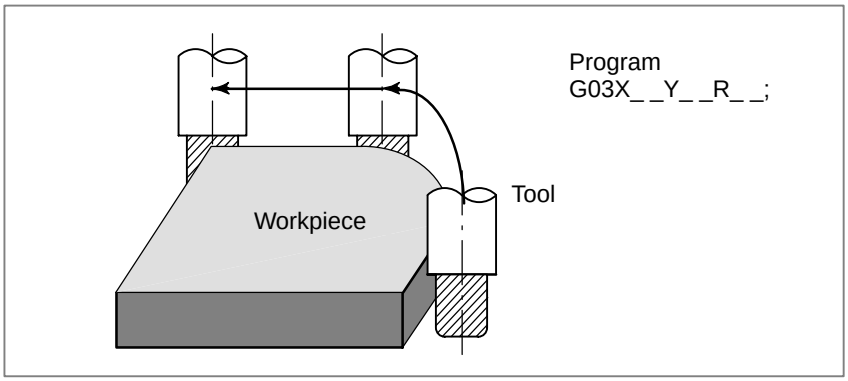

Fig. 1.1 (b) Tool movement along an arc

Symbols of the programmed commands G01, G02, ... are called the preparatory function and specify the type of interpolation conducted in the control unit.

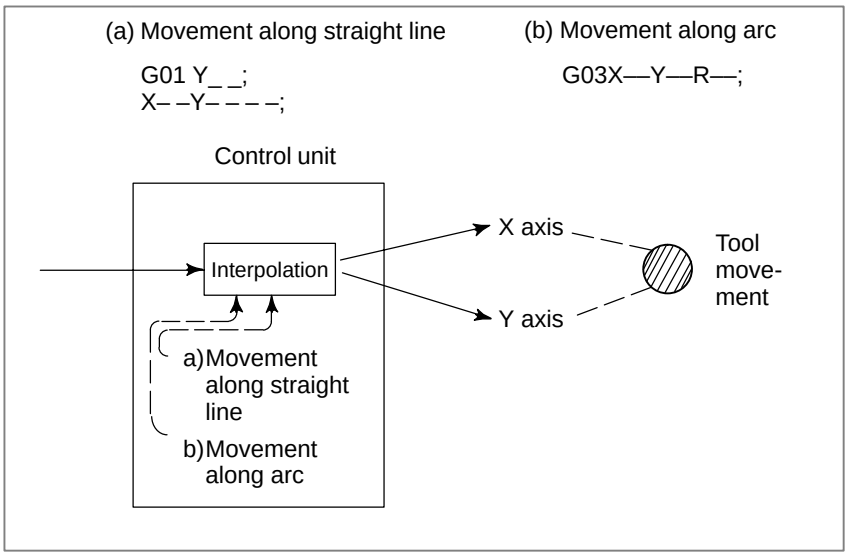

Fig. 1.1 (c) Interpolation function

NOTE
Some machines move tables instead of tools but this manual assumes that tools are moved against workpieces.

1.2 FEED–FEED FUNCTION

Movement of the tool at a specified speed for cutting a workpiece is called the feed.

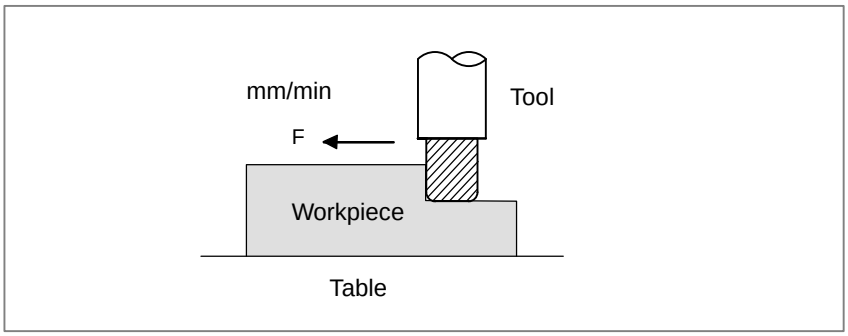

Fig. 1.2 Feed function

Feedrates can be specified by using actual numerics. For example, to feed the tool at a rate of 150 mm/min, specify the following in the program:
F150.0
The function of deciding the feed rate is called the feed function (See II–5).

1.3 PART DRAWING AND TOOL MOVEMENT

1.3.1 Reference Position (Machine–Specific Position)

A CNC machine tool is provided with a fixed position. Normally, tool change and programming of absolute zero point as described later are performed at this position. This position is called the reference position.

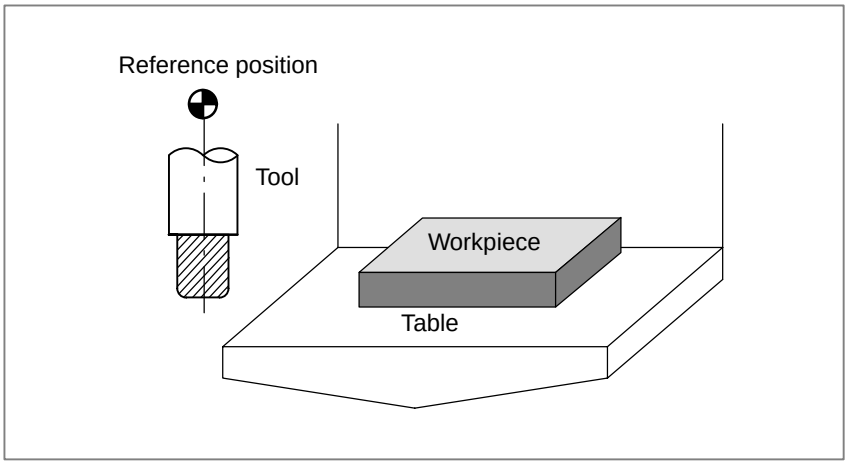

Fig. 1.3.1 Reference position

Explanations

The tool can be moved to the reference position in two ways:

(1) Manual reference position return (See III–3.1)
Reference position return is performed by manual button operation.

(2) Automatic reference position return (See II–6)
In general, manual reference position return is performed first after the power is turned on. In order to move the tool to the reference position for tool change thereafter, the function of automatic reference position return is used.

1.3.2 Coordinate System on Part Drawing and Coordinate System Specified by CNC – Coordinate System

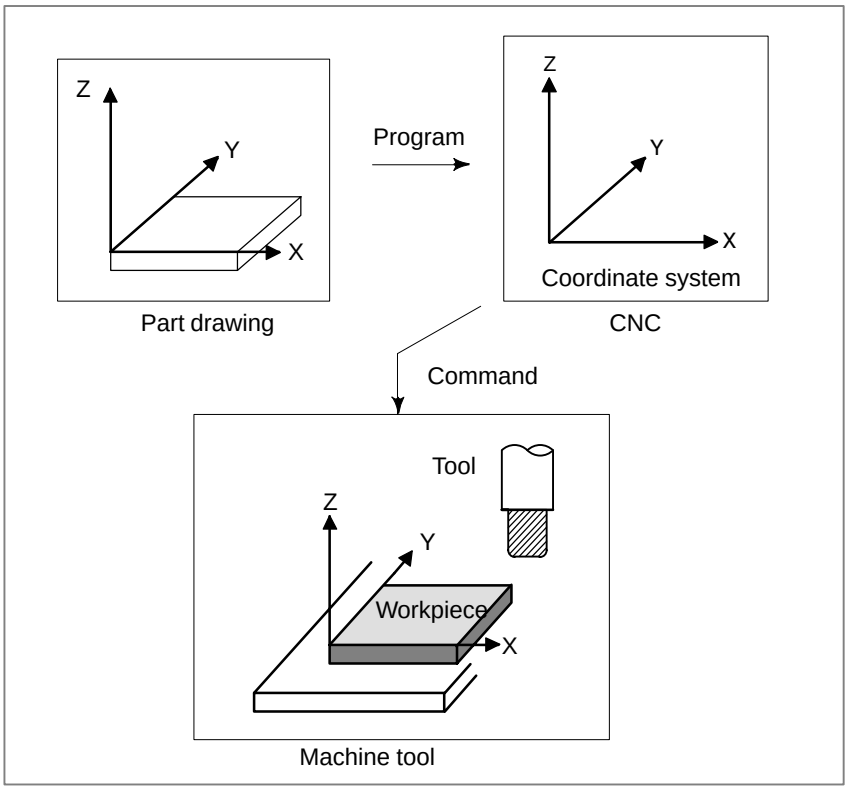

Fig. 1.3.2 (a) Coordinate system

Explanations

- **Coordinate system**

The following two coordinate systems are specified at different locations: (See II–7)

(1) Coordinate system on part drawing
The coordinate system is written on the part drawing. As the program data, the coordinate values on this coordinate system are used.

(2) Coordinate system specified by the CNC
The coordinate system is prepared on the actual machine tool table. This can be achieved by programming the distance from the current position of the tool to the zero point of the coordinate system to be set.

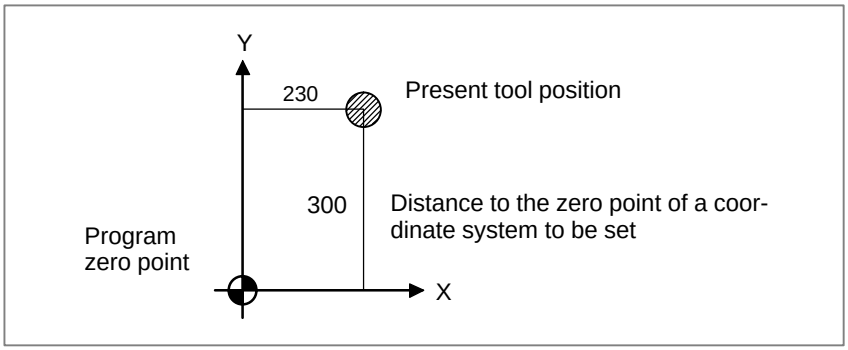

Fig. 1.3.2 (b) Coordinate system specified by the CNC

The positional relation between these two coordinate systems is determined when a workpiece is set on the table.

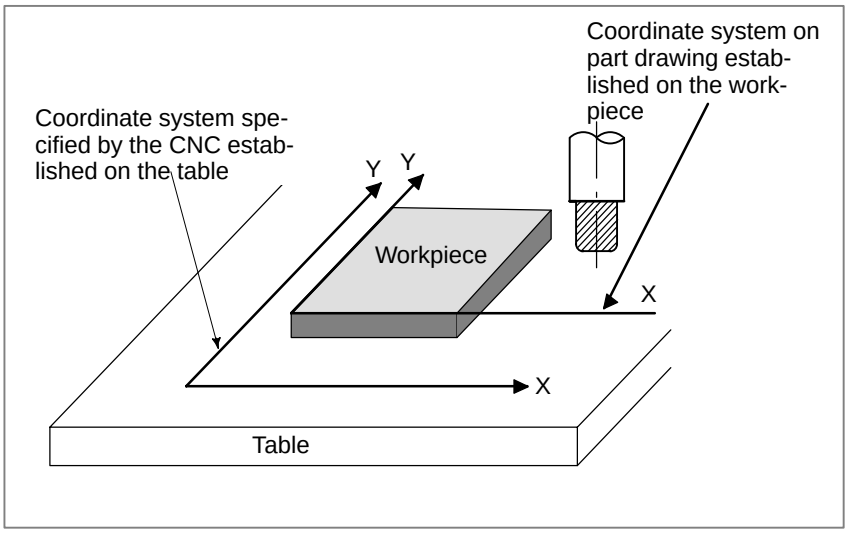

Fig. 1.3.2 (c) Coordinate system specified by CNC and coordinate systemon part drawing

The tool moves on the coordinate system specified by the CNC in accordance with the command program generated with respect to the coordinate system on the part drawing, and cuts a workpiece into a shape on the drawing.
Therefore, in order to correctly cut the workpiece as specified on the drawing, the two coordinate systems must be set at the same position.

- **Methods of setting the two coordinate systems in the same position**

To set the two coordinate systems at the same position, simple methods shall be used according to workpiece shape, the number of machinings.

(1) Using a standard plane and point of the workpiece.

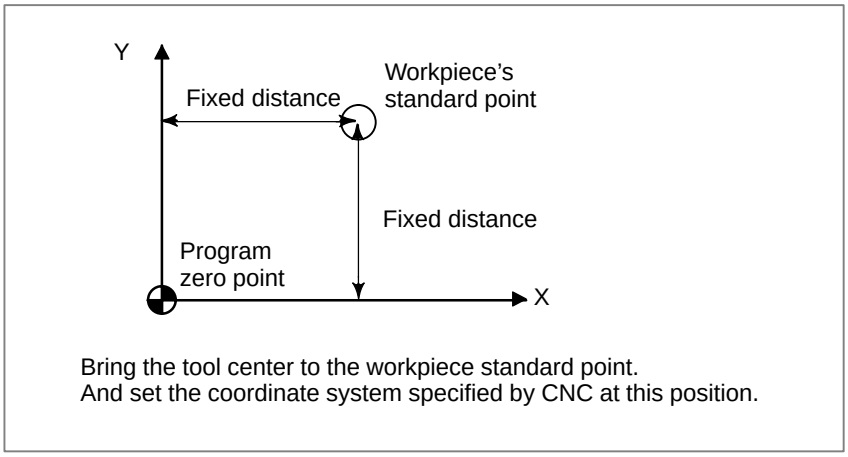

(2) Mounting a workpiece directly against the jig

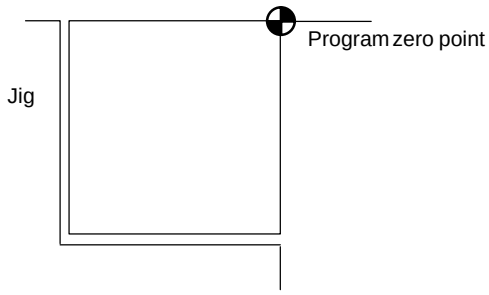

Meet the tool center to the reference position. And set the coordinate system specified by CNC at this position. (Jig shall be mounted on the predetermined point from the reference position.)

(3) Mounting a workpiece on a pallet, then mounting the workpiece and pallet on the jig

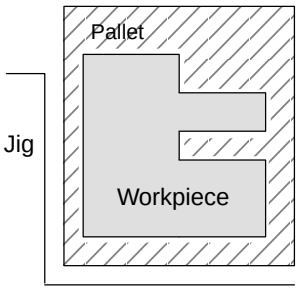

(Jig and coordinate system shall be specified by the same as (2)).

1.3.3 How to Indicate Command Dimensions for Moving the Tool – Absolute, Incremental Commands

Explanations

Command for moving the tool can be indicated by absolute command or incremental command (See II–8.1).

- **Absolute command**

The tool moves to a point at “the distance from zero point of the coordinate system” that is to the position of the coordinate values.

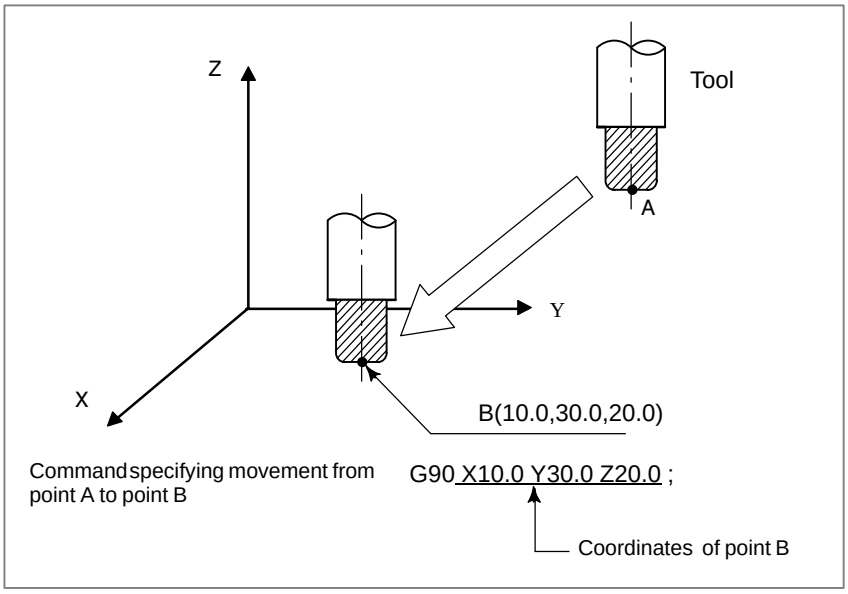

- **Incremental command**

Specify the distance from the previous tool position to the next tool position.

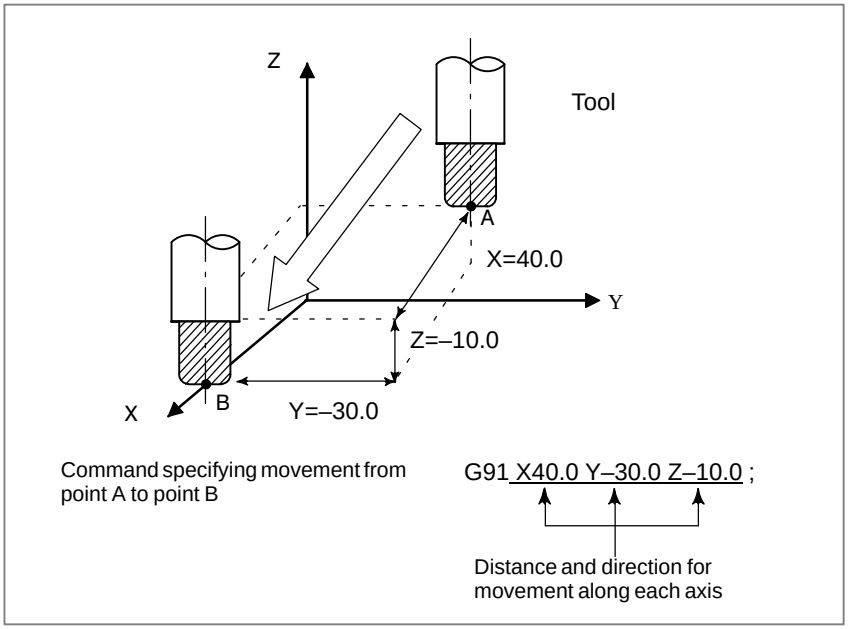

1.4 CUTTING SPEED – SPINDLE SPEED FUNCTION

The speed of the tool with respect to the workpiece when the workpiece is cut is called the cutting speed.
As for the CNC, the cutting speed can be specified by the spindle speed in min^{-1} unit.

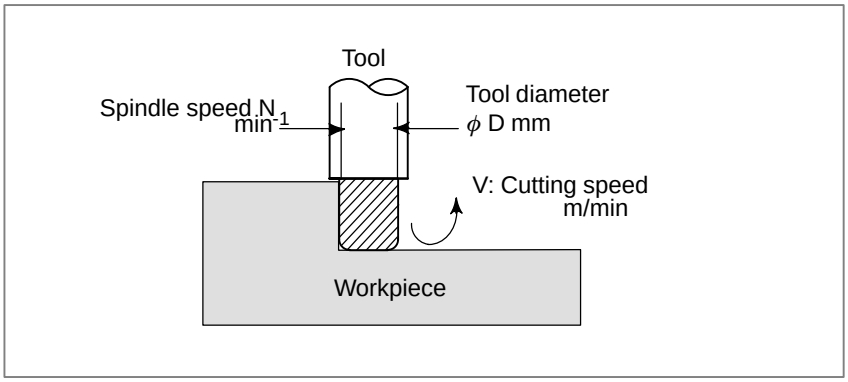

Examples

<When a workpiece should be machined with a tool 100 mm in diameter at a cutting speed of 80 m/min. >
The spindle speed is approximately 250 min^{-1}, which is obtained from $N=1000v/\pi D$. Hence the following command is required:

S250;

Commands related to the spindle speed are called the spindle speed function (See II–9) .

1.5 SELECTION OF TOOL USED FOR VARIOUS MACHINING – TOOL FUNCTION

When drilling, tapping, boring, milling or the like, is performed, it is necessary to select a suitable tool. When a number is assigned to each tool and the number is specified in the program, the corresponding tool is selected.

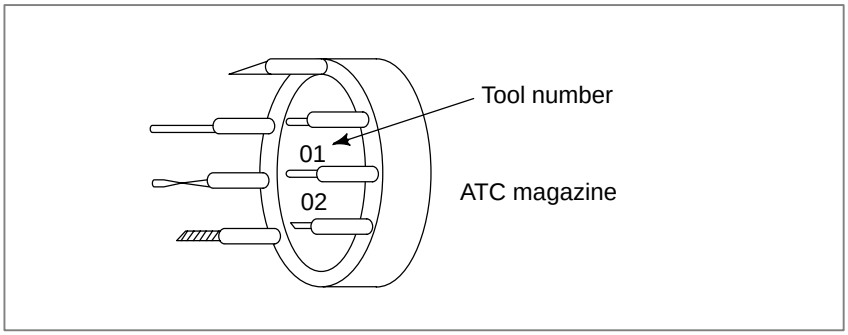

Examples

<When No.01 is assigned to a drilling tool>
When the tool is stored at location 01 in the ATC magazine, the tool can be selected by specifying T01. This is called the tool function (See II–10).

1.6 COMMAND FOR MACHINE OPERATIONS – MISCELLANEOUS FUNCTION

When machining is actually started, it is necessary to rotate the spindle, and feed coolant. For this purpose, on–off operations of spindle motor and coolant valve should be controlled.

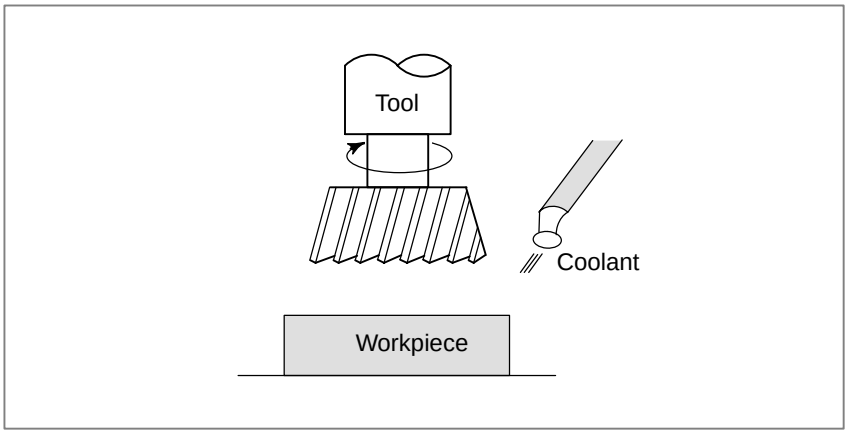

The function of specifying the on–off operations of the components of the machine is called the miscellaneous function. In general, the function is specified by an M code (See II–11).
For example, when M03 is specified, the spindle is rotated clockwise at the specified spindle speed.

1.7 PROGRAM CONFIGURATION

A group of commands given to the CNC for operating the machine is called the program. By specifying the commands, the tool is moved along a straight line or an arc, or the spindle motor is turned on and off.
In the program, specify the commands in the sequence of actual tool movements.

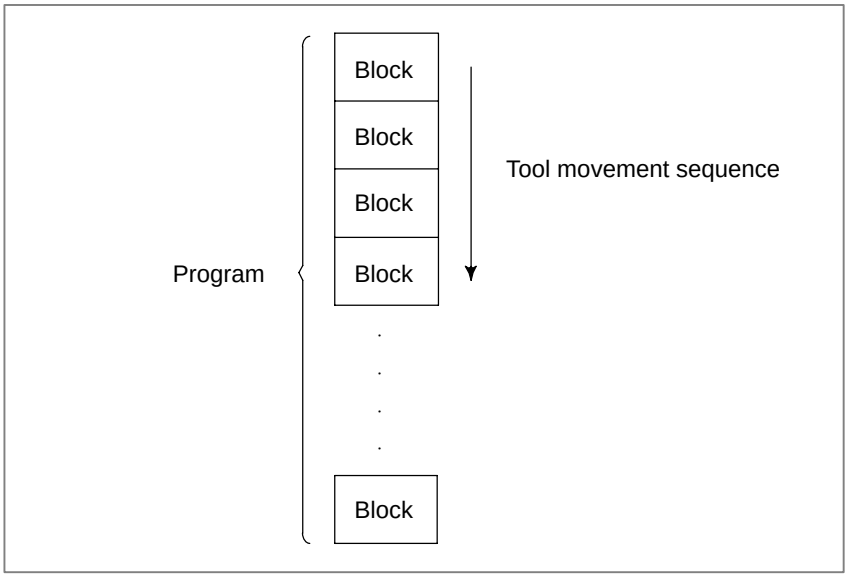

Fig. 1.7 (a) Program configuration

A group of commands at each step of the sequence is called the block. The program consists of a group of blocks for a series of machining. The number for discriminating each block is called the sequence number, and the number for discriminating each program is called the program number (See II–12).

Explanations

The block and the program have the following configurations.

- **Block**

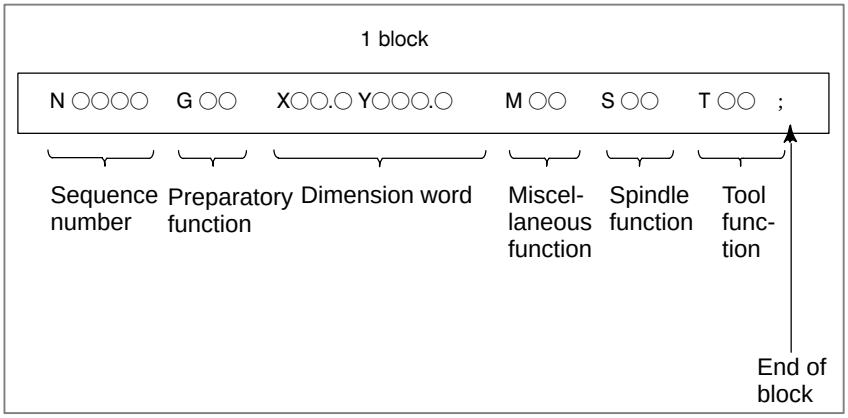

Fig. 1.7 (b) Block configuration

A block starts with a sequence number to identify the block and ends with an end–of–block code.
This manual indicates the end–of–block code by ; (LF in the ISO code and CR in the EIA code).
The contents of the dimension word depend on the preparatory function.
In this manual, the portion of the dimension word may be represent as IP_.

- **Program**

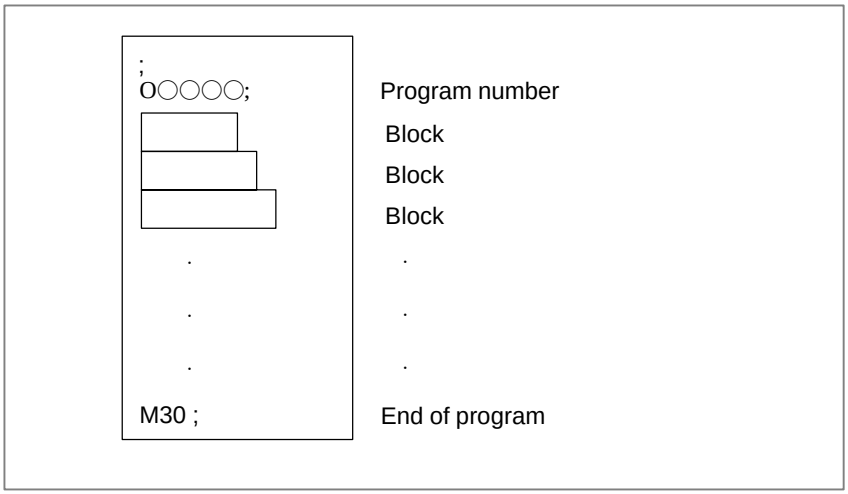

Fig. 1.7 (c) Program configuration

Normally, a program number is specified after the end–of–block (;) code at the beginning of the program, and a program end code (M02 or M30) is specified at the end of the program.

- **Main program and subprogram**

When machining of the same pattern appears at many portions of a program, a program for the pattern is created. This is called the subprogram. On the other hand, the original program is called the main program. When a subprogram execution command appears during execution of the main program, commands of the subprogram are executed. When execution of the subprogram is finished, the sequence returns to the main program.

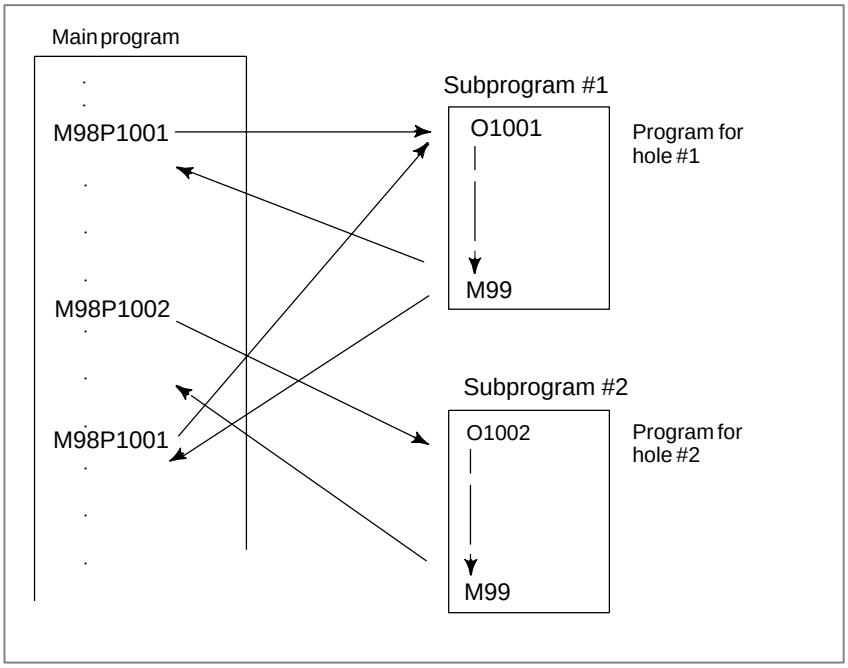

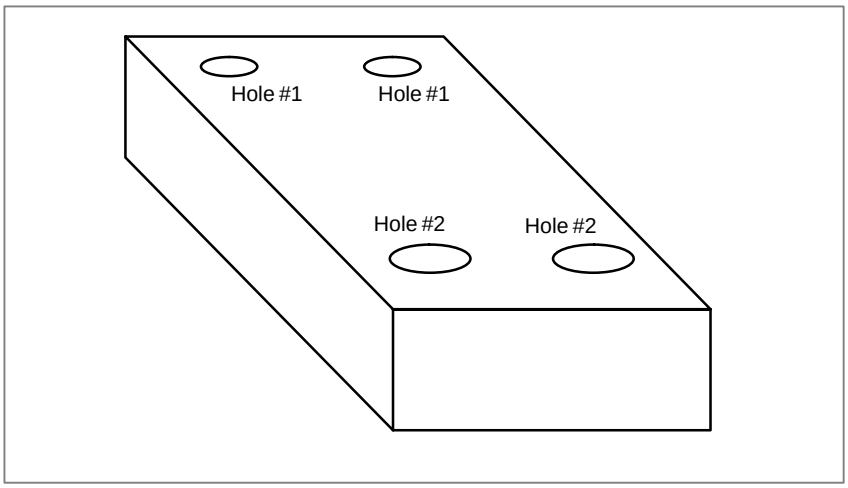

1.8 TOOL FIGURE AND TOOL MOTION BY PROGRAM

Explanations

- **Machining using the end of cutter – Tool length compensation function (See II–14.1)**

Usually, several tools are used for machining one workpiece. The tools have different tool length. It is very troublesome to change the program in accordance with the tools.
Therefore, the length of each tool used should be measured in advance. By setting the difference between the length of the standard tool and the length of each tool in the CNC (data display and setting : see III–11), machining can be performed without altering the program even when the tool is changed. This function is called tool length compensation.

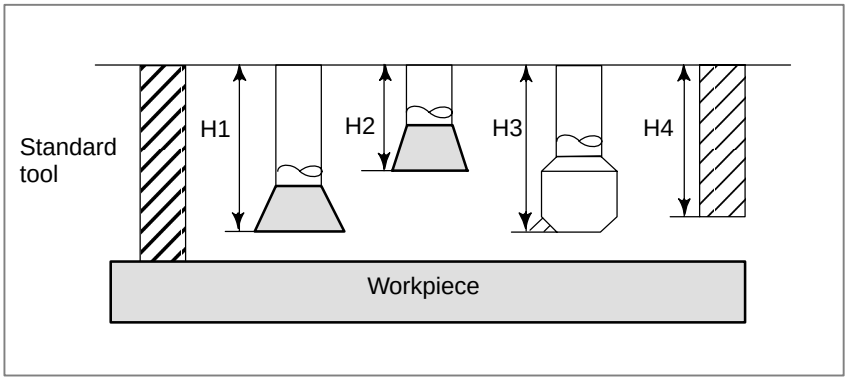

- **Machining using the side of cutter – Cutter compensation function (See II–14.4,14.5,14.6)**

Because a cutter has a radius, the center of the cutter path goes around the workpiece with the cutter radius deviated.

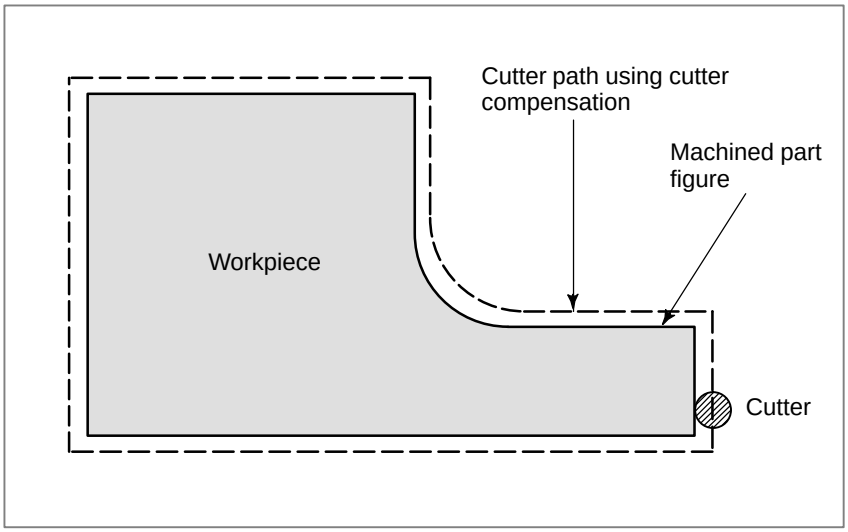

If radius of cutters are stored in the CNC (Data Display and Setting : see III–11), the tool can be moved by cutter radius apart from the machining part figure. This function is called cutter compensation.

1.9 TOOL MOVEMENT RANGE – STROKE

Limit switches are installed at the ends of each axis on the machine to prevent tools from moving beyond the ends. The range in which tools can move is called the stroke.

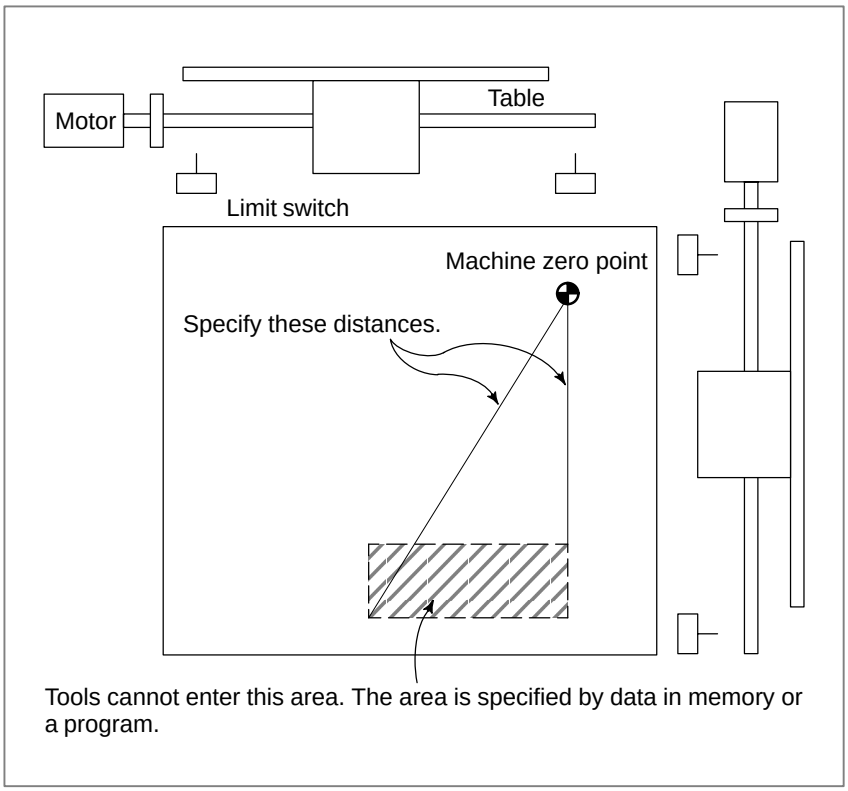

Besides strokes defined with limit switches, the operator can define an area which the tool cannot enter using a program or data in memory. This function is called stroke check (see III–6.3).

2 CONTROLLED AXES

2.1 CONTROLLED AXES

Item	21*i*–MB 210*i*–MB
No. of basic controlled axes	3 axes
Controlled axes expansion (total)	Max. 4 axes (included in Cs axis)
Basic simultaneously controlled axes	2 axes
Simultaneously controlled axes expansion (total)	Max. 4 axes

NOTE
The number of simultaneously controllable axes for manual operation jog feed, manual reference position return, or manual rapid traverse) is 1 or 3 (1 when bit 0 (JAX) of parameter 1002 is set to 0 and 3 when it is set to 1).

2.2 AXIS NAME

The names of three basic axes are always X, Y, and Z. The name of an additional axis can be set to A, B, C, U, V, or W by using parameter 1020. Parameter No. 1020 is used to determine the name of each axis.

Limitations

- **Default axis name**

When this parameter is set to 0 or a character other than the valid characters is specified, an axis name from 1 to 4 is assigned by default. When a default axis name (1 to 4) is used, operation in the MEM mode and MDI mode is disabled.

- **Duplicate axis names**

If a duplicate axis name is specified in the parameter, operation is enabled only for the axis specified first.

2.3 INCREMENT SYSTEM

The increment system consists of the least input increment (for input) and least command increment (for output). The least input increment is the least increment for programming the travel distance. The least command increment is the least increment for moving the tool on the machine. Both increments are represented in mm, inches, or deg.

Name of increment system	Least input increment	Least command increment	Maximum stroke
IS–B	0.001mm 0.0001inch 0.001deg	0.001mm 0.0001inch 0.001deg	99999.999mm 9999.9999inch 99999.999deg
IS–C	0.0001mm 0.00001inch 0.0001deg	0.0001mm 0.00001inch 0.0001deg	9999.9999mm 999.99999inch 9999.9999deg

The least command increment is either metric or inch depending on the machine tool. Set metric or inch to the parameter INM (No.100#0).
For selection between metric and inch for the least input increment, G code (G20 or G21) or a setting parameter selects it.

Combined use of the inch system and the metric system is not allowed. There are functions that cannot be used between axes with different unit systems (circular interpolation, cutter compensation, etc.). For the increment system, see the machine tool builder's manual.

2.4 MAXIMUM STROKE

Maximum stroke = Least command increment × 99999999
See 2.3 Incremen System.

Table 2.4 Maximum strokes

Increment system		Maximum stroke
IS–B	Metric machine system	±99999.999 mm ±99999.999 deg
	Inch machine system	±9999.9999 inch ±99999.999 deg
IS–C	Metric machine system	±9999.9999 mm ±9999.9999 deg
	Inch machine system	±999.99999 inch ±9999.9999 deg

NOTE
1 A command exceeding the maximum stroke cannot be specified.
2 The actual stroke depends on the machine tool.

3 PREPARATORY FUNCTION (G FUNCTION)

A number following address G determines the meaning of the command for the concerned block.
G codes are divided into the following two types.

Type	Meaning
One–shot G code	The G code is effective only in the block in which it is specified.
Modal G code	The G code is effective until another G code of the same group is specified.

(Example)
G01 and G00 are modal G codes in group 01.

```
G01X−;
  Z−;      } G01 is effective in this range.
  X;
G00Z−;
```

Explanations

1. When the clear state (bit 6 (CLR) of parameter No. 3402) is set at power–up or reset, the modal G codes are placed in the states described below.
(1) The modal G codes are placed in the states marked with ◤ as indicated in Table 3.
(2) G20 and G21 remain unchanged when the clear state is set at power–up or reset.
(3) Which status G22 or G23 at power on is set by parameter G23 (No. 3402#7). However, G22 and G23 remain unchanged when the clear state is set at reset.
(4) The user can select G00 or G01 by setting bit 0 (G01) of parameter No. 3402.
(5) The user can select G90 or G91 by setting bit 3 (G91) of parameter No. 3402.
(6) The user can select G17, G18, or G19 by setting bit 1 (parameterG18) and bit 2 (parameter G19) of parameter No. 3402.

2.G codes other than G10 and G11 are one–shot G codes.
3.When a G code not listed in the G code list is specified, or a G code that has no corresponding option is specified, P/S alarm No. 010 is output.
4.Multiple G codes can be specified in the same block if each G code belongs to a different group. If multiple G codes that belong to the same group are specified in the same block, only the last G code specified is valid.
5.If a G code belonging to group 01 is specified in a canned cycle, the canned cycle is cancelled. This means that the same state set by specifying G80 is set. Note that the G codes in group 01 are not affected by a G code specifying a canned cycle.
6.G codes are indicated by group.
7.The group of G60 is switched according to the setting of the MDL bit (bit 0 of parameter 5431). (When the MDL bit is set to 0, the 00 group is selected. When the MDL bit is set to 1, the 01 group is selected.)

Table 3 G code list (1/3)

G code	Group	Function	
G00	01	Positioning	
G01		Linear interpolation	
G02		Circular interpolation/Helical interpolation CW	
G03		Circular interpolation/Helical interpolation CCW	
G04	00	Dwell, Exact stop	
G05		High speed cycle machining	
G05.1		AI advanced control	
G07.1 (G107)		Cylindrical interpolation	
G08		Advanced preview control	
G09		Exact stop	
G10		Programmable data input	
G11		Programmable data input mode cancel	
G15	17	Polar coordinates command cancel	
G16		Polar coordinates command	
G17	02	XpYp plane selection	Xp: X axis or its parallel axis
G18		ZpXp plane selection	Yp: Y axis or its parallel axis
G19		YpZp plane selection	Zp: Z axis or its parallel axis
G20	06	Input in inch	
G21		Input in mm	
G22	04	Stored stroke check function on	
G23		Stored stroke check function off	
G25	24	Spindle speed fluctuation detection off	
G26		Spindle speed fluctuation detection on	
G27	00	Reference position return check	
G28		Return to reference position	
G29		Return from reference position	
G30		2nd, 3rd and 4th reference position return	
G31		Skip function	
G33	01	Thread cutting	
G37	00	Automatic tool length measurment	
G39		Corner offset circular interpolation	
G40	07	Cutter compensation cancel/Three dimensional compensation cancel	
G41		Cutter compensation left/Three dimensional compensation	
G42		Cutter compensation right	
G40.1 (G150)	19	Normal direction control cancel mode	
G41.1 (G151)		Normal direction control left side on	
G42.1 (G152)		Normal direction control right side on	
G43	08	Tool length compensation + direction	
G44		Tool length compensation – direction	

Table 3 G code list (2/3)

G code	Group	Function
G45	00	Tool offset increase
G46		Tool offset decrease
G47		Tool offset double increase
G48		Tool offset double decrease
G49	08	Tool length compensation cancel
G50	11	Scaling cancel
G51		Scaling
G50.1	22	Programmable mirror image cancel
G51.1		Programmable mirror image
G52	00	Local coordinate system setting
G53		Machine coordinate system selection
G54	14	Workpiece coordinate system 1 selection
G54.1		Additional workpiece coordinate system selection
G55		Workpiece coordinate system 2 selection
G56		Workpiece coordinate system 3 selection
G57		Workpiece coordinate system 4 selection
G58		Workpiece coordinate system 5 selection
G59		Workpiece coordinate system 6 selection
G60	00	Single direction positioning
G61	15	Exact stop mode
G62		Automatic corner override
G63		Tapping mode
G64		Cutting mode
G65	00	Macro call
G66	12	Macro modal call
G67		Macro modal call cancel
G68	16	Coordinate rotation/Three dimensional coordinate conversion
G69		Coordinate rotation cancel/Three dimensional coordinate conversion cancel
G73	09	Peck drilling cycle
G74		Counter tapping cycle
G76	09	Fine boring cycle
G80	09	Canned cycle cancel/external operation function cancel
G81		Drilling cycle, spot boring cycle or external operation function
G82		Drilling cycle or counter boring cycle
G83		Peck drilling cycle
G84		Tapping cycle
G85		Boring cycle
G86		Boring cycle
G87		Back boring cycle
G88		Boring cycle
G89		Boring cycle

Table 3 G code list (3/3)

G code	Group	Function
G90	03	Absolute command
G91		Increment command
G92	00	Setting for work coordinate system or clamp at maximum spindle speed
G92.1		Workpiece coordinate system preset
G94	05	Feed per minute
G95		Feed per rotation
G96	13	Constant surface speed control
G97		Constant surface speed control cancel
G98	10	Return to initial point in canned cycle
G99		Return to R point in canned cycle

4 INTERPOLATION FUNCTIONS

4.1 POSITIONING (G00)

The G00 command moves a tool to the position in the workpiece system specified with an absolute or an incremental command at a rapid traverse rate.
In the absolute command, coordinate value of the end point is programmed.
In the incremental command the distance the tool moves is programmed.

Format

G00 IP_;

IP: For an absolute command, the coordinates of an end position, and for an incremental commnad, the distance the tool moves.

Explanations

Either of the following tool paths can be selected according to bit 1 of parameter LRP No. 1401.

- **Nonlinear interpolation positioning**
  The tool is positioned with the rapid traverse rate for each axis separately. The tool path is normally straight.

- **Linear interpolation positioning**
  The tool path is the same as in linear interpolation (G01). The tool is positioned within the shortest possible time at a speed that is not more than the rapid traverse rate for each axis. However, the tool path is not the same as in linear interpolation (G01).

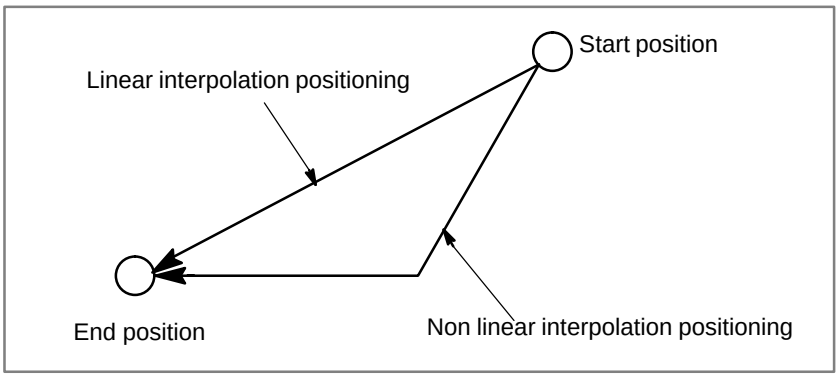

The rapid traverse rate in G00 command is set to the parameter No. 1420 for each axis independently by the machine tool builder. In the posiitoning mode actuated by G00, the tool is accelerated to a predetermined speed at the start of a block and is decelerated at the end of a block. Execution proceeds to the next block after confirming the in–position.
“In–position ” means that the feed motor is within the specified range. This range is determined by the machine tool builder by setting to parameter (No. 1826).
In–position check for each block can be disabled by setting bit 5 (NCI) of parameter No.1601 accordingly.

Limitations

The rapid traverse rate cannot be specified in the address F.
Even if linear interpolation positioning is specified, nonlinear interpolation positioning is used in the following cases. Therefore, be careful to ensure that the tool does not foul the workpiece.

- G28 specifying positioning between the reference and intermediate positions.
- G53

4.2 SINGLE DIRECTION POSITIONING (G60)

For accurate positioning without play of the machine (backlash), final positioning from one direction is available.

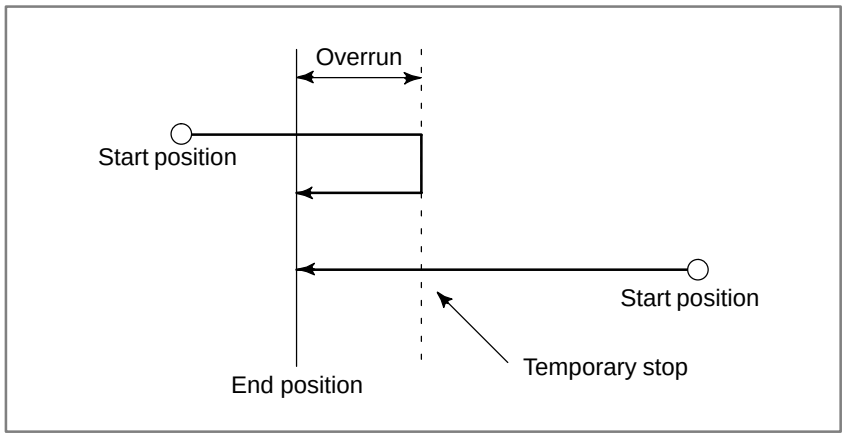

Format

G60 IP_;

IP_ : For an absolute command, the coordinates of an end position, and for an incremental commnad, the distance the tool moves.

Explanations

An overrun and a positioning direction are set by the parameter (No. 5440). Even when a commanded positioning direction coincides with that set by the parameter, the tool stops once before the end point.
G60, which is an one–shot G–code, can be used as a modal G–code in group 01 by setting 1 to the parameter (No. 5431 bit 0 MDL).
This setting can eliminate specifying a G60 command for every block. Other specifications are the same as those for an one–shot G60 command. When an one–shot G code is sepcified in the single direction positioning mode, the one–shot G command is effective like G codes in group 01.

Examples

When one–shot G60 commands are used.	**When modal G60 command is used.**
G90; G60 X0Y0; G60 X100; } Single direction positioning G60 Y100; G04 X10; G00 X0Y0;	G90G60; Single direction positioning mode start X0Y0; X100; } Single direction positioning Y100; G04X10; G00X0Y0; Single direction positioning mode cancel

Restrictions

- During canned cycle for drilling, no single direction positioning is effected in Z axis.
- No single direction positioning is effected in an axis for which no overrun has been set by the parameter.
- When the move distance 0 is commanded, the single direction positioning is not performed.
- The direction set to the parameter is not effected by mirror image.
- The single direction positioning does not apply to the shift motion in the canned cycles of G76 and G87.

4.3 LINEAR INTERPOLATION (G01)

Tools can move along a line

Format

G01 IP_F_;

IP_:For an absolute command, the coordinates of an end point , and for an incremental commnad, the distance the tool moves.

F_:Speed of tool feed (Feedrate)

Explanations

A tools move along a line to the specified position at the feedrate specified in F.
The feedrate specified in F is effective until a new value is specified. It need not be specified for each block.
The feedrate commanded by the F code is measured along the tool path.
If the F code is not commanded, the feedrate is regarded as zero.
The feedrate of each axis direction is as follows.

G01$\alpha\alpha\beta\beta\gamma\gamma\zeta\zeta$ Ff ;

Feed rate of α axis direction : $F\alpha = \frac{\alpha}{L} \times f$

Feed rate of β axis direction : $F_\beta = \frac{\beta}{L} \times f$

Feed rate of γ axis direction : $F\gamma = \frac{\gamma}{L} \times f$

Feed rate of ζ axis direction : $F_\zeta = \frac{\zeta}{L} \times f$

$L = \sqrt{\alpha^2 + \beta^2 + \gamma^2 + \zeta^2}$

The feed rate of the rotary axis is commanded in the unit of deg/min (the unit is decimal point position).

When the straight line axis α(such as X, Y, or Z) and the rotating axisβ (such as A, B, or C) are linearly interpolated, the feed rate is that in which the tangential feed rate in the αandβ cartesian coordinate system is commanded by F(mm/min).
β–axis feedrate is obtained ; at first, the time required for distribution is calculated by using the above fromula, then the β –axis feedrate unit is changed to deg 1min.

A calcula;tion example is as follows.
G91 G01 X20.0B40.0 F300.0 ;
This changes the unit of the C axis from 40.0 deg to 40mm with metric input. The time required for distribution is calculated as follows:

$$\frac{\sqrt{20^2 + 40^2}}{300} \doteqdot 0.14907 \text{ (min)}$$

The feed rate for the C axis is

$$\frac{40}{0.14907} \doteqdot 268.3 \text{ deg/min}$$

In simultaneous 3 axes control, the feed rate is calculated the same way as in 2 axes control.

Examples

- **Linear interpolation**

(G91) G01X200.0Y100.0F200.0 ;

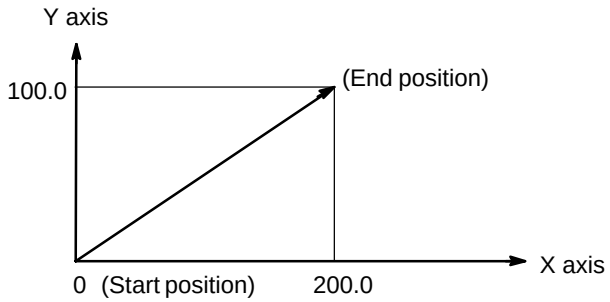

- **Feedrate for the rotation axis**

G91G01C–90.0 G300.0 ;Feed rate of 300deg/min

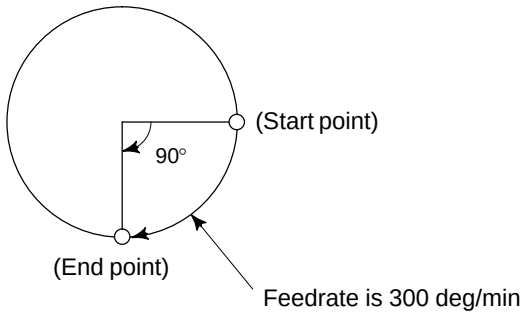

4.4 CIRCULAR INTERPOLATION (G02,G03)

The command below will move a tool along a circular arc.

Format

Arc in the XpYp plane

$$G17 \left\{ \begin{matrix} G02 \\ G03 \end{matrix} \right\} Xp_Yp_ \left\{ \begin{matrix} I_\ J_ \\ R_ \end{matrix} \right\} F_ ;$$

Arc in the ZpXp plane

$$G18 \left\{ \begin{matrix} G02 \\ G03 \end{matrix} \right\} Xp_\ p_ \left\{ \begin{matrix} I_\ K_ \\ R_ \end{matrix} \right\} F_$$

Arc in the YpZp plane

$$G19 \left\{ \begin{matrix} G02 \\ G03 \end{matrix} \right\} Yp_\ Zp_ \left\{ \begin{matrix} J_\ K_ \\ R_ \end{matrix} \right\} F_$$

Table 4.4 Description of the command format

Command	Description
G17	Specification of arc on XpYp plane
G18	Specification of arc on ZpXp plane
G19	Specification of arc on YpZp plane
G02	Circular Interpolation Clockwise direction (CW)
G03	Circular Interpolation Counterclockwise direction (CCW)
$X_{p_}$	Command values of X axis or its parallel axis (set by parameter No. 1022)
$Y_{p_}$	Command values of Y axis or its parallel axis (set by parameter No. 1022)
$Z_{p_}$	Command values of Z axis or its parallel axis (set by parameter No. 1022)
I_	X_p axis distance from the start point to the center of an arc with sign
J_	Y_p axis distance from the start point to the center of an arc with sign
k_	Z_p axis distance from the start point to the center of an arc with sign
R_	Arc radius (with sign)
F_	Feedrate along the arc

Explanations

- **Direction of the circular interpolation**

"Clockwise"(G02) and "counterclockwise"(G03) on the X_pY_p plane (Z_pX_p plane or Y_pZ_p plane) are defined when the X_pY_p plane is viewed in the positive–to–negative direction of the Z_p axis (Y_p axis or X_p axis, respectively) in the Cartesian coordinate system. See the figure below.

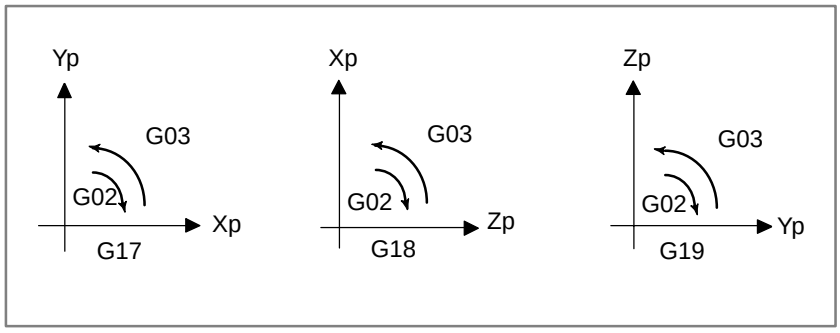

- **Distance moved on an arc**

The end point of an arc is specified by address Xp, Yp or Zp, and is expressed as an absolute or incremental value according to G90 or G91. For the incremental value, the distance of the end point which is viewed from the start point of the arc is specified.

- **Distance from the start point to the center of arc**

The arc center is specified by addresses I, J, and K for the Xp, Yp, and Zp axes, respectively. The numerical value following I, J, or K, however, is a vector component in which the arc center is seen from the start point, and is always specified as an incremental value irrespective of G90 and G91, as shown below.
I, J, and K must be signed according to the direction.

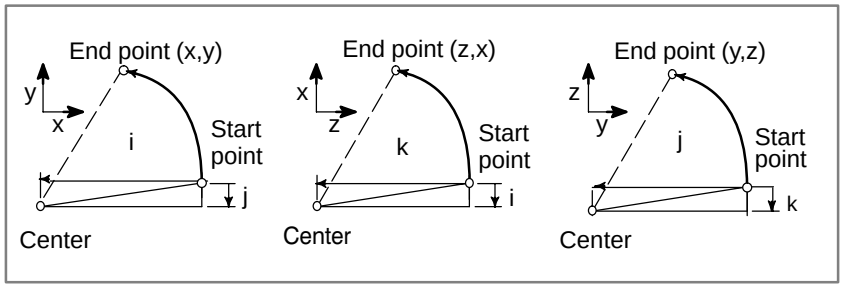

I0,J0, and K0 can be omitted. When X_p, Y_p , and Z_p are omitted (the end point is the same as the start point) and the center is specified with I, J, and K, a 360° arc (circle) is specified.
G021; Command for a circle
If the difference between the radius at the start point and that at the end point exceeds the permitted value in a parameter (No.3410), an P/S alarm (No.020) occurs.

- **Arc radius**

The distance between an arc and the center of a circle that contains the arc can be specified using the radius, R, of the circle instead of I, J, and K. In this case, one arc is less than 180°, and the other is more than 180° are considered. When an arc exceeding 180° is commanded, the radius must be specified with a negative value. If Xp, Yp, and Zp are all omitted, if the end point is located at the same position as the start point and when R is used, an arc of 0° is programmed
G02R ; (The cutter does not move.)

For arc (1)**(less than 180°)**
G91 G02 X_P60.0 Y_P20.0 R50.0 F300.0 ;
For arc (2)**(greater than 180°)**
G91 G02 X_P60.0 Y_P20.0 R–50.0 F300.0 ;

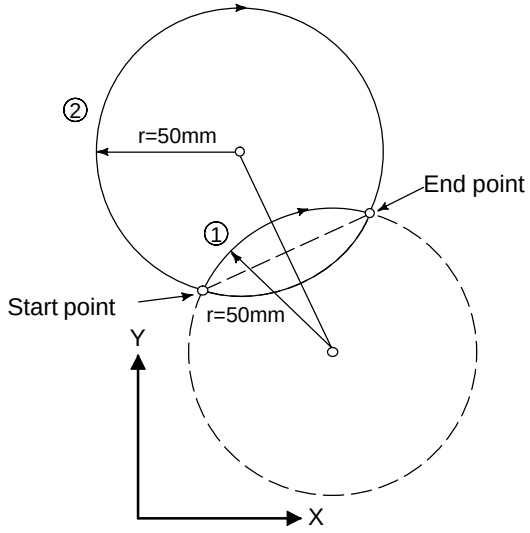

- **Feedrate**

The feedrate in circular interpolation is equal to the feed rate specified by the F code, and the feedrate along the arc (the tangential feedrate of the arc) is controlled to be the specified feedrate.
The error between the specified feedrate and the actual tool feedrate is ±2% or less. However, this feed rate is measured along the arc after the cutter compensation is applied

Restrictions

If I, J, K, and R addresses are specified simultaneously, the arc specified by address R takes precedence and the other are ignored.
If an axis not comprising the specified plane is commanded, an alarm is displayed.
For example, if axis U is specified as a parallel axis to X axis when plane XY is specified, an P/S alarm (No.028)is displayed.
When an arc having a center angle approaching 180° is specified, the calculated center coordinates may contain an error. In such a case, specify the center of the arc with I, J, and K.

Examples

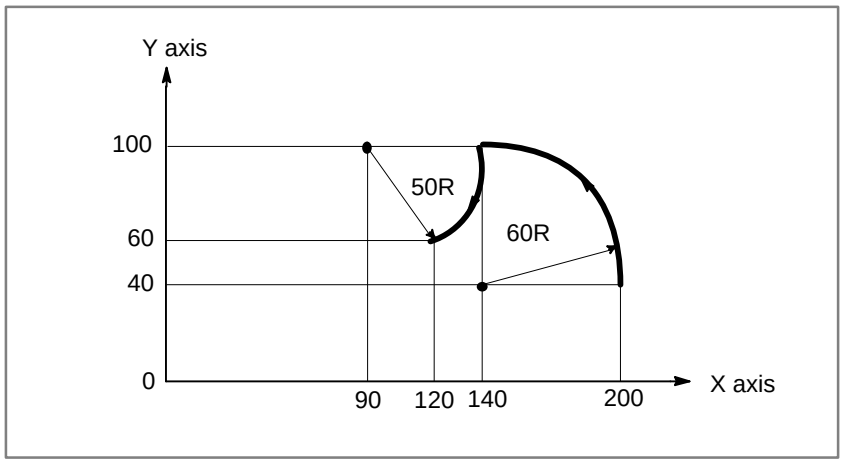

The above tool path can be programmed as follows ;

(1) In absolute programming

G92X200.0 Y40.0 Z0 ;
G90 G03 X140.0 Y100.0R60.0 F300.;
G02 X120.0 Y60.0R50.0 ;

or

G92X200.0 Y40.0Z0 ;
G90 G03 X140.0 Y100.0I−60.0 F300.;
G02 X120.0 Y60.0I−50.0 ;

(2) In incremental programming

G91 G03 X−60.0 Y60.0 R60.0 F300.;
G02 X−20.0 Y−40.0 R50.0 ;

or

G91 G03 X−60.0 Y60.0 I−60.0 F300. ;
G02 X−20.0 Y−40.0 I−50.0 ;

4.5 HELICAL INTERPOLATION (G02,G03)

Helical interpolation which moved helically is enabled by specifying up to two other axes which move synchronously with the circular interpolation by circular commands.

Format

Synchronously with arc of XpYp plane

$$G17 \left\{ \begin{matrix} G02 \\ G03 \end{matrix} \right\} Xp_Yp_ \left\{ \begin{matrix} I_J_ \\ R_ \end{matrix} \right\} \alpha_(\beta_)F_;$$

Synchronously with arc of ZpXp plane

$$G18 \left\{ \begin{matrix} G02 \\ G03 \end{matrix} \right\} Xp_Zp_ \left\{ \begin{matrix} I_K_ \\ R_ \end{matrix} \right\} \alpha_(\beta_)F_;$$

Synchronously with arc of YpZp plane

$$G19 \left\{ \begin{matrix} G02 \\ G03 \end{matrix} \right\} Yp_Zp_ \left\{ \begin{matrix} J_K_ \\ R_ \end{matrix} \right\} \alpha_(\beta_)F_;$$

α,β: Any one axis where circular interpolation is not applied.
Up to two other axes can be specified.

Explanations

The command method is to simply or secondary add a move command axis which is not circular interpolation axes. An F command specifies a feed rate along a circular arc. Therefore, the feed rate of the linear axis is as follows:

$$F\times \frac{\text{Length of linear axis}}{\text{Length of circular arc}}$$

Determine the feed rate so the linear axis feed rate does not exceed any of the various limit values.Bit 0 (HFC) of parameter No. 1404 can be used to prevent the linear axis feedrate from exceeding various limit values.

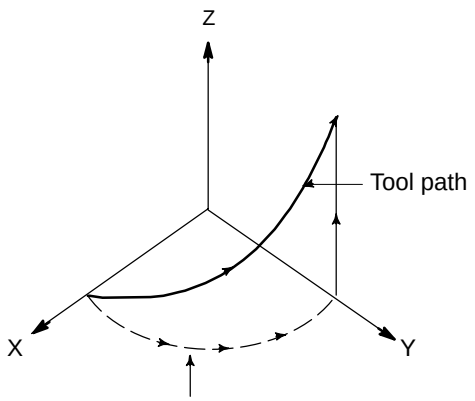

The feedrate along the circumference of two circular interpolated axes is the specified feedrate.

Restrictions

Cutter compensation is applied only for a circular arc.
Tool offset and tool length compensation cannot be used in a block in which a helical interpolation is commanded.

4.6 CYLINDRICAL INTERPOLATION (G07.1)

The amount of travel of a rotary axis specified by an angle is once internally converted to a distance of a linear axis along the outer surface so that linear interpolation or circular interpolation can be performed with another axis. After interpolation, such a distance is converted back to the amount of travel of the rotary axis.
The cylindrical interpolation function allows the side of a cylinder to be developed for programming. So programs such as a program for cylindrical cam grooving can be created very easily.

Format

```
G07.1 IP r ; Starts the cylindrical interpolation mode
     (enables cylindrical interpolation).
        :
        :
G07.1 IP 0 ; The cylindrical interpolation mode is cancelled.

        IP: An address for the rotation axis
        r : The radius of the cylinder

Specify G07.1 IP r ; and G07.1 IP 0; in separate blocks.
G107 can be used instead of G07.1.
```

Explanations

- **Plane selection (G17, G18, G19)**

Use parameter (No. 1022) to specify whether the rotation axis is the X–, Y–, or Z–axis, or an axis parallel to one of these axes. Specify the G code to select a plane for which the rotation axis is the specified linear axis. For example, when the rotation axis is an axis parallel to the X–axis, G17 must specify an Xp–Yp plane, which is a plane defined by the rotation axis and the Y–axis or an axis parallel to the Y–axis.
Only one rotation axis can be set for cylindrical interpolation.

- **Feedrate**

A feedrate specified in the cylindrical interpolation mode is a speed on the developed cylindrical surface.

- **Circular interpolation (G02,G03)**

In the cylindrical interpolation mode, circular interpolation is possible with the rotation axis and another linear axis. Radius R is used in commands in the same way as described in II–4.4.
The unit for a radius is not degrees but millimeters (for metric input) or inches (for inch input).

< Example Circular interpolation between the Z axis and C axis >

For the C axis of parameter (No.1022), 5 (axis parallel with the X axis) is to be set. In this case, the command for circular interpolation is

```
G18 Z__C__;
G02 (G03) Z__C__R__;
```

For the C axis of parameter (No.1022), 6 (axis parallel with the Y axis) may be specified instead. In this case, however, the command for circular interpolation is

```
G19 C__Z__;
G02 (G03) Z__C__R__;
```

- **Tool offset**

To perform tool offset in the cylindrical interpolation mode, cancel any ongoing cutter compensation mode before entering the cylindrical interpolation mode. Then, start and terminate tool offset within the cylindrical interpolation mode.

- **Cylindrical interpolation accuracy**

In the cylindrical interpolation mode, the amount of travel of a rotary axis specified by an angle is once internally converted to a distance of a linear axis on the outer surface so that linear interpolation or circular interpolation can be performed with another axis. After interpolation, such a distance is converted back to an angle. For this conversion, the amount of travel is rounded to a least input increment.
So when the radius of a cylinder is small, the actual amount of travel can differ from a specified amount of travel. Note, however, that such an error is not accumulative.
If manual operation is performed in the cylindrical interpolation mode with manual absolute on, an error can occur for the reason described above.

$$\text{The actual amount of travel} = \left[\frac{\text{MOTION REV}}{2\times 2\pi R}\left[\times \text{Specified value} \times \frac{2\times 2\pi R}{\text{MOTION REV}}\right]\right]$$

MOTION REV : The amount of travel per rotation of the rotation axis (Setting value of parameter No. 1260)

R : Workpiece radius

$[\ ]$:Rounded to the least input increment

Limitations

- **Arc radius specification in the cylindrical interpolation mode**

In the cylindrical interpolation mode, an arc radius cannot be specified with word address I, J, or K.

- **Circular interpolation and cutter compensation**

If the cylindrical interpolation mode is started when cutter compensation is already applied, circular interpolation is not correctly performed in the cylindrical interpolation mode.

- **Positioning**

In the cylindrical interpolation mode, positioning operations (including those that produce rapid traverse cycles such as G28, G53, G73, G74, G76, G80 through G89) cannot be specified. Before positioning can be specified, the cylindrical interpolation mode must be cancelled. Cylindrical interpolation (G07.1) cannot be performed in the positioning mode (G00).

- **Coordinate system setting**

In the cylindrical interpolation mode, a workpiece coordinate system (G92, G54 through G59) or local coordinate system (G52) cannot be specified.

- **Cylindrical interpolation mode setting**

In the cylindrical interpolation mode, the cylindrical interpolation mode cannot be reset. The cylindrical interpolation mode must be cancelled before the cylindrical interpolation mode can be reset.

- **Tool offset**

A tool offset must be specified before the cylindrical interpolation mode is set. No offset can be changed in the cylindrical interpolation mode.

- **Index table indexing function**

Cylindrical interpolation cannot be specified when the index table index function is being used.

Examples

Example of a Cylindrical Interpolation Program

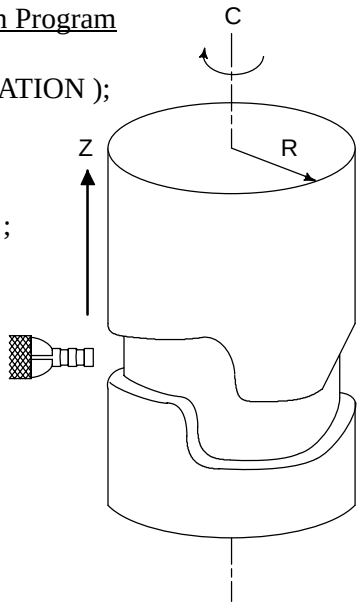


```
O0001 (CYLINDRICAL INTERPOLATION );
N01 G00 G90 Z100.0 C0 ;
N02 G01 G91 G18 Z0 C0 ;
N03 G07.1 C57299 ;
N04 G90 G01 G42 Z120.0 D01 F250 ;
N05 C30.0 ;
N06 G02 Z90.0 C60.0 R30.0 ;
N07 G01 Z70.0 ;
N08 G03 Z60.0 C70.0 R10.0 ;
N09 G01 C150.0 ;
N10 G03 Z70.0 C190.0 R75.0 ;
N11 G01 Z110.0 C230.0 ;
N12 G02 Z120.0 C270.0 R75.0 ;
N13 G01 C360.0 ;
N14 G40 Z100.0 ;
N15 G07.1 C0 ;
N16 M30 ;
```

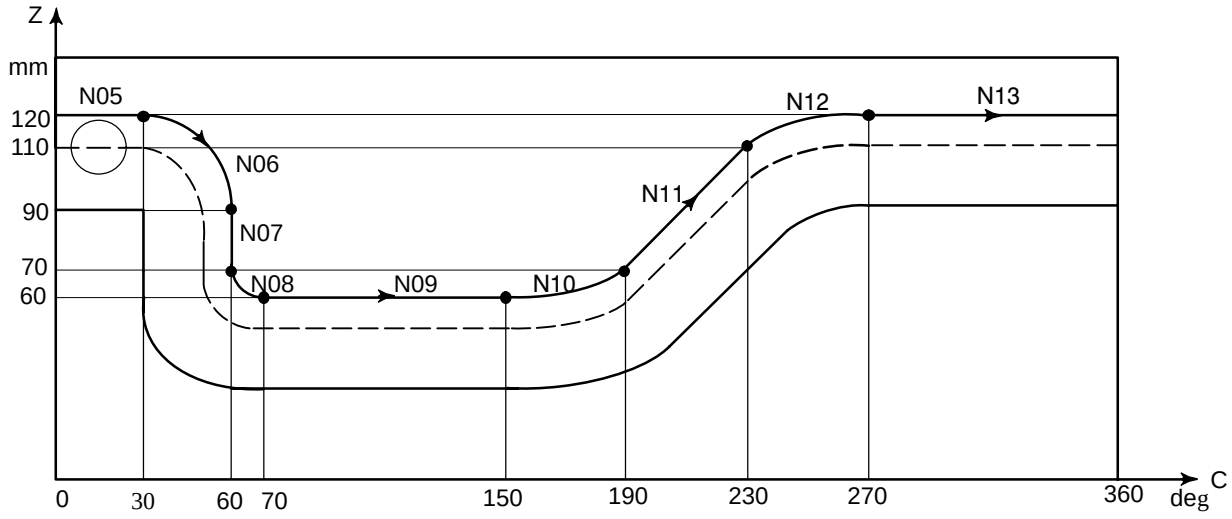

4.7 THREAD CUTTING (G33)

Straight threads with a constant lead can be cut. The position coder mounted on the spindle reads the spindle speed in real–time. The read spindle speed is converted to the feedrate per minute to feed the tool.

Format

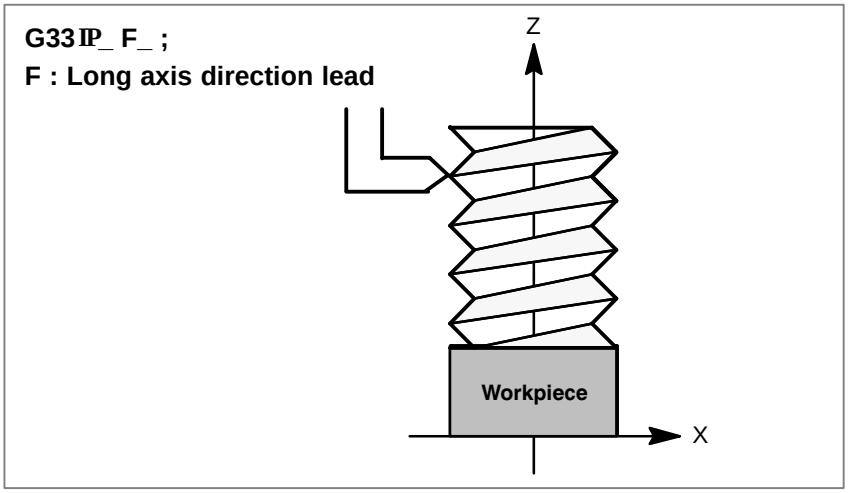

Explanations

In general, thread cutting is repeated along the same tool path in rough cutting through finish cutting for a screw. Since thread cutting starts when the position coder mounted on the spindle outputs a 1–turn signal, threading is started at a fixed point and the tool path on the workpiece is unchanged for repeated thread cutting. Note that the spindle speed must remain constant from rough cutting through finish cutting. If not, incorrect thread lead will occur.

In general, the lag of the servo system, etc. will produce somewhat incorrect leads at the starting and ending points of a thread cut. To compensate for this, a thread cutting length somewhat longer than required should be specified.

Table 4.7 lists the ranges for specifying the thread lead.

Table. 4.7 Ranges of lead sizes that can be specified

	Least command increment	Command value range of the lead
mm input	0.001 mm	F1 to F50000 (0.01 to 500.00mm)
	0.0001 mm	F1 to F50000 (0.01 to 500.00mm)
Inch input	0.0001 inch	F1 to F99999 (0.0001 to 9.9999inch)
	0.00001 inch	F1 to F99999 (0.0001 to 9.9999inch)

NOTE

1 The spindle speed is limited as follows :

$$1 \leqq \text{spindle speed} \leqq \frac{\text{Maximum feedrate}}{\text{Thread lead}}$$

Spindle speed : min^{-1}
Thread lead : mm or inch
Maximum feedrate : mm/min or inch/min ; maximum command–specified feedrate for feed–per–minute mode or maximum feedrate that is determined based on mechanical restrictions including those related to motors, whichever is smaller

2 Cutting feedrate override is not applied to the converted feedrate in all machining process from rough cutting to finish cutting. The feedrate is fixed at 100%
3 The converted feedrate is limited by the upper feedrate specified.
4 Feed hold is disabled during threading. Pressing the feed hold key during thread cutting causes the machine to stop at the end point of the next block after threading (that is, after the G33 mode is terminated)

Examples

Thread cutting at a pitch of 1.5mm

```
G33 Z10. F1.5;
```

4.8 SKIP FUNCTION(G31)

Linear interpolation can be commanded by specifying axial move following the G31 command, like G01. If an external skip signal is input during the execution of this command, execution of the command is interrupted and the next block is executed.
The skip function is used when the end of machining is not programmed but specified with a signal from the machine, for example, in grinding. It is used also for measuring the dimensions of a workpiece.

Format

G31 IP_ ;

G31: One–shot G code (If is effective only in the block in which it is specified)

Explanations

The coordinate values when the skip signal is turned on can be used in a custom macro because they are stored in the custom macro system variable #5061 to #5064, as follows:

#5061 X axis coordinate value
#5062 Y axis coordinate value
#5063 Z axis coordinate value
#5064 4th axis coordinate value

WARNING

Disable feedrate override, dry run, and automatic acceleration/deceleration (however, these become available by setting the parameter SKF No.6200#7 to 1.) when the feedrate per minute is specified, allowing for an error in the position of the tool when a skip signal is input. These functions are enabled when the feedrate per rotation is specified.

NOTE

If G31 command is issued while cutter compensation C is applied, an P/S alarm of No.035 is displayed. Cancel the cutter compensation with the G40 command before the G31 command is specified.

Examples

- **The next block to G31 is an incremental command**

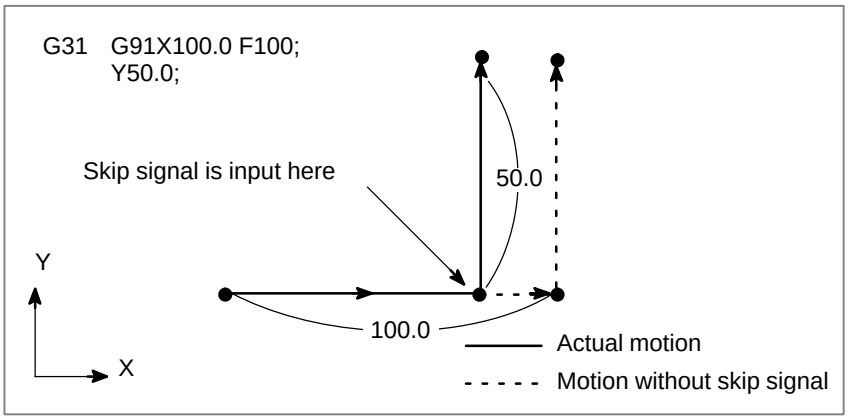

Fig. 4.8 (a) The next block is an incremental command

- **The next block to G31 is an absolute command for 1 axis**

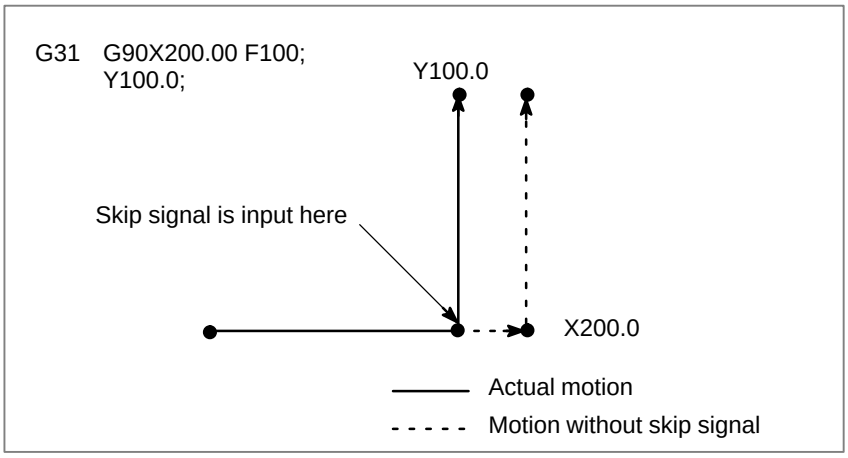

Fig. 4.8 (b) The next block is an absolute command for 1 axis

- **The next block to G31 is an absolute command for 2 axes**

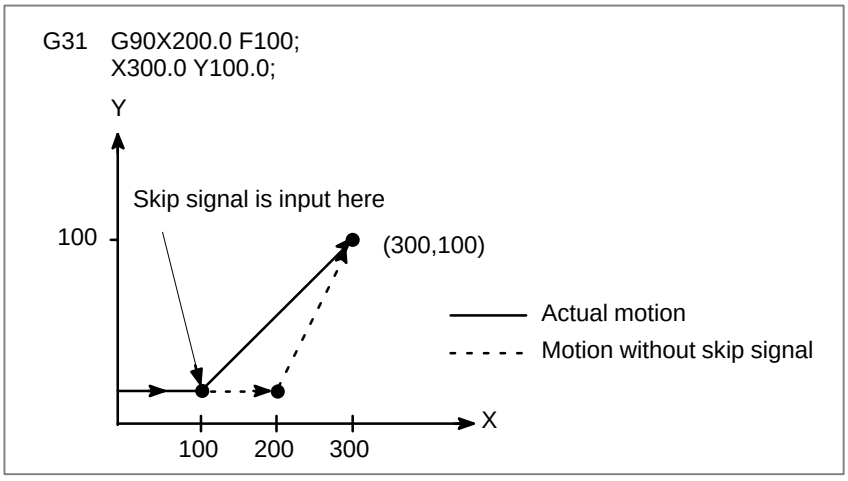

Fig. 4.8 (c) The next block is an absolute command for 2 axes

4.9 HIGH SPEED SKIP SIGNAL (G31)

The skip function operates based on a high–speed skip signal (connected directly to the NC; not via the PMC) instead of an ordinary skip signal. In this case, up to eight signals can be input.
Delay and error of skip signal input is 0 – 2 msec at the NC side (not considering those at the PMC side).
This high–speed skip signal input function keeps this value to 0.1 msec or less, thus allowing high precision measurement.

For details, refer to the appropriate manual supplied from the machine tool builder.

Format

G31 IP_ ;

G31: One–shot G code (If is effective only in the block in which it is specified)

5 FEED FUNCTIONS

5.1 GENERAL

The feed functions control the feedrate of the tool. The following two feed functions are available:

- **Feed functions**

1. Rapid traverse
   When the positioning command (G00) is specified, the tool moves at a rapid traverse feedrate set in the CNC (parameter No. 1420).

2. Cutting feed
   The tool moves at a programmed cutting feedrate.

- **Override**

Override can be applied to a rapid traverse rate or cutting feedrate using the switch on the machine operator's panel.

- **Automatic acceleration/ deceleration**

To prevent a mechanical shock, acceleration/deceleration is automatically applied when the tool starts and ends its movement (Fig. 5.1 (a)).

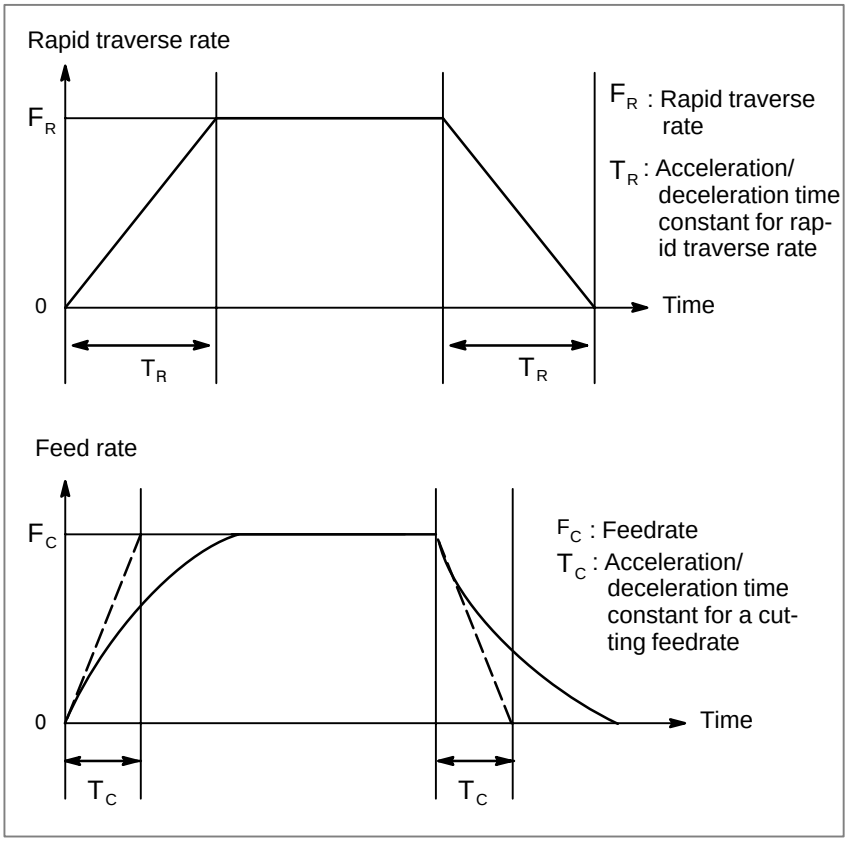

Fig. 5.1 (a) Automatic acceleration/deceleration (example)

- **Tool path in a cutting feed**

If the direction of movement changes between specified blocks during cutting feed, a rounded–corner path may result (Fig. 5.1 (b)).

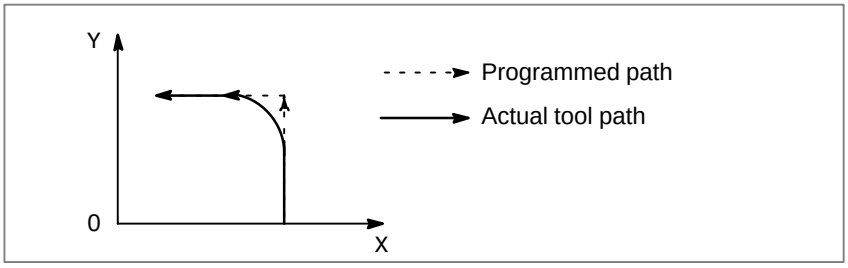

Fig. 5.1 (b) Example of tool path between two blocks

In circular interpolation, a radial error occurs (Fig. 5.1(c)).

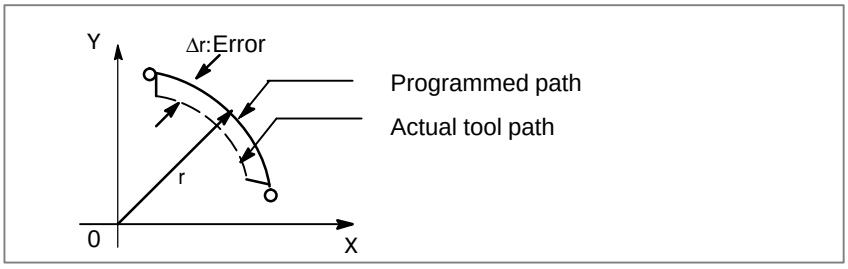

Fig. 5.1 (c) Example of radial error in circular interpolation

The rounded–corner path shown in Fig. 5.1(b) and the error shown in Fig. 5.1(c) depend on the feedrate. So, the feedrate needs to be controlled for the tool to move as programmed.

5.2 RAPID TRAVERSE

Format

G00 IP_ ;

G00 : G code (group 01) for positioning (rapid traverse)
IP_ ; Dimension word for the end point

Explanations

The positioning command (G00) positions the tool by rapid traverse. In rapid traverse, the next block is executed after the specified feedrate becomes 0 and the servo motor reaches a certain range set by the machine tool builder (in–position check).
A rapid traverse rate is set for each axis by parameter No. 1420, so no rapid traverse feedrate need be programmed.
The following overrides can be applied to a rapid traverse rate with the switch on the machine operator's panel:F0, 25, 50, 100%
F0: Allows a fixed feedrate to be set for each axis by parameter No. 1421.
For detailed information, refer to the appropriate manual of the machine tool builder.

5.3 CUTTING FEED

Feedrate of linear interpolation (G01), circular interpolation (G02, G03), etc. are commanded with numbers after the F code.
In cutting feed, the next block is executed so that the feedrate change from the previous block is minimized.
Four modes of specification are available:

1. Feed per minute (G94)
   After F, specify the amount of feed of the tool per minute.
2. Feed per revolution (G95)
   After F, specify the amount of feed of the tool per spindle revolution.
3. F1–digit feed
   Specify a desired one–digit number after F. Then, the feedrate set with the CNC for that number is set.

Format

Feed per minute
G94 ; G code (group 05) for feed per minute
F_ ; Feedrate command (mm/min or inch/min)

Feed per revolution
G95 ; G code (group 05) for feed per revolution
F_ ; Feedrate command (mm/rev or inch/rev)

F1–digit feed
FN ;
N : Number from 1 to 9

Explanations

- **Tangential speed constant control**

Cutting feed is controlled so that the tangential feedrate is always set at a specified feedrate.

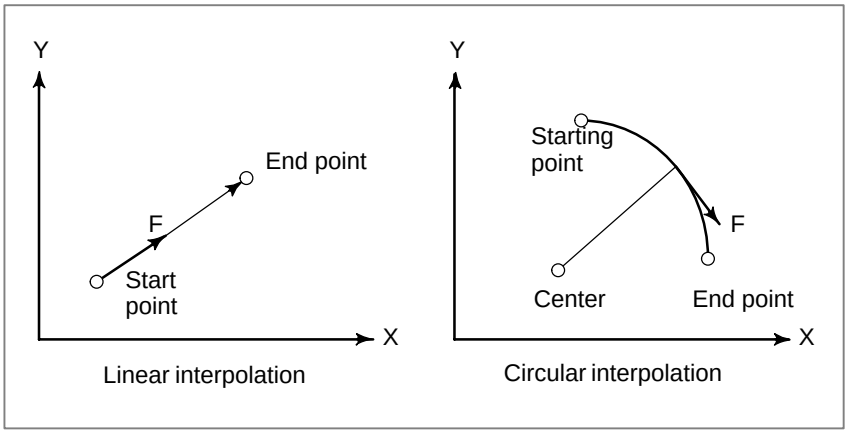

Fig. 5.3 (a) Tangential feedrate (F)

- **Feed per minute (G94)**

After specifying G94 (in the feed per minute mode), the amount of feed of the tool per minute is to be directly specified by setting a number after F. G94 is a modal code. Once a G94 is specified, it is valid until G95 (feed per revolution) is specified. At power–on, the feed per minute mode is set.
An override from 0% to 254% (in 1% steps) can be applied to feed per minute with the switch on the machine operator's panel. For detailed information, see the appropriate manual of the machine tool builder.

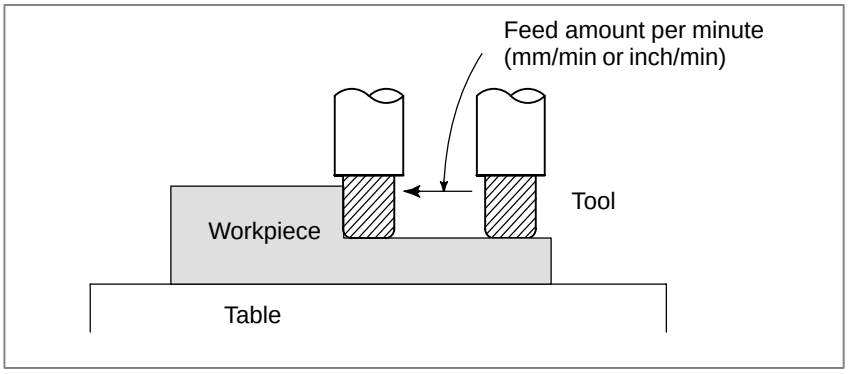

Fig. 5.3 (b) Feed per minute

WARNING
No override can be used for some commands such as for threading.

- **Feed per revolution (G95)**

After specifying G95 (in the feed per revolution mode), the amount of feed of the tool per spindle revolution is to be directly specified by setting a number after F. G95 is a modal code. Once a G95 is specified, it is valid until G94 (feed per minute) is specified.
An override from 0% to 254% (in 1% steps) can be applied to feed per revolution with the switch on the machine operator's panel. For detailed information, see the appropriate manual of the machine tool builder.

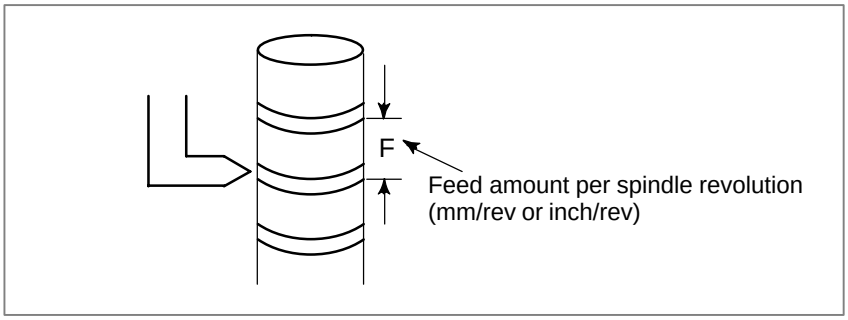

Fig. 5.3 (c) Feed per revolution

CAUTION
When the speed of the spindle is low, feedrate fluctuation may occur. The slower the spindle rotates, the more frequently feedrate fluctuation occurs.

● One–digit F code feed

When a one–digit number from 1 to 9 is specified after F, the feedrate set for that number in a parameter (Nos. 1451 to 1459) is used. When F0 is specified, the rapid traverse rate is applied.
The feedrate corresponding to the number currently selected can be increased or decreased by turning on the switch for changing F1–digit feedrate on the machine operator's panel, then by rotating the manual pulse generator.
The increment/decrement, ΔF, in feedrate per scale of the manual pulse generator is as follows:

$$\Delta F = \frac{Fmax}{100X}$$

Fmax : feedrate upper limit for F1–F4 set by parameter (No.1460), or feedrate upper limit for F5–F9 set by parameter (No.1461)
X :any value of 1–127 set by parameter (No.1450)

The feedrate set or altered is kept even while the power is off. The current feed rate is displayed on the CRT screen.

● Cutting feedrate clamp

A common upper limit can be set on the cutting feedrate along each axis with parameter No. 1422. If an actual cutting feedrate (with an override applied) exceeds a specified upper limit, it is clamped to the upper limit. Parameter No. 1430 can be used to specify the maximum cutting feedrate for each axis only for linear interpolation and circular interpolation. When the cutting feedrate along an axis exceeds the maximum feedrate for the axis as a result of interpolation, the cutting feedrate is clamped to the maximum feedrate.

NOTE
An upper limit is set in mm/min or inch/min. CNC calculation may involve a feedrate error of ±2% with respect to a specified value. However, this is not true for acceleration/deceleration. To be more specific, this error is calculated with respect to a measurement on the time the tool takes to move 500 mm or more during the steady state:

Reference

See Appendix C for range of feedrate command value.

5.4 CUTTING FEEDRATE CONTROL

Cutting feedrate can be controlled, as indicated in Table 5.4.

Table 5.4 Cutting Feedrate Control

Function name		G code	Validity of G code	Description
Exact stop		G09	This function is valid for specified blocks only.	The tool is decelerated at the end point of a block, then an in–position check is made. Then the next block is executed.
Exact stop mode		G61	Once specified, this function is valid until G62, G63, or G64 is specified.	The tool is decelerated at the end point of a block, then an in–position check is made. Then the next block is executed.
Cutting mode		G64	Once specified, this function is valid until G61, G62, or G63 is specified.	The tool is not decelerated at the end point of a block, but the next block is executed.
Tapping mode		G63	Once specified, this function is valid until G61, G62, or G64 is specified.	The tool is not decelerated at the end point of a block, but the next block is executed. When G63 is specified, feedrate override and feed hold are invalid.
Auto–matic	Automatic override for inner corners	G62	Once specified, this function is valid until G61, G63, or G64 is specified.	When the tool moves along an inner corner during cutter compensation, override is applied to the cutting feedrate to suppress the amount of cutting per unit of time so that a good surface finish can be produced.
	Internal circular cutting feedrate change	_	This function is valid in the cutter compensation mode, regardless of the G code.	The internal circular cutting feedrate is changed.

NOTE

1 The purpose of in–position check is to check that the servo motor has reached within a specified range (specified with a parameter by the machine tool builder).
In–position check is not performed when bit 5 (NCI) of parameter No. 1601 is set to 1.

2 Inner corner angle θ: $2° < \theta \leqq \alpha \leqq 178°$
(α is a set value)

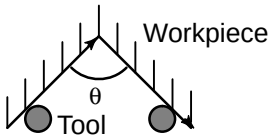

Format

Exact stop	**G09 IP_ ;**
Exact stop mode	**G61 ;**
Cutting mode	**G64 ;**
Tapping mode	**G63 ;**
Automatic corner override	**G62 ;**

5.4.1 Exact Stop (G09, G61) Cutting Mode (G64) Tapping Mode (G63)

Explanations

The inter–block paths followed by the tool in the exact stop mode, cutting mode, and tapping mode are different (Fig. 5.4.1).

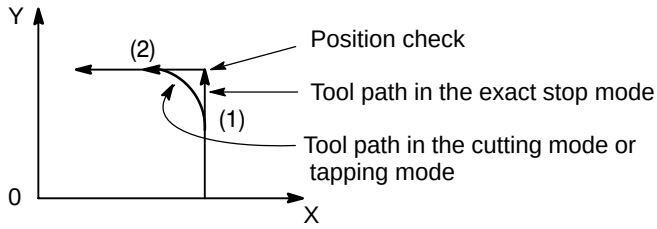

Fig. 5.4.1 Example of tool paths from block (1) to block (2)

CAUTION
The cutting mode (G64 mode) is set at power–on or system clear.

5.4.2 Automatic Corner Override

When cutter compensation is performed, the movement of the tool is automatically decelerated at an inner corner and internal circular area. This reduces the load on the cutter and produces a smoothly machined surface.

5.4.2.1 Automatic Override for Inner Corners (G62)

Explanations

- **Override condition**

When G62 is specified, and the tool path with cutter compensation applied forms an inner corner, the feedrate is automatically overridden at both ends of the corner.
There are four types of inner corners (Fig. 5.4.2.1 (a)).
$2, \leqq \theta \leqq \theta p \leqq 178$, in Fig. 5.4.2.1 (a)
θp is a value set with parameter No. 1711. When θ is approximately equal to θp, the inner corner is determined with an error of 0.001,or less.

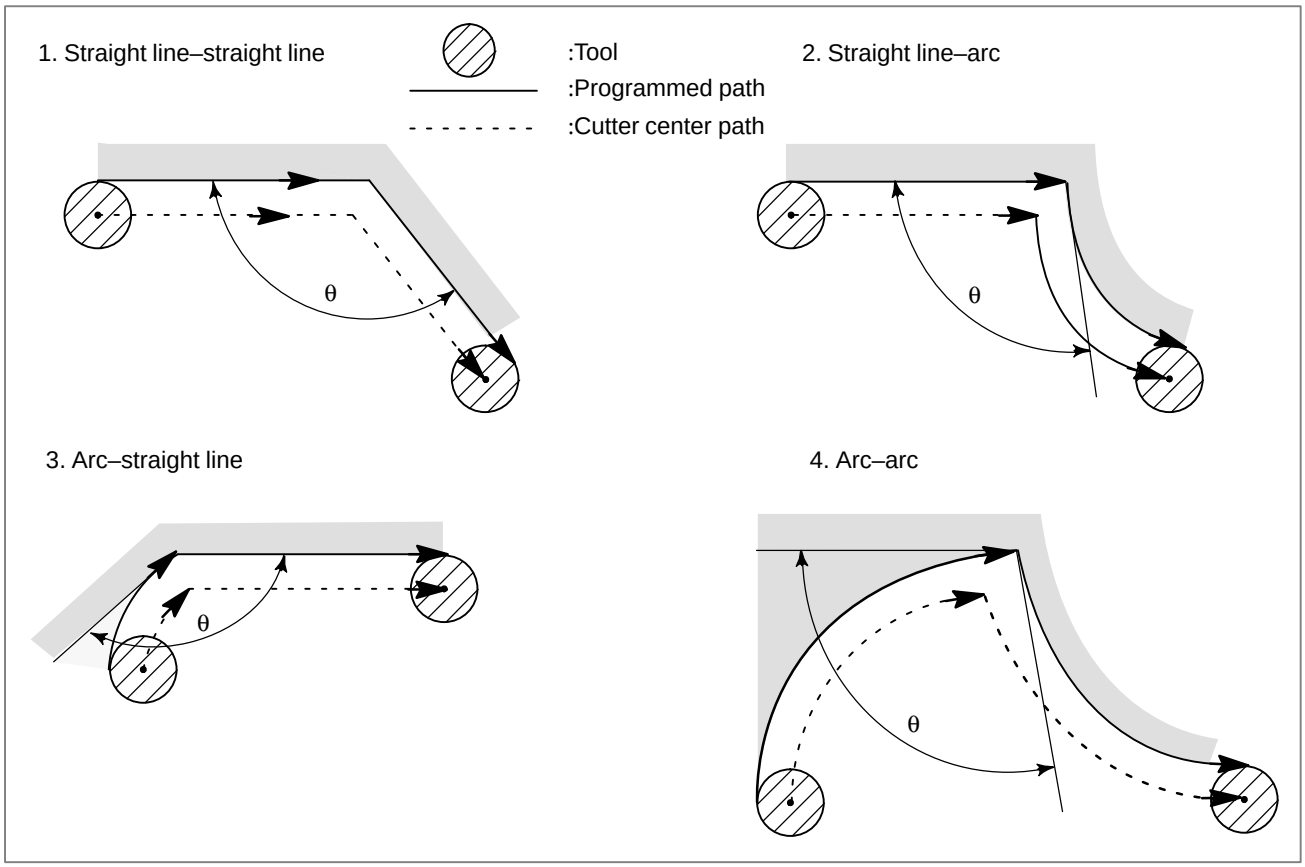

Fig. 5.4.2.1 (a) Inner corner

Override range

When a corner is determined to be an inner corner, the feedrate is overridden before and after the inner corner. The distances Ls and Le, where the feedrate is overridden, are distances from points on the cutter center path to the corner (Fig. 5.4.2.1 (b), Fig. 5.4.2.1 (c), Fig. 5.4.2.1 (d)). Ls and Le are set with parameter Nos. 1713 and 1714.

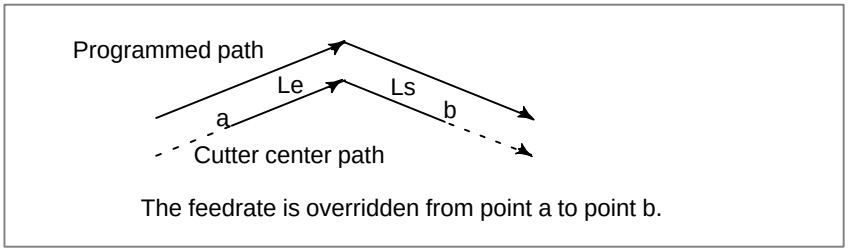

FIg. 5.4.2.1 (b) Override Range (Straight Line to Straight Line)

When a programmed path consists of two arcs, the feedrate is overridden if the start and end points are in the same quadrant or in adjacent quadrants (Fig. 5.4.2.1 (c)).

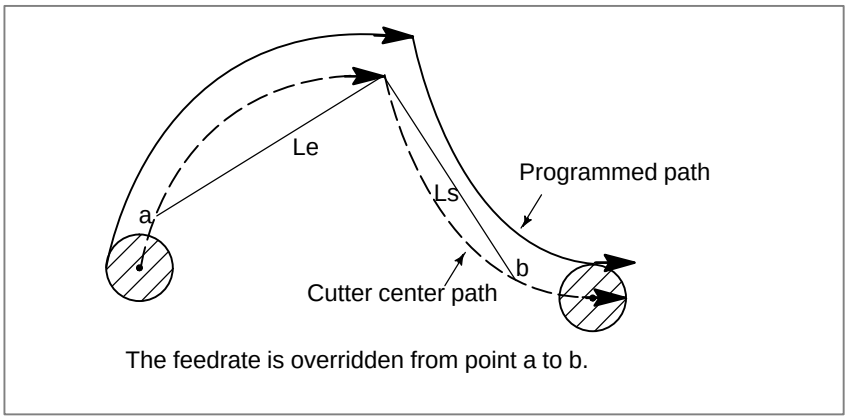

Fig. 5.4.2.1 (c) Override Range (Arc to Arc)

Regarding program (2) of an arc, the feedrate is overridden from point a to point b and from point c to point d (Fig. 5.4.2.1 (d)).

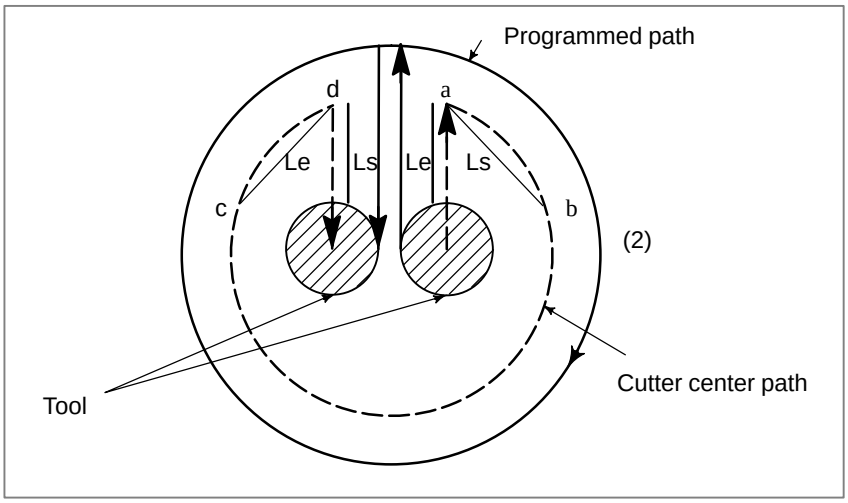

Fig. 5.4.2.1 (d) Override Range (Straight Line to Arc, Arc to Straight Line)

Override value

An override value is set with parameter No. 1712. An override value is valid even for dry run and F1–digit specification.
In the feed per minute mode, the actual feedrate is as follows:

F × (automatic override for inner corners) × (feedrate override)

Limitations

- **Acceleration/deceleration before interpolation**

  Override for inner corners is disabled during acceleration/deceleration before interpolation.

- **Start–up/G41, G42**

  Override for inner corners is disabled if the corner is preceded by a start–up block or followed by a block including G41 or G42.

- **Offset**

  Override for inner corners is not performed if the offset is zero.

5.4.2.2 Internal Circular Cutting Feedrate Change

For internally offset circular cutting, the feedrate on a programmed path is set to a specified feedrate (F) by specifying the circular cutting feedrate with respect to F, as indicated below (Fig. 5.4.2.2). This function is valid in the cutter compensation mode, regardless of the G62 code.

$$F \times \frac{Rc}{Rp}$$

Rc : Cutter center path radius
Rp : Programmed radius

It is also valid for the dry run and the one–digit F command.

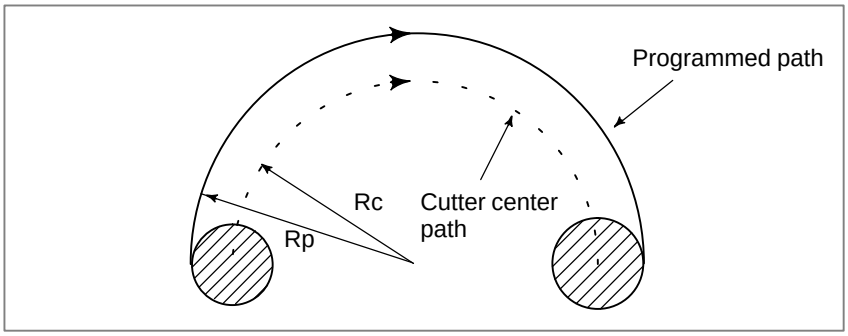

Fig. 5.4.2.2 Internal circular cutting feedrate change

If Rc is much smaller than Rp, Rc/Rp ≒ 0; the tool stops. A minimum deceleration ratio (MDR) is to be specified with parameter No. 1710. When Rc/Rp ≦ MDR, the feedrate of the tool is (F×MDR).

NOTE
When internal circular cutting must be performed together with override for inner corners, the feedrate of the tool is as follows:

$$F \times \frac{Rc}{Rp} \times \quad \text{(override for the inner corners)} \times \text{(feedrate override)}$$

5.5 DWELL (G04)

Format

Dwell G04 X_ ; or G04 P_ ;

X_ : Specify a time (decimal point permitted)
P_ : Specify a time (decimal point not permitted)

Explanations

By specifying a dwell, the execution of the next block is delayed by the specified time. In addition, a dwell can be specified to make an exact check in the cutting mode (G64 mode).
When neither P nor X is specified, exact stop is performed.
Bit 1 (DWL) of parameter No. 3405 can specify dwell for each rotation in feed per rotation mode (G95).

Table 5.5 (a) Command value range of the dwell time (Command by X)

Increment system	Command value range	Dwell time unit
IS–B	0.001 to 99999.999	s or rev
IS–C	0.0001 to 9999.9999	

Table 5.5 (b) Command value range of the dwell time (Command by P)

Increment system	Command value range	Dwell time unit
IS–B	1 to 99999999	0.001 s or rev
IS–C	1 to 99999999	0.0001 s or rev

6 REFERENCE POSITION

A CNC machine tool has a special position where, generally, the tool is exchanged or the coordinate system is set, as described later. This position is referred to as a reference position.

6.1 REFERENCE POSITION RETURN

General

- **Reference position**

The reference position is a fixed position on a machine tool to which the tool can easily be moved by the reference position return function.
For example, the reference position is used as a position at which tools are automatically changed. Up to four reference positions can be specified by setting coordinates in the machine coordinate system in parameters (No. 1240 to 1243).

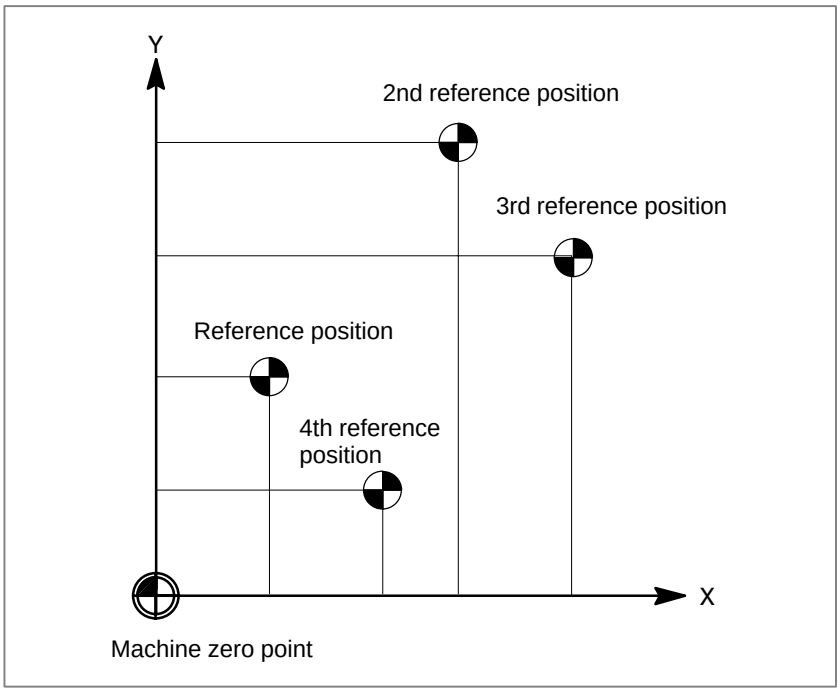

Fig. 6.1 (a) Machine zero point and reference positions

- **Reference position return and movement from the reference position**

Tools are automatically moved to the reference position via an intermediate position along a specified axis. Or, tools are automatically moved from the reference position to a specified position via an intermediate position along a specified axis. When reference position return is completed, the lamp for indicating the completion of return goes on.

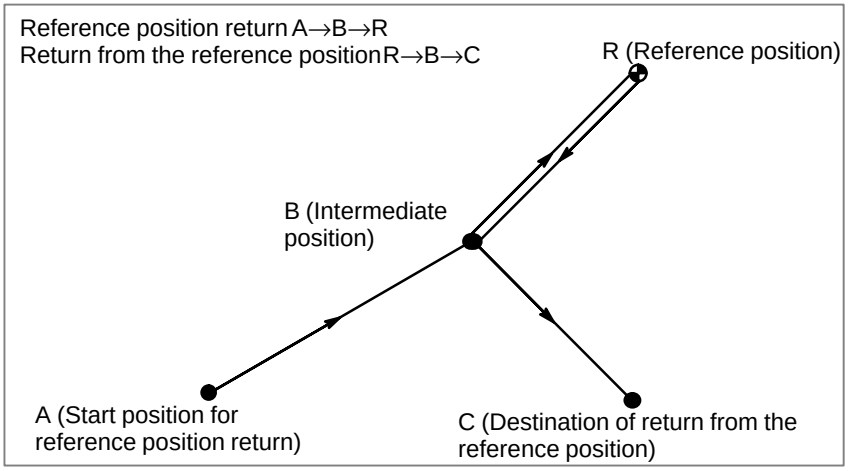

Fig. 6.1 (b) Reference position return and return form the reference position

- **Reference position return check**

The reference position return check (G27) is the function which checks whether the tool has correctly returned to the reference position as specified in the program. If the tool has correctly returned to the reference position along a specified axis, the lamp for the axis goes on.

Format

- **Reference position return**

G28 IP_ ; **Reference position return**

G30 P2 IP_ ; 2nd reference position return **(P2 can be omitted.)**

G30 P3 IP_ ; 3rd reference position return

G30 P4 IP_ ; 4th reference position return

IP_ : Command specifying the intermediate position (Absolute/incremental command)

- **Return from reference position**

G29 IP_ ;

IP_ : Command specifying the destination of return from reference position (Absolute/incremental command)

- **Reference position return check**

G27 IP_ ;

IP_ : Command specifying the reference position (Absolute/incremental command)

Explanations

- **Reference position return (G28)**

Positioning to the intermediate or reference positions are performed at the rapid traverse rate of each axis.
Therefore, for safety, the cutter compensation, and tool length compensation should be cancelled before executing this command.
The coordinates for the intermediate position are stored in the CNC only for the axes for which a value is specified in a G28 block. For the other axes, the previously specified coordinates are used.

Example N1 G28 X40.0 ; Intermediate position (X40.0)
N2 G28 Y60.0 ; Intermediate position (X40.0, Y60.0)

- **2nd, 3rd, and 4th reference position return (G30)**

In a system without an absolute–position detector, the first, third, and fourth reference position return functions can be used only after the reference position return (G28) or manual reference position return (see III–3.1) is made. The G30 command is generally used when the automatic tool changer (ATC) position differs from the reference position.

- **Return from the reference position (G29)**

In general, it is commanded immediately following the G28 command or G30. For incremental programming, the command value specifies the incremental value from the intermediate point.
Positioning to the intermediate or reference points are performed at the rapid traverse rate of each axis.
When the workpiece coordinate system is changed after the tool reaches the reference position through the intermediate point by the G28 command, the intermediate point also shifts to a new coordinate system. If G29 is then commanded, the tool moves to to the commanded position through the intermediate point which has been shifted to the new coordinate system.
The same operations are performed also for G30 commands.

- **Reference position return check (G27)**

G27 command positions the tool at rapid traverse rate. If the tool reaches the reference position, the reference position return lamp lights up.
However, if the position reached by the tool is not the reference position, an alarm (No. 092) is displayed.

- **Setting of the reference position return feedrate**

Before a machine coordinate system is established with the first reference position return after power–on, the manual and automatic reference position return feedrates and automatic rapid traverse rate conform to the setting of parameter No. 1428 for each axis. Even after a machine coordinate system is established lupon the completion of reference position return, the manual reference postiion return feedrate conforms to the setting of the parameter.

NOTE
1 To this feedrate, a rapid traverse override (F0 ,25,50,100%) is applied, for which the setting is 100%.
2 After a machine coordinate system has been established upon the completion of reference position return, the automatic reference position return feedrate will conform to the ordinary rapid traverse rate.
3 For the manual rapid traverse rate used before a machine coordinate system is estavlished upon the completion of reference position return a jog feedrate or manual rapid traverse rate can be selected usting RPD (bit 0 of parameter No. 1401).

	Before a coordinate system is established	**After a coordinate system is established**
Automatic reference position return (G28)	No. 1428	No.1420
Automatic rapid traverse (G00)	No.1428	No.1420
Manual reference position return	No.1428	No.1428
Manual rapid traverse rate	No.1423 *1	No.1424

NOTE
When parameter No. 1428 is set to 0, the feedrates conform to the parameter settings shown below.

	Before a coordinate system is established	**After a coordinate system is established**
Automatic reference position return (G28)	No. 1420	No.1420
Automatic rapid traverse (G00)	No.1420	No.1420
Manual reference position return	No.1424	No.1424
Manual rapid traverse rate	No.1423 *1	No.1424

1420 : Rapid traverse rate
1423 : Jog feedrate
1424 : Manual rapid traverse rate

*1 Setting of parameter No.1424 when RPD (bit 0 of parameter No.1401) is set to 1.

Restrictions

- **Status the machine lock being turned on**

The lamp for indicating the completion of return does not go on when the machine lock is turned on, even when the tool has automatically returned to the reference position. In this case, it is not checked whether the tool has returned to the reference position even when a G27 command is specified.

- **First return to the reference position after the power has been turned on (without an absolute position detector)**

When the G28 command is specified when manual return to the reference position has not been performed after the power has been turned on, the movement from the intermediate point is the same as in manual return to the reference position.
In this case, the tool moves in the direction for reference position return specified in parameter ZMIx (bit 5 of No. 1006). Therefore the specified intermediate position must be a position to which reference position return is possible.

- **Reference position return check in an offset mode**

In an offset mode, the position to be reached by the tool with the G27 command is the position obtained by adding the offset value. Therefore, if the position with the offset value added is not the reference position, the lamp does not light up, but an alarm is displayed instead. Usually, cancel offsets before G27 is commanded.

- **Lighting the lamp when the programmed position does not coincide with the reference position**

When the machine tool system is an inch system with metric input, the reference position return lamp may also light up even if the programmed position is shifted from the reference position by the least setting increment. This is because the least setting increment of the machine tool system is smaller than its least command increment.

Reference

- **Manual reference position return**

See III–3.1.

Examples

G28G90X1000.0Y500.0 ; (Programs movement from A to B)
T1111 ; (Changing the tool at the reference position)
G29X1300.0Y200.0 ; (Programs movement from B to C)

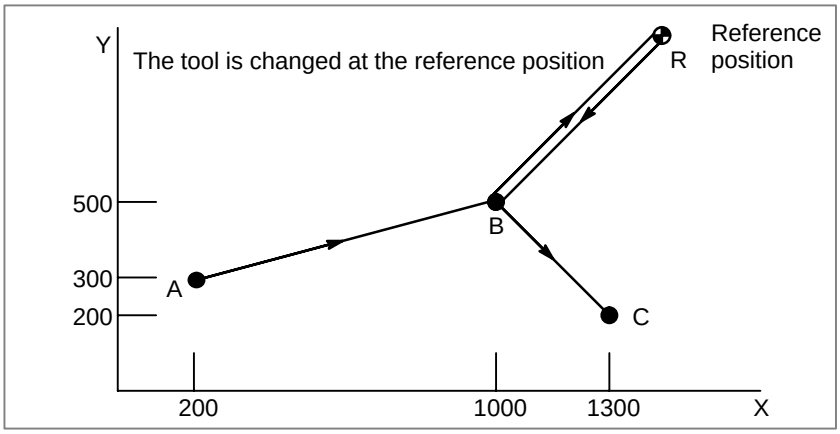

Fig. 6.1 (c) Reference position return and return from the reference position

7 COORDINATE SYSTEM

By teaching the CNC a desired tool position, the tool can be moved to the position. Such a tool position is represented by coordinates in a coordinate system. Coordinates are specified using program axes.
When three program axes, the X–axis, Y–axis, and Z–axis, are used, coordinates are specified as follows:

X_Y_Z_

This command is referred to as a dimension word.

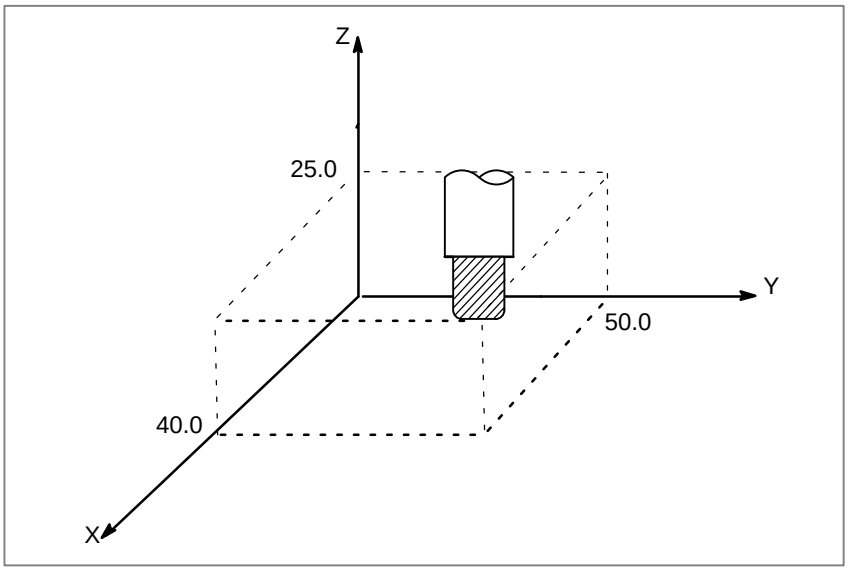

Fig. 7 Tool position specified by X40.0Y50.0Z25.0

Coordinates are specified in one of following three coordinate systems:

(1) Machine coordinate system
(2) Workpiece coordinate system
(3) Local coordinate system

The number of the axes of a coordinate system varies from one machine to another. So, in this manual, a dimension word is represented as IP_.

7.1 MACHINE COORDINATE SYSTEM

The point that is specific to a machine and serves as the reference of the machine is referred to as the machine zero point. A machine tool builder sets a machine zero point for each machine.
A coordinate system with a machine zero point set as its origin is referred to as a machine coordinate system.
A machine coordinate system is set by performing manual reference position return after power–on (see III–3.1). A machine coordinate system, once set, remains unchanged until the power is turned off.

Format

(G90)G53 IP_ ;

IP_ ; Absolute dimension word

Explanations

- **Selecting a machine coordinate system (G53)**

When a command is specified the position on a machine coordinate system, the tool moves to the position by rapid traverse. G53, which is used to select a machine coordinate system, is a one–shot G code; that is, it is valid only in the block in which it is specified on a machine coordinate system. Specify an absolute command (G90) for G53. When an incremental command (G91) is specified, the G53 command is ignored. When the tool is to be moved to a machine–specific position such as a tool change position, program the movement in a machine coordinate system based on G53.

Restrictions

- **Cancel of the compensation function**

When the G53 command is specified, cancel the cutter compensation, tool length offset, and tool offset.

- **G53 specification immediately after power–on**

Since the machine coordinate system must be set before the G53 command is specified, at least one manual reference position return or automatic reference position return by the G28 command must be performed after the power is turned on. This is not necessary when an absolute–position detector is attached.

Reference

When manual reference position return is performed after power–on, a machine coordinate system is set so that the reference position is at the coordinate values of (α, β) set using parameter No.1240.

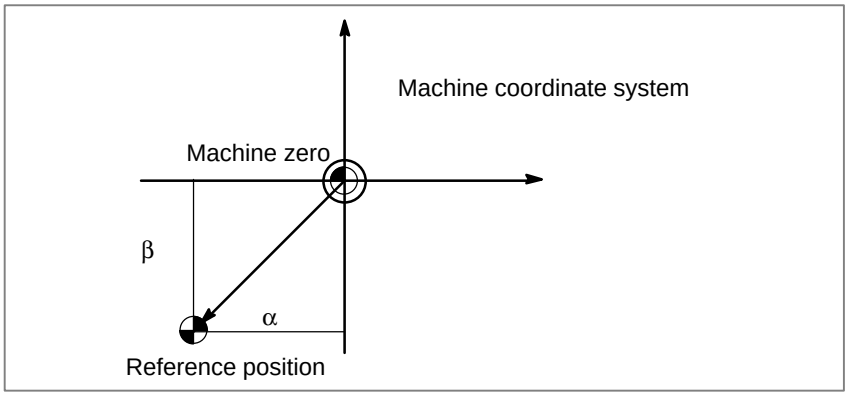

7.2 WORKPIECE COORDINATE SYSTEM

A coordinate system used for machining a workpiece is referred to as a workpiece coordinate system. A workpiece coordinate system is to be set with the CNC beforehand (setting a workpiece coordinate system).
A machining program sets a workpiece coordinate system (selecting a workpiece coordinate system).
A set workpiece coordinate system can be changed by shifting its origin (changing a workpiece coordinate system).

7.2.1 Setting a Workpiece Coordinate System

A workpiece coordinate system can be set using one of three methods:

(1) Method using G92
A workpiece coordinate system is set by specifying a value after G92 in the program.

(2) Automatic setting
If bit 0 of parameter SPR No. 1201 is set beforehand, a workpiece coordinate system is automatically set when manual reference position return is performed (see Part III–3.1.).

(3) Input using the CRT/MDI panel
Six workpiece coordinate systems can be set beforehand using the MDI panel (see Part III–11.4.6.).
When using an absolute command, establish the workpiece coordinate system in any of the above ways.

Format

- **Setting a workpiece coordinate system by G92**

(G90) G92 IP_

Explanations

A workpiece coordinate system is set so that a point on the tool, such as the tool tip, is at specified coordinates. If a coordinate system is set using G92 during tool length offset, a coordinate system in which the position before offset matches the position specified in G92 is set.
Cutter compensation is cancelled temporarily with G92.

Examples

Example 1

Setting the coordinate system by the G92X25.2Z23.0; command
(The tool tip is the start point for the program.)

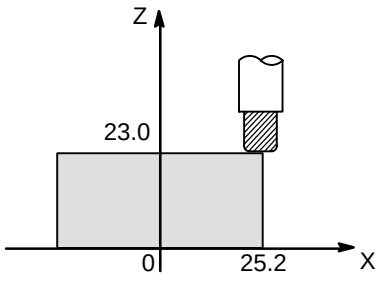

Example 2

Setting the coordinate system by the G92X600.0Z1200.0; command
(The base point on the tool holder is the start point for the program.)

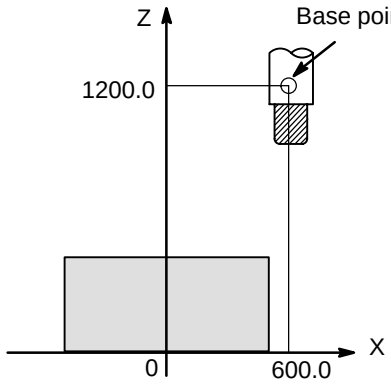

If an absolute command is issued, the base point moves to the commanded position. In order to move the tool tip to the commanded position, the difference from the tool tip to the base point is compensated by tool length offset.

7.2.2 Selecting a Workpiece Coordinate System

The user can choose from set workpiece coordinate systems as described below. (For information about the methods of setting, see II– 7.2.1.)

(1) Once a workpiece coordinate system is selected by G92 or automatic workpiece coordinate system setting, absolute commands work with the workpiece coordinate system.

(2) Choosing from six workpiece coordinate systems set using the CRT/MDI panel

By specifying a G code from G54 to G59, one of the workpiece coordinate systems 1 to 6 can be selected.

G54 Workpiece coordinate system 1
G55 Workpiece coordinate system 2
G56 Workpiece coordinate system 3
G57 Workpiece coordinate system 4
G58 Workpiece coordinate system 5
G59 Workpiece coordinate system 6

Workpiece coordinate system 1 to 6 are established after reference position return after the power is turned on. When the power is turned on, G54 coordinate system is selected.

Examples

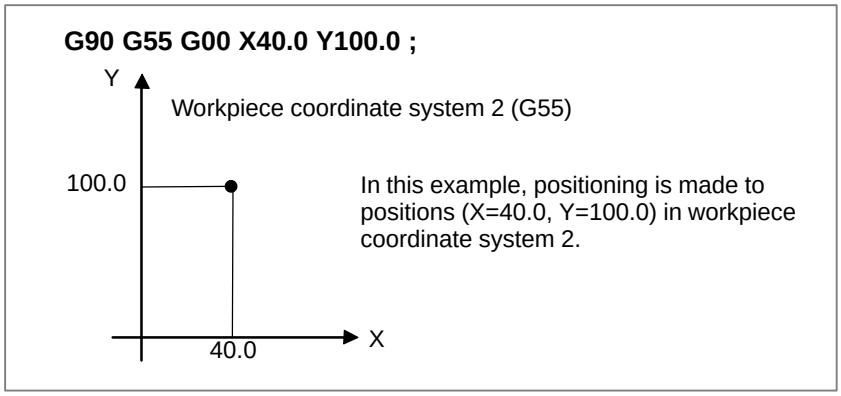

Fig. 7.2.2

7.2.3 Changing Workpiece Coordinate System

The six workpiece coordinate systems specified with G54 to G59 can be changed by changing an external workpiece zero point offset value or workpiece zero point offset value.
Three methods are available to change an external workpiece zero point offset value or workpiece zero point offset value.

(1) Inputting from the MDI panel (see III–11.4.6)
(2) Programming by G10 or G92
(3) Using the external data input function
An external workpiece zero point offset value can be changed by input signal to CNC. Refer to machine tool builder's manual for details

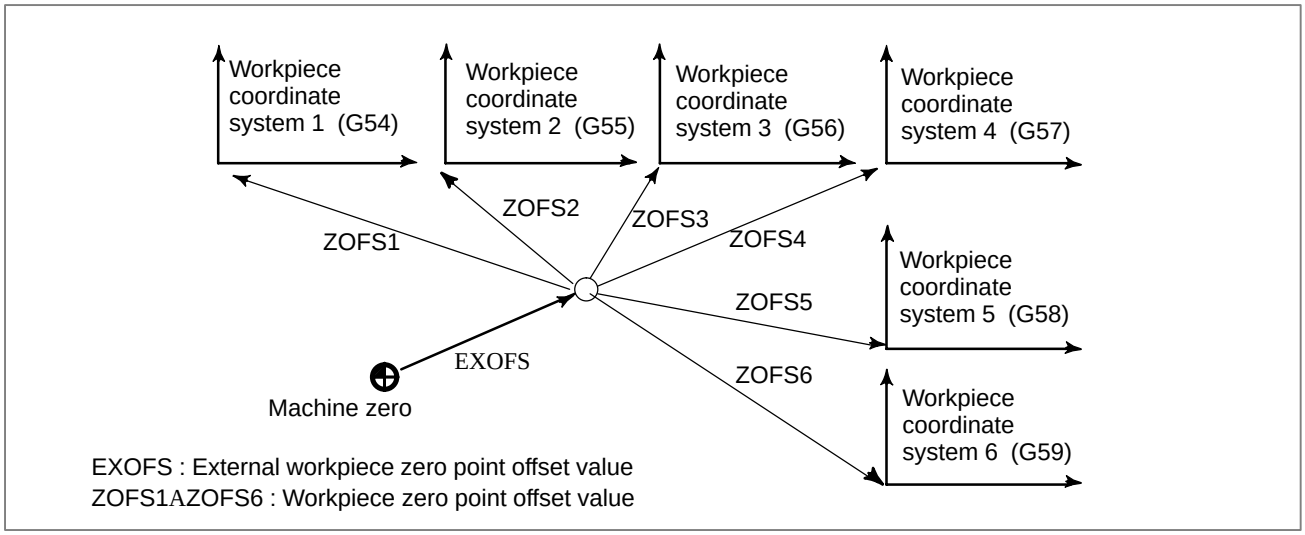

Fig. 7.2.3 Changing an external workpiece zero point offset value or workpiece zero point offset value

Format

- **Changing by G10**

G10 L2 Pp IP_;

p=0 : External workpiece zero point offset value
p=1 to 6 : Workpiece zero point offset value correspond to workpiece coordinate system 1 to 6
IP_ : For an absolute command (G90), workpiece zero point offset for each axis.
For an incremental command (G91), value to be added to the set workpiece zero point offset for each axis (the result of addition becomes the new workpiece zero point offset).

- **Changing by G92**

G92 IP_;

Explanations

- **Changing by G10**

With the G10 command, each workpiece coordinate system can be changed separately.

- **Changing by G92**

By specifying G92IP_;, a workpiece coordinate system (selected with a code from G54 to G59) is shifted to set a new workpiece coordinate system so that the current tool position matches the specified coordinates (IP_).
Then, the amount of coordinate system shift is added to all the workpiece zero point offset values. This means that all the workpiece coordinate systems are shifted by the same amount.

WARNING

When a coordinate system is set with G92 after an external workpiece zero point offset value is set, the coordinate system is not affected by the external workpiece zero point offset value. When G92X100.0Z80.0; is specified, for example, the coordinate system having its current tool reference position at X = 100.0 and Z = 80.0 is set.

Examples

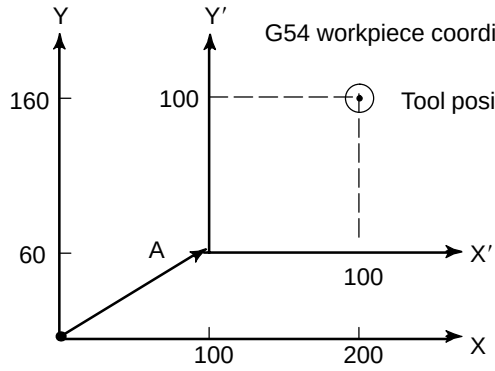

If G92X100Y100; is commanded when the tool is positioned at (200, 160) in G54 mode, workpiece coordinate system 1 (X' – Y') shifted by vector A is created.

G54 Workpiece coordinate system

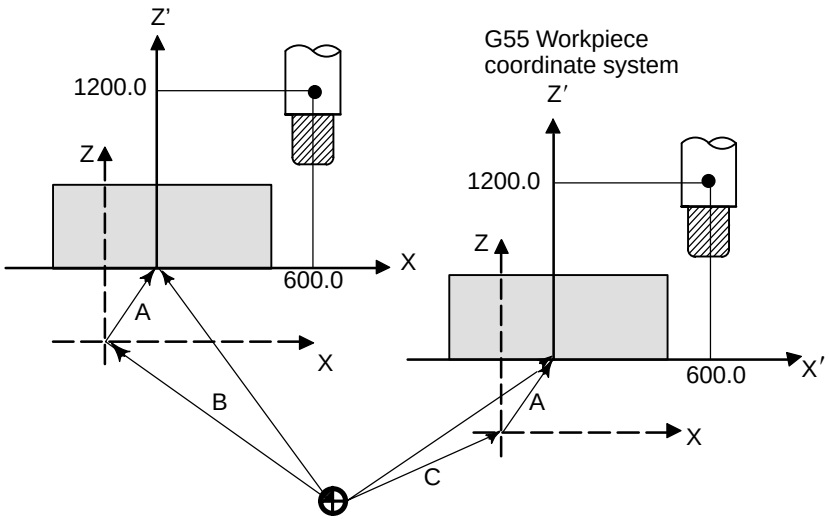

X' – Z' - New workpiece coordinate system
X – Z - Original workpiece coordinate system
A : Offset value created by G92
B : Workpiece zero point offset value in theG54
C : Workpiece zero point offset value in the G55

Suppose that a G54 workpiece coordinate system is specified. Then, a G55 workpiece coordinate system where the black circle on the tool (figure at the left) is at (600.0,12000.0) can be set with the following command if the relative relationship between the G54 workpiece coordinate system and G55 workpiece coordinate system is set correctly:G92X600.0Z1200.0;Also, suppose that pallets are loaded at two different positions. If the relative relationship of the coordinate systems of the pallets at the two positions is correctly set by handling the coordinate systems as the G54 workpiece coordinate system and G55 workpiece coordinate system, a coordinate system shift with G92 in one pallet causes the same coordinate system shift in the other pallet. This means that workpieces on two pallets can be machined with the same program just by specifying G54 or G55.

7.2.4 Workpiece coordinate system preset (G92.1)

The workpiece coordinate system preset function presets a workpiece coordinate system shifted by manual intervention to the pre–shift workpiece coordinate system. The latter system is displaced from the machine zero point by a workpiece zero point offset value.
There are two methods for using the workpiece coordinate system preset function. One method uses a programmed command (G92.1). The other uses MDI operations on the absolute position display screen, relative position display screen, and overall position display screen (III– 11.1.4).

Format

G92.1 IP 0 ;

IP 0 ; Specifies axis addresses subject to the workpiece coordinate system preset operation. Axes that are not specified are not subject to the preset operation.

Explanations

When manual reference position return operation is performed in the reset state, a workpiece coordinate system is shifted by the workpiece zero point offset value from the machine coordinate system zero point. Suppose that the manual reference position return operation is performed when a workpiece coordinate system is selected with G54. In this case, a workpiece coordinate system is automatically set which has its zero point displaced from the machine zero point by the G54 workpiece zero point offset value; the distance from the zero point of the workpiece coordinate system to the reference position represents the current position in the workpiece coordinate system.

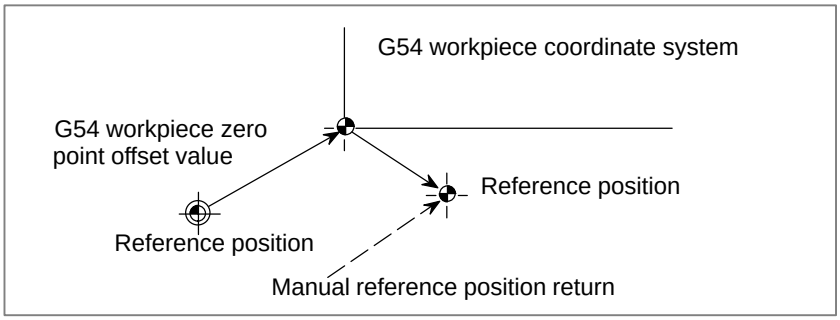

If an absolute position detector is provided, the workpiece coordinate system automatically set at power–up has its zero point displaced from the machine zero point by the G54 workpiece zero point offset value. The machine position at the time of power–up is read from the absolute position detector and the current position in the workpiece coordinate system is set by subtracting the G54 workpiece zero point offset value from this machine position. The workpiece coordinate system set by these operations is shifted from the machine coordinate system using the commands and operations listed next page.

(a) Manual intervention performed when the manual absolute signal is off
(b) Move command executed in the machine lock state
(c) Movement by handle interrupt
(d) Operation using the mirror image function
(e) Setting the local coordinate system using G52, or shifting the workpiece coordinate system using G92

In the case of (a) above, the workpiece coordinate system is shifted by the amount of movement during manual intervention.

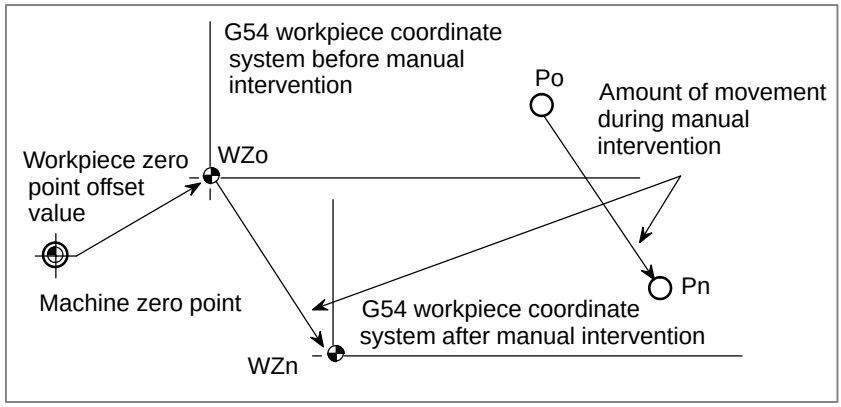

In the operation above, a workpiece coordinate system once shifted can be preset using G code specification or MDI operation to a workpiece coordinate system displaced by a workpiece zero point offset value from the machine zero point. This is the same as when manual reference position return operation is performed on a workpiece coordinate system that has been shifted. In this example, such G code specification or MDI operation has the effect of returning workpiece coordinate system zero point WZn to the original zero point WZo, and the distance from WZo to Pn is used to represent the current position in the workpiece coordinate system.

Bit 3 (PPD) of parameter No. 3104 specifies whether to preset relative coordinates (RELATIVE) as well as absolute coordinates.

When no workpiece coordinate system option (G54 to G59) is selected, the workpiece coordinate system is preset to the coordinate system set by automatic workpiece coordinate system setting. When automatic workpiece coordinate system setting is not selected, the workpiece coordinate system is preset with its zero point placed at the reference position.

Limitations

- **Cutter compensation, tool length compensation, tool offset**

  When using the workpiece coordinate system preset function, cancel compensation modes: cutter compensation, tool length compensation, and tool offset. If the function is executed without cancelling these modes, compensation vectors are temporarily cancelled.

- **Program restart**

  The workpiece coordinate system preset function is not executed during program restart.

- **Prohibited modes**

  Do not use the workpiece coordinate system preset function when the scaling, coordinate system rotation, programmable image, or drawing copy mode is set.

7.2.5 Adding Workpiece Coordinate Systems (G54.1 or G54)

Besides the six workpiece coordinate systems (standard workpiece coordinate systems) selectable with G54 to G59, 48 additional workpiece coordinate systems (additional workpiece coordinate systems) can be used. Alternatively, up to 300 additional workpiece coordinate systems can be used.

Format

- **Selecting the additional workpiece coordinate systems**

G54.1Pn ; or G54Pn ;

Pn : Codes specifying the additional workpiece coordinate systems
n : 1 to 48

- **Setting the workpiece zero point offset value in the additional workpiece coordinate systems**

G10L20 Pn IP_;

Pn : Codes specifying the workpiece coordinate system for setting the workpiece zero point offset value
n : 1 to 48
IP_ : Axis addresses and a value set as the workpiece zero point offset

Explanations

- **Selecting the additional workpiece coordinate systems**

When a P code is specified together with G54.1 (G54), the corresponding coordinate system is selected from the additional workpiece coordinate systems (1 to 48).
A workpiece coordinate system, once selected, is valid until another workpiece coordinate system is selected. Standard workpiece coordinate system 1 (selectable with G54) is selected at power–on.

G54.1 P1 . . . Additional workpiece coordinate system 1
G54.1 P2 . . . Additional workpiece coordinate system 2
⋮
G54.1 P48 . . Additional workpiece coordinate system 48

As with the standard workpiece coordinate systems, the following operations can be performed for a workpiece zero point offset in an additional workpiece coordinate system:

(1) The OFFSET function key can be used to display and set a workpiece zero point offset value.

(2) The G10 function enables a workpiece zero point offset value to be set by programming (refer to II–7.2.3).

(3) A custom macro allows a workpiece zero point offset value to be handled as a system variable.

(4) Workpiece zero point offset data can be entered or output as external data.

(5) The PMC window function enables workpiece zero point offset data to be read as program command modal data.

- **Setting the workpiece zero point offset value in the additional workpiece coordinate systems**

When an absolute workpiece zero point offset value is specified, the specified value becomes a new offset value. When an incremental workpiece zero point offset value is specified, the specified value is added to the current offset value to produce a new offset value.

Limitations

- **Specifying P codes**

A P code must be specified after G54.1 (G54). If G54.1 is not followed by a P code in the same block, additional workpiece coordinate system 1 (G54.1P1) is assumed.
If a value not within the specifiable range is specified in a P code, an P/S alarm (No. 030) is issued.
P codes other than workpiece offset numbers cannot be specified in a G54.1 (G54) block.

Example) G54.1 (G54) G04 P1000 ;

7.3 LOCAL COORDINATE SYSTEM

When a program is created in a workpiece coordinate system, a child workpiece coordinate system can be set for easier programming. Such a child coordinate system is referred to as a local coordinate system.

Format

G52 IP_; Setting the local coordinate system

.....

G52 IP0 ; Canceling of the local coordinate system

IP_ : Origin of the local coordinate system

Explanations

By specifying G52 IP_;, a local coordinate system can be set in all the workpiece coordinate systems (G54 to G59). The origin of each local coordinate system is set at the position specified by IP_ in the workpiece coordinate system.

When a local coordinate system is set, the move commands in absolute mode (G90), which is subsequently commanded, are the coordinate values in the local coordinate system. The local coordinate system can be changed by specifying the G52 command with the zero point of a new local coordinate system in the workpiece coordinate system.

To cancel the local coordinate system and specify the coordinate value in the workpiece coordinate system, match the zero point of the local coordinate system with that of the workpiece coordinate system.

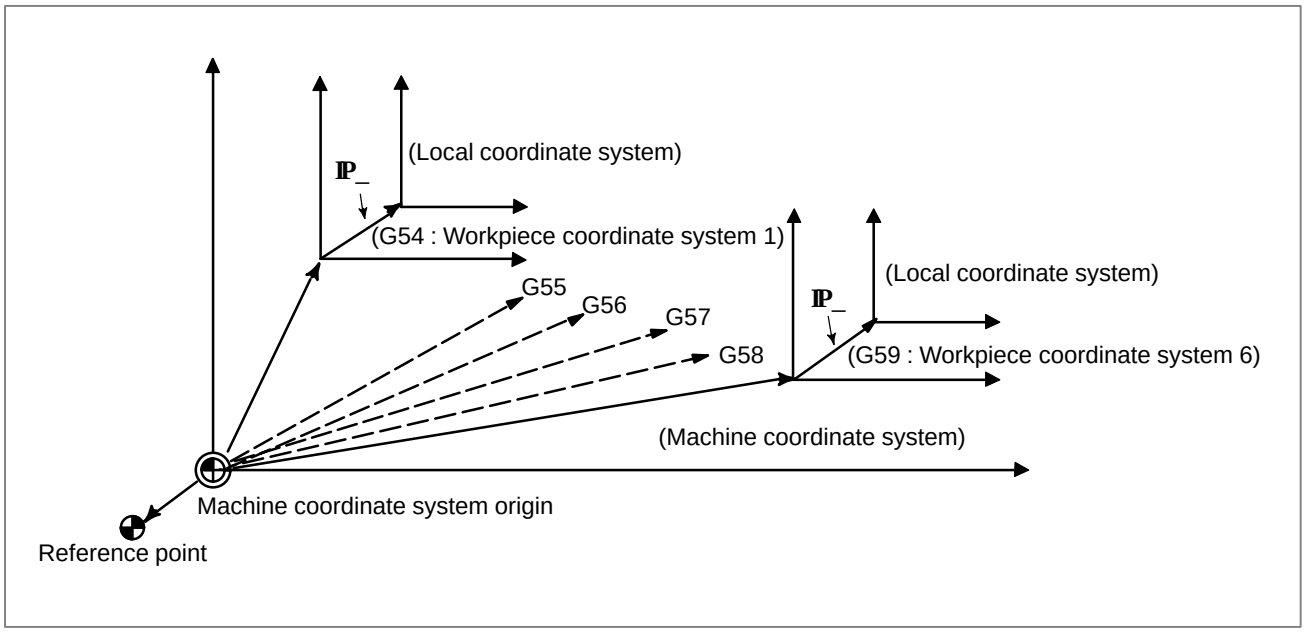

Fig. 7.3 Setting the local coordinate system

WARNING

1 When an axis returns to the reference point by the manual reference point return function,the zero point of the local coordinate system of the axis matches that of the work coordinate system. The same is true when the following command is issued:

G52α0;

α:Axis which returns to the reference point

2 The local coordinate system setting does not change the workpiece and machine coordinate systems.

3 Whether the local coordinate system is canceled at reset depends on the parameter setting. The local coordinate system is canceled when either CLR, bit 6 of parameter No.3402 or RLC, bit 3 of parameter No.1202 is set to 1.

4 If coordinate values are not specified for all axes when setting a workpiece coordinate system with the G92 command, the local coordinate systems of axes for which coordinate values were not specified are not cancelled, but remain unchanged.

5 G52 cancels the offset temporarily in cutter compensation.

6 Command a move command immediately after the G52 block in the absolute mode.

7.4 PLANE SELECTION

Select the planes for circular interpolation, cutter compensation, and drilling by G–code.
The following table lists G–codes and the planes selected by them.

Explanations

Table 7.4 Plane selected by G code

G code	Selected plane	Xp	Yp	Zp
G17	Xp Yp plane	X–axis or an axis parallel to it	Y–axis or an axis parallel to it	Z–axis or an axis parallel to it
G18	Zp Xp plane			
G19	Yp Zp plane			

Xp, Yp, Zp are determined by the axis address appeared in the block in which G17, G18 or G19 is commanded.
When an axis address is omitted in G17, G18 or G19 block, it is assumed that the addresses of basic three axes are omitted.
Parameter No. 1022 is used to specify that an optional axis be parallel to the each axis of the X, Y–, and Z–axes as the basic three axes.
The plane is unchanged in the block in which G17, G18 or G19 is not commanded.
When the power is turned on or the CNC is reset, G17 (XY plane), G18 (ZX plane), or G19 (YZ plane) is selected by bits 1 (G18) and 2 (G19) of parameter 3402.
The movement instruction is irrelevant to the plane selection.

Examples

Plane selection when the X–axis is parallel with the U–axis.

```
G17X_Y_  XY plane,
G17U_Y_  UY plane
G18X_Z_    ZX plane
     X_Y_ Plane is unchanged (ZX plane)
G17    XY plane
G18    ZX plane
G17 U_    UY plane
G18Y_ ;    ZX plane, Y axis moves regardless without any
    relation to the plane.
```

8 COORDINATE VALUE AND DIMENSION

This chapter contains the following topics.

8.1 ABSOLUTE AND INCREMENTAL PROGRAMMING (G90, G91)
8.2 POLAR COORDINATE COMMAND (G15, G16)
8.3 INCH/METRIC CONVERSION (G20, G21)
8.4 DECIMAL POINT PROGRAMMING

8.1 ABSOLUTE AND INCREMENTAL PROGRAMMING (G90, G91)

There are two ways to command travels of the tool; the absolute command, and the incremental command. In the absolute command, coordinate value of the end position is programmed; in the incremental command, move distance of the position itself is programmed. G90 and G91 are used to command absolute or incremental command, respectively.

Format

Absolute command	**G90 IP_ ;**
Incremental command	**G91 IP_ ;**

Examples

G90 X40.0 Y70.0 ; **Absolute command**

G91 X–60.0 Y40.0 ; **Incremental command**

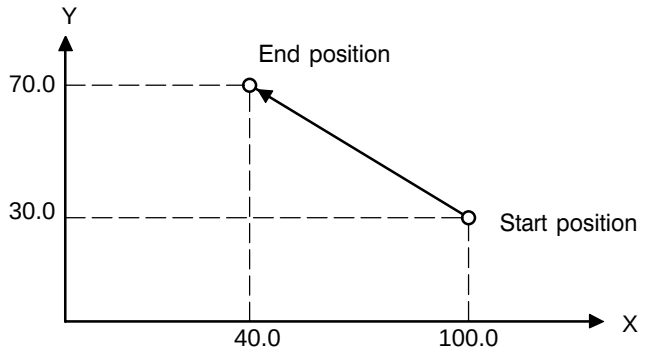

8.2 POLAR COORDINATE COMMAND (G15, G16)

The end point coordinate value can be input in polar coordinates (radius and angle).
The plus direction of the angle is counterclockwise of the selected plane first axis + direction, and the minus direction is clockwise.
Both radius and angle can be commanded in either absolute or incremental command (G90, G91).

Format

G□□ G○○ G16 ; Starting the polar coordinate command (polar coordinate mode)

G○○ IP _ ; Polar coordinate command

G15 ; Canceling the polar coordinate command (polar coordinate mode)

G16 Polar coordinate command

G15 Polar coordinate command cancel

G□□ Plane selection of the polar coordinate command (G17, G18 or G19)

G○○ G90 specifies the zero point of the work coordinate system as the origin of the polar coordinate system, from which a radius is measured.
G91 specifies the current position as the origin of the polar coordinate system, from which a radius is measured.

IP_ Specifying the addresses of axes constituting the plane selected for the polar coordinate system, and their values
First axis : radius of polar coordinate
Second axis : radius of polar coordinate

- **Setting the zero point of the workpiece coordinate system as the origin of the polar coordinate system**

Specify the radius (the distance between the zero point and the point) to be programmed with an absolute command. The zero point of the work coordinate system is set as the origin of the polar coordinate system.
When a local coordinate system (G52) is used, the origin of the local coordinate system becomes the center of the polar coordinates.

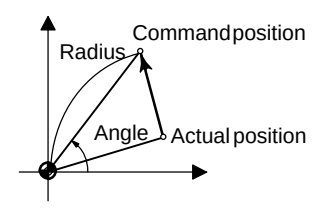

When the angle is specified with an absolute command

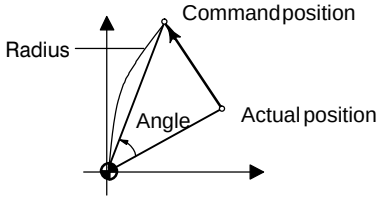

When the angle is specified with an incremental command

- **Setting the current position as the origin of the polar coordinate system**

Specify the radius (the distance between the current position and the point) to be programmed with an incremental command. The current position is set as the origin of the polar coordinate system.

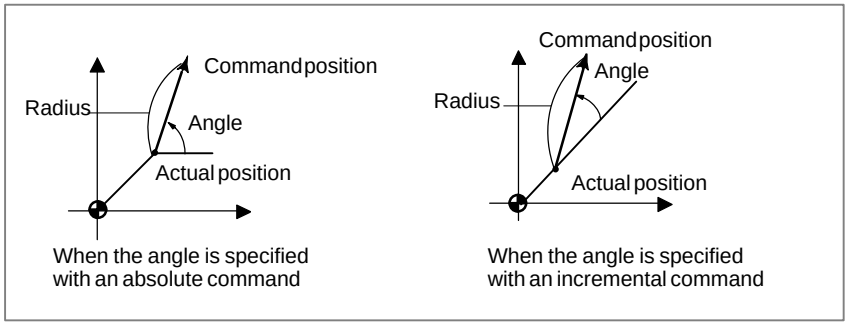

Examples

Bolt hole circle

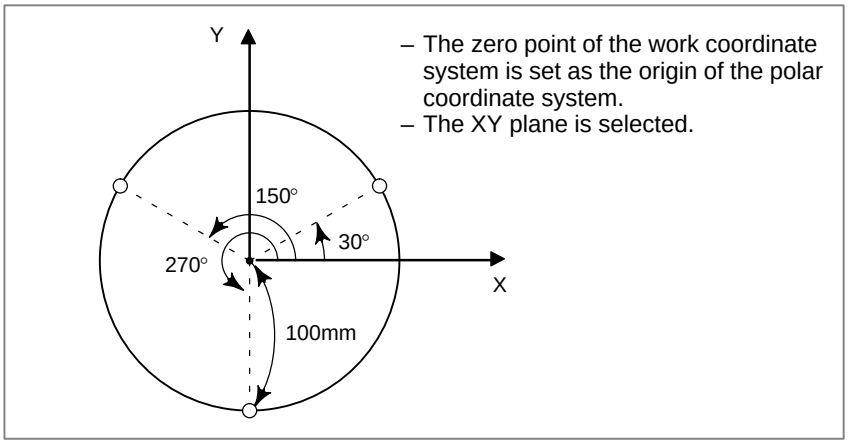

- **Specifying angles and a radius with absolute commands**

N1 G17 G90 G16 ;
Specifying the polar coordinate command and selecting the XY plane
Setting the zero point of the work coordinate system as the origin of the polar coordinate system
N2 G81 X100.0 Y30.0 Z–20.0 R–5.0 F200.0 ;
Specifying a distance of 100 mm and an angle of 30 degrees
N3 Y150.0 ;
Specifying a distance of 100 mm and an angle of 150 degrees
N4 Y270.0 ;
Specifying a distance of 100 mm and an angle of 270 degrees
N5 G15 G80 ;
Canceling the polar coordinate command

- **Specifying angles with incremental commands and a radius with absolute commands**

N1 G17 G90 G16;
Specifying the polar coordinate command and selecting the XY plane
Setting the zero point of the work coordinate system as the origin of the polar coordinate system
N2 G81 X100.0 Y30.0 Z−20.0 R−5.0 F200.0 ;
Specifying a distance of 100 mm and an angle of 30 degrees
N3 G91 Y120.0 ;
Specifying a distance of 100 mm and an angle of +120 degrees
N4 Y120.0 ;
Specifying a distance of 100 mm and an angle of +120 degrees

N5 G15 G80 ;
Canceling the polar coordinate command

Limitations

- **Specifying a radius in the polar coordinate mode**

In the polar coordinate mode, specify a radius for circular interpolation or helical cutting (G02, G03) with R.

- **Axes that are not considered part of a polar coordinate command in the polar coordinate mode**

Axes specified for the following commands are not considered part of the polar coordinate command:

– Dwell (G04)
– Programmable data input (G10)
– Setting the local coordinate system (G52)
– Converting the workpiece coordinate system (G92)
– Selecting the machine coordinate system (G53)
– Stored stroke check (G22)
– Coordinate system rotation (G68)
– Scaling (G51)

- **Optional–angle chamfering/corner rounding**

Neither optional–angle chamfering nor corner rounding can be commanded in polar coordinate mode.

8.3 INCH/METRIC CONVERSION (G20,G21)

Either inch or metric input can be selected by G code.

Format

G20 ;	Inch input
G21 ;	mm input

This G code must be specified in an independent block before setting the coordinate system at the beginning of the program. After the G code for inch/metric conversion is specified, the unit of input data is switched to the least inch or metric input increment of increment system IS–B or IS–C (II– 2.3). The unit of data input for degrees remains unchanged.The unit systems for the following values are changed after inch/metric conversion:

– Feedrate commanded by F code
– Positional command
– Work zero point offset value
– Tool compensation value
– Unit of scale for manual pulse generator
– Movement distance in incremental feed
– Some parameters

When the power is turned on, the G code is the same as that held before the power was turned off.

WARNING
1 G20 and G21 must not be switched during a program.
2 When switching inch input (G20) to metric input (G21) and vice versa, the tool compensation value must be re–set according to the least input increment.
However, when bit 0 (OIM) of parameter 5006 is 1, tool compensation values are automatically converted and need not be re–set.

CAUTION
For the first G28 command after switching inch input to metric input or vice versa, operation from the intermediate point is the same as that for manual reference position return. The tool moves from the intermediate point in the direction for reference position return, specified with bit 5 (ZMI) of parameter No. 1006.

NOTE
1 When the least input increment and the least command increment systems are different, the maximum error is half of the least command increment. This error is not accumulated.
2 The inch and metric input can also be switched using settings.

8.4 DECIMAL POINT PROGRAMMING

Numerical values can be entered with a decimal point. A decimal point can be used when entering a distance, time, or speed. Decimal points can be specified with the following addresses:
X, Y, Z, U, V, W, A, B, C, I, J, K, Q, R, and F.

Explanations

There are two types of decimal point notation: calculator–type notation and standard notation.
When calculator–type decimal notation is used, a value without decimal point is considered to be specified in millimeters inch,or deg. When standard decimal notation is used, such a value is considered to be specified in least input increments.Select either calculator–type or standard decimal notation by using the DPI bit (bit 0 of parameter 3401).Values can be specified both with and without decimal point in a single program.

Examples

Program command	Pocket calculator type decimal point programming	Standard type decimal point programming
X1000 Command value without decimal point	1000mm Unit : mm	1mm Unit : Least input increment (0.001 mm)
X1000.0 Command value with decimal point	1000mm Unit : mm	1000mm Unit : mm

WARNING

In a single block, specify a G code before entering a value. The position of decimal point may depend on the command.

Examples:

G20; Input in inches

X1.0 G04; X1.0 is considered to be a distance and processed as X10000. This command is equivalent to G04 X10000. The tool dwells for 10 seconds.

G04 X1.0; Equivalent to G04 X1000. The tool dwells for one second.

NOTE

1 Fractions less than the least input increment are truncated.

Examples:

X1.23456; Truncated to X1.234 when the least input increment is 0.001 mm.
Processed as X1.2345 when the least input increment is 0.0001 inch.

2 When more than eight digits are specified, an alarm occurs. If a value is entered with a decimal point, the number of digits is also checked after the value is converted to an integer according to the least input increment.

Examples:

X1.23456789; P/S alarm 0.003 occurs because more than eight digits are specified.

X123456.7; If the least input increment is 0.001 mm, the value is converted to integer 123456700. Because the integer has more than eight digits, an alarm occurs.

9 SPINDLE SPEED FUNCTION (S FUNCTION)

The spindle speed can be controlled by specifying a value following address S.
This chapter contains the following topics.

9.1 SPECIFYING THE SPINDLE SPEED WITH A CODE
9.2 SPECIFYING THE SPINDLE SPEED VALUE DIRECTLY (S5–DIGIT COMMAND)
9.3 CONSTANT SURFACE SPEED CONTROL (G96, G97)

9.1 SPECIFYING THE SPINDLE SPEED WITH A CODE

When a value is specified after address S, the code signal and strobe signal are sent to the machine to control the spindle rotation speed.
A block can contain only one S code. Refer to the appropriate manual provided by the machine tool builder for details such as the number of digits in an S code or the execution order when a move command and an S code command are in the same block.

9.2 SPECIFYING THE SPINDLE SPEED VALUE DIRECTLY (S5–DIGIT COMMAND)

The spindle speed can be specified directly by address S followed by a max.five–digit value (min^{-1}). The unit for specifying the spindle speed may vary depending on the machine tool builder. Refer to the appropriate manual provided by the machine tool builder for details.

9.3 CONSTANT SURFACE SPEED CONTROL (G96, G97)

Specify the surface speed (relative speed between the tool and workpiece) following S. The spindle is rotated so that the surface speed is constant regardless of the position of the tool.

Format

- **Constant surface speed control command**

G96 S○○○○○ ;

↑ Surface speed (m/min or feet/min)

Note : This surface speed unit may change according to machine tool builder's specification.

- **Constant surface speed control cancel command**

G97 S○○○○○ ;

↑ Spindle speed (min^{-1})

Note : This surface speed unit may change according to machine tool builder's specification.

- **Constant surface speed controlled axis command**

G96 Pα ; P0 : Axis set in the parameter (No. 3770)
P1 : X axis, P2 : Y axis, P3 : Z axis, P4 : 4th axis
P5 : 5th axis, P6 : 6th axis, P7 : 7th axis, P8 : 8th axis

- **Clamp of maximum spindle speed**

G92 S_ ; The maximum spindle speed (min^{-1}) follows S.

Explanations

- **Constant surface speed control command (G96)**

G96 (constant surface speed control command) is a modal G code. After a G96 command is specified, the program enters the constant surface speed control mode (G96 mode) and specified S values are assumed as a surface speed. A G96 command must specify the axis along which constant surface speed control is applied. A G97 command cancels the G96 mode.When constant surface speed control is applied, a spindle speed higher than the value specified in G92S_; (maximum spindle speed) is clamped at the maximum spindle speed. When the power is turned on, the maximum spindle speed is not yet set and the speed is not clamped.S (surface speed) commands in the G96 mode are assumed as S = 0 (the surface speed is 0) until M03 (rotating the spindle in the positive direction) or M04 (rotating the spindle in the negative direction) appears in the program.

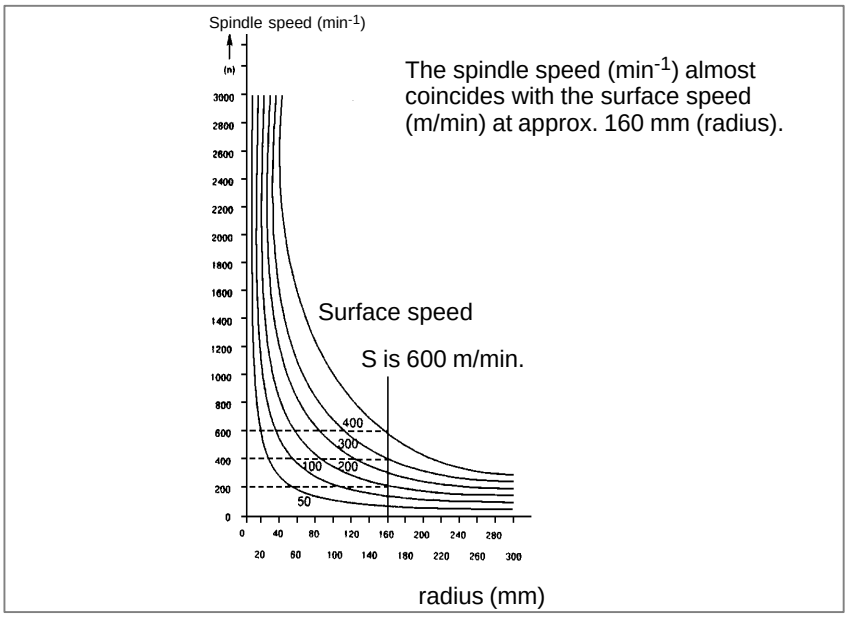

Fig. 9.3 (a) Relation between workpiece radius, spindle speed and surface speed

- **Setting the workpiece coordinate system for constant surface speed control**

To execute the constant surface speed control, it is necessary to set the work coordinate system , and so the coordinate value at the center of the rotary axis, for example, Z axis, (axis to which the constant surface speed control applies) becomes zero.

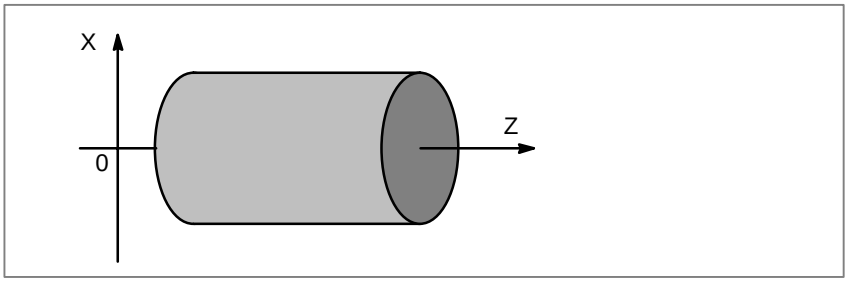

Fig. 9.3 (b) Example of the workpiece coordinate system for constant surface speed control

- **Surface speed specified in the G96 mode**

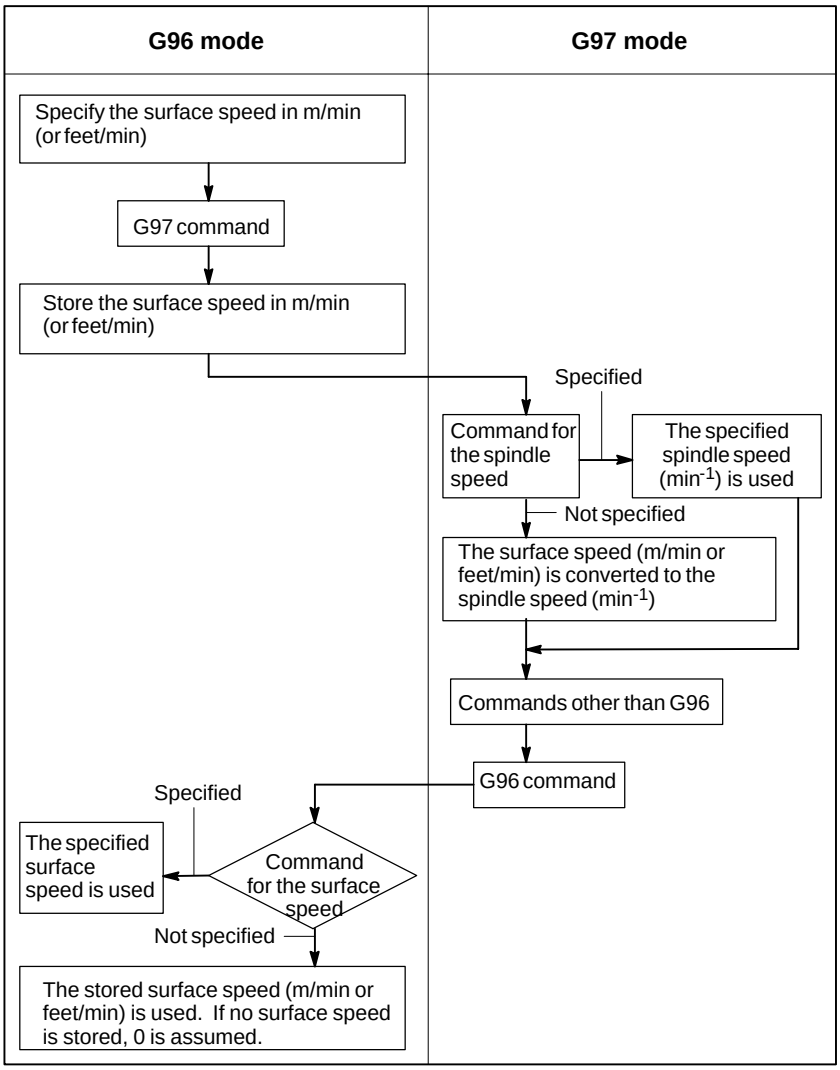

Restrictions

- **Constant surface speed control for threading**

The constant surface speed control is also effective during threading. Accordingly, it is recommended that the constant surface speed control be invalidated with G97 command before starting the scroll threading and taper threading, because the response problem in the servo system may not be considered when the spindle speed changes.

- **Constant surface speed control for rapid traverse (G00)**

In a rapid traverse block specified by G00, the constant surface speed control is not made by calculating the surface speed to a transient change of the tool position, but is made by calculating the surface speed based on the position at the end point of the rapid traverse block, on the condition that cutting is not executed at rapid traverse.

10 TOOL FUNCTION (T FUNCTION)

General

Two tool functions are available. One is the tool selection function, and the other is the tool life management function.

10.1 TOOL SELECTION FUNCTION

By specifying an up to 8–digit numerical value following address T, tools can be selected on the machine.

One T code can be commanded in a block. Refer to the machine tool builder's manual for the number of digits commandable with address T and the correspondence between the T codes and machine operations.

When a move command and a T code are specified in the same block, the commands are executed in one of the following two ways:

(i) Simultaneous execution of the move command and T function commands.

(ii) Executing T function commands upon completion of move command execution.

The selection of either (i) or (ii) depends on the machine tool builder's specifications. Refer to the manual issued by the machine tool builder for details.

10.2 TOOL LIFE MANAGEMENT FUNCTION

Tools are classified into various groups, with the tool life (time or frequency of use) for each group being specified. The function of accumulating the tool life of each group in use and selecting and using the next tool previously sequenced in the same group, is called the tool life management function.

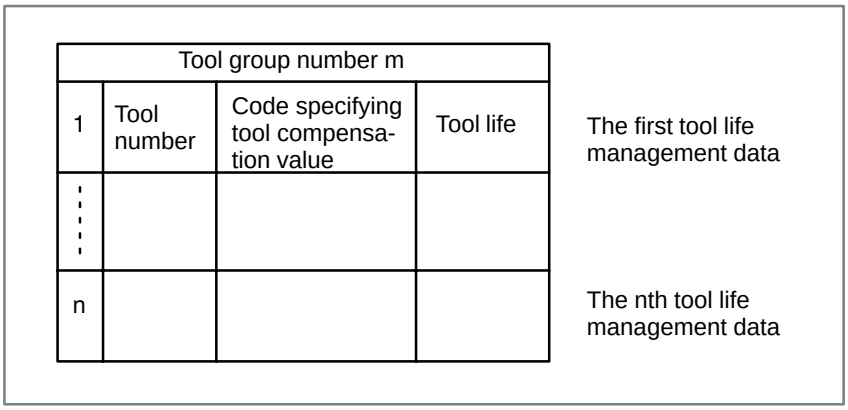

Fig. 10.2(a) Tool life management data (number of n tools)

By choosing a tool from a tool group specified by a machining program, the tool life can be managed.

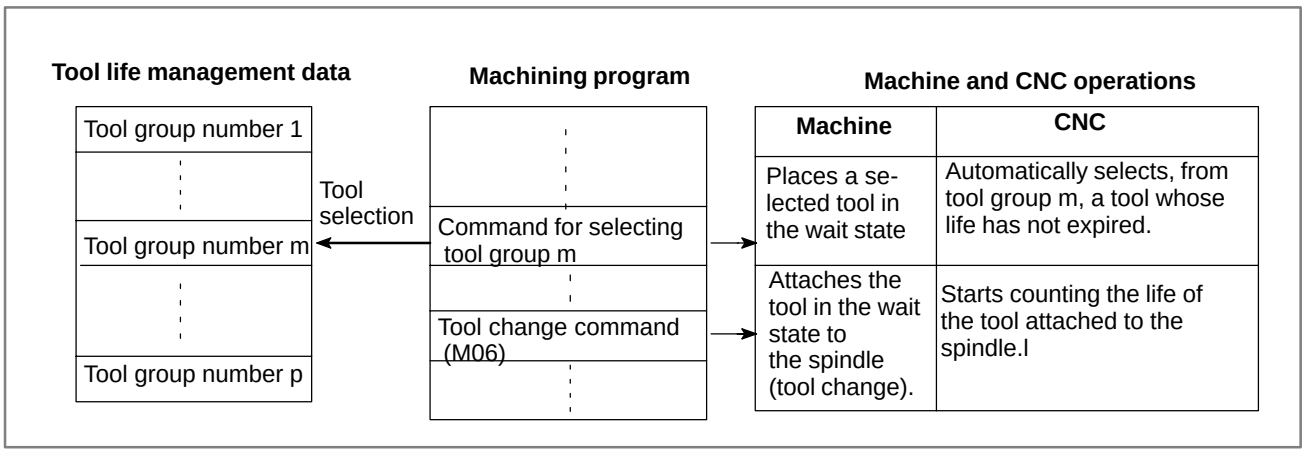

Fig. 10.2(b) Tool Selection by machining program

For two–path control, tool life management is applied independently for each path. Tool life management data is also set for each path.

10.2.1 Tool Life Management Data

Tool life management data consists of tool group numbers, tool numbers, codes specifying tool compensation values, and tool life value.

Explanations

- **Tool group number**

The Max. number of groups and the number of tools per group that can be registered are set by parameter (GS1,GS2 No. 6800#0, #1) (Table 10.2.1 (a)).

Table 10.2.1 (a) The Max. number of groups and tools that can be registered

GS1 (No. 6800#0)	GS2 (No. 6800#1)	The Max. number of groups and tools without optional function of 512 tool pairs		The Max. number of groups and tools with optional function of 512 tool pairs	
		Number of group	Number of tool	Number of group	Number of tool
0	0	16	16	64	32
0	1	32	8	128	16
1	0	64	4	256	8
1	1	128	2	512	4

WARNING
When bits 0 or 1 of parameter GS1,GS2 No.6800 is changed, re–register tool life management data with the G10L3 command (for registering and deleting data for all groups). Otherwise, new data pairs cannot be set.

- **Tool number**

Specify a four–digit number after T.

- **Code specifying tool compensation value**

Codes specifying tool offset values are classified into H codes (for tool length offset) and D codes (cutter compensation). The maximum number of the tool compensation value specification code which can be registered is 255 when there are 400 tool compensation values (even if the option for 512 tool life management sets is supported). The maximum number is 32, 64, 99, 200, 499, or 999 when there are 32, 64, 99, 200, 499, or 999 tool compensation values.

NOTE
When codes specifying tool offset values are not used, registration can be omitted.

- **Tool life value**

Refer to II– 10.2.2 and II–10.2.4.

10.2.2 Register, Change and Delete of Tool Life Management Data

In a program, tool life management data can be registered in the CNC unit, and registered tool life management data can be changed or deleted.

Explanations

A different program format is used for each of the four types of operations described below.

- **Register with deleting all groups**

  After all registered tool life management data is deleted, programmed tool life management data is registered.

- **Addition and change of tool life management data**

  Programmed tool life management data for a group can be added or changed.

- **Deletion of tool life management data**

  Programmed tool life management data for a group can be deleted.

- **Register of tool life count type**

  Count types (time or frequency can be registered for individual groups.

- **Life value**

  Whether tool life is to be indicated by time (minutes) or by frequency, it is set by a parameter LTM (No. 6800 #2) .
  Maximum value of tool life is as follows.
  In case of minute:4300(minutes)
  In case of frequency :9999(times)

Format

- **Register with deleting all groups**

Format	Meaning of command
G10L3 ; **P-L- ;** **T-H-D- ;** **T-H-D- ;** ⋮ **P-L- ;** **T-H-D- ;** **T-H-D- ;** ⋮ **G11 ;** **M02 (M30) ;**	**G10L3 :**Register with deleting all groups **P-** :Group number **L-** :Life value **T-** :Tool number **H-** :Code specifying tool offset value (H code) **D-** :Code specifying tool offset value (D code) **G11** :End of registration

- **Addition and change of tool life management data**

Format	Meaning of command
G10L3P1 ; **P-L- ;** **T-H-D- ;** **T-H-D- ;** ⋮ **P-L- ;** **T-H-D- ;** **T-H-D- ;** ⋮ **G11 ;** **M02 (M30) ;**	**G10L3P1 :**Addition and change of group **P-** :Group number **L-** :Life value **T-** :Tool number **H-** :Code specifying tool offset value (H code) **D-** :Code specifying tool offset value (D code) **G11** :End of addition and change of group

- **Deletion of tool life management data**

Format	Meaning of command
G10L3P2 ; **P- ;** **P- ;** **P- ;** **P- ;** ⋮ **G11 ;** **M02 (M30) ;**	**G10L3P2 :**Deletion of group **P-** :Group number **G11** :End of deletion of group

- **Setting a tool life cout type for groups**

Format	Meaning of command
G10L3 **or** **G10L3P1);** **P-L-Q- ;** **T-H-D- ;** **T-H-D- ;** ⋮ **P-L-Q- ;** **T-H-D- ;** **T-H-D- ;** ⋮ **G11 ;** **M02 (M30) ;**	**Q_ :** Life count type (1:Frequency, 2:Time)

CAUTION
1 When the Q command is omitted, the value set in bit 7 (LTM) of parameter No.6800 is used as the life count type.
2 G10L3P1 and G10L3L2 can be commanded only when the extended tool life management feature is enabled. (Parameter EXT (No.6801#6) = 1)

10.2.3 Tool Life Management Command in a Machining Program

Explanations

- **Command**

The following command is used for tool life management:
T∇∇∇∇;–Specifies a tool group number.

The tool life management function selects, from a specified group, a tool whose life has not expired, and outputs its T code. In ∇∇∇∇, specify a number calculated by adding the tool life management cancel number specified in parameter6810 to a group number. For example, to set tool group 1 when the tool life management cancel number is 100, specify T101;.

NOTE
When ∇∇∇∇ is less than a tool life management cancel number, the T code is treated as an ordinary T code.

M06;———Terminates life management for the previously used tools, and begins counting the life of the new tools selected with the T code.

WARNING
When an option for speciofying multiple M codes is selected, specify this code by itself or as the first M code.

H99;———Selects the H code of tool life management data for the tool currently being used.
H00;———Cancels tool length offset
D99;———Selects the D code of tool life management data for the tool currently being used.
D00;———Cancels cutter compensation

WARNING
H99 or D99 must be specified after the M06 command. When a code other than H99 or D99 is specified after the M06 command, the H code and D code of tool life management data are not selected.

- **Types**

For tool life management, the four tool change types indicated below are available. The type used varies from one machine to another. For details, refer to the appropriate manual of each machinde tool builder.

Table 10.2.3 Tool Change Type

Tool change type	A	B	C	D
Tool group number specified in the same block as the tool change command (M06)	Previously used tools	Tools to be used next		
Tool life count timing	Life counting is performed for a tool in the specified tool group when M06 is specified next.			Life counting is performed when a tool in the tool group specified in the same block as M06 is specified.
Remarks		Normally, when a tool group number is specified by itself, type B is used. However, no alarm is raised even if the tool group number is specified by itself as type C.		When only M06 is specified, P/S alarm No. 153 is issued.
Parameter	No. 6800#7 (M6T)=0 No.6801#7 (M6E)=0	No. 6800#7 (M6T)=1 No. 6801#7 (M6E)=0		No.6801#7 (M6E)=1

NOTE
When a tool group number is specified and a new tool is selected, the new tool selection signal is output.

Examples

- **Tool change type A**

Suppose that the tool life management cancel number is 100.

```
T101;     A tool whose life has not expired is selected from group 1.
  ¦       (Suppose that tool number 010 is selected.)
M06;      Tool life counting is performed for the tool in group 1.
  ¦       (The life of tool number 010 is counted.)
T102;     A tool whose life has not expired is selected from group 2.
          (Suppose that tool number 100 is selected.)
M06T101;  Tool life counting is performed for the tool in group 2.
          (The life of tool number 100 is counted.)
          The number of the tool currently used (in group 1) is
          output with a T code signal. (Tool number 010 is
           output.)
```

- **Tool change type B and C**

Suppose that the tool life management ignore number is 100.

```
T101;       A tool whose life has not expired is selected from group 1.
  :         (Suppose that tool number 010 is selected.)
M06T102;Tool life counting is performed for the tool in group 1.
  :         (The life of tool number 010 is counted.)
  :         A tool whose life has not expired is selected from group 2.
  :         (Suppose that toolnumber 100 is selected.
M06T103;Tool life counting is lperformed for the tool in group 2.
            (The life of tool number 100 is counted.)
            A tool whose life has not expired is selected from group 3.
            (Suppose that tool number 200 is selected.)
```

- **Tool change type D**

Suppose that the tool life management ignore number is 100.

```
T101M06;A tool whose life has not expired is selected from group 1.
  :           (Suppose that tool number 010 is selected.)
  :           Tool life counting is performed for the tool in group 1.
  :
 T102M06;A tool whose life has not expired is selected from group 2.
            (Suppose that tool number 100 is selected.)
            Tool life counting is performed for the tool in group 2.
            (The life of tool number 100 is counted.)
```

10.2.4 Tool Life

The life of a tool is specified by a usage frequency (count) or usage time (in minutes).

Explanations

- **Usage count**

The usage count is incremented by 1 for each tool used in a program. In other words, the usage count is incremented by 1 only when the first tool group number and tool change command are specified after the CNC unit enters the automatic operation state from the reset state.

CAUTION
Even if the same tool group number is specified more than once in a program, the usage count is only incremented by 1 and no new tools are selected.

- **Usage time**

When a tool change is specified (M06), tool life management is started for the tools specified by the tool group number. In tool life management, the time during which a tool is used in the cutting mode is counted in four second increments., If the tool group is changed before the incremental time of four seconds elapses, the time is not counted. The time a tool is used for single block stop, feed hold, rapid traverse, dwell, machine lock, and interlock is not counted.

NOTE
1 When a tool is selected from available tools, tools are searched starting from the current tool towards the lasttool to find a tool whose life has not expired. When thelast tool is reached during this search, the search restartsfrom the first tool. When it has been determined that there are no tools whose life has not expired, the last tool is selected. When the tool currently being used is changed by tool skip signal, the next new tool is selected using the method described here.
2 When tool life is counted by time, the life counting can be overridden using the tool life count override signal. An override from 0 to 99.9 can be applied. When 0 is specified, time is not counted. Before the override capability can be used, bit 2 of parameter LFV No.6801 must be set.
3 When tool life counting indicates that the life of the last tool in a group has expired, the tool change signal is output. When tool life is managed by time, the signal is output when the life of the last tool in the group has expired. When tool life is managed by usage frequency (count), the signal is output when the CNC unit is reset or the tool life count restart M code is specified.

11 AUXILIARY FUNCTION

General

There are two types of auxiliary functions ; miscellaneous function (M code) for specifying spindle start, spindle stop program end, and so on, and secondary auxiliary function (B code) for specifying index table positioning.

When a move command and miscellaneous function are specified in the same block, the commands are executed in one of the following two ways:

i) Simultaneous execution of the move command and miscellaneous function commands.

ii) Executing miscellaneous function commands upon completion of move command execution.

The selection of either sequence depends on the machine tool builder's specification. Refer to the manual issued by the machine tool builder for details.

11.1 AUXILIARY FUNCTION (M FUNCTION)

When a numeral is specified following address M, code signal and a strobe signal are sent to the machine. The machine uses these signals to turn on or off its functions.
Usually, only one M code can be specified in one block. In some cases, however, up to three M codes can be specified for some types of machine tools.
Which M code corresponds to which machine function is determined by the machine tool builder.
The machine processes all operations specified by M codes except those specified by M98, M99,M198 or called subprogram(Parameter No.6071 to 6079), or called custom macro (Parameter No.6080 to 6089). Refer to the machine tool builder's instruction manual for details.

Explanations

The following M codes have special meanings.

- **M02,M03 (End of program)**

This indicates the end of the main program
Automatic operation is stopped and the CNC unit is reset.
This differs with the machine tool builder.
After a block specifying the end of the program is executed, control returns to the start of the program.
Bit 5 of parameter 3404 (M02) or bit 4 of parameter 3404 (M30) can be used to disable M02, M30 from returning control to the start of the program.

- **M00 (Program stop)**

Automatic operation is stopped after a block containing M00 is executed. When the program is stopped, all existing modal information remains unchanged. The automatic operation can be restarted by actuating the cycle operation. This differs with the machine tool builder.

- **M01 (Optional stop)**

Similarly to M00, automatic operation is stopped after a block containing M01 is executed. This code is only effective when the Optional Stop switch on the machine operator's panel has been pressed.

- **M98 (Calling of sub–program)**

This code is used to call a subprogram. The code and strobe signals are not sent. See the subprogram **II– 12.3** for details .

- **M99 (End of subprogram)**

This code indicates the end of a subprogram.
M99 execution returns control to the main program. The code and strobe signals are not sent. See the subprogram **section 12.3** for details.

- **M198 (Calling a subprogram)**

This code is used to call a subprogram of a file in the external input/output function. See the description of the subprogram call function (III–4.7) for details.

NOTE
The block following M00, M01, M02, or M30 is not pre–read (buffered). Similarly, ten M codes which do not buffer can be set by parameters (Nos. 3411 to 3420). Refer to the machine tool builder's instruction manual for these M codes.

11.2 MULTIPLE M COMMANDS IN A SINGLE BLOCK

In general, only one M code can be specified in a block. However, up to three M codes can be specified at once in a block by setting bit 7 (M3B) of parameter No. 3404 to 1. Up to three M codes specified in a block are simultaneously output to the machine. This means that compared with the conventional method of a single M command in a single block, a shorter cycle time can be realized in machining.

Explanations

CNC allows up to three M codes to be specified in one block. However, some M codes cannot be specified at the same time due to mechanical operation restrictions. For detailed information about the mechanical operation restrictions on simultaneous specification of multiple M codes in one block, refer to the manual of each machine tool builder.
M00, M01, M02, M30, M98, M99, or M198 must not be specified together with another M code.
Some M codes other than M00, M01, M02, M30, M98, M99, and M198 cannot be specified together with other M codes; each of those M codes must be specified in a single block.
Such M codes include these which direct the CNC to perform internal operations in addition to sending the M codes themselves to the machine. To be specified, such M codes are M codes for calling program numbers 9001 to 9009 and M codes for disabling advance reading (buffering) of subsequent blocks. Meanwhile, multiple of M codes that direct the CNC only to send the M codes themselves (without performing internal operations) can be specified in a single block.

Examples

One M command in a single block	**Multiple M commands in a single block**
M40 ; M50 ; M60 ; G28G91X0Y0Z0 ; : : :	M40M50M60 ; G28G91X0Y0Z0 ; : : : : :

11.3 THE SECOND AUXILIARY FUNCTIONS (B CODES)

Indexing of the table is performed by address B and a following 8–digit number. The relationship between B codes and the corresponding indexing differs between machine tool builders.
Refer to the manual issued by the machine tool builder for details.

Explanations

- **Valid data range**

0 to 99999999

- **Specification**

1. To enable the use of a decimal point, set bit 0 (AUP) of parameter No.3450 to 1.

Command	Output value
B10.	10000
B10	10

2. Use bit 0 (DPI) of parameter No. 3401 to specify whether the magnification for B output will be $\times 1000$ or $\times 1$ when a decimal point is omitted.

	Command	Output value
DPI=1	B1	1000
DPI=0	B1	1

3. Use bit 0 (AUX) of parameter No. 3405 to specify whether the magnification for B output will be $\times 1000$ or $\times 10000$ when a decimal point is omitted for the inch Input system (only when DPI=1).

	Command	Output value
AUX=1	B1	10000
AUX=0	B1	1000

Restrictions

When this functions is used, the B address specifying an axis movement disabled.

12 PROGRAM CONFIGURATION

General

• Main program and subprogram

There are two program types, main program and subprogram. Normally, the CNC operates according to the main program. However, when a command calling a subprogram is encountered in the main program, control is passed to the subprogram. When a command specifying a return to the main program is encountered in a subprogram, control is returned to the main program.

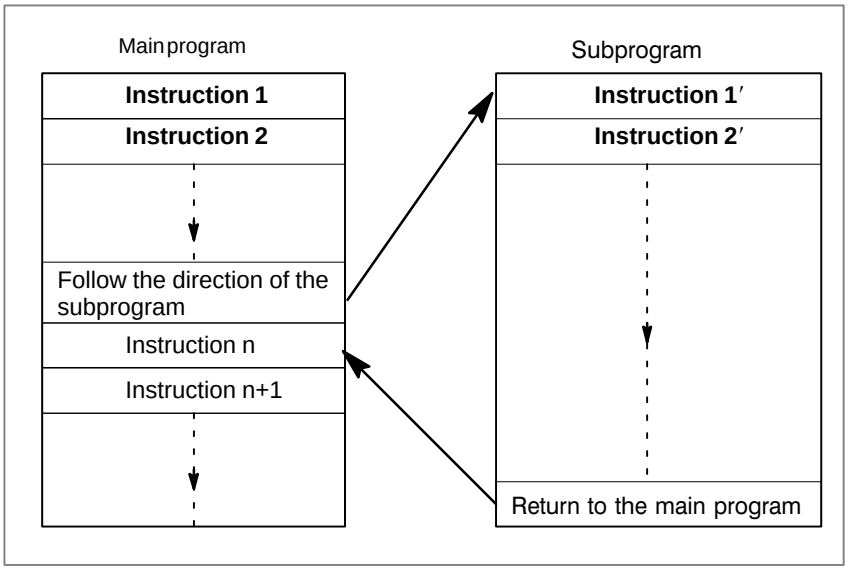

Fig. 12 (a) Main program and subprogram

The CNC memory can hold up to 400 main programs and subprograms (63 as standard). A main program can be selected from the stored main programs to operate the machine. See III–9.3 or III–10 in OPERATION for the methods of registering and selecting programs.

● Program components

A program consists of the following components:

Table 12 Program components

Components	Descriptions
Tape start	Symbol indicating the start of a program file
Leader section	Used for the title of a program file, etc.
Program start	Symbol indicating the start of a program
Program section	Commands for machining
Comment section	Comments or directions for the operator
Tape end	Symbol indicating the end of a program file

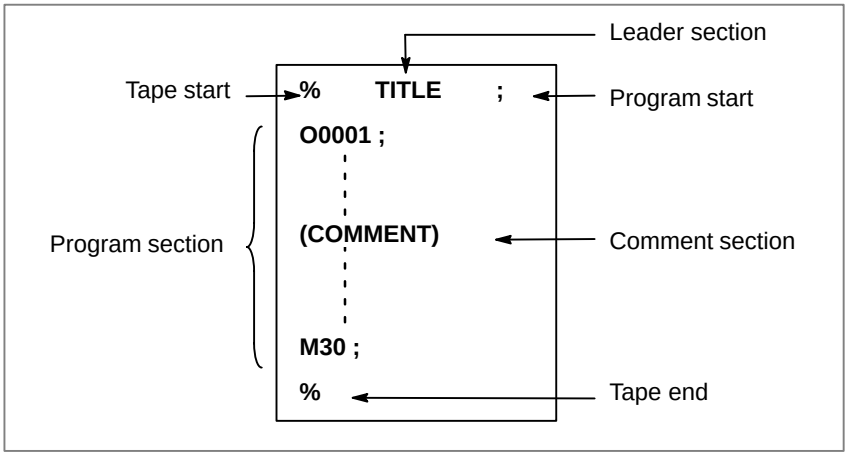

Fig. 12(b) Program configuration

● Program section configuration

A program section consists of several blocks. A program section starts with a program number and ends with a program end code.

Program section configuration	**Program section**
Program number	O0001 ;
Block 1	N1 G91 G00 X120.0 Y80.0 ;
Block 2	N2 G43 Z–32.0 H01 ;
: :	
Block n	Nn Z0 ;
Program end	M30 ;

A block contains information necessary for machining, such as a move command or coolant on/off command.Specifying a slash (/) at the start of a block disables the execution of some blocks (see “optional block skip” in II–12.2).

12.1 PROGRAM COMPONENTS OTHER THAN PROGRAM SECTIONS

This section describes program components other than program sections. See II–12.2 for a program section.

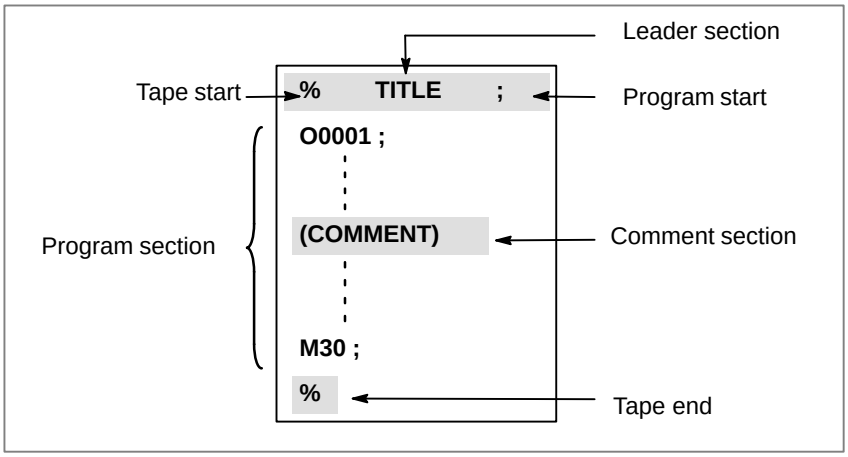

Fig. 12.1(a) Program configuration

Explanations

- **Tape start**

The tape start indicates the start of a file that contains NC programs. The mark is not required when programs are entered using SYSTEM P or ordinary personal computers. The mark is not displayed on the screen. However, if the file is output,the mark is automatically output at the start of the file.

Table 12.1(a) Code of a tape start

Name	ISO code	EIA code	Notation in this manual
Tape start	%	ER	%

- **Leader section**

Data entered before the programs in a file constitutes a leader section. When machining is started, the label skip state is usually set by turning on the power or resetting the system. In the label skip state, all information is ignored until the first end–of–block code is read. When a file is read into the CNC unit from an I/O device, leader sections are skipped by the label skip function.
A leader section generally contains information such as a file header. When a leader section is skipped, even a TV parity check is not made. So a leader section can contain any codes except the EOB code.

- **Program start**

The program start code is to be entered immediately after a leader section, that is, immediately before a program section.
This code indicates the start of a program, and is always required to disable the label skip function.
With SYSTEM P or ordinary personal computers, this code can be entered by pressing the return key.

Table 12.1(b) Code of a program start

Name	ISO code	EIA code	Notation in this manual
Program start	LF	CR	;

NOTE
If one file contains multiple programs, the EOB code for label skip operation must not appear before a second or subsequent program number.

- **Comment section**

Any information enclosed by the control–out and control–in codes is regarded as a comment.
The user can enter a header, comments, directions to the operator, etc. in a comment section.

Table 12.1(c) Codes of a control–in and a control–out

Name	ISO code	EIA code	Notation in this manual	Meaning
Control–out	(	2–4–5	(	Start of comment section
Control–in	)	2–4–7	)	End of comment section

When a program is read into memory for memory operation, comment sections, if any, are not ignored but are also read into memory. Note, however, that codes other than those listed in the code table in Appendix A are ignored, and thus are not read into memory.
When data in memory is output on external I/O device(See III–8), the comment sections are also output.
When a program is displayed on the screen, its comment sections are also displayed. However, those codes that were ignored when read into memory are not output or displayed.
During memory operation or DNC operation, all comment sections are ignored.
The TV check function can be used for a comment section by setting parameter CTV (bit 1 of No. 0100).

CAUTION
If a long comment section appears in the middle of a program section, a move along an axis may be suspended for a long time because of such a comment section. So a comment section should be placed where movement suspension may occur or no movement is involved.

NOTE
1 If only a control–in code is read with no matching control–out code, the read control–in code is ignored.
2 The EOB code cannot be used in a comment.

- **Tape end**

A tape end is to be placed at the end of a file containing NC programs. If programs are entered using the automatic programming system, the mark need not be entered.
The mark is not displayed on the screen. However, when a file is output, the mark is automatically output at the end of the file.
If an attempt is made to execute % when M02 or M03 is not placed at the end of the program, the P/S alarm (No. 5010) is occurred.

Table 12.1(d) Code of a tape end

Name	ISO code	EIA code	Notation in this manual
Tape end	%	ER	%

12.2 PROGRAM SECTION CONFIGURATION

This section describes elements of a program section. See II–12.1 for program components other than program sections.

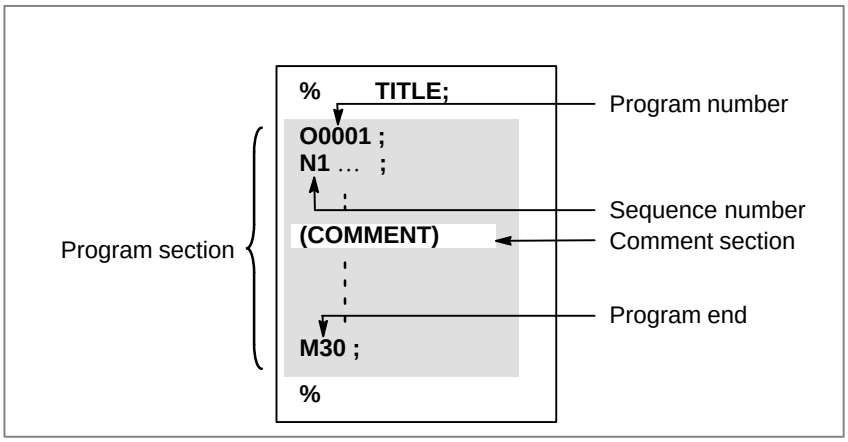

Fig. 12.2(a) Program configuration

- **Program number**

A program number consisting of address O followed by a four–digit number is assigned to each program at the beginning registered in memory to identify the program.
In ISO code, the colon (:) can be used instead of O.
When no program number is specified at the start of a program, the sequence number (N....) at the start of the program is regarded as its program number. If a five–digit sequence number is used, the lower four digits are registered as a program number. If the lower four digits are all 0, the program number registered immediately before added to 1 is registered as a program number. Note, however, that N0 cannot be used for a program number.
If there is no program number or sequence number at the start of a program, a program number must be specified using the MDI panel when the program is stored in memory (See III–8.4 or III–10.1)

NOTE
Program numbers 8000 to 9999 may be used by machine tool builders, and the user may not be able to use these numbers.

- **Sequence number and block**

A program consists of several commands. One command unit is called a block. One block is separated from another with an EOB of end of block code.

Table 12.2(a) EOB code

Name	ISO code	EIA code	Notation in this manual
End of block (EOB)	LF	CR	;

At the head of a block, a sequence number consisting of address N followed by a number not longer than five digits (1 to 99999) can be placed. Sequence numbers can be specified in a random order, and any numbers can be skipped. Sequence numbers may be specified for all blocks or only for desired blocks of the program. In general, however, it is convenient to assign sequence numbers in ascending order in phase with the machining steps (for example, when a new tool is used by tool replacement, and machining proceeds to a new surface with table indexing.)

N300 X200.0 Z300.0 ; A sequence number is underlined.

Fig. 12.2 (b) Sequence number and block (example)

NOTE
N0 must not be used for the reason of file compatibility with other CNC systems.
Program number 0 cannot be used. So 0 must not be used for a sequence number regarded as a program number.

- **TV check (Vertical parity check along tape)**

A parity check is made for a block on input tape vertically. If the number of characters in one block (starting with the code immediately after an EOB and ending with the next EOB) is odd, an P/S alarm (No.002) is output. No TV check is made only for those parts that are skipped by the label skip function. Bit 1 (CTV) of parameter No. 0100 is used to specify whether comments enclosed in parentheses are counted as characters during TV check. The TV check function can be enabled or disabled by setting on the MDI unit (See III–11.4.3.).

- **Block configuration (word and address)**

A block consists of one or more words. A word consists of an address followed by a number some digits long. (The plus sign (+) or minus sign (–) may be prefixed to a number.)
Word = Address + number (Example : X–1000)
For an address, one of the letters (A to Z) is used ; an address defines the meaning of a number that follows the address. Table 12.2 (b) indicates the usable addresses and their meanings.
The same address may have different meanings, depending on the preparatory function specification.

Table 12.2(b) Major functions and addresses

Function	Address	Meaning
Program number	O (1)	Program number
Sequence number	N	Sequence number
Preparatory function	G	Specifies a motion mode (linear, arc, etc.)
Dimension word	X, Y, Z, U, V, W, A, B, C	Coordinate axis move command
	I, J, K	Coordinate of the arc center
	R	Arc radius
Feed function	F	Rate of feed per minute, Rate of feed per revolution
Spindle speed function	S	Spindle speed
Tool function	T	Tool number
Auxiliary function	M	On/off control on the machine tool
	B	Table indexing, etc.
Offset number	D, H	Offset number
Dwell	P, X	Dwell time
Program number designation	P	Subprogram number
Number of repetitions	P	Number of subprogram repetitions
Parameter	P, Q	Canned cycle parameter

NOTE
In ISO code, the colon (:) can also be used as the address of a program number.

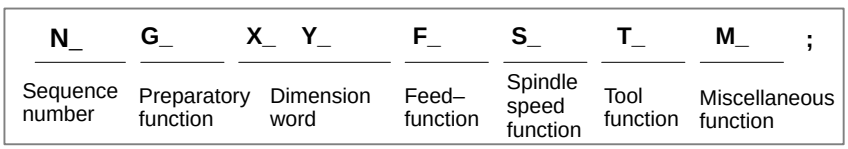

Fig. 12.2 (c) 1 block (example)

- **Major addresses and ranges of command values**

Major addresses and the ranges of values specified for the addresses are shown below. Note that these figures represent limits on the CNC side, which are totally different from limits on the machine tool side. For example, the CNC allows a tool to traverse up to about 100 m (in millimeter input) along the X axis.
However, an actual stroke along the X axis may be limited to 2 m for a specific machine tool.
Similarly, the CNC may be able to control a cutting federate of up to 240 m/min, but the machine tool may not allow more than 3 m/min. When developing a program, the user should carefully read the manuals of the machine tool as well as this manual to be familiar with the restrictions on programming.

Table 12.2(c) Major addresses and ranges of command values

Function		Address	Input in mm	Input in inch
Program number		O (1)	1–9999	1–9999
Sequence number		N	1–99999	1–99999
Preparatory function		G	0–99	0–99
Dimension word	Increment system IS–B	X, Y, Z, U, V, W, A, B, C, I, J, K, R,	±99999.999mm	±9999.9999inch
	Increment system IS–C		±9999.9999mm	±999.99999inch
Feed per minute	Increment system IS–B	F	1–240000mm/min	0.01–9600.00 inch/min
	Increment system IS–C		1–100000mm/min	0.01–4000.00 inch/min
Feed per revolution		F	0.001–500.00 mm/rev	0.0001–9.9999 inch/rev
Spindle speed function		S	0–20000	0–20000
Tool function		T	0–99999999	0–99999999
Auxiliary function		M	0–99999999	0–99999999
		B	0–99999999	0–99999999
Offset number		H, D	0–400	0–400
Dwell	Increment system IS–B	X, P	0–99999.999s	0–99999.999s
	Increment system IS–C		0–9999.9999s	0–9999.9999s
Designation of a program number		P	1–9999	1–9999
Number of subprogram repetitions		P	1–999	1–999

NOTE
In ISO code, the colon (:) can also be used as the address of a program number.

- **Optional block skip**

When a slash followed by a number (/n (n=1 to 9)) is specified at the head of a block, and optional block skip switch n on the machine operator panel is set to on, the information contained in the block for which /n corresponding to switch number n is specified is ignored in DNC operation or memory operation.
When optional block skip switch n is set to off, the information contained in the block for which /n is specified is valid. This means that the operator can determine whether to skip the block containing /n.
Number 1 for /1 can be omitted. However, when two or more optional block skip switches are used for one block, number 1 for /1 cannot be omitted.

Example)

(Incorrect) (Correct)
//3 G00X10.0; /1/3 G00X10.0;

This function is ignored when programs are loaded into memory. Blocks containing /n are also stored in memory, regardless of how the optional block skip switch is set.
Programs held in memory can be output, regardless of how the optional block skip switches are set.
Optional block skip is effective even during sequence number search operation.
Depending on the machine tool, all optional block skip switches (1 to 9) may not be usable. Refer to manuals of the machine tool builder to find which switches are usable.

WARNING

1 Position of a slash
A slash (/) must be specified at the head of a block. If a slash is placed elsewhere, the information from the slash to immediately before the EOB code is ignored.

2 Disabling an optional block skip switch
Optional block skip operation is processed when blocks are read from memory or tape into a buffer. Even if a switch is set to on after blocks are read into a buffer, the blocks already read are not ignored.

NOTE

TV and TH check
When an optional block skip switch is on. TH and TV checks are made for the skipped portions in the same way as when the optional block skip switch is off.

- **Program end**

The end of a program is indicated by programming one of the following codes at the end of the program:

Table 12.2(d) Code of a program end

Code	Meaning usage
M02	For main program
M30	
M99	For subprogram

If one of the program end codes is executed in program execution, the CNC terminates the execution of the program, and the reset state is set. When the subprogram end code is executed, control returns to the program that called the subprogram.

WARNING

A block containing an optional block skip code such as /M02 ; , /M30 ; , or /M99 ; is not regarded as the end of a program, if the optional block skip switch on the machine operator's panel is set to on.
(See "Optional block skip".)

12.3 SUBPROGRAM (M98, M99)

If a program contains a fixed sequence or frequently repeated pattern, such a sequence or pattern can be stored as a subprogram in memory to simplify the program.
A subprogram can be called from the main program.
A called subprogram can also call another subprogram.

Format

- **Subprogram configuration**

One subprogram

O □□□□ ;
⋮
M99 ;

Subprogram number (or the colon (:) optionally in the case of ISO)

Program end

M99 need not constitute a separate block as indicated below.
Example) **X100.0 Y100.0 M99 ;**

- **Subprogram call**

M98 P ○○○ ○○○○ **;**

Number of times the subprogram is called repeatedly

Subprogram number

When no repetition data is specified, the subprogram is called just once.

Explanations

When the main program calls a subprogram, it is regarded as a one–level subprogram call. Thus, subprogram calls can be nested up to four levels as shown below.

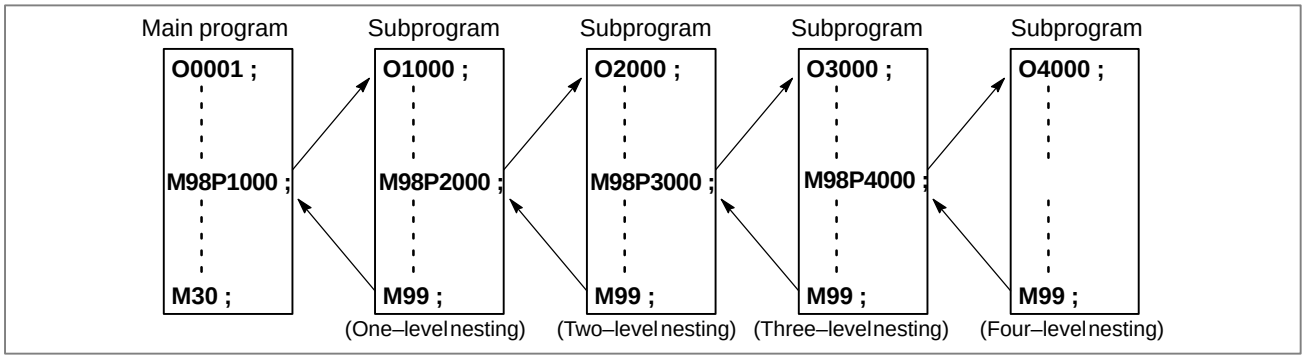

A single call command can repeatedly call a subprogram up to 999 times.
For compatibility with automatic programming systems, in the first block, Nxxxx can be used instead of a subprogram number that follows O (or :). A sequence number after N is registered as a subprogram number.

- **Reference**

See III–10 for the method of registering a subprogram.

NOTE
1 The M98 and M99 code signal and strobe signal are not output to the machine tool.
2 If the subprogram number specified by address P cannot be found, an alarm (No. 078) is output.

Examples

☆ **M98 P51002 ;**

This command specifies ”Call the subprogram (number 1002) five times in succession.” A subprogram call command (M98P_) can be specified in the same block as a move command.

☆ **X1000.0 M98 P1200 ;**

This example calls the subprogram (number 1200) after an X movement.

☆ Execution sequence of subprograms called from a main program

Main program

N0010 0 ;
N0020 0 ;
N0030 M98 P21010 ;
N0040 0 ;
N0050 M98 P1010 ;
N0060 0 ;

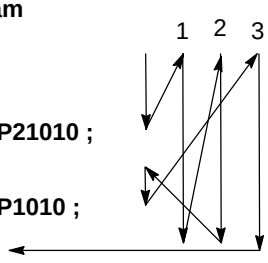

Subprogram

O1010 0 ;
N1020 0 ;
N1030 0 ;
N1040 0 ;
N1050 0 ;
N1060 0 M99 ;

A subprogram can call another subprogram in the same way as a main program calls a subprogram.

Special Usage

- **Specifying the sequence number for the return destination in the main program**

If P is used to specify a sequence number when a subprogram is terminated, control does not return to the block after the calling block, but returns to the block with the sequence number specified by P. Note, however, that P is ignored if the main program is operating in a mode other than memory operation mode.
This method consumes a much longer time than the normal return method to return to the main program.

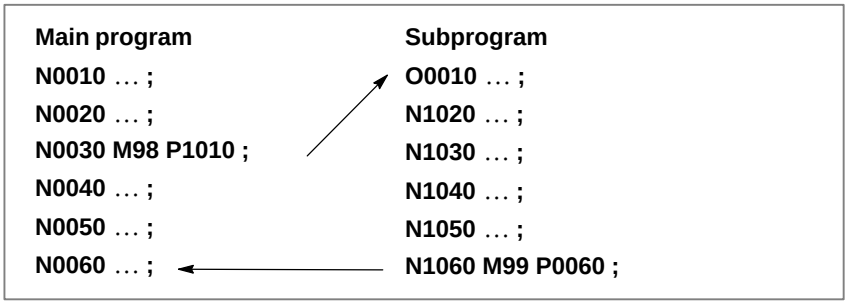

- **Using M99 in the main program**

If M99 is executed in a main program, control returns to the start of the main program. For example, M99 can be executed by placing /M99 ; at an appropriate location of the main program and setting the optional block skip function to off when executing the main program. When M99 is executed, control returns to the start of the main program, then execution is repeated starting at the head of the main program.
Execution is repeated while the optional block skip function is set to off. If the optional block skip function is set to on, the /M99 ; block is skipped ; control is passed to the next block for continued execution.
If/M99Pn ; is specified, control returns not to the start of the main program, but to sequence number n. In this case, a longer time is required to return to sequence number n.

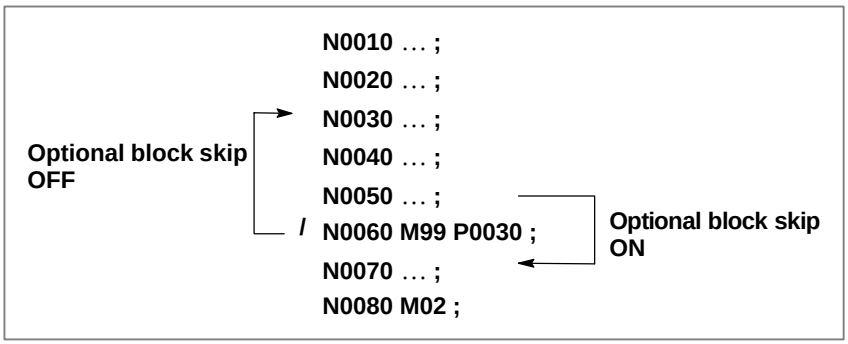

- **Using a subprogram only**

A subprogram can be executed just like a main program by searching for the start of the subprogram with the MDI.
(See III–9.3 for information about search operation.)
In this case, if a block containing M99 is executed, control returns to the start of the subprogram for repeated execution. If a block containing M99Pn is executed, control returns to the block with sequence number n in the subprogram for repeated execution. To terminate this program, a block containing /M02 ; or /M30 ; must be placed at an appropriate location, and the optional block switch must be set to off ; this switch is to be set to on first.

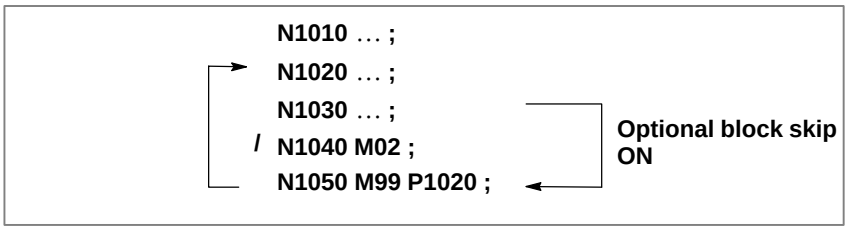

13 FUNCTIONS TO SIMPLIFY PROGRAMMING

General

This chapter explains the following items:

13.1 CANNED CYCLE
13.2 RIGID TAPPING
13.3 OPTIONAL ANGLE CHAMFERING AND CORNER ROUNDING
13.4 EXTERNAL MOTION FUNCTION
13.5 INDEX TABLE INDEXING FUNCTION

13.1 CANNED CYCLE

Canned cycles make it easier for the programmer to create programs. With a canned cycle, a frequently–used machining operation can be specified in a single block with a G function; without canned cycles, normally more than one block is required. In addition, the use of canned cycles can shorten the program to save memory.
Table 13.1 (a) lists canned cycles.

Table 13.1 (a) Canned cycles

G code	Drilling(–Z direction)	Operation at the bottom of a hole	Retraction(+Z direction)	Application
G73	Intermittent feed	–	Rapid traverse	High–speed peck drilling cycle
G74	Feed	Dwell→Spindle CW	Feed	Left–hand tapping cycle
G76	Feed	Oriented spindle stop	Rapid traverse	Fine boring cycle
G80	–	–	–	Cancel
G81	Feed	–	Rapid traverse	Drilling cycle, spot drilling cycle
G82	Feed	Dwell	Rapid traverse	Drilling cycle, counter boring cycle
G83	Intermittent feed	–	Rapid traverse	Peck drilling cycle
G84	Feed	Dwell→Spindle CCW	Feed	Tapping cycle
G85	Feed	–	Feed	Boring cycle
G86	Feed	Spindle stop	Rapid traverse	Boring cycle
G87	Feed	Spindle CW	Rapid traverse	Back boring cycle
G88	Feed	Dwell→spindle stop	Manual	Boring cycle
G89	Feed	Dwell	Feed	Boring cycle

Explanations

A canned cycle consists of a sequence of six operations (Fig. 13.1 (a))

Operation 1 Positioning of axes X and Y (including also another axis)
Operation 2 Rapid traverse up to point R level
Operation 3 Hole machining
Operation 4 Operation at the bottom of a hole
Operation 5 Retraction to point R level
Operation 6 Rapid traverse up to the initial point

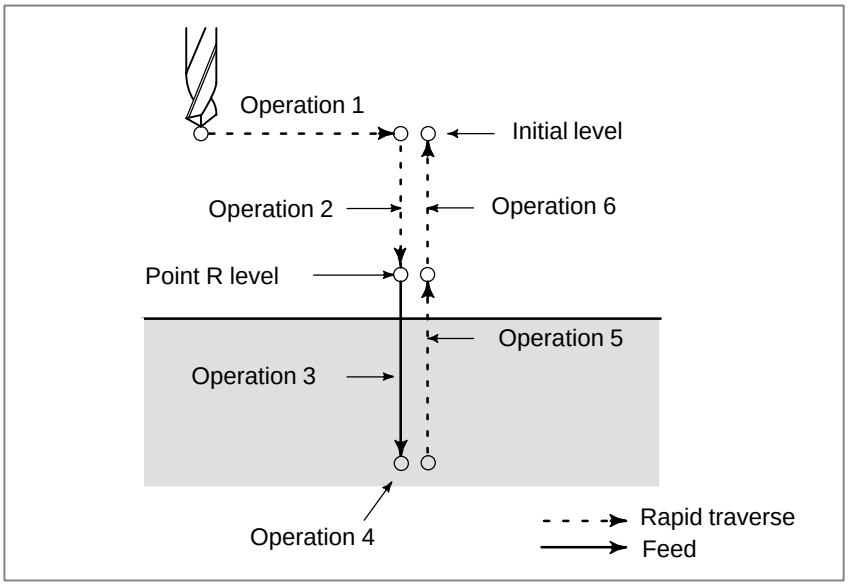

Fig. 13.1 Canned cycle operation sequence

• Positioning plane

The positioning plane is determined by plane selection code G17, G18, or G19.
The positioning axis is an axis other than the drilling axis.

• Drilling axis

Although canned cycles include tapping and boring cycles as well as drilling cycles, in this chapter, only the term drilling will be used to refer to operations implemented with canned cycles.
The drilling axis is a basic axis (X, Y, or Z) not used to define the positioning plane, or any axis parallel to that basic axis.
The axis (basic axis or parallel axis) used as the drilling axis is determined according to the axis address for the drilling axis specified in the same block as G codes G73 to G89.
If no axis address is specified for the drilling axis, the basic axis is assumed to be the drilling axis.

Table13.1(b) Positioning plane and drilling axis

G code	Positioning plane	Drilling axis
G17	Xp–Yp plane	Zp
G18	Zp–Xp plane	Yp
G19	Yp–Zp plane	Xp

Xp : X axis or an axis parallel to the X axis
Yp : Y axis or an axis parallel to the Y axis
Zp : Z axis or an axis parallel to the Z axis

Examples

Assume that the U, V and W axes be parallel to the X, Y, and Z axes respectively. This condition is specified by parameter No. 1022.

G17 G81 .....Z _ _ : The Z axis is used for drilling.
G17 G81 .....W _ _ : The W axis is used for drilling.
G18 G81 .....Y _ _ : The Y axis is used for drilling.
G18 G81 .....V _ _ : The V axis is used for drilling.
G19 G81 .....X _ _ : The X axis is used for drilling.
G19 G81 .....U _ _ : The U axis is used for drilling.

G17 to G19 may be specified in a block in which any of G73 to G89 is not specified.

WARNING
Switch the drilling axis after canceling a canned cycle.

NOTE
A parameter FXY (No. 5101 #0) can be set to the Z axis always used as the drilling axis. When FXY=0, the Z axis is always the drilling axis.

• Travel distance along the drilling axis G90/G91

The travel distance along the drilling axis varies for G90 and G91 as follows:

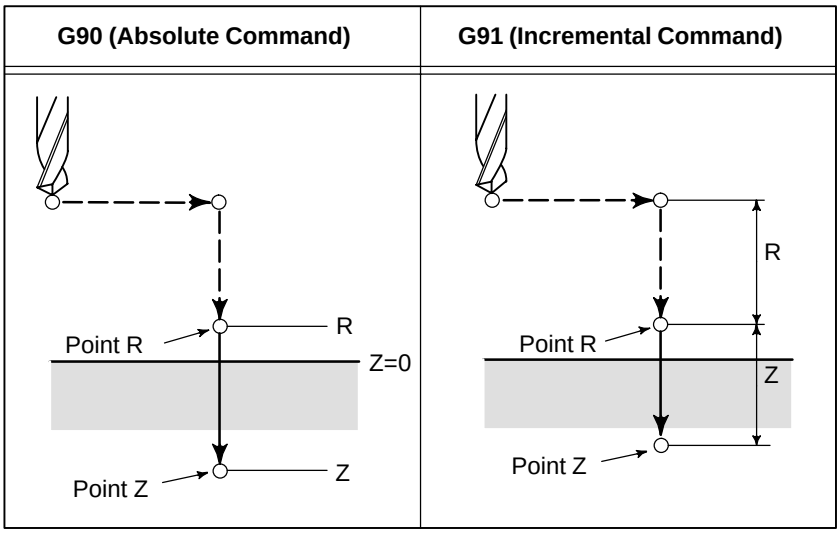

• Drilling mode

G73, G74, G76, and G81 to G89 are modal G codes and remain in effect until canceled. When in effect, the current state is the drilling mode. Once drilling data is specified in the drilling mode, the data is retained until modified or canceled.
Specify all necessary drilling data at the beginning of canned cycles; when canned cycles are being performed, specify data modifications only.

- **Return point level G98/G99**

When the tool reaches the bottom of a hole, the tool may be returned to point R or to the initial level. These operations are specified with G98 and G99. The following illustrates how the tool moves when G98 or G99 is specified. Generally, G99 is used for the first drilling operation and G98 is used for the last drilling operation.
The initial level does not change even when drilling is performed in the G99 mode.

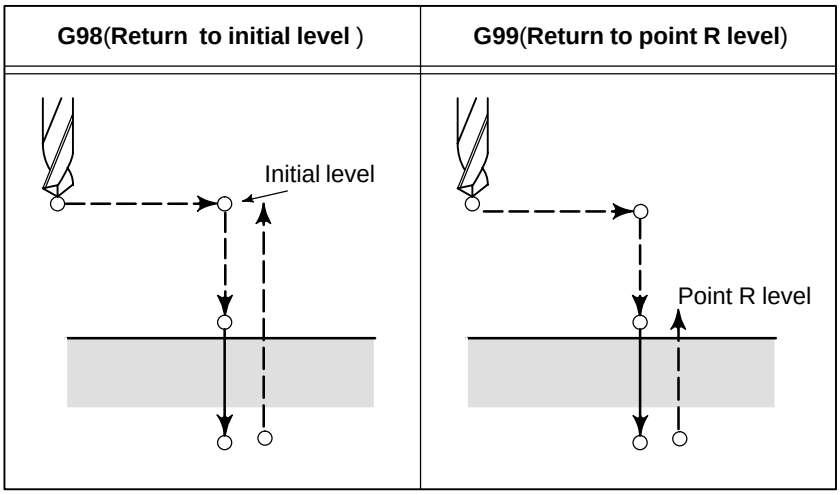

- **Repeat**

To repeat drilling for equally–spaced holes, specify the number of repeats in K_.
K is effective only within the block where it is specified.
Specify the first hole position in incremental mode (G91).
If it is specified in absolute mode (G90), drilling is repeated at the same position.

Number of repeats K	The maximum command value = 9999

If K0 is specified, drilling data is stored, but drilling is not performed.

- **Cancel**

To cancel a canned cycle, use G80 or a group 01 G code.

Group 01 G codes

G00 : Positioning (rapid traverse)
G01 : Linear interpolation
G02 : Circular interpolation or helical interpolation (CW)
G03 : Circular interpolation or helical interpolation (CCW)
G60 : Single direction positioning (when the MDL bit (bit 0 of parameter 5431) is set to 1)

- **Symbols in figures**

Subsequent sections explain the individual canned cycles. Figures in these explanations use the following symbols:

⟶	Positioning (rapid traverse G00)
⟶	Cutting feed (linear interpolation G01)
⟿	Manual feed
OSS	Oriented spindle stop (The spindle stops at a fixed rotation position)
⇨	Shift (rapid traverse G00)
P	Dwell

13.1.1 High–speed Peck Drilling Cycle (G73)

This cycle performs high–speed peck drilling. It performs intermittent cutting feed to the bottom of a hole while removing chips from the hole.

Format

G73 X_ Y_ Z_ R_ Q_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
Q_ : Depth of cut for each cutting feed
F_ : Cutting feedrate
K_ : Number of repeats (if required)

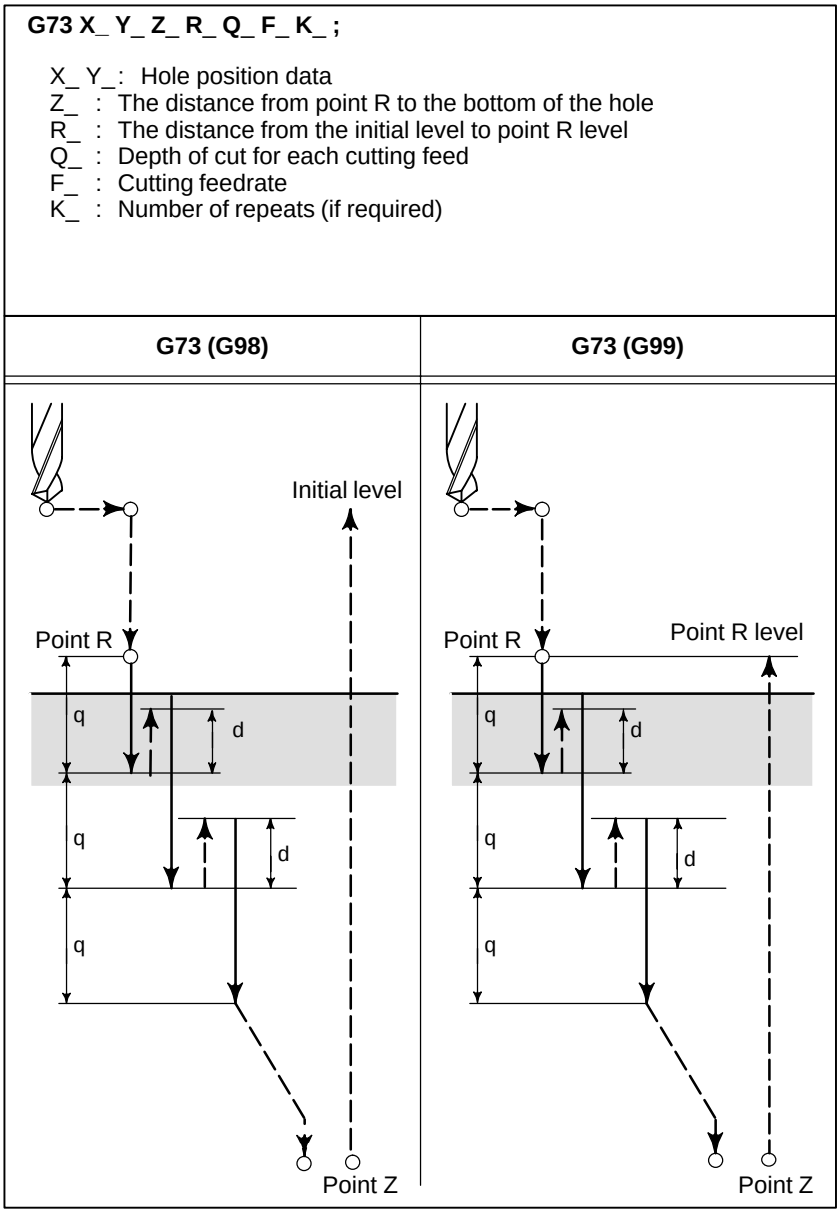

Explanations

The high–speed peck drilling cycle performs intermittent feeding along the Z–axis. When this cycle is used, chips can be removed from the hole easily, and a smaller value can be set for retraction. This allows, drilling to be performed efficiently. Set the clearance, d, in parameter 5114.
The tool is retracted in rapid traverse.
Before specifying G73, rotate the spindle using a miscellaneous function (M code).
When the G73 code and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.
When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **Q/P**

  Specify Q and P in blocks that perform drilling. If they are specified in a block that does not perform drilling, they cannot be stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G73 in a single block. Otherwise, G73 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S2000 ;	Cause the spindle to start rotating.
G90 G99 G73 X300. Y–250. Z–150. R–100. Q15. F120. ;	Position, drill hole 1, then return to point R.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.2 Left–handed Tapping Cycle (G74)

This cycle performs left–handed tapping. In the left–handed tapping cycle, when the bottom of the hole has been reached, the spindle rotates clockwise.

Format

G74 X_ Y_ Z_ R_P_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
P_ : Dwell time
F_ : Cutting feedrate
K_ : Number of repeats (if required)

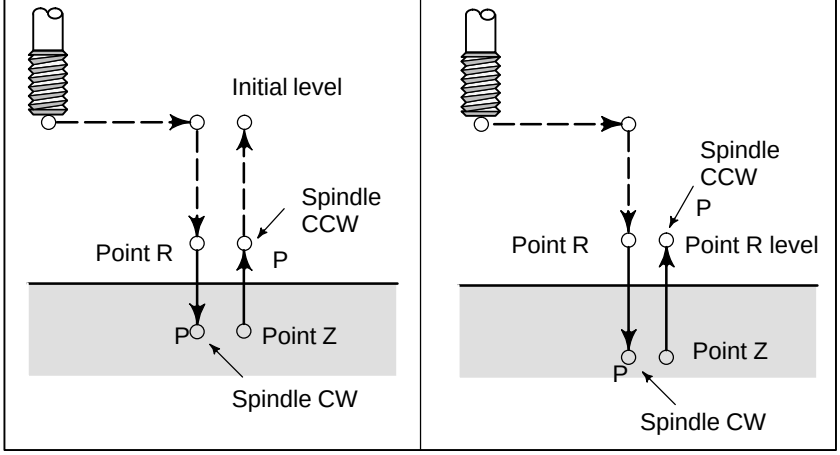

Explanations

Tapping is performed by turning the spindle counterclockwise. When the bottom of the hole has been reached, the spindle is rotated clockwise for retraction. This creates a reverse thread.
Feedrate overrides are ignored during left–handed tapping. A feed hold does not stop the machine until the return operation is completed.
Before specifying G74, use a miscellaneous function (M code) to rotate the spindle counterclockwise.
When the G74 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.
When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **P**

  Specify P in blocks that perform drilling. If it is specified in a block that does not perform drilling, it cannot be stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G74 in a single block. Otherwise, G74 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M4 S100 ;	Cause the spindle to start rotating.
G90 G99 G74 X300. Y–250. Z–150. R–120. F120. ;	Position, tapping hole 1, then return to point R.
Y–550. ;	Position, tapping hole 2, then return to point R.
Y–750. ;	Position, tapping hole 3, then return to point R.
X1000. ;	Position, tapping hole 4, then return to point R.
Y–550. ;	Position, tapping hole 5, then return to point R.
G98 Y–750. ;	Position, tapping hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.3 Fine Boring Cycle (G76)

The fine boring cycle bores a hole precisely. When the bottom of the hole has been reached, the spindle stops, and the tool is moved away from the machined surface of the workpiece and retracted.

Format

G76 X_ Y_ Z_ R_ Q_ P_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
Q_ : Shift amount at the bottom of a hole
P_ : Dwell time at the bottom of a hole
F_ : Cutting feedrate
K_ : Number of repeats (if required)

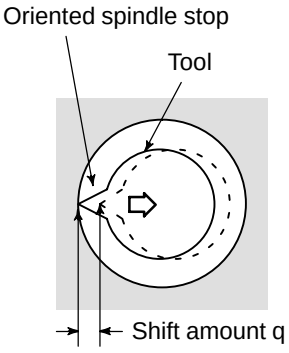

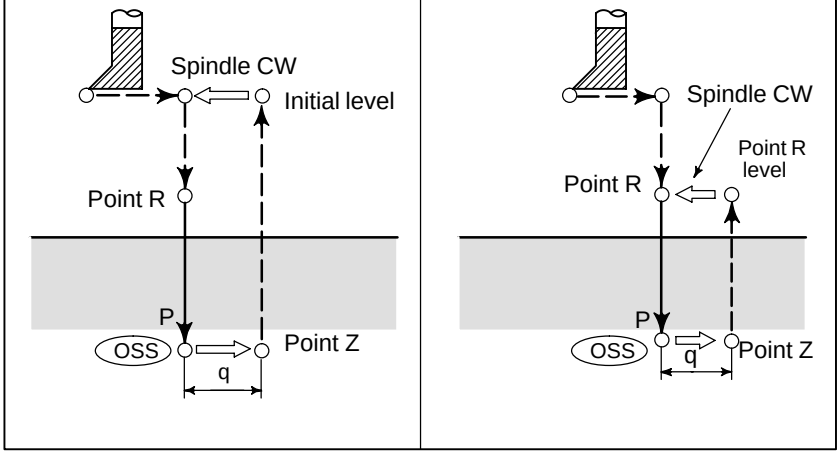

WARNING

Q (shift at the bottom of a hole) is a modal value retained within canned cycles. It must be specified carefully because it is also used as the depth of cut for G73 and G83.

Explanations

When the bottom of the hole has been reached, the spindle is stopped at the fixed rotation position, and the tool is moved in the direction opposite to the tool tip and retracted. This ensures that the machined surface is not damaged and enables precise and efficient boring to be performed.
Before specifying G76, use a miscellaneous function (M code) to rotate the spindle.
When the G76 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next operation.
When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Boring**

  In a block that does not contain X, Y, Z, R, or any additional axes, boring is not performed.

- **P/Q**

  Be sure to specify a positive value in Q. If Q is specified with a negative value, the sign is ignored. Set the direction of shift in bits 4 (RD1) and 5 (RD2) of parameter 5101. Specify P and Q in a block that performs boring. If they are specified in a block that does not perform boring, they are not stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G76 in a single block. Otherwise, G76 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S500 ;	Cause the spindle to start rotating.
G90 G99 G76 X300. Y–250.	Position, bore hole 1, then return to point R.
Z–150. R–120. Q5.	Orient at the bottom of the hole, then shift by 5 mm.
P1000 F120. ;	Stop at the bottom of the hole for 1 s.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.4 Drilling Cycle, Spot Drilling (G81)

This cycle is used for normal drilling. Cutting feed is performed to the bottom of the hole. The tool is then retracted from the bottom of the hole in rapid traverse.

Format

G81 X_ Y_ Z_ R_ F_ K_ ;

X_ Y_ : Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
F_ : Cutting feedrate
K_ : Number of repeats (if required)

G81 (G98)	G81 (G99)
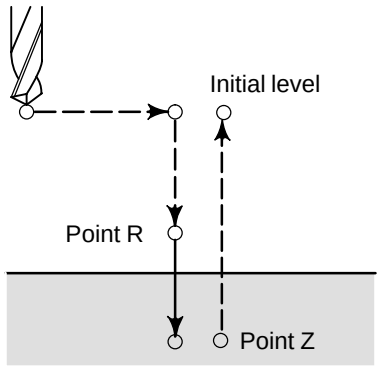	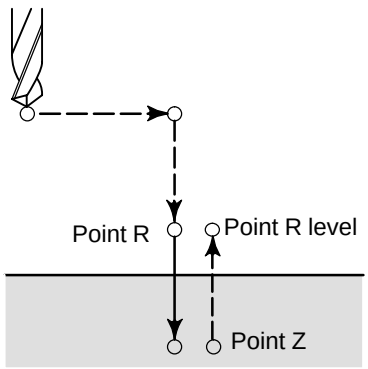

Explanations

After positioning along the X– and Y–axes, rapid traverse is performed to point R.
Drilling is performed from point R to point Z.
The tool is then retracted in rapid traverse.
Before specifying G81, use a miscellaneous function (M code) to rotate the spindle.
When the G81 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.
When K is used to specify the number of repeats, the M code is performed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Restrictions

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G81 in a single block. Otherwise, G81 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S2000 ;	Cause the spindle to start rotating.
G90 G99 G81 X300. Y–250. Z–150. R–100. F120. ;	Position, drill hole 1, then return to point R.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.5 Drilling Cycle Counter Boring Cycle (G82)

This cycle is used for normal drilling.
Cutting feed is performed to the bottom of the hole. At the bottom, a dwell is performed, then the tool is retracted in rapid traverse.
This cycle is used to drill holes more accurately with respect to depth.

Format

G82 X_ Y_ Z_ R_ P_ F_ K_ ;

X_ Y_ : Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
P_ : Dwell time at the bottom of a hole
F_ : Cutting feed rate
K_ : Number of repeats (if required)

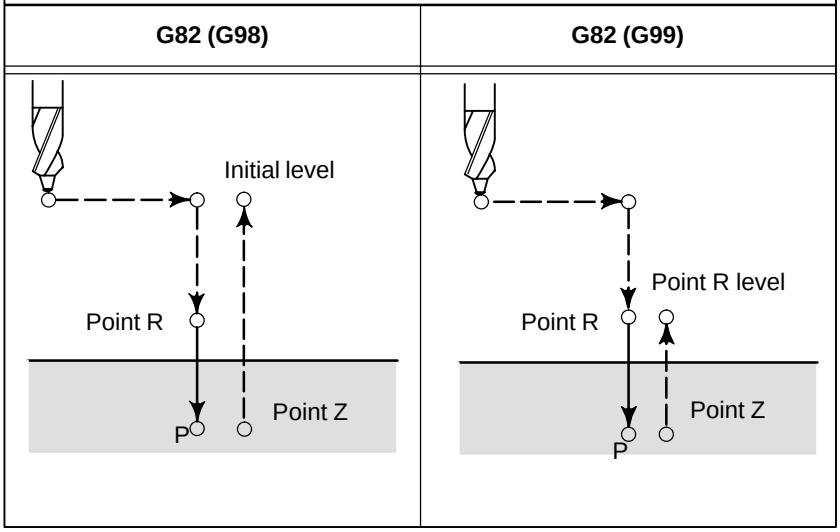

Explanations

After positioning along the X– and Y–axes, rapid traverse is performed to point R.
Drilling is then performed from point R to point Z.
When the bottom of the hole has been reached, a dwell is performed. The tool is then retracted in rapid traverse.
Before specifying G82, use a miscellaneous function (M code) to rotate the spindle.
When the G82 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.
When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Restrictions

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **P**

  Specify P in blocks that perform drilling. If it is specified in a block that does not perform drilling, it cannot be stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G81 in a single block. Otherwise, G81 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S2000 ;	Cause the spindle to start rotating.
G90 G99 G82 X300. Y–250. Z–150. R–100. P1000 F120. ;	Position, drill hole 2, and dwell for 1 s at the bottom of the hole, then return to point R.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.6 Peck Drilling Cycle (G83)

This cycle performs peck drilling.
It performs intermittent cutting feed to the bottom of a hole while removing shavings from the hole.

Format

G83 X_ Y_ Z_ R_ Q_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
Q_ : Depth of cut for each cutting feed
F_ : Cutting feedrate
K_ : Number of repeats (if required)

G83 (G98)	G83 (G99)
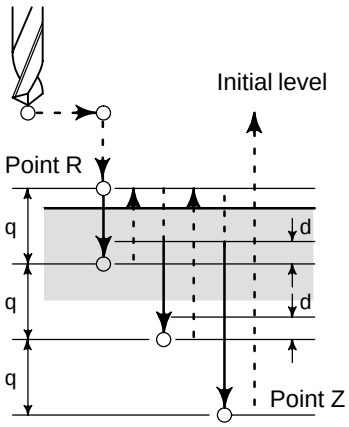	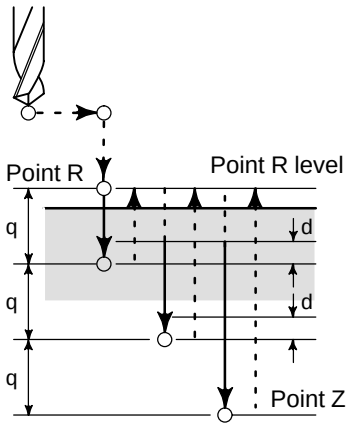

Explanations

Q represents the depth of cut for each cutting feed. It must always be specified as an incremental value.
In the second and subsequent cutting feeds, rapid traverse is performed up to a d point just before where the last drilling ended, and cutting feed is performed again. d is set in parameter (No.5115).
Be sure to specify a positive value in Q. Negative values are ignored.
Before specifying G83, use a miscellaneous function (M code) to rotate the spindle.
When the G83 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.
When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **Q**

  Specify Q in blocks that perform drilling. If they are specified in a block that does not perform drilling, they cannot be stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G82 in a single block. Otherwise, G82 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S2000 ;	Cause the spindle to start rotating.
G90 G99 G83 X300. Y–250. Z–150. R–100. Q15. F120. ;	Position, drill hole 1, then return to point R.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.7 Small–hole peck drilling cycle (G83)

An arbor with the overload torque detection function is used to retract the tool when the overload torque detection signal (skip signal) is detected during drilling. Drilling is resumed after the spindle speed and cutting feedrate are changed. These steps are repeated in this peck drilling cycle.

The mode for the small–hole peck drilling cycle is selected when the M code in parameter 5163 is specified. The cycle can be started by specifying G83 in this mode. This mode is canceled when G80 is specified or when a reset occurs.

Format

G83 X_ Y_ Z_ R_ Q_ F_ I_ K_ P_ ;

X_ Y_: Hole position data
Z_ : Distance from point R to the bottom of the hole
R_ : Distance from the initial level to point R
Q_ : Depth of each cut
F_ : Cutting feedrate
I_: Forward or backward traveling speed (same format as F above)
(If this is omitted, the values in parameters No.5172 and No.5173 are assumed as defaults.)
K_ : Number of times the operation is repeated (if required)
P_ : Dwell time at the bottom of the hole
(If this is omitted, P0 is assumed as the default.)

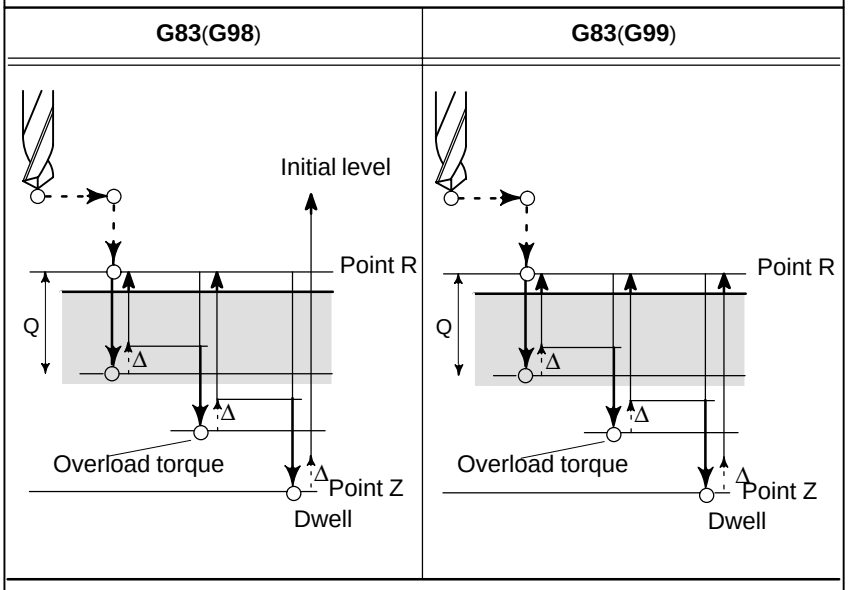

Δ : Initial clearance when the tool is retracted to point R and the clearance from the bottom of the hole in the second or subsequent drilling (parameter 5174)
Q : Depth of each cut

- - ➤ Path along which the tool travels at the rapid traverse rate

⟶ Path along which the tool travels (forward or backward) at the rapid traverse rate during the cycle specified with parameters

⟶ Path along which the tool travels at the programmed cutting feedrate

Explanations

- **Component operations of the cycle**

*Positioning along the X–axis and Y–axis
*Positioning at point R along the Z–axis
*Drilling along the Z–axis (first drilling, depth of cut Q, incremental)
→ Retraction (bottom of the hole → small clearance Δ, incremental)
Retraction (bottom of the hole → point R)
Advance (point R → point at a height of clearance Δ from the bottom of the hole)
→ Drilling (second or subsequent drilling, depth of cut Q + Δ , incremental)
*Dwell
*Return to point R (or initial level) along the Z–axis, cycle end

Acceleration/deceleration during advancing and retraction is controlled according to the cutting feed acceleration/deceleration time constant. When retraction is performed, the position is checked at point R.

- **Specifying an M code**

When the M code in parameter 5163 is specified, the system enters the mode for the small–hole peck drilling cycle.
This M code does not wait for FIN. Care must be taken when this M code is specified with another M code in the same block.

(Example) M□□ M03 ; → Waits for FIN.
M03 M□□ ; → Does not wait for FIN.

- **Specifying a G code**

When G83 is specified in the mode for the small–hole peck drilling cycle, the cycle is started.
This continuous–state G code remains unchanged until another canned cycle is specified or until the G code for cancelling the canned cycle is specified. This eliminates the need for specifying drilling data in each block when identical drilling is repeated.

- **Signal indicating that the cycle is in progress**

In this cycle, the signal indicating that the small–hole peck drilling cycle is in progress is output after the tool is positioned at the hole position along the axes not used for drilling. Signal output continues during positioning to point R along the drilling axis and terminates upon a return to point R or the initial level. For details, refer to the manual of the machine tool builder.

- **Overload torque detection signal**

A skip signal is used as the overload torque detection signal. The skip signal is effective while the tool is advancing or drilling and the tool tip is between points R and Z. (The signal causes a retraction). For details, refer to the manual of the machine tool builder.

- **Changing the drilling conditions**

In a single G83 cycle, drilling conditions are changed for each drilling operation (advance → drilling → retraction). Bits 1 and 2 of parameter OLS, NOL No. 5160 can be specified to suppress the change in drilling conditions.

1. Changing the cutting feedrate
   The cutting feedrate programmed with the F code is changed for each of the second and subsequent drilling operations. In parameters No.5166 and No.5167, specify the respective rates of change applied when the skip signal is detected and when it is not detected in the previous drilling operation.

   Cutting feedrate =F×α

   <First drilling> α=1.0
   <Second or subsequent drilling> α=α×β÷100, where β is the rate of change for each drilling operation

   When the skip signal is detected during the previous drilling operation :β=b1%(parameter No. 5166)
   When the skip signal is not detected during the previous drilling operation:β=b2%(parameter No. 5167)

   If the rate of change in cutting feedrate becomes smaller than the rate specified in parameter 5168, the cutting feedrate is not changed.
   The cutting feedrate can be increased up to the maximum cutting feedrate.

2. Changing the spindle speed
   The spindle speed programmed with the S code is changed for each of the second and subsequent advances. In parameters 5164 and 5165, specify the rates of change applied when the skip signal is detected and when it is not detected in the previous drilling operation.

   Spindle speed =S×γ

   <First drilling> γ=1.0
   <Second or subsequent drilling> γ=γ×δ÷100, where δ is the rate of change for each drilling operation

   When the skip signal is detected during the previous drilling operation :β=b1%(parameter No. 5164)
   When the skip signal is not detected during the previous drilling operation:β=b2%(parameter No. 5165)

   When the cutting feedrate reaches the minimum rate, the spindle speed is not changed. The spindle speed can be increased up to a value corresponding to the maximum value of S analog data.

- **Advance and retraction**

Advancing and retraction of the tool are not executed in the same manner as rapid–traverse positioning. Like cutting feed, the two operations are carried out as interpolated operations. The speed is subjected to exponen–tial acceleration/deceleration. Note that the tool life management func–tion excludes advancing and retraction from the calculation of the tool life.

- **Specifying address I**

The forward or backward traveling speed can be specified with address I in the same format as address F, as shown below:

G83 I1000 ; (without decimal point)
G83 I1000. ; (with decimal point)

Both commands indicate a speed of 1000 mm/min.

Address I specified with G83 in the continuous–state mode continues to be valid until G80 is specified or until a reset occurs.

- **Functions that can be specified**

In this canned cycle mode, the following functions can be specified:

· Hole position on the X–axis, Y–axis, and additional axis
· Operation and branch by custom macro
· Subprogram (hole position group, etc.) calling
· Switching between absolute and incremental modes
· Coordinate system rotation
· Scaling (This command will not affect depth of cut Q or small clearance d1.)
· Dry run
· Feed hold

- **Single block**

When single–block operation is enabled, drilling is stopped after each retraction.

- **Feedrate override**

The feedrate override function works during cutting, retraction, and advancing in the cycle.

- **Custom macro interface**

The number of retractions made during cutting and the number of retractions made in response to the overload signal received during cutting can be output to custom macro common variables (#100 to #149) specified in parameters No.5170 and No.5171. Parameters No.5170 and No.5171 can specify variable numbers within the range of #100 to #149.

Parameter No.5170 : Specifies the number of the common variable to which the number of retractions made during cutting is output.

Parameter No.5171: Specifies the number of the common variable to which the number of retractions made in response to the overload signal received during cutting is output.

Examples

```
N01M03 S___ ;
N02M□□ ;
N03G83 X_ Y_ Z_ R_ Q_ F_ I_ K_ P_ ;
N04X_ Y_ ;
  :
  :
N10G80 ;
```

<**Description of each block**>

N01: Specifies forward spindle rotation and spindle speed.

N02: Specifies the M code to execute **G83** as the small–hole peck drilling cycle. The M code is specified in parameter No.5163.

N03: Specifies the small–hole peck drilling cycle. Drilling data (except K and P) is stored and drilling is started.

N04: Drills a small, deep hole at another position with the same drilling data as for **N03.**

N10: Cancels the small–hole peck drilling cycle. The M code specified in **N02** is also canceled.

13.1.8 Tapping Cycle (G84)

This cycle performs tapping.
In this tapping cycle, when the bottom of the hole has been reached, the spindle is rotated in the reverse direction.

Format

G84 X_ Y_ Z_ R_P_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
P_ : Dwell time
F_ : Cutting feedrate
K_ : Number of repents (if required)

G84 (G98)	G84 (G99)

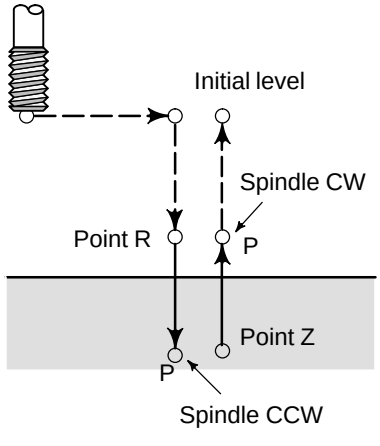

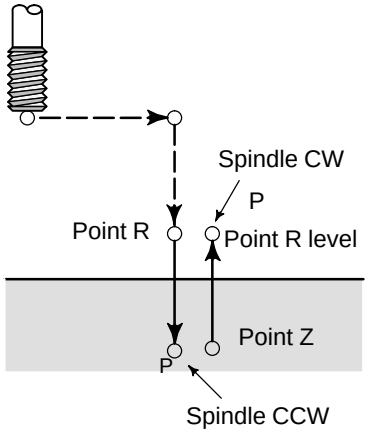

Explanations

Tapping is performed by rotating the spindle clockwise. When the bottom of the hole has been reached, the spindle is rotated in the reverse direction for retraction. This operation creates threads.
Feedrate overrides are ignored during tapping. A feed hold does not stop the machine until the return operation is completed.
Before specifying G84, use a miscellaneous function (M code) to rotate the spindle.
When the G84 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.
When the K is used to specify number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **P**

Specify P in blocks that perform drilling. If it is specified in a block that does not perform drilling, it cannot be stored as modal data.

- **Cancel**

Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G84 in a single block. Otherwise, G84 will be canceled.

- **Tool offset**

In the canned cycle mode, tool offsets are ignored.

Examples

M3 S100 ;	Cause the spindle to start rotating.
G90 G99 G84 X300. Y–250. Z–150. R–120. P300 F120. ;	Position, drill hole 1, then return to point R.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.9 Boring Cycle (G85)

This cycle is used to bore a hole.

Format

G85 X_ Y_ Z_ R_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
F_ : Cutting feed rate
K_ : Number of repeats (if required)

G85 (G98)	G85 (G99)
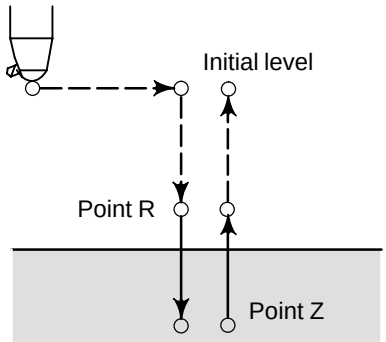	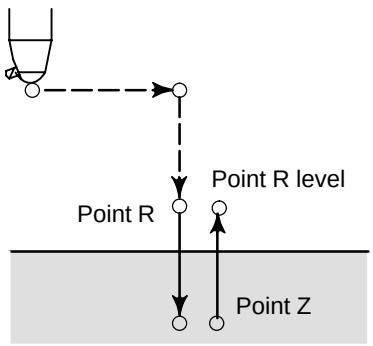

Explanations

After positioning along the X– and Y– axes, rapid traverse is performed to point R.
Drilling is performed from point R to point Z.
When point Z has been reached, cutting feed is performed to return to point R.
Before specifying G85, use a miscellaneous function (M code) to rotate the spindle.
When the G85 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.
When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G85 in a single block. Otherwise, G85 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S100 ;	Cause the spindle to start rotating.
G90 G99 G85 X300. Y–250. Z–150. R–120. F120. ;	Position, drill hole 1, then return to point R.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.10 Boring Cycle (G86)

This cycle is used to bore a hole.

Format

G86 X_ Y_ Z_ R_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
F_ : Cutting feed rate
K_ : Number of repeats (if required)

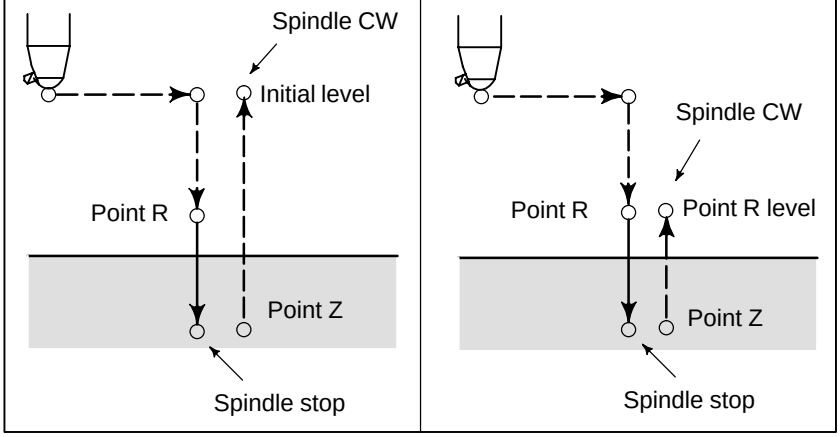

Explanations

After positioning along the X– and Y–axes, rapid traverse is performed to point R.
Drilling is performed from point R to point Z.
When the spindle is stopped at the bottom of the hole, the tool is retracted in rapid traverse.
Before specifying G86, use a miscellaneous function (M code) to rotate the spindle.
When the G86 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation.
The system then proceeds to the next drilling operation.
When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G86 in a single block. Otherwise, G86 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S2000 ;	Cause the spindle to start rotating.
G90 G99 G86 X300. Y–250. Z–150. R–100. F120. ;	Position, drill hole 1, then return to point R.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.11 Back Boring Cycle (G87)

This cycle performs accurate boring.

Format

G87 X_ Y_ Z_ R_ Q_ P_ F_ K_ ;

X_ Y_ : Hole position data
Z_ : The distance from the bottom of the hole to point Z
R_ : The distance from the initial level to point R (the bottom of the hole) level
Q_ : Tool shift amount
P_ : Dwell time
F_ : Cutting feed rate
K_ : Number of repeats (if required)

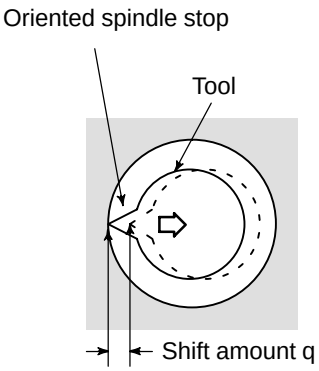

G87 (G98)	G87 (G99)
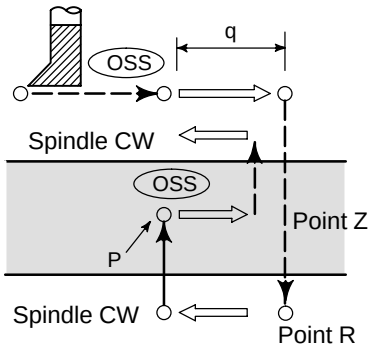	Not used

WARNING

Q (shift at the bottom of a hole) is a modal value retained in canned cycles. It must be specified carefully because it is also used as the depth of cut for G73 and G83.

Explanations

After positioning along the X– and Y–axes, the spindle is stopped at the fixed rotation position. The tool is moved in the direction opposite to the tool tip, positioning (rapid traverse) is performed to the bottom of the hole (point R).
The tool is then shifted in the direction of the tool tip and the spindle is rotated clockwise. Boring is performed in the positive direction along the Z–axis until point Z is reached.
At point Z, the spindle is stopped at the fixed rotation position again, the tool is shifted in the direction opposite to the tool tip, then the tool is returned to the initial level. The tool is then shifted in the direction of the tool tip and the spindle is rotated clockwise to proceed to the next block operation.
Before specifying G87, use a miscellaneous function (M code) to rotate the spindle.
When the G87 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation.
The system then proceeds to the next drilling operation. When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Restrictions

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Boring**

  In a block that does not contain X, Y, Z, R, or any additional axes, boring is not performed.

- **P/Q**

  Be sure to specify a positive value in Q. If Q is specified with a negative value, the sign is ignored. Set the direction of shift in bits 4 (RD1) and 5 (RD2) of parameter No.5101. Specify P and Q in a block that performs boring. If they are specified in a block that does not perform boring, they are not stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G87 in a single block. Otherwise, G87 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S500 ;	Cause the spindle to start rotating.
G90 G87 X300. Y–250.	Position, bore hole 1.
Z–120. R–150. Q5.	Orient at the initial level, then shift by 5 mm.
P1000 F120. ;	Stop at point Z for 1 s.
Y–550. ;	Position, drill hole 2.
Y–750. ;	Position, drill hole 3.
X1000. ;	Position, drill hole 4.
Y–550. ;	Position, drill hole 5.
Y–750. ;	Position, drill hole 6
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.12 Boring Cycle (G88)

This cycle is used to bore a hole.

Format

G88 X_ Y_ Z_ R_ P_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
P_ : Dwell time at the bottom of a hole
F_ : Cutting feed rate
K_ : Number of repeats (if required)

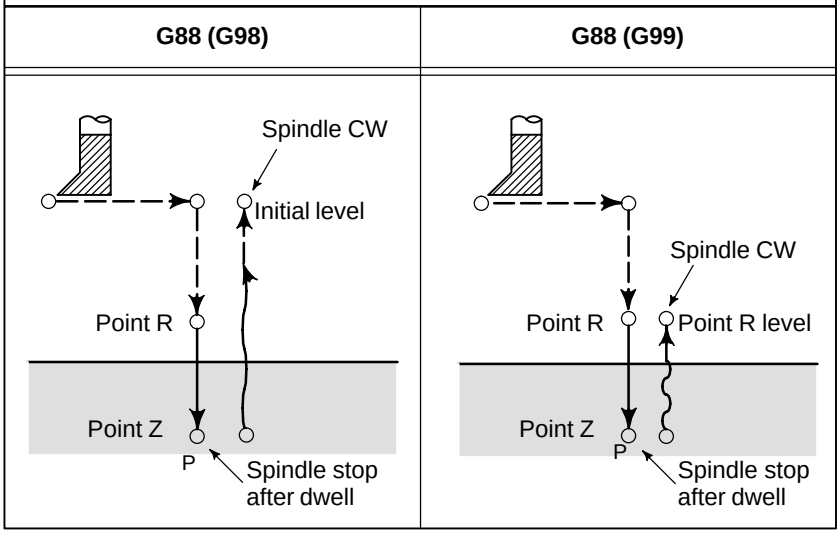

Explanations

After positioning along the X– and Y–axes, rapid traverse is performed to point R. Boring is performed from point R to point Z. When boring is completed, a dwell is performed, then the spindle is stopped. The tool is manually retracted from the bottom of the hole (point Z) to point R. At point R, the spindle is rotated clockwise, and rapid traverse is performed to the initial level.

Before specifying G88, use a miscellaneous function (M code) to rotate the spindle.

When the G88 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.

When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.

When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **P**

  Specify P in blocks that perform drilling. If it is specified in a block that does not perform drilling, it cannot be stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G88 in a single block. Otherwise, G88 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S2000 ;	Cause the spindle to start rotating.
G90 G99 G88 X300. Y–250. Z–150. R–100. P1000 F120. ;	Position, drill hole 1, return to point R then stop at the bottom of the hole for 1 s.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.13 Boring Cycle (G89)

This cycle is used to bore a hole.

Format

G89 X_ Y_ Z_ R_ P_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole
R_ : The distance from the initial level to point R level
P_ : Dwell time at the bottom of a hole
F_ : Cutting feed rate
K_ : Number of repeats (if required)

G89 (G98)	G89 (G99)
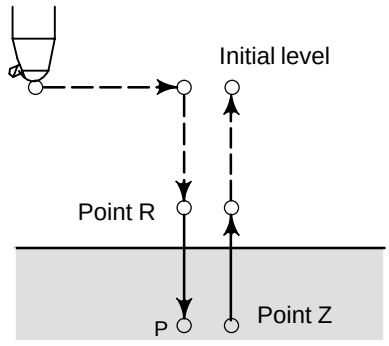	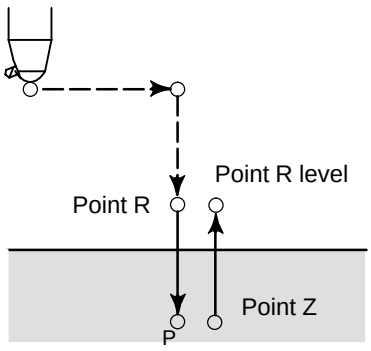

Explanations

This cycle is almost the same as G85. The difference is that this cycle performs a dwell at the bottom of the hole.
Before specifying G89, use a miscellaneous function (M code) to rotate the spindle.
When the G89 command and an M code are specified in the same block, the M code is executed at the time of the first positioning operation. The system then proceeds to the next drilling operation.
When K is used to specify the number of repeats, the M code is executed for the first hole only; for the second and subsequent holes, the M code is not executed.
When a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled.

- **Drilling**

  In a block that does not contain X, Y, Z, R, or any other axes, drilling is not performed.

- **P**

  Specify P in blocks that perform drilling. If it is specified in a block that does not perform drilling, it cannot be stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G89 in a single block. Otherwise, G89 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

M3 S100 ;	Cause the spindle to start rotating.
G90 G99 G89 X300. Y–250. Z–150. R–120. P1000 F120. ;	Position, drill hole 1, return to point R then stop at the bottom of the hole for 1 s.
Y–550. ;	Position, drill hole 2, then return to point R.
Y–750. ;	Position, drill hole 3, then return to point R.
X1000. ;	Position, drill hole 4, then return to point R.
Y–550. ;	Position, drill hole 5, then return to point R.
G98 Y–750. ;	Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;	Return to the reference position return
M5 ;	Cause the spindle to stop rotating.

13.1.14 Canned Cycle Cancel (G80)

G80 cancels canned cycles.

Format

```
G80 ;
```

Explanations

All canned cycles are canceled to perform normal operation. Point R and point Z are cleared. This means that R = 0 and Z = 0 in incremental mode. Other drilling data is also canceled (cleared).

Examples

```
M3 S100 ;          Cause the spindle to start rotating.
G90 G99 G88 X300. Y–250. Z–150. R–120. F120. ;
                   Position, drill hole 1, then return to point R.
Y–550. ;           Position, drill hole 2, then return to point R.
Y–750. ;           Position, drill hole 3, then return to point R.
X1000. ;           Position, drill hole 4, then return to point R.
Y–550. ;           Position, drill hole 5, then return to point R.
G98 Y–750. ;       Position, drill hole 6, then return to the initial level.
G80 G28 G91 X0 Y0 Z0 ;
                   Return to the reference position return,
                   canned cycle cancel
M5 ;               Cause the spindle to stop rotating.
```

Program example using tool length offset and canned cycles

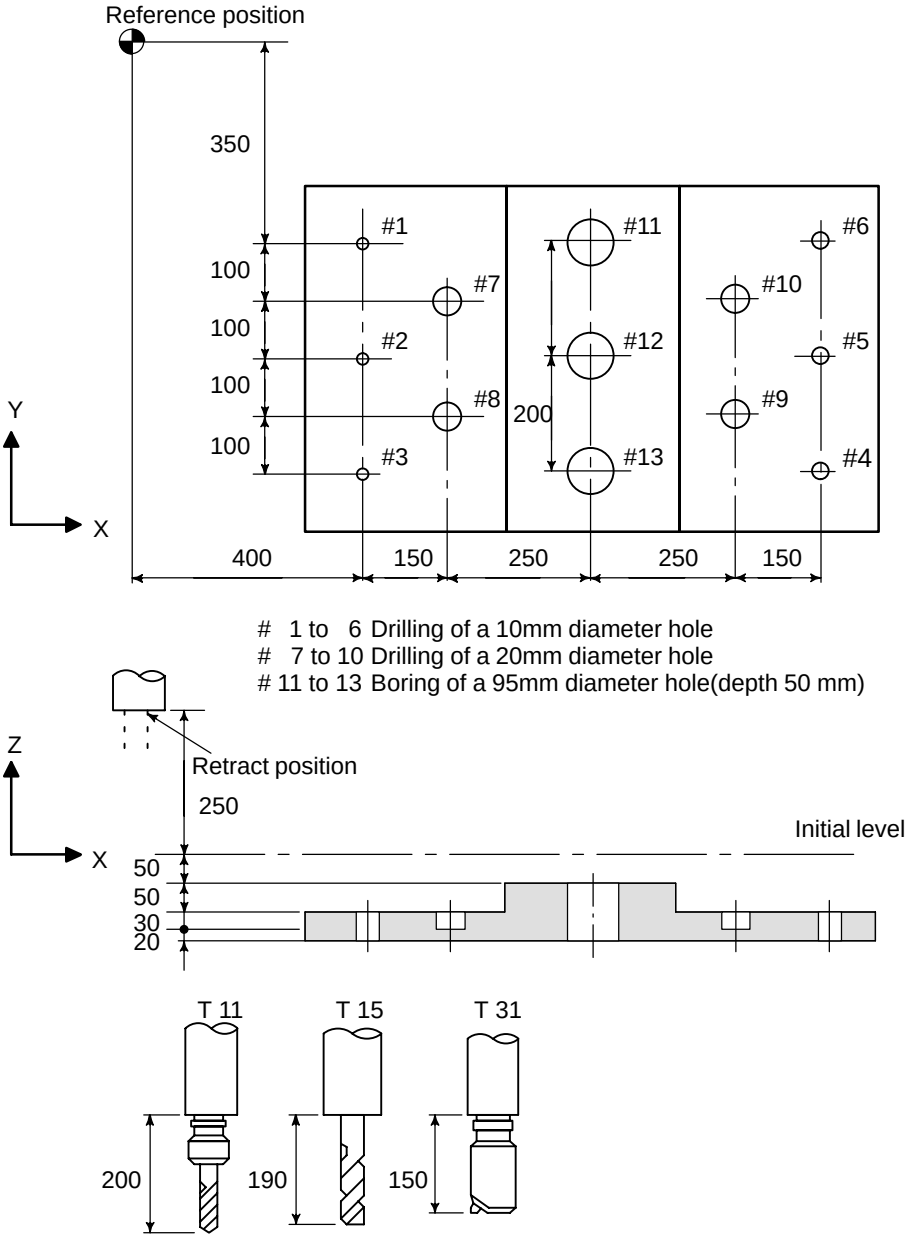

Offset value +200.0 is set in offset No.11, +190.0 is set in offset No.15, and +150.0 is set in offset No.31

Program example

```
;
N001  G92X0Y0Z0;                    Coordinate setting at reference position
N002  G90 G00 Z250.0 T11 M6;        Tool change
N003  G43 Z0 H11;                   Initial level, tool length offset
N004  S30 M3                        Spindle start
N005  G99 G81X400.0 R Y–350.0
      Z–153,0R–97.0 F120;           Positioning, then #1 drilling
N006  Y–550.0;                      Positioning, then #2 drilling and point R level return
N007  G98Y–750.0;                   Positioning, then #3 drilling and initial level return
N008  G99X1200.0;                   Positioning, then #4 drilling and point R level return
N009  Y–550.0;                      Positioning, then #5 drilling and point R level return
N010  G98Y–350.0;                   Positioning, then #6 drilling and initial level return
N011  G00X0Y0M5;                    Reference position return, spindle stop
N012  G49Z250.0T15M6;               Tool length offset cancel, tool change
N013  G43Z0H15;                     Initial level, tool length offset
N014  S20M3;                        Spindle start
N015  G99G82X550.0Y–450.0           Positioning, then #7 drilling, point R level return
      Z–130.0R–97.0P300F70;
N016  G98Y–650.0;                   Positioning, then #8 drilling, initial level return
N017  G99X1050.0;                   Positioning, then #9 drilling, point R level return
N018  G98Y–450.0;                   Positioning, then #10 drilling, initial level return
N019  G00X0Y0M5;                    Reference position return, spindle stop
N020  G49Z250.0T31M6;               Tool length offset cancel, tool change
N021  G43Z0H31;                     Initial level, tool length offset
N022  S10M3;                        Spindle start
N023  G85G99X800.0Y–350.0           Positioning, then #11 drilling, point R level return
      Z–153.0R47.0F50;
N024  G91Y–200.0K2;                 Positioning, then #12, 13 drilling. point R level return
N025  G28X0Y0M5;                    Reference position return, spindle stop
N026  G49Z0;                        Tool length offset cancel
N027  M0;                           Program stop
```

13.2 RIGID TAPPING

The tapping cycle (G84) and left–handed tapping cycle (G74) may be performed in standard mode or rigid tapping mode.
In standard mode, the spindle is rotated and stopped along with a movement along the tapping axis using miscellaneous functions M03 (rotating the spindle clockwise), M04 (rotating the spindle counterclockwise), and M05 (stopping the spindle) to perform tapping.In rigid mode, tapping is performed by controlling the spindle motor as if it were a servo motor and by interpolating between the tapping axis and spindle.
When tapping is performed in rigid mode, the spindle rotates one turn every time a certain feed (thread lead) which takes place along the tapping axis. This operation does not vary even during acceleration or deceleration.
Rigid mode eliminates the need to use a floating tap required in the standard tapping mode, thus allowing faster and more precise tapping.

13.2.1 Rigid Tapping (G84)

When the spindle motor is controlled in rigid mode as if it were a servo motor, a tapping cycle can be sped up.

Format

G84 X_ Y_ Z_ R_ P_ F_ K_ ;

X_ Y_: Hole position data
Z_ : The distance from point R to the bottom of the hole and the position of the bottom of the hole
R_ : The distance from the initial level to point R level
P_ : Dwell time at the bottom of the hole and at point R when a return is made
F_ : Cutting feedrate
K_ : Number of repeats (Only for necessity of repeat)

G84.2 X_ Y_ Z_ R_ P_ F_ L_ ; (FS15 format)

L_ : Number of repeats (only for necessity of repeat)

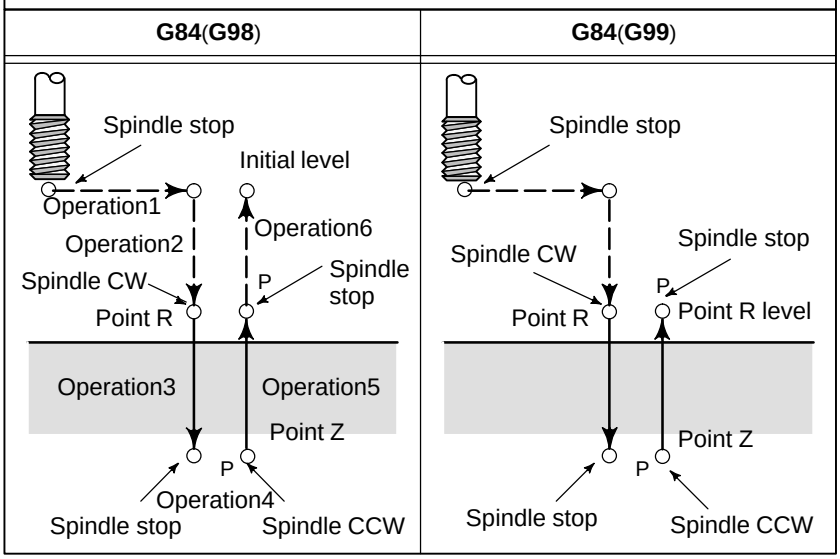

Explanations

After positioning along the X– and Y–axes, rapid traverse is performed to point R.
Tapping is performed from point R to point Z. When tapping is completed, the spindle is stopped and a dwell is performed . The spindle is then rotated in the reverse direction, the tool is retracted to point R, then the spindle is stopped. Rapid traverse to initial level is then performed. While tapping is being performed, the feedrate override and spindle override are assumed to be 100%.
However, the speed for extraction (operation 5) can be overridden by up to 2000% depending on the setting at bit 4 (DOV) of parameter No.5200, bit 3 (OVU) of parameter No.5201, and parameter No.5211.

- **Rigid mode**

Rigid mode can be specified using any of the following methods:
·**Specify M29 S***** before a tapping command.**
·**Specify M29 S***** in a block which contains a tapping command.**
·**Specify G84 for rigid tapping (parameter G84 No. 5200 #0 set to 1).**

- **Thread lead**

In feed–per–minute mode, the thread lead is obtained from the expression, feedrate × spindle speed. In feed–per–revolution mode, the thread lead equals the feedrate speed.

- **Tool length compensation**

If a tool length compensation (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

- **FS10/11–format command**

Rigid tapping can be performed using FS10/11–format commands. Rigid tapping (Including data transfer to and from the PMC) is performed according to the sequence for the FS 21.

Limitations

- **Axis switching**

Before the drilling axis can be changed, the canned cycle must be canceled. If the drilling axis is changed in rigid mode, P/S alarm (No. 206) is issued.

- **S command**

If a speed higher than the maximum speed for the gear being used is specified, P/S alarm (No. 200) is issued.

- **Distribution amount for the spindle**

For an analog spindle control circuit:
Upon specifying a speed command requiring more than 4096 pulses, in detection units, within 8 ms, a P/S alarm (No.202) is issued because the result of such an operation is unpredictable.

For a serial spindle:
Upon specifying a speed command requiring more than 32767 pulses, in detection units, within 8 ms, a P/S alarm (No.202) is issued because the result of such an operation is unpredictable.

- **F command**

If a value exceeding the upper limit of cutting feedrate is specified, P/S alarm (No. 011) is issued.

- **Unit of F command**

	Metric input	Inch input	Remarks
G94	1 mm/min	0.01 inch/min	Decimal point programming allowed
G95	0.01 mm/rev	0.0001 inch/rev	Decimal point programming allowed

- **M29**

If an S command and axis movement are specified between M29 and G84, P/S alarm (No. 203) is issued. If M29 is specified in a tapping cycle, P/S alarm (No. 204) is issued.

- **P**

Specify P in a block that performs drilling. If R is specified in a non–drilling block, it is not stored as modal data.

- **Cancel**

Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G84 in a single block. Otherwise, G84 will be canceled.

- **Tool offset**

In the canned cycle mode, tool offsets are ignored.

- **Program restart**

Any program cannot be resumed during rigid tapping.

Examples

Z–axis feedrate 1000 mm/min
Spindle speed 1000 min^{-1}
Thread lead 1.0 mm
<Programming of feed per minute>

G94 ;	Specify a feed–per–minute command.
G00 X120.0 Y100.0 ;	Positioning
M29 S1000 ;	Rigid mode specification
G84 Z–100.0 R–20.0 F1000 ;	Rigid tapping

<Programming of feed per revolution>

G95 ;	Specify a feed–per–revolution command**.**
G00 X120.0 Y100.0 ;	Positioning
M29 S1000 ;	Rigid mode specification
G84 Z–100.0 R–20.0 F1.0 ;	Rigid tapping

13.2.2 Left–handed Rigid Tapping Cycle (G74)

When the spindle motor is controlled in rigid mode as if it were a servo motor, tapping cycles can be sped up.

Format

G74 X_ Y_ Z_ R_ P_ F_ K_ ;

X_ Y_ : Hole position data
Z_ : The distance from point R to the bottom of the hole and the position of the bottom of the hole
R_ : The distance from the initial level to point R level
P_ : Dwell time at the bottom of the hole and at point R when return is made.
F_ : Cutting feedrate
K_ : Number of repeats (Only for necessity of repeat)

G84.3 X_ Y_ Z_ R_ P_ F_ L_ ; (FS15 format)
L_ : Number of repeats (Only for necessity of repeat)

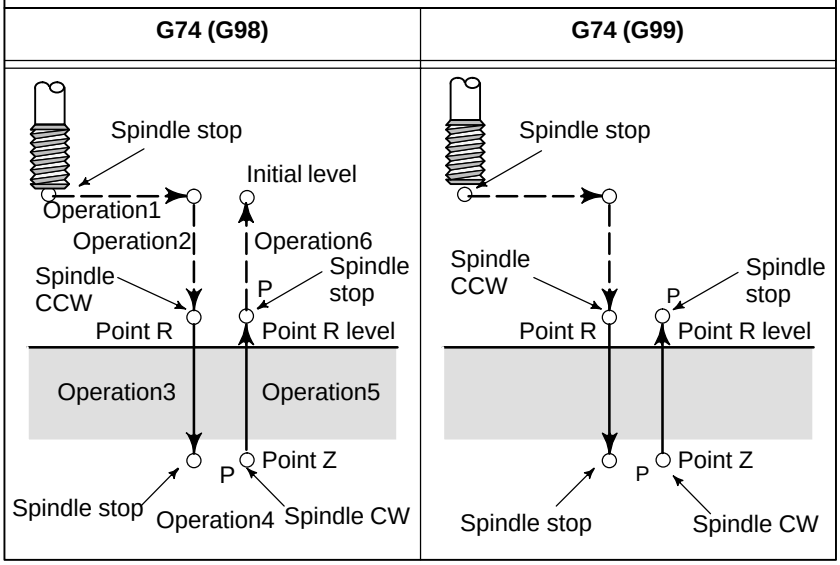

Explanations

After positioning along the X– and Y–axes, rapid traverse is performed to point R.
Tapping is performed from point R to point Z. When tapping is completed, the spindle is stopped and a dwell is performed. The spindle is then rotated in the normal direction, the tool is retracted to point R, then the spindle is stopped. Rapid traverse to initial level is then performed. While tapping is being performed, the feedrate override and spindle override are assumed to be 100%.
However, the speed for extraction (operation 5) can be overridden by up to 2000% depending on the setting at bit 4 (DOV) of parameter 5200, bit 3 (OVU) of parameter No.5201, and parameter 5211.

- **Rigid mode**

Rigid mode can be specified using any of the following methods:
· **Specify M29 S***** before a tapping command.**
· **Specify M29 S***** in a block which contains a tapping command.**
· **Specify G84 for rigid tapping. (parameter G84 No. 5200#0 set to1).**

- **Thread lead**

  In feed–per–minute mode, the thread lead is obtained from the expression, feedrate × spindle speed. In feed–per–revolution mode, the thread lead equals the feedrate.

- **Tool length compensation**

  If a tool length offset (G43, G44, or G49) is specified in the canned cycle, the offset is applied at the time of positioning to point R.

- **FS10/11–format command**

  Rigid tapping can be performed using FS10/11–format commands. Rigid tapping (Including data transfer to and from the PMC) is performed according to the sequence for the FS 21.

Limitations

- **Axis switching**

  Before the drilling axis can be changed, the canned cycle must be canceled. If the drilling axis is changed in rigid mode,P/S alarm (No. 206) is issued.

- **S command**

  Specifying a rotation speed exceeding the maximum speed for the gear used causes P/S alarm (No. 200).

- **Distribution amount for the spindle**

  For an analog spindle control circuit:
  Upon specifying a speed command requiring more than 4096 pulses, in detection units, within 8 ms, a P/S alarm (No.202) is issued because the result of such an operation is unpredictable.

  For a serial spindle:
  Upon specifying a speed command requiring more than 32767 pulses, in detection units, within 8 ms, a P/S alarm (No.202) is issued because the result of such an operation is unpredictable.

- **F command**

  Specifying a value that exceeds the upper limit of cutting feedrate causes P/S alarm (No. 011).

- **Unit of F command**

	Metric input	Inch input	Remarks
G94	1 mm/min	0.01 inch/min	Decimal point programming allowed
G95	0.01 mm/rev	0.0001 inch/rev	Decimal point programming allowed

- **M29**

  Specifying an S command or axis movement between M29 and G74 causes P/S alarm (No. 203).
  Then, specifying M29 in the tapping cycle causes P/S alarm (No. 204).

- **P**

  Specify P in a block that performs drilling. If R is specified in a non–drilling block, it ss not stored as modal data.

- **Cancel**

  Do not specify a G code of the 01 group (G00 to G03 or G60 (when the MDL bit (bit 0 of parameter 5431) is set to 1)) and G74 in a single block. Otherwise, G74 will be canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

Examples

Z–axis feedrate 1000 mm/min
Spindle speed 1000 min^{-1}
Thread lead 1.0 mm
<Programming for feed per minute>

G94 ;	Specify a feed–per–minute command.
G00 X120.0 Y100.0 ;	Positioning
M29 S1000 ;	Rigid mode specification
G84 Z–100.0 R–20.0 F1000 ;	Rigid tapping

<Programming for feed per revolution>

G95 ;	Specify a feed–per–revolution command.
G00 X120.0 Y100.0 ;	Positioning
M29 S1000 ;	Rigid mode specification
G74 Z–100.0 R–20.0 F1.0 ;	Rigid tapping

13.2.3 Peck Rigid Tapping Cycle (G84 or G74)

Tapping a deep hole in rigid tapping mode may be difficult due to chips sticking to the tool or increased cutting resistance. In such cases, the peck rigid tapping cycle is useful.
In this cycle, cutting is performed several times until the bottom of the hole is reached. Two peck tapping cycles are available: High–speed peck tapping cycle and standard peck tapping cycle. These cycles are selected using the PCP bit (bit 5) of parameter 5200.

Format

G84 (or G74) X_ Y_ Z_ R_ P_ Q_ F_ K_ ;

X_ Y_ : Hole position data
Z_ : The distance from point R to the bottom of the hole and the position of the bottom of the hole
R_ : The distance from the initial level to point R level
P_ : Dwell time at the bottom of the hole and at point R when a return is made
Q_ : Depth of cut for each cutting feed
F_ : The cutting feedrate
K_ : Number of repeats

·High–speed peck tapping cycle
(Parameter PCP(No.5200#5=0))

(1) The tool operates at a normal cutting feedrate. The normal time constant is used.
(2) Retraction can be overridden. The retraction time constant is used.

·Peck tapping cycle
(Parameter PCP(No.5200#5=1))

(1) The tool operates at a normal cutting feedrate. The normal time constant is used.
(2) Retraction can be overridden. The retraction time constant is used.
(3) Retraction can be overridden. The normal time constant is used.

During a rigid tapping cycle, in–position check is performed at the end of each operation of (1) and (2) in the peck tapping cycle.

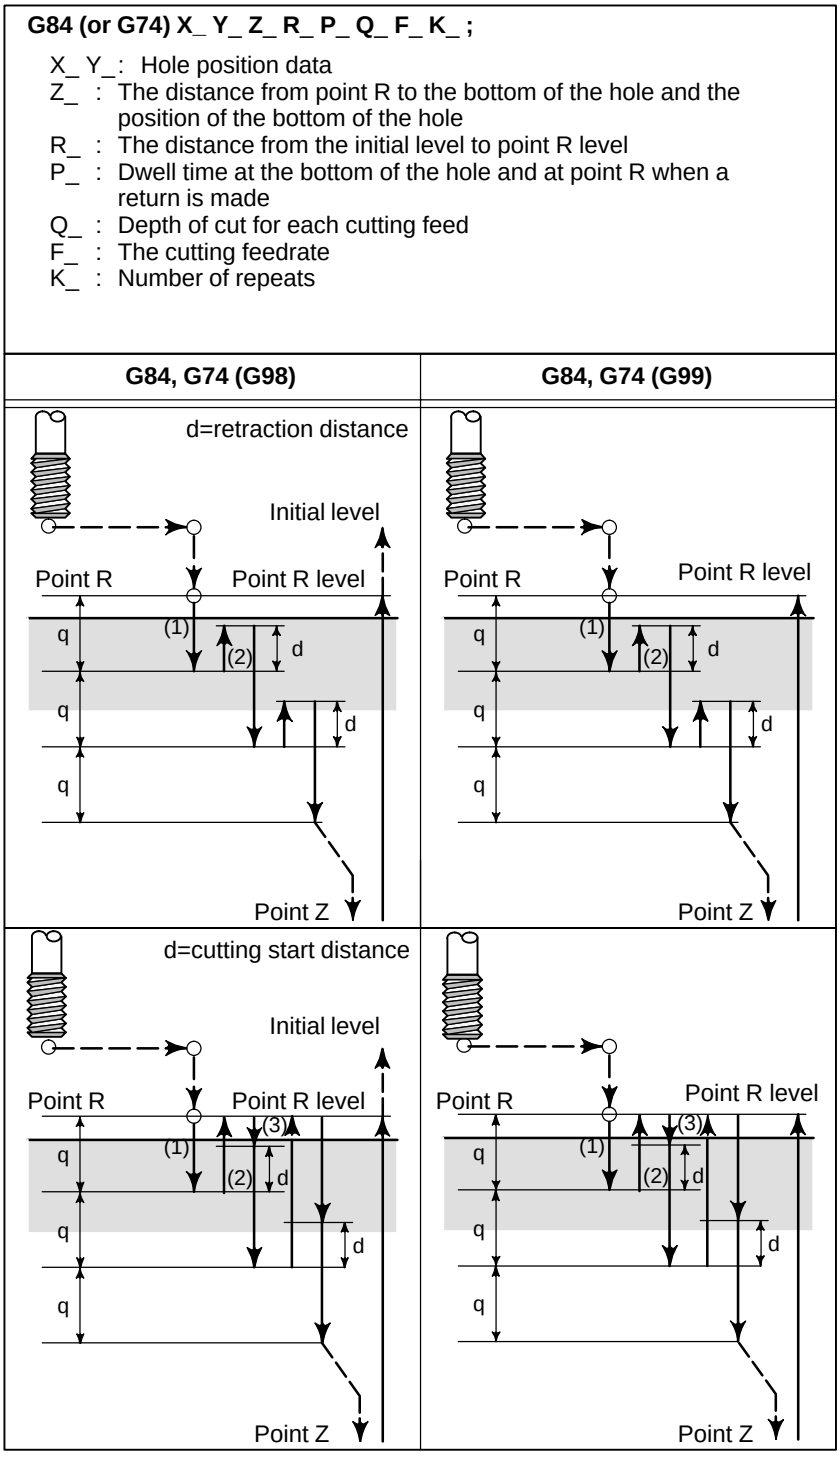

Explanations

- **High–speed peck tapping cycle**

After positioning along the X– and Y–axes, rapid traverse is performed to point R. From point R, cutting is performed with depth Q (depth of cut for each cutting feed), then the tool is retracted by distance d. The DOV bit (bit 4) of parameter 5200 specifies whether retraction can be overridden or not. When point Z has been reached, the spindle is stopped, then rotated in the reverse direction for retraction.
Set the retraction distance, d, in parameter 5213.

- **Peck tapping cycle**

After positioning along the X– and Y–axes, rapid traverse is performed to point R level. From point R, cutting is performed with depth Q (depth of cut for each cutting feed), then a return is performed to point R. The DOV bit (bit 4) of parameter 5200 specifies whether the retraction can be overridden or not. The moving of cutting feedrate F is performed from point R to a position distance d from the end point of the last cutting, which is where cutting is restarted. For this moving of cutting feedrate F, the specification of the DOV bit (bit 4) of parameter 5200 is also valid. When point Z has been reached, the spindle is stopped, then rotated in the reverse direction for retraction.
Set d (distance to the point at which cutting is started) in parameter 5213.

Limitations

- **Axis switching**

Before the drilling axis can be changed, the canned cycle must be canceled. If the drilling axis is changed in rigid mode, P/S alarm (No. 206) is issued.

- **S command**

Specifying a rotation speed exceeding the maximum speed for the gear used causes P/S alarm (No. 200).

- **Distribution amount for the spindle**

For an analog spindle control circuit:
Upon specifying a speed command requiring more than 4096 pulses, in detection units, within 8 ms, a P/S alarm (No.202) is issued because the result of such an operation is unpredictable.

For a serial spindle:
Upon specifying a speed command requiring more than 32767 pulses, in detection units, within 8 ms, a P/S alarm (No.202) is issued because the result of such an operation is unpredictable.

- **F command**

Specifying a value that exceeds the upper limit of cutting feedrate causes alarm (No. 011).

- **Unit of F**

	Metric input	Inch input	Remarks
G94	1 mm/min	0.01 inch/min	Decimal point programming allowed
G95	0.01 mm/rev	0.0001 inch/rev	Decimal point programming allowed

- **M29**

Specifying an S command or axis movement between M29 and G84 causes P/S alarm (No. 203).
Then, specifying M29 in the tapping cycle causes P/S alarm (No. 204).

- **P/Q**

Specify P and Q in a block that performs drilling. If they are specified in a block that does not perform drilling, they are not stored as modal data. When Q0 is specified, the peck rigid tapping cycle is not performed.

- **Cancel**

  Do not specify a group 01 G code (G00 to G03) and G73 in the same block. If they are specified together, G73 is canceled.

- **Tool offset**

  In the canned cycle mode, tool offsets are ignored.

13.2.4 Canned Cycle Cancel (G80)

The rigid tapping canned cycle is canceled. For how to cancel this cycle, see II–13.1.14.

13.3 OPTIONAL ANGLE CHAMFERING AND CORNER ROUNDING

Chamfering and corner rounding blocks can be inserted automatically between the following:

·Between linear interpolation and linear interpolation blocks
·Between linear interpolation and circular interpolation blocks
·Between circular interpolation and linear interpolation blocks
·Between circular interpolation and circular interpolationblocks

Format

, C_	**Chamfering**
, R_	**Corner R**

Explanations

When the above specification is added to the end of a block that specifies linear interpolation (G01) or circular interpolation (G02 or G03), a chamfering or corner rounding block is inserted.
Blocks specifying chamfering and corner rounding can be specified consecutively.

- **Chamfering**

After C, specify the distance from the virtual corner point to the start and end points. The virtual corner point is the corner point that would exist if chamfering were not performed.

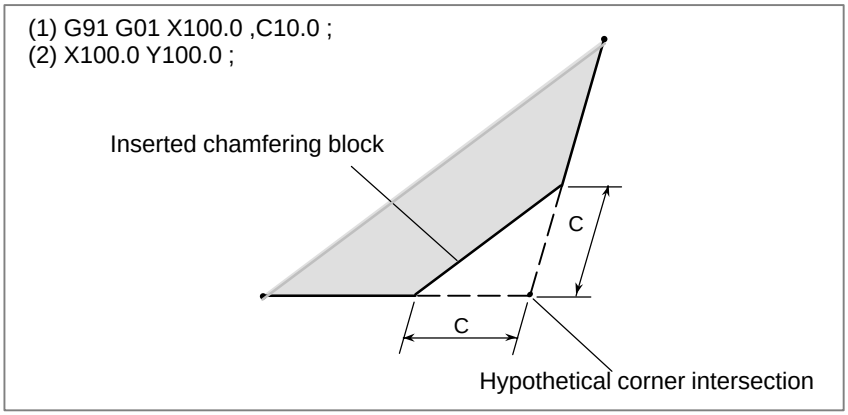

- **Corner R**

After R, specify the radius for corner rounding.

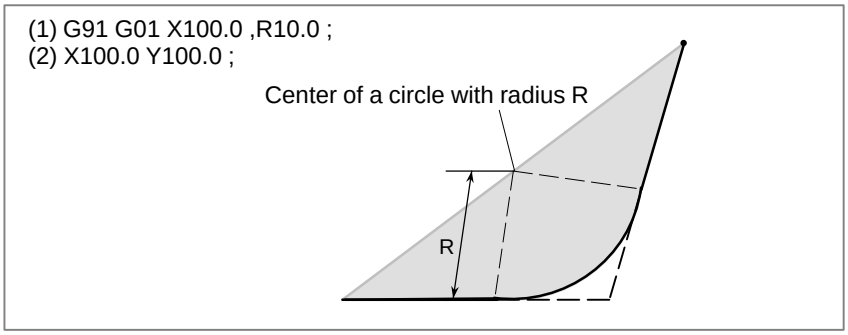

Examples

```
N001 G92 G90 X0 Y0 ;
N002 G00 X10.0 Y10.0 ;
N003 G01 X50.0 F10.0 ,C5.0 ;
N004 Y25.0 ,R8.0 ;
N005 G03 X80.0 Y50.0 R30.0 ,R8.0 ;
N006 G01 X50.0 ,R8.0 ;
N007 Y70.0 ,C5.0 ;
N008 X10.0 ,C5.0 ;
N009 Y10.0 ;
N010 G00 X0 Y0 ;
N011 M0 ;
```

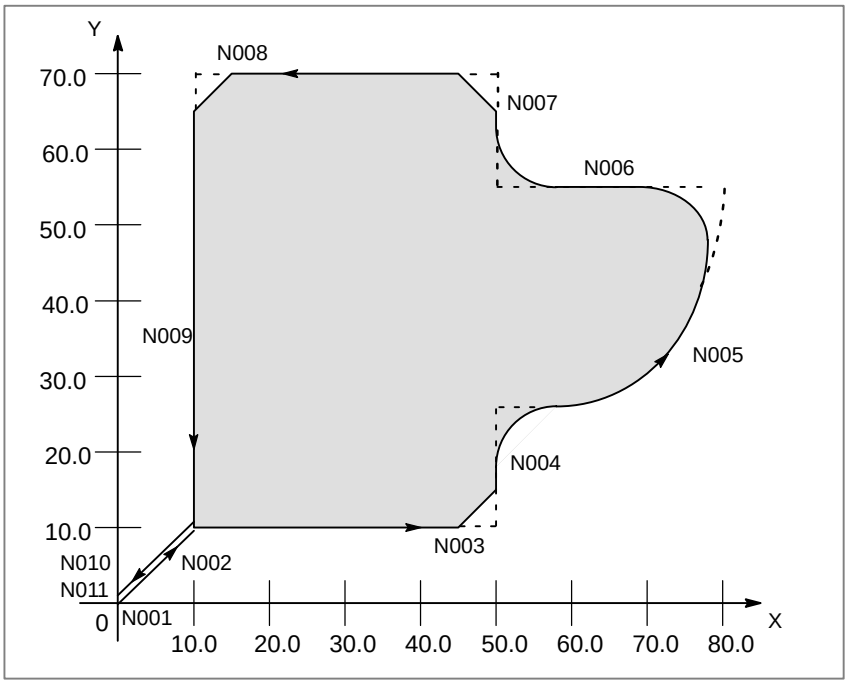

Restrictions

- **Plane selection**

  Chamfering and corner rounding can be performed only in the plane specified by plane selection (G17, G18, or G19). These functions cannot be performed for parallel axes.

- **Next block**

  A block specifying chamfering or corner rounding must be followed by a block that specifies a move command using linear interpolation (G01) or circular interpolation (G02 or G03). If the next block does not contain these specifications, P/S alarm No. 052 is issued.

- **Plane switching**

  A chamfering or corner rounding block can be inserted only for move commands which are performed in the same plane. In a block that comes immediately after plane switching (G17, G18, or G19 is specified), neither chamfering nor corner rounding can be specified.

- **Exceeding the move range**

  If the inserted chamfering or corner rounding block causes the tool to go beyond the original interpolation move range, P/S alarm No.055 is issued.

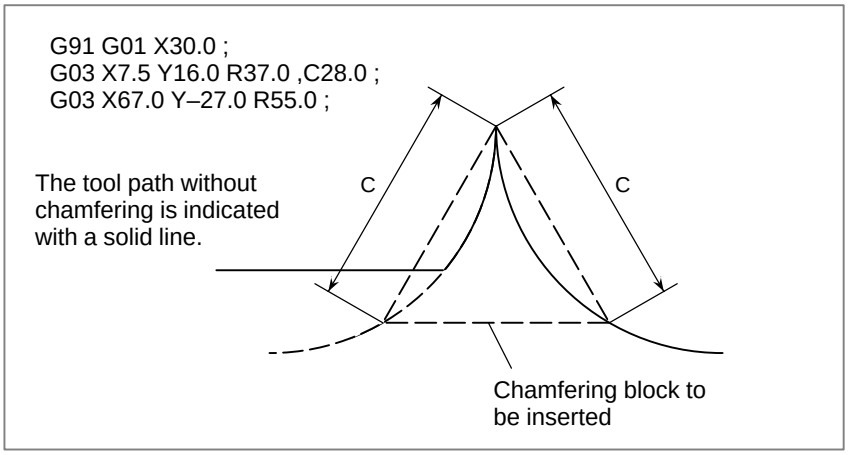

- **Coordinate system**

  In a block that comes immediately after the coordinate system is changed (G92, or G52 to G59) or a return to the reference position (G28 to G30) is specified, neither chamfering nor corner rounding can be specified.

- **Travel distance 0**

  When two linear interpolation operations are performed, the chamfering or corner rounding block is regarded as having a travel distance of zero if the angle between the two straight lines is within +1 . When linear interpolation and circular interpolation operations are performed, the corner rounding block is regarded as having a travel distance of zero if the angle between the straight line and the tangent to the arc at the intersection is within +1 . When two circular interpolation operations are performed, the corner rounding block is regarded as having a travel distance of zero if the angle between the tangents to the arcs at the intersection is within +1 .

- **Unavailable G codes**

  The following G codes cannot be used in a block that specifies chamfering or corner rounding. They also cannot be used between chamfering and corner rounding blocks that define a continuous figure.
  ·G codes of group 00 (except G04)
  ·G68 of group 16

- **Threading**

  Corner rounding cannot be specified in a threading block.

- **DNC operation**

  DNC operation cannot be applied to optional–angle chamfering or corner rounding.

13.4 EXTERNAL MOTION FUNCTION (G81)

Upon completion of positioning in each block in the program, an external operation function signal can be output to allow the machine to perform specific operation.
Concerning this operation, refer to the manual supplied by the machine tool builder.

Format

G81 IP_ ; (IP_ Axis move command)

Explanations

Every time positioning for the IP_ move command is completed, the CNC sends a external operation function signal to the machine. An external operation signal is output for each positioning operation until canceled by G80 or a group 01 G code.

Restrictions

- **A block without X or Y axis**

  No external operation signals are output during execution of a block that contains neither X nor Y.

- **Relationship with canned cycle G81**

  G81 can also be used for a drilling canned cycle (II–13.1.4). Whether G81 is to be used for an external motion function or for a drilling canned cycle is psecified with EXC, bit 1 of parameter No.5101.

13.5 INDEX TABLE INDEXING FUNCTION

By specifying indexing positions (angles) for the indexing axis (one rotation axis, A, B, or C), the index table of the machining center can be indexed.
Before and after indexing, the index table is automatically unclamped or clamped .

Explanations

● Indexing position

Specify an indexing position with address A, B, or C (set to bit 0 of parameter ROT_X No.1006).
The indexing position is specified by either of the following (depending on bit 4 of parameter G90 No.5500):

1. Absolute value only
2. Absolute or incremental value depending on the specified G code: G90 or G91

A positive value indicates an indexing position in the counterclockwise direction. A negative value indicates an indexing position in the clockwise direction.
The minimum indexing angle of the index table is the value set to parameter 5512. Only multiples of the least input increment can be specified as the indexing angle. If any value that is not a multiple is specified, an P/S alarm (No. 135) occurs. Decimal fractions can also be entered. When a decimal fraction is entered, the 1's digit corresponds to degree units.

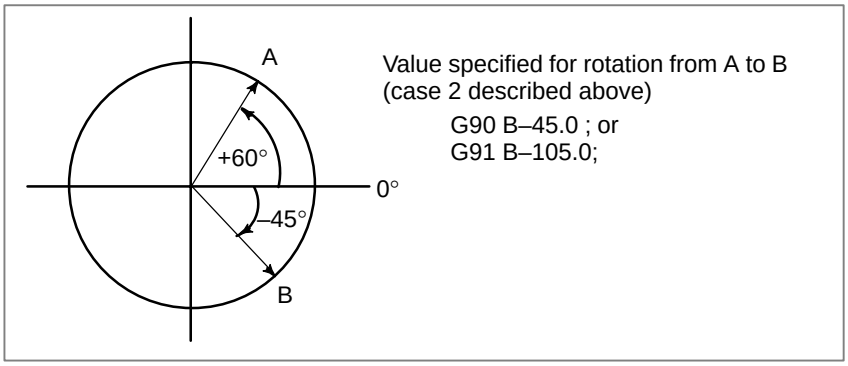

● Direction and value of rotation

The direction of rotation and angular displacement are determined by either of the following two methods. Refer to the manual written by the machine tool builder to find out which method is applied.

1. Using the miscellaneous function specified in parameter No. 5511
   (Address) (Indexing position) (Miscellaneous function);
   Rotation in the negative direction
   (Address) (Indexing position);
   Rotation in the positive direction (No miscellaneous functions are specified.)
   An angular displacement greater than 360◦is rounded down to the corresponding angular displacement within 360◦when bit 2 of parameter ABS No. 5500 specifies this option.
   For example, when G90 B400.0 (miscellaneous function); is specified at a position of 0 , the table is rotated by 40◦in the negative direction.

2. Using no miscellaneous functions
   By setting to bits 2, 3, and 4 of parameter ABS, INC,G90 No.5500, operation can be selected from the following two options.
   Select the operation by referring to the manual written by the machine tool builder.

   (1) Rotating in the direction in which an angular displacement becomes shortest
   This is valid only in absolute mode. A specified angular dis–placement greater than 360◦ is rounded down to the correspond–ing angular displacement within 360◦ when bit 2 of parameter ABS No.5500 specifies this option.
   For example, when G90 B400.0; is specified at a position of 0, the table is rotated by 40◦in the positive direction.

   (2) Rotating in the specified direction
   In the absolute mode, the value set in bit 2 of parameter ABS No.5500 determines whether an angular displacement greater than 360◦ is rounded down to the corresponding angular displacement within 360◦.
   In the incremental mode, the angular displacement is not rounded down.
   For example, when G90 B720.0; is specified at a position of 0, the table is rotated twice in the positive direction, when the angular displacement is not rounded down.

- **Feedrate**

The table is always rotated around the indexing axis in the rapid traverse mode.
Dry runs cannot be executed for the indexing axis.

WARNING
If a reset is made during indexing of the index table, a reference position return must be made before each time the index table is indexed subsequently.

NOTE
1 Specify the indexing command in a single block. If the command is specified in a block in which another controlled axis is specified, P/S alarm (No.136) occurs.
2 The waiting state which waits for completion of clamping or unclamping of the index table is indicated on diagnostic screen 12.
3 The miscellaneous function specifying a negative direction is processed in the CNC.
   The relevant M code signal and completion signal are sent between the CNC and the machine.
4 If a reset is made while waiting for completion of clamping or unclamping, the clamp or unclamp signal is cleared and the CNC exits the completion wait state.

● Indexing function and other functions

Table13.5 Index indexing function and other functions

Item	Explanation
Relative position display	This value is rounded down when bit 1 of parameter REL No. 5500 specifies this option.
Absolute position display	This value is rounded down when bit 2 of parameterABS No. 5500 specifies this option.
Automatic return from the reference position (G29) 2nd reference position return (G30)	Impossible to return
Movement in the machine coordinate system	Impossible to move
Single direction positioning	Impossible to specify
2nd auxiliary function (B code)	Possible with any address other than B that of the indexing axis.
Operations while moving the indexing axis	Unless otherwise processed by the machine, feed hold, interlock and emerrgency stop can be executed. Machine lock can be executed after indexing is completed.
SERVO OFF signal	Disabled The indexing axis is usually in the servo–off state.
Incremental commands for indexing the index table	The workpiece coordinate system and machine coordinate system must always agree with each other on the indexing axis (the workpiece zero point offset value is zero.).
Operations for indexing the index table	Manual operation is disabled in the JOG, INC, or HANDLE mode. A manual reference position return can be made. If the axis selection signal is set to zero during manual reference position return, movement is stopped and the clamp command is not executed.

14 COMPENSATION FUNCTION

General

This chapter describes the following compensation functions:

14.1 TOOL LENGTH OFFSET (G43, G44, G49)
14.2 AUTOMATIC TOOL LENGTH MEASUREMENT (G37)
14.3 TOOL OFFSET (G45–G48)
14.4 OVERVIEW OF CUTTER COMPENSATION C (G40–G42)
14.5 DETAILS OF CUTTER COMPENSATION C
14.6 TOOL COMPENSATION VALUES, NUMBER OF COMPENSATION VALUES, AND ENTERING VALUES FROM THE PROGRAM (G10)
14.7 SCALING (G50, G51)
14.8 COORDINATE SYSTEM ROTATION (G68, G69)
14.9 NORMAL DIRECTION CONTROL (G40.1, G41.1, G42.1 OR G150, G151, G152)
14.10 PROGRAMMABLE MIRROR IMAGE (G50.1, G51.1)

14.1 TOOL LENGTH OFFSET (G43,G44,G49)

This function can be used by setting the difference between the tool length assumed during programming and the actual tool length of the tool used into the offset memory. It is possible to compensate the difference without changing the program.
Specify the direction of offset with G43 or G44. Select a tool length offset value from the offset memory by entering the corresponding address and number (H code).

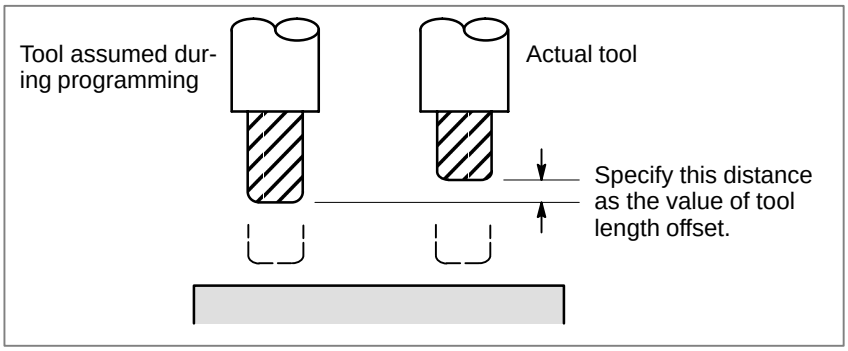

Fig14.1 Tool length offset

The following three methods of tool length offset can be used, depending on the axis along which tool length offset can be made.

·**Tool length offset A**
Compensates for the difference in tool length along the Z–axis.

·**Tool length offset B**
Compensates for the difference in tool length along the X–,Y–,or Z–axis.

·**Tool length offset C**
Compensates for the difference in tool length along a specified axis.

14.1.1 General

Format

Tool length offset A	G43 Z_ H_ ; G44 Z_ H_ ;	Explanation of each address G43 : Positive offset G44 : Negative offset G17 : XY plane selection G18 : ZX plane selection G19 : YZ plane selection α : Address of a specified axis H : Address for specifying the tool length offset value
Tool length offset B	G17 G43 Z_ H_ ; G17 G44 Z_ H_ ; G18 G43 Y_ H_ ; G18 G44 Y_ H_ ; G19 G43 X_ H_ ; G19 G44 X_ H_ ;	
Tool length offset C	G43 α_ H_ ; G44 α_ H_ ;	
Tool length offset cancel	G49 ; or H0 ;	

Explanations

- **Selection of tool length offset**

Select tool length offset A, B, or C, by setting bits 0 and 1 of parameter TLC,TLB No. 5001.

- **Direction of the offset**

When G43 is specified, the tool length offset value (stored in offset memory) specified with the H code is added to the coordinates of the end position specified by a command in the program. When G44 is specified, the same value is subtracted from the coordinates of the end position. The resulting coordinates indicate the end position after compensation, regardless of whether the absolute or incremental mode is selected.
If movement along an axis is not specified, the system assumes that a move command that causes no movement is specified. When a positive value is specified for tool length offset with G43, the tool is moved accordingly in the positive direction. When a positive value is specified with G44, the tool is moved accordingly in the negative direction. When a negative value is specified, the tool is moved in the opposite direction. G43 and G44 are modal G codes. They are valid until another G code belonging to the same group is used.

- **Specification of the tool length offset value**

The tool length offset value assigned to the number (offset number) specified in the H code is selected from offset memory and added to or subtracted from the moving command in the program.

(1) Tool length offset A/B
When the offset numbers for tool length offset A/B are specified or modified, the offset number validation order varies, depending on the condition, as described below.

- **When OFH (bit 2 of parameter No. 5001) = 0**

```
O××××;
 H01 ;
    :
G43Z_ ;          (1)
    :
G44Z_H02 ;       (2)
    :
H03 ;            (3)
    :
```

(1) Offset number H01 is valid.
(2) Offset number H02 is valid.
(3) Offset number H03 is valid.

- **When OFH (bit 2 of parameter No. 5001) = 1**

```
O××××;
 H01 ;
    :
G43Z_ ;          (1)
    :
G44Z_H02 ;       (2)
    :
H03 ;            (3)
    :
```

(1) Offset number H00 is valid.
(2) Offset number H02 is valid.
(3) Offset number H02 is valid.

(2) Cutter compensation C

When the offset numbers for cutter compensation C are specified or modified, the offset number validation order varies, depending on the condition, as described below.

- **When OFH (bit 2 of parameter No. 5001) = 0**

```
O××××;
 H01 ;
   :
G43P_ ;          (1)
   :
G44P_H02 ;       (2)
   :
H03 ;            (3)
   :
```

(1)Offset number H01 is valid.
(2)Offset number H02 is valid.
(3)Offset number H03 is valid only for the axis to which compensation was applied most recently.

- **When OFH (bit 2 of parameter No. 5001) = 1**

```
O××××;
H01 ;
   :
G43P_ ;          (1)
   :
G44P_H02 ;       (2)
   :
H03 ;            (3)
   :
```

(1) Offset number H00 is valid.
(2) Offset number H02 is valid.
(3) Offset number H02 is valid. (However, the H number displayed is changed to 03.)

The tool length offset value may be set in the offset memory through the CRT/MDI panel.
The range of values that can be set as the tool length offset value is as follows.

	Metric input	Inch input
Tool length offset value	0 to ±999.999mm	0 to ±99.9999inch

WARNING

When the tool length offset value is changed due to a change of the offset number, the offset value changes to the new tool length offset value, the new tool length offset value is not added to the old tool length offset value.

H1 : tool length offset value 20.0
H2 : tool length offset value 30.0
G90 G43 Z100.0 H1 ; Z will move to 120.0
G90 G43 Z100.0 H2 ; Z will move to 130.0

CAUTION

When the tool length offset is used and set a parameter OFH (No. 5001#2) to 0, specify the tool length offset with H code and the cutter compensation with D code.

NOTE
The tool length offset value corresponding to offset No. 0, that is, H0 always means 0. It is impossible to set any other tool length offset value to H0.

- **Performing tool length offset along two or more axes**

Tool length offset B can be executed along two or more axes when the axes are specified in two or more blocks.

Offset in X and Y axes.
G19 G43 H _ ; Offset in X axis
G18 G43 H _ ; Offset in Y axis
(Offsets in X and Y axes are performed)

If the TAL bit (bit 3 of parameter No. 5001) is set to 1, an alarm will not occur even when tool length offset C is executed along two or more axes at the same time.

- **Tool length offset cancel**

To cancel tool length offset, specify G49 or H0. After G49 or H0 is specified, the system immediately cancels the offset mode.

NOTE
- After tool length offset B is executed along two or more axes, offset along all the axes is canceled by specifying G49. If H0 is specified, only offset along an axis perpendicular to the specified plane is canceled.
- In the case of the offset in three axes or more, if the offset is canceled by G49 code, the P/S alarm 015 is generated. Cancel the offset by using G49 and H0.

Examples

Tool length offset (in boring holes No.1, 2, and 3)

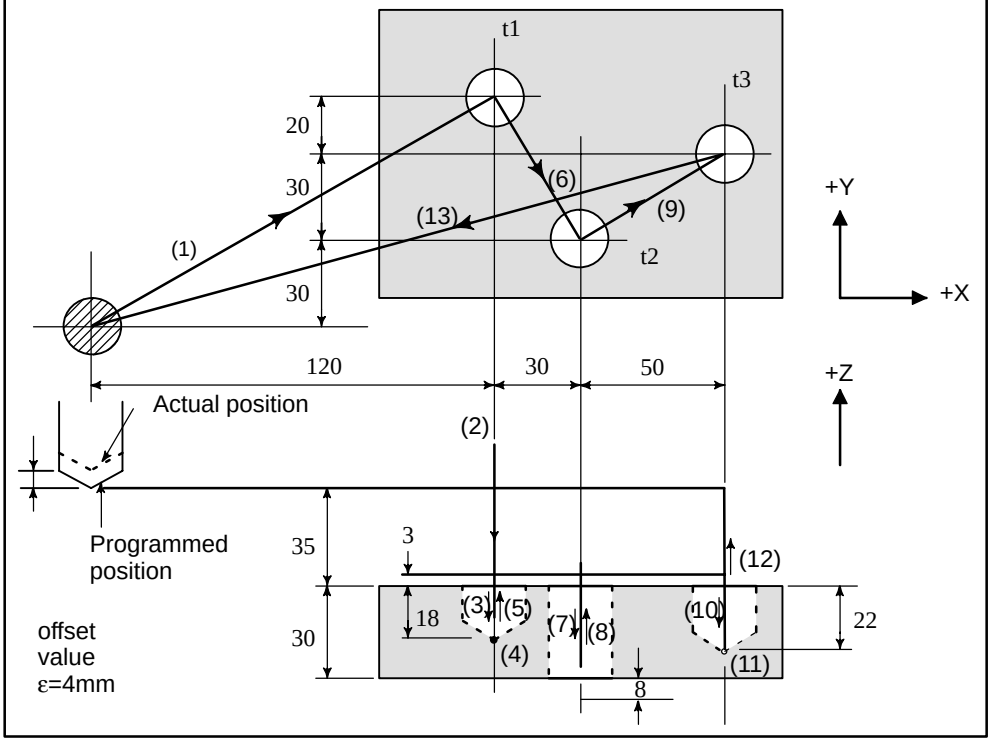

·Program

```
H1=–4.0 (Tool length offset value)
N1 G91 G00 X120.0 Y80.0 ;          (1)
N2 G43 Z–32.0 H1 ;                 (2)
N3 G01 Z–21.0 F1000 ;              (3)
N4 G04 P2000 ;                     (4)
N5 G00 Z21.0 ;                     (5)
N6 X30.0 Y–50.0 ;                  (6)
N7 G01 Z–41.0 ;                    (7)
N8 G00 Z41.0 ;                     (8)
N9 X50.0 Y30.0 ;                   (9)
N10  G01 Z–25.0 ;                  (10)
N11  G04 P2000 ;                   (11)
N12  G00 Z57.0 H0 ;                (12)
N13  X–200.0 Y–60.0 ;              (13)
N14  M2 ;
```

14.1.2 G53, G28, G30, and G30.1 Commands in Tool Length Offset Mode

This section describes the tool length offset cancellation and restoration performed when G53, G28, G30, or G31 is specified in tool length offset mode. Also described is the timing of tool length offset.

(1) Tool length offset vector cancellation and restoration, performed when G53, G28, G30, or G30.1 is specified in tool length offset mode

(2) Specification of the G43/G44 command for tool length offset A/B/C, and independent specification of the H command

Explanations

- **Tool length offset vector cancellation**

When G53, G28, G30, or G30.1 is specified in tool length offset mode, tool length offset vectors are canceled as described below. However, the previously specified modal G code remains displayed; modal code display is not switched to G49.

(1) When G53 is specified

Command	Specified axis	Common to type A/B/C
G53P_;	Tool length offset axis	Canceled upon movement being performed according to a specified value
	Other than tool length offset axis	Not canceled

NOTE
When tool length offset is applied to multiple axes, all specified axes are subject to cancellation.

When tool length offset cancellation is specified at the same time, tool length offset vector cancellation is performed as indicated below.

Command	Specified axis	Common to type A/B/C
G49G53P_;	Tool length offset axis	Canceled upon movement being performed according to a specified value
	Other than tool length offset axis	Canceled upon movement being performed according to a specified value

(2) When G28, G30, or G30.1 is specified

Command	Specified axis	Common to type A/B/C
G28P_;	Tool length offset axis	Canceled upon movement to a reference position being performed
	Other than tool length offset axis	Not canceled

NOTE
When tool length offset is applied to multiple axes, all specified axes involved in reference position return are subject to cancellation.

When tool length offset cancellation is specified at the same time, tool length offset vector cancellation is performed as indicated below.

Command	Specified axis	Common to type A/B/C
G49G28P_;	Tool length offset axis	Canceled upon movement to an intermediate position being performed
	Other than tool length offset axis	Canceled upon movement to an intermediate position being performed

- **Tool length offset vector restoration**

Tool length offset vectors, canceled by specifying G53, G28, G30, or G30.1 in tool length offset mode, are restored as described below.

(1) When OFH (bit 2 of parameter No. 5001) = 0

Type	EVO (bit 6 of parameter No. 5001)	Restoration block
A/B	1	Block to be buffered next
	0	Block containing an H command or G43/44 command
C	Ignored	Block containing an H command Block containing a G43P_/G44P_ command

(2) When OFH (bit 2 of parameter No. 5001) = 1
In a mode other than tool length offset mode

Type	EVO (bit 6 of parameter No. 5001)	Restoration block
A/B	1	Block to be buffered next
	0	Block containing an H command or G43/44 command
C	Ignored	Block containing an H command Block containing a G43P_/G44P_ command

In tool length offset mode

Type	EVO (bit 6 of parameter No. 5001)	Restoration block
A/B	1	Block containing a G43/G44 block
	0	Block containing an H command and G43/44 command
C	Ignored	Block containing a G43P_H_/G44P_H_ command

WARNING

When tool length offset is applied to multiple axes, all axes for which G53, G28, G30, and G30.1 are specified are subject to cancellation. However, restoration is performed only for that axis to which tool length offset was applied last; restoration is not performed for any other axes.

NOTE

In a block containing G40, G41, or G42, the tool length offset vector is not restored.

14.2 AUTOMATIC TOOL LENGTH MEASUREMENT (G37)

By issuing G37 the tool starts moving to the measurement position and keeps on moving till the approach end signal from the measurement device is output. Movement of the tool is stopped when the tool tip reaches the measurement position.
Difference between coordinate value when tool reaches the measurement position and coordinate value commanded by G37 is added to the tool length offset amount currently used.

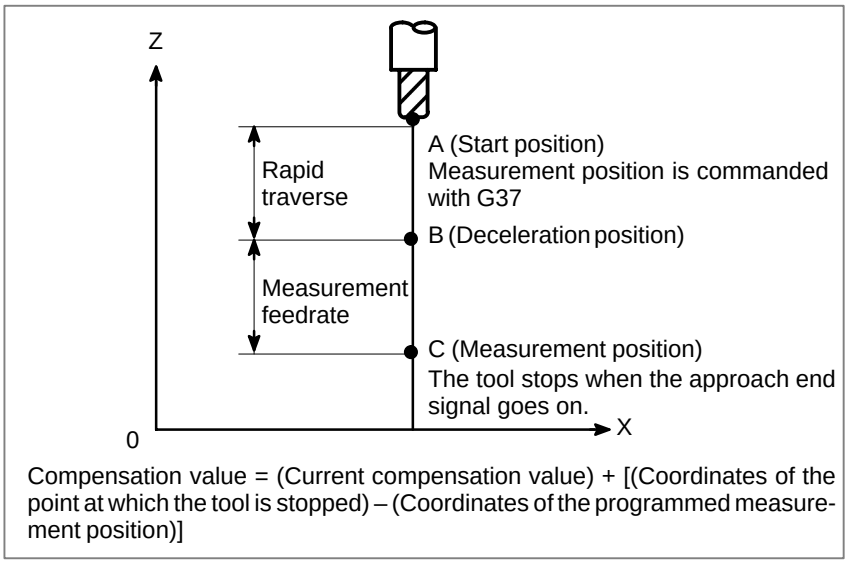

Fig. 14.2 (a).Automatic tool length measurement

Format

G92 IP_ **;** Sets the workpiece coordinate system. (It can be set with G54 to G59. See Chapter II–7, “Coordinate System.”)
H○○; Specifies an offset number for tool length offset.

G90 G37 IP_ **;** Absolute command
G37 is valid only in the block in which it is specified.
IP _ indicates the X–, Y–, Z–, or fourth axis.

Explanations

- **Setting the workpiece coordinate system**

Set the workpiece coordinate system so that a measurement can be made after moving the tool to the measurement position. The coordinate system must be the same as the workpiece coordinate system for programming.

- **Specifying G37**

Specify the absolute coordinates of the correct measurement position.
Execution of this command moves the tool at the rapid traverse rate toward the measurement position, reduces the federate halfway, then continuous to move it until the approach end signal from the measuring instrument is issued. When the tool tip reaches the measurement position, the measuring instrument sends an approach end signal to the CNC which stops the tool.

- **Changing the offset value**

The difference between the coordinates of the position at which the tool reaches for measurement and the coordinates specified by G37 is added to the current tool length offset value.

Offset value =
(Current compensation value) + [(Coordinates of the position at which the tool reaches for measurement) – (Coordinates specified by G37)]

These offset values can be manually changed from MDI.

- **Alarm**

When automatic tool length measurement is executed, the tool moves as shown in Fig. 14.2 (b). If the approach end signal goes on while the tool is traveling from point B to point C, an alarm occurs. Unless the approach end signal goes on before the tool reaches point F, the same alarm occurs. The P/S alarm number is 080.

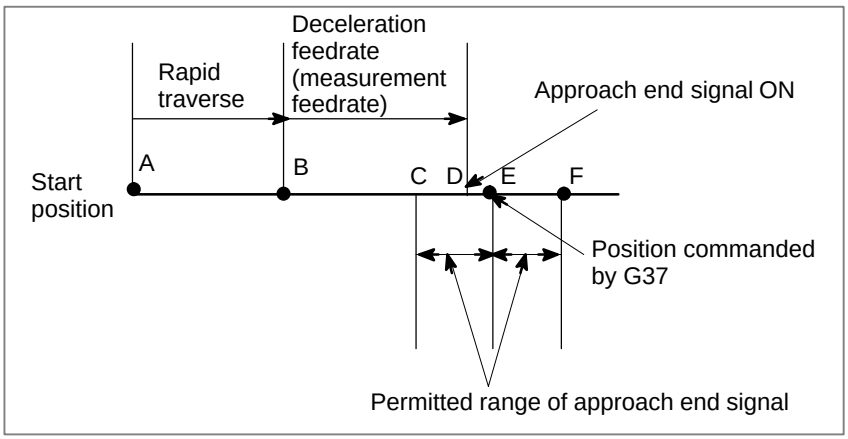

Fig14.2 (b) Tool movement to the measurement position

WARNING

When a manual movement is inserted into a movement at a measurement federate, return the tool to the!position before the inserted manual movement for restart.

NOTE

1 When an H code is specified in the same block as G37, an alarm is generated. Specify H code before the block!of G37.
2 The measurement speed (parameter No. 6241), deceleration position (parameter No. 6251), and permitted range of the approach end signal (parameter No. 6254) are specified by the machine tool builder.
3 When offset memory A is used, the offset value is changed. When offset memory B is used, the tool wear compensation value is changed.
When offset memory C is used, the tool wear compensation value for the H code is changed.
4 The approach end signal is monitored usually every 2 ms. The following measuring error is generated:
$ERR_{max.}$: $Fm \times 1/60 \times T_S/1000$ where
T_S : Sampling period, for usual 2 (ms)
$ERR_{max.}$: maximum measuring error (mm)
F_m : measurement federate (mm/min.)
For example, when F_m = 1000 mm/min., $ERR_{max.}$ = 0.003m
5 The tool stops a maximum of 16 ms after the approach end signal is detected. But the value of the position!at which the approach end signal was detected (note the value when the tool stopped) is used to determine the offset amount. The overrun for 16 ms is:
$Q_{max.} = F_m \times 1/60 \times 16/1000$
$Q_{max.}$: maximum overrun (mm)
F_m : measurement federate (mm/min.)

Examples

G92 Z760.0 X1100.0 ; Sets a workpiece coordinate system with respect to the programmed absolute zero point.

G00 G90 X850.0 ; Moves the tool to X850.0.
That is the tool is moved to a position that is a specified distance from the measurement position along the Z–axis.

H01 ; Specifies offset number 1.

G37 Z200.0 ; Moves the tool to the measurement position.

G00 Z204.0 ; Retracts the tool a small distance along the Z–axis.

For example, if the tool reaches the measurement position with Z198.0;, the compensation value must be corrected. Because the correct measurement position is at a distance of 200 mm, the compensation value is lessened by 2.0 mm (198.0 – 200.0 = –2.0).

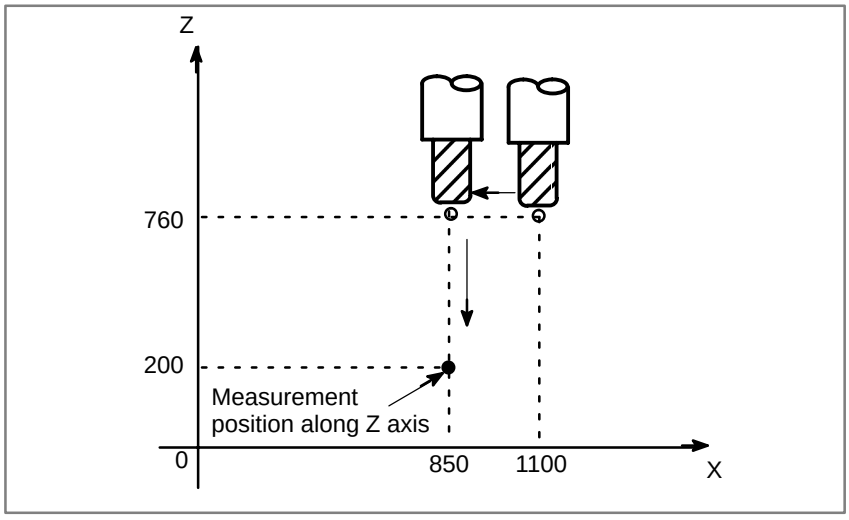

14.3 TOOL OFFSET (G45–G48)

The programmed travel distance of the tool can be increased or decreased by a specified tool offset value or by twice the offset value.
The tool offset function can also be applied to an additional axis.

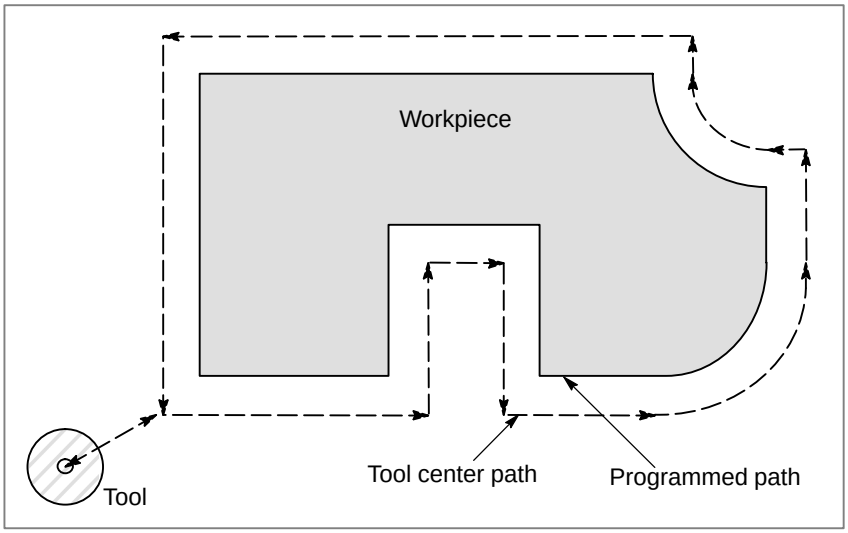

Format

G45 IP_D_ ;	Increase the travel distance by the tool offset value
G46 IP_D_ ;	Decrease the travel distance by the tool offset value
G47 IP_D_ ;	Increase the travel distance by twice the tool offset value
G48 IP_D_ ;	Decrease the travel distance by twice the tool offset value

G45 to G48 : One–shot G code for increasing or decreasing the travel distance
IP_ : Command for moving the tool
D : Code for specifying the tool offset value

Explanations

• Increase and decrease

As shown in Table 14.3(a), the travel distance of the tool is increased or decreased by the specified tool offset value.
In the absolute mode, the travel distance is increased or decreased as the tool is moved from the end position of the previous block to the position specified by the block containing G45 to G48.

Table 14.3 (a) Increase and decrease of the tool travel distance

G code	When a positive tool offset value is specified	When a negative tool offset value is specified
G45		
G46		
G47		
G48		



If a move command with a travel distance of zero is specified in the incremental command (G91) mode, the tool is moved by the distance corresponding to the specified tool offset value.
If a move command with a travel distance of zero is specified in the absolute command (G90) mode, the tool is not moved.

• Tool offset value

Once selected by D code, the tool offset value remains unchanged until another tool offset value is selected.
Tool offset values can be set within the following range:

Table 14.3 (b) Range of tool offset values

	Metric input	**inch input**
Tool offset value	0 to ±999.999mm	0 to ±99.9999inch
	0 to ±999.999deg	0 to ±999.999deg

D0 always indicates a tool offset value of zero.

WARNING

1 When G45 to G48 is specified to n axes (n=1–6) simultaneously in a motion block, offset is applied to all n axes.
When the cutter is offset only for cutter radius or diameter in taper cutting, overcutting or undercutting occurs.
Therefore, use cutter compensation (G40 or G42) shown in II–14.4 or 14.5.

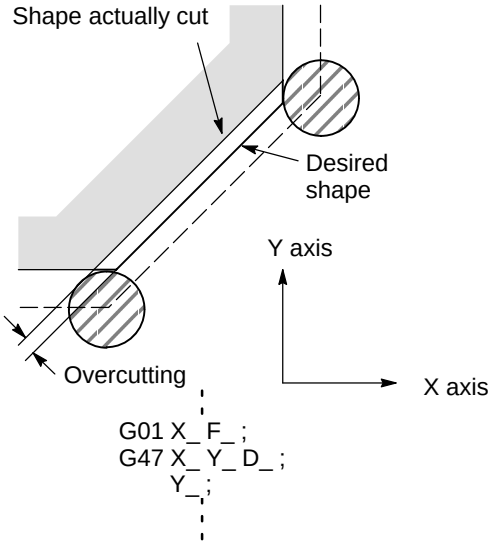

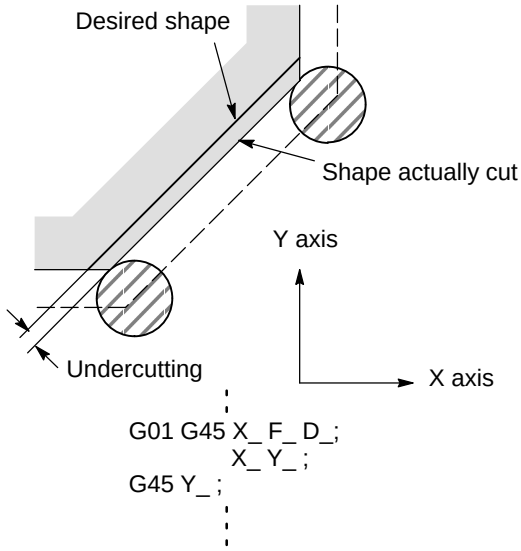

2 G45 to G48 (tool offset) must not be used in the G41 or G42 (cutter compensation) mode.

NOTE

1 When the specified direction is reversed by decrease as shown in the figure below, the tool moves in the opposite direction.

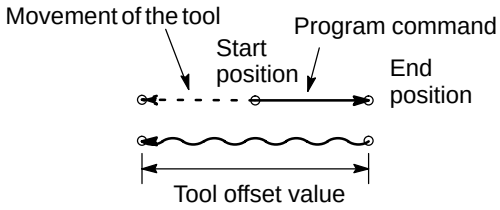

Example
G46 X2.50 ;
Tool offset value
+3.70

} Equivalent command
X–1.20 ;

2 Tool offset can be applied to circular interpolation (G02, G03) with the G45 to G48 commands only for 1/4 and 3/4 circles using addresses I, J and K by the parameter setting, providing that the coordinate rotation be not specified at the same time. This function is provided for compatibility with the conventional CNC tape without any cutter compensation. The function should not be used when a new CNC program is prepared.

Tool offset for circular interpolation

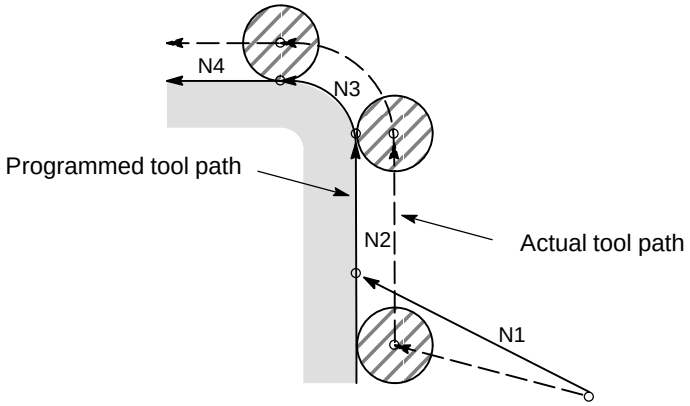

Program

N1 G46 G00 X_ Y_ D_ ;
N2 G45 G01 Y_ F_ ;
N3 G45 G03 X_ Y_ I_ ;
N4 G01 X_ ;

3 D code should be used in tool offset mode (G45 to G48). However, H code can be used by setting the parameter TPH (No. 5001#5) because of compatibility with conventional CNC tape format. The H code must be used under tool length offset cancel (G49).

4 G45 to G48 are ignored in canned cycle mode. Perform tool offset by specifying G45 to G48 before entering canned cycle mode and cancel the offset after releasing the canned cycle mode.

Examples

Program using tool offset

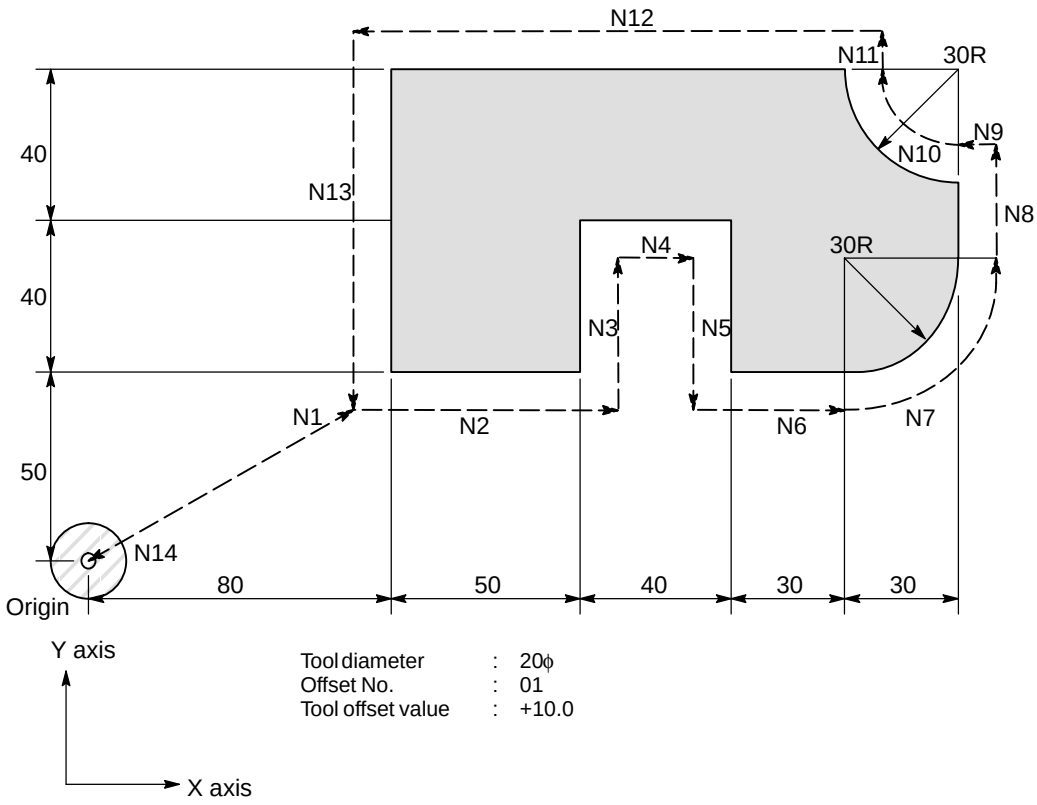

Program

```
N1 G91 G46 G00 X80.0 Y50.0 D01 ;
N2 G47 G01 X50.0 F120.0 ;
N3 Y40.0 ;
N4 G48 X40.0 ;
N5 Y–40.0 ;
N6 G45 X30.0 ;
N7 G45 G03 X30.0 Y30.0 J30.0 ;
N8 G45 G01 Y20.0 ;
N9 G46 X0 ;
```

Decreases toward the positive direction for movement amount “0”. The tool moves in the –X direction by theoffset value.

```
N10 G46 G02 X–30.0 Y30.0 J30.0 ;
N11 G45 G01 Y0 ;
```

Increase toward the positive direction for movement amount “0”. The tool moves in the +Y direction by the offset value.

```
N12 G47 X–120.0 ;
N13 G47 Y–80.0 ;
N14 G46 G00 X80.0 Y–50.0 ;
```

14.4 OVERVIEW OF CUTTER COMPENSATION C (G40 – G42)

When the tool is moved, the tool path can be shifted by the radius of the tool (Fig. 14.4 (a)).
To make an offset as large as the radius of the tool, CNC first creates an offset vector with a length equal to the radius of the tool (start–up). The offset vector is perpendicular to the tool path. The tail of the vector is on the workpiece side and the head positions to the center of the tool.
If a linear interpolation or circular interpolation command is specified after start–up, the tool path can be shifted by the length of the offset vector during machining.
To return the tool to the start position at the end of machining, cancel the cutter compensation mode.

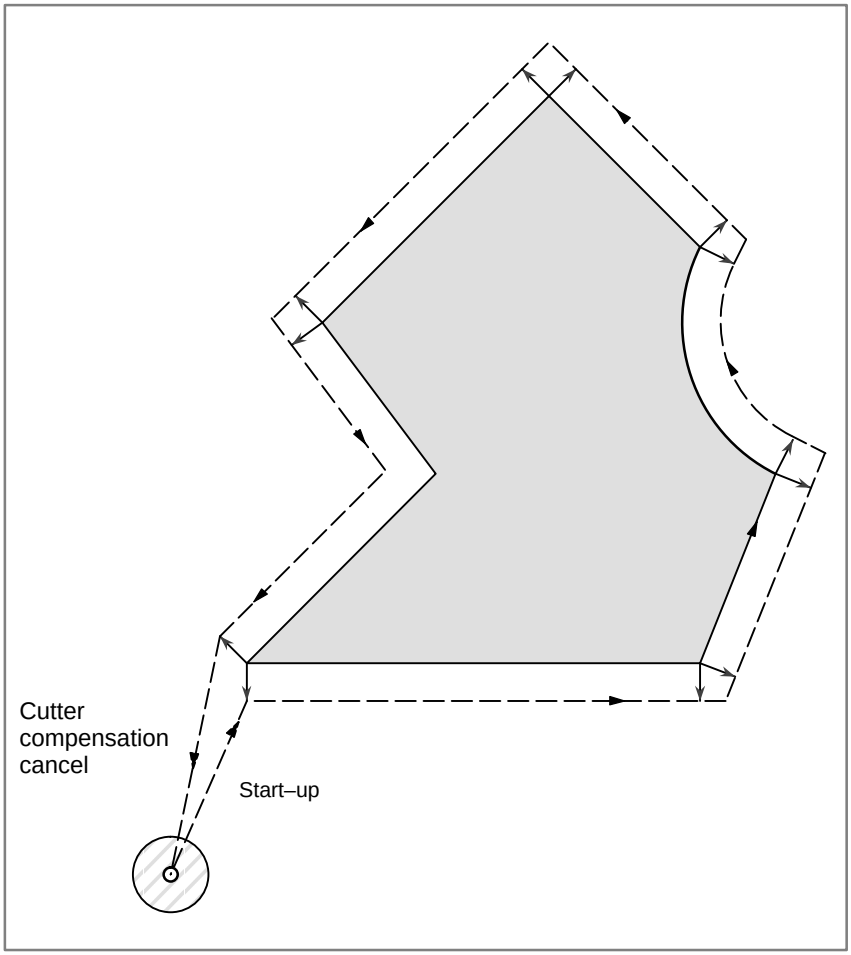

Fig. 14.4 (a) Outline of cutter compensation C

Format

- **Start up (Tool compensation start)**

G00(or G01)G41(or G42) **IP _ D_ ;**

G41 : Cutter compensation left (Group07)
G42 : Cutter compensation right (Group07)
IP _ : Command for axis movement
D_ : Code for specifying as the cutter compensation value(1–3digits) (D code)

- **Cutter compensation cancel (offset mode cancel)**

G40 ;

G40 : Cutter compensation cancel(Group 07) (Offset mode cancel)
IP _ : Command for axis movement

- **Selection of the offset plane**

Offset plane	Command for plane selection	IP_
XpYp	**G17 ;**	Xp_Yp_
ZpXp	**G18 ;**	Xp_Zp_
YpZp	**G19 ;**	Yp_Zp_

Explanations

- **Offset cancel mode**

At the beginning when power is applied the control is in the cancel mode. In the cancel mode, the vector is always 0, and the tool center path coincides with the programmed path.

- **Start Up**

When a cutter compensation command (G41 or G42, nonzero dimension words in the offset plane, and D code other than D0) is specified in the offset cancel mode, the CNC enters the offset mode.
Moving the tool with this command is called start–up.
Specify positioning (G00) or linear interpolation (G01) for start–up. If circular interpolation (G02, G03) is specified, P/S alarm 34 occurs.
When processing the start–up block and subsequent blocks, the CNC prereads two blocks.

- **Offset mode**

In the offset mode, compensation is accomplished by positioning (G00), linear interpolation (G01), or circular interpolation (G02, G03). If two or more blocks that do not move the tool (miscellaneous function, dwell, etc.) are processed in the offset mode, the tool will make either an excessive or insufficient cut. If the offset plane is switched in the offset mode, P/S alarm 37 occurs and the tool is stopped.

- **Offset mode cancel**

In the offset mode, when a block which satisfies any one of the following conditions is executed, the CNC enters the offset cancel mode, and the action of this block is called the offset cancel.

1. G40 has been commanded.
2. 0 has been commanded as the offset number for cutter compensation.

When performing offset cancel, circular arc commands (G02 and G03) are not available. If a circular arc is commanded, an P/S alarm (No. 034) is generated and the tool stops.
In the offset cancel, the control executes the instructions in that block and the block in the cutter compensation buffer. In the meantime, in the case of a single block mode, after reading one block, the control executes it and stops. By pushing the cycle start button once more, one block is executed without reading the next block.
Then the control is in the cancel mode, and normally, the block to be executed next will be stored in the buffer register and the next block is not read into the buffer for cutter compensation.

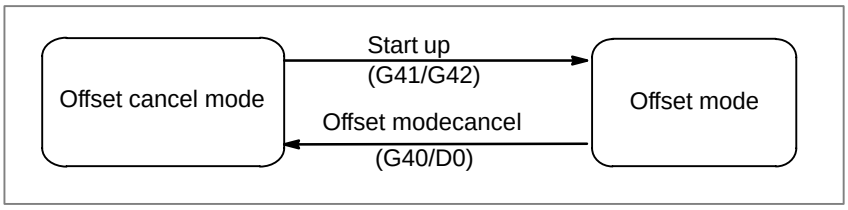

Fig. 14.4 (b) Changing the offset mode

- **Change of the Cutter compensation value**

In general, the cutter compensation value shall be changed in the cancel mode, when changing tools. If the cutter compensation value is changed in offset mode, the vector at the end point of the block is calculated for the new cutter compensation value.

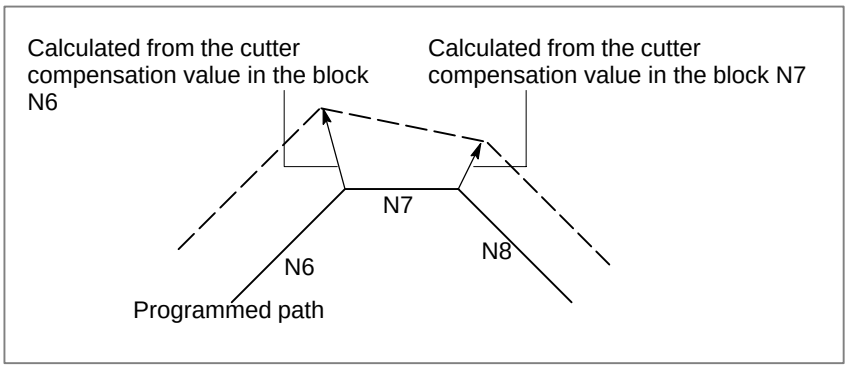

Fig. 14.4 (c) Changing the cutter compensation value

- **Positive/negative cutter compensation value and tool center path**

If the offset amount is negative (–), distribution is made for a figure in which G41's and G42's are all replaced with each other on the program. Consequently, if the tool center is passing around the outside of the workpiece, it will pass around the inside, and vice versa.
The figure below shows one example. Generally, the offset amount is programmed to be positive (+).
When a tool path is programmed as in ((1)), if the offset amount is made negative (–), the tool center moves as in ((2)), and vice versa. Consequently, the same tape permits cutting both male and female shapes, and any gap between them can be adjusted by the selection of the offset amount. Applicable if start–up and cancel is A type. (See II– 14.5.2 and 14.5.4)

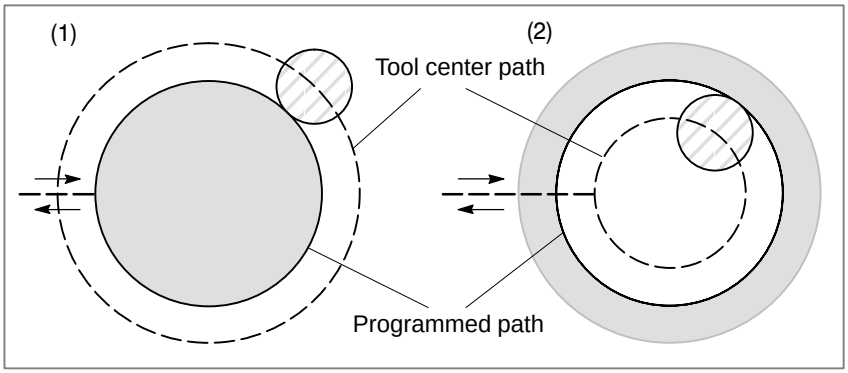

Fig. 14.4 (d) Tool center paths when positive and negative cutter compensation values are specified

- **Cutter compensation value setting**

Assign a cutter compensation values to the D codes on the MDI panel. The table below shows the range in which cutter compensation values can be specified.

	mm input	inch input
Cutter compensation value	0 to ±999.999mm	0 to ±99.9999inch

NOTE
1 The cutter compensation value corresponding to offset No. 0, that is, D0 always means 0. It is impossible to set D0 to any other offset amount.
2 Cutter compensation C can be specified by H code with parameter OFH (No. 5001 #2) set to 1.

- **Offset vector**

The offset vector is the two dimensional vector that is equal to the cutter compensation value assigned by D code. It is calculated inside the control unit, and its direction is up–dated in accordance with the progress of the tool in each block.
The offset vector is deleted by reset.

- **Specifying a cutter compensation value**

Specify a cutter compensation value with a number assigned to it. The number consists of 1 to 3 digits after address D (D code). The D code is valid until another D code is specified. The D code is used to specify the tool offset value as well as the cutter compensation value.

- **Plane selection and vector**

Offset calculation is carried out in the plane determined by G17, G18 and G19, (G codes for plane selection). This plane is called the offset plane. Compensation is not executed for the coordinate of a position which is not in the specified plane. The programmed values are used as they are.
In simultaneous 3 axes control, the tool path projected on the offset plane is compensated.
The offset plane is changed during the offset cancel mode. If it is performed during the offset mode, a P/S alarm (No. 37) is displayed and the machine is stopped.

Examples

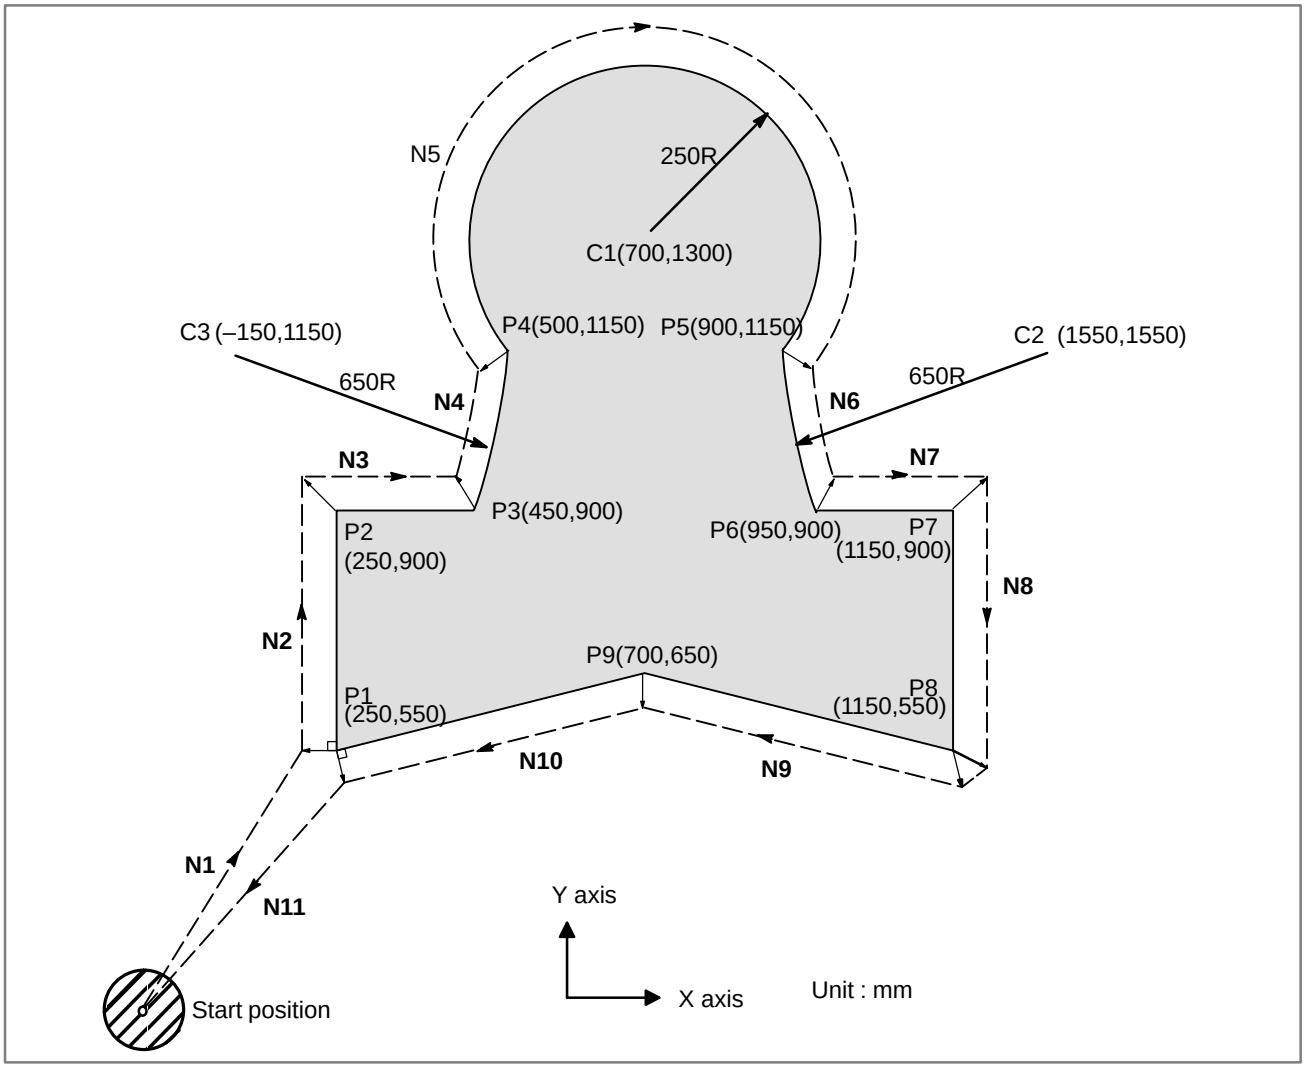

G92 X0 Y0 Z0 ; . . . . . Specifies absolute coordinates.
The tool is positioned at the start position (X0, Y0, Z0).

N1 G90 G17 G00 G41 D07 X250.0 Y550.0 ; Starts cutter compensation (start–up). The tool is shifted to the left of the programmed path by the distance specified in D07. In other words the tool path is shifted by the radius of the tool (offset mode) because D07 is set to 15 beforehand (the radius of the tool is 15 mm).

N2 G01 Y900.0 F150 ; . . . . . Specifies machining from P1 to P2.
N3 X450.0 ; . . . . . Specifies machining from P2 to P3.
N4 G03 X500.0 Y1150.0 R650.0 : . . . . . Specifies machining from P3 to P4.
N5 G02 X900.0 R–250.0 ; . . . . . Specifies machining from P4 to P5.
N6 G03 X950.0 Y900.0 R650.0 ; . . . . . Specifies machining from P5 to P6.
N7 G01 X1150.0 ; . . . . . Specifies machining from P6 to P7.
N8 Y550.0 ; . . . . . Specifies machining from P7 to P8.
N9 X700.0 Y650.0 ; . . . . . Specifies machining from P8 to P9.
N10 X250.0 Y550.0 ; . . . . . Specifies machining from P9 to P1.
N11 G00 G40 X0 Y0 ; . . . . . Cancels the offset mode.
The tool is returned to the start position (X0, Y0, Z0).

14.5 DETAILS OF CUTTER COMPENSATION C

This section provides a detailed explanation of the movement of the tool for cutter compensation C outlined in Section 14.4.
This section consists of the following subsections:

14.5.1 General
14.5.2 Tool Movement in Start–up
14.5.3 Tool Movement in Offset Mode
14.5.4 Tool Movement in Offset Mode Cancel
14.5.5 Interference Check
14.5.6 Overcutting by Cutter Compensation
14.5.7 Input command from MDI
14.5.8 G53,G28,G30, G30.1 and G29 Commands in Cutter Compensation C Mode
14.5.9 Corner Circular Interpolation (G39)

14.5.1 General

• Inner side and outer side

When an angle of intersection created by tool paths specified with move commands for two blocks is over 180°, it is referred to as “inner side.” When the angle is between 0° and 180°, it is referred to as “outer side.”

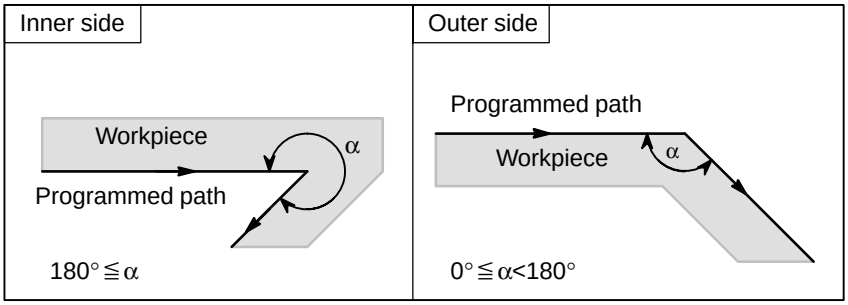

• Meaning of symbols

The following symbols are used in subsequent figures:
– ***S*** indicates a position at which a single block is executed once.
– ***SS*** indicates a position at which a single block is executed twice.
– ***SSS*** indicates a position at which a single block is executed three times.
– ***L*** indicates that the tool moves along a straight line.
– ***C*** indicates that the tool moves along an arc.
– ***r*** indicates the cutter compensation value.
– An intersection is a position at which the programmed paths of two blocks intersect with each other after they are shifted by ***r***.
– ○ indicates the center of the tool.

14.5.2 Tool Movement in Start–up

When the offset cancel mode is changed to offset mode, the tool moves as illustrated below (start–up):

Explanations

- **Tool movement around an inner side of a corner (180° ≦ α)**

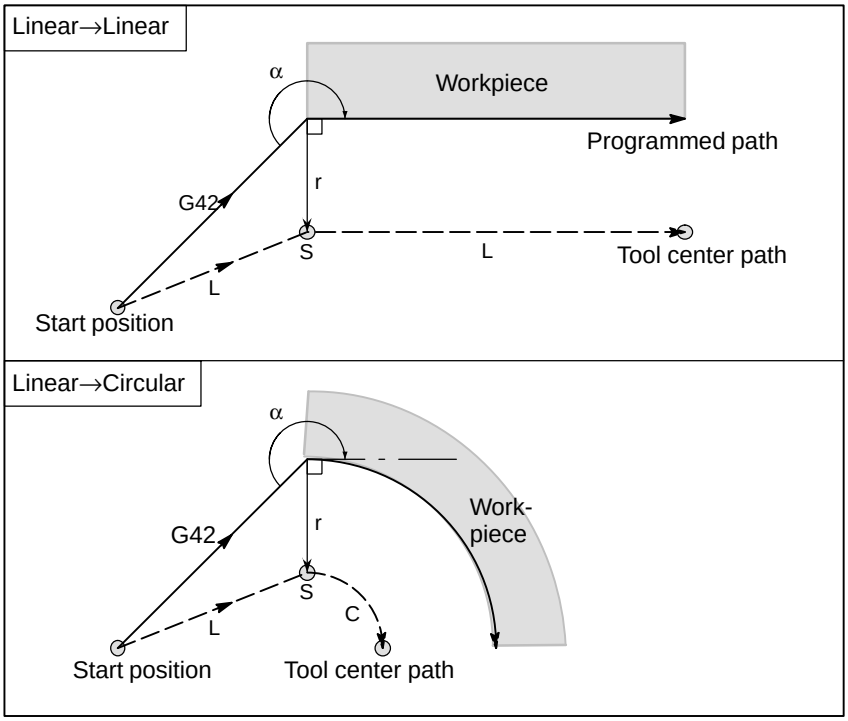

- **Tool movement around the outside of a corner at an obtuse angle (90° ≦ α<180°)**

Tool path in start–up has two types A and B, and they are selected by parameter SUP (No. 5003#0).

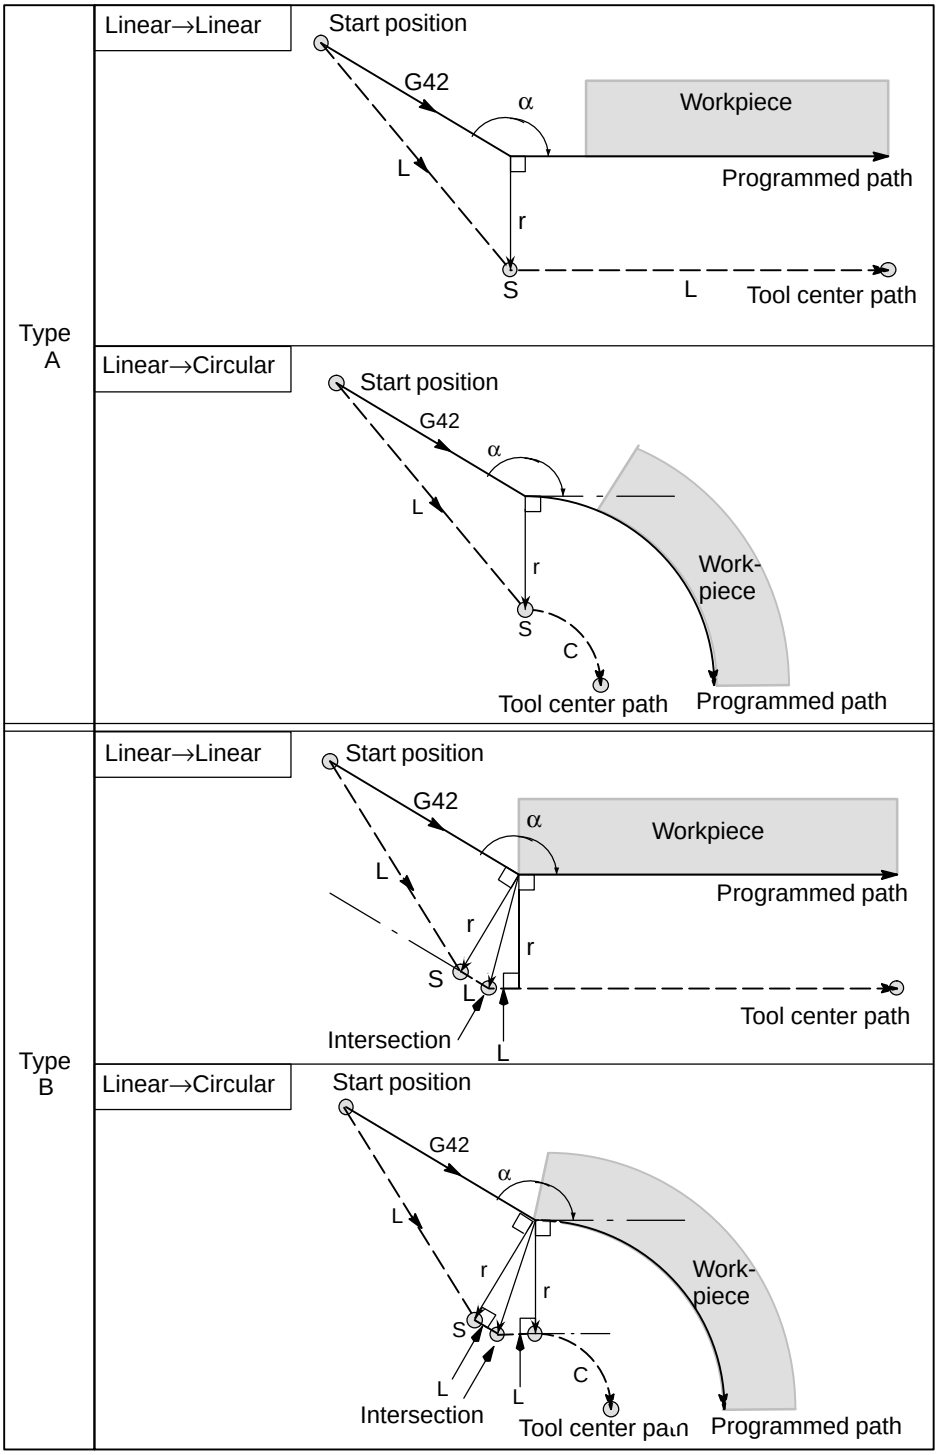

- **Tool movement around the outside of an acute angle (α<90°)**

Tool path in start–up has two types A and B, and they are selected by parameter SUP (No.5003#0).

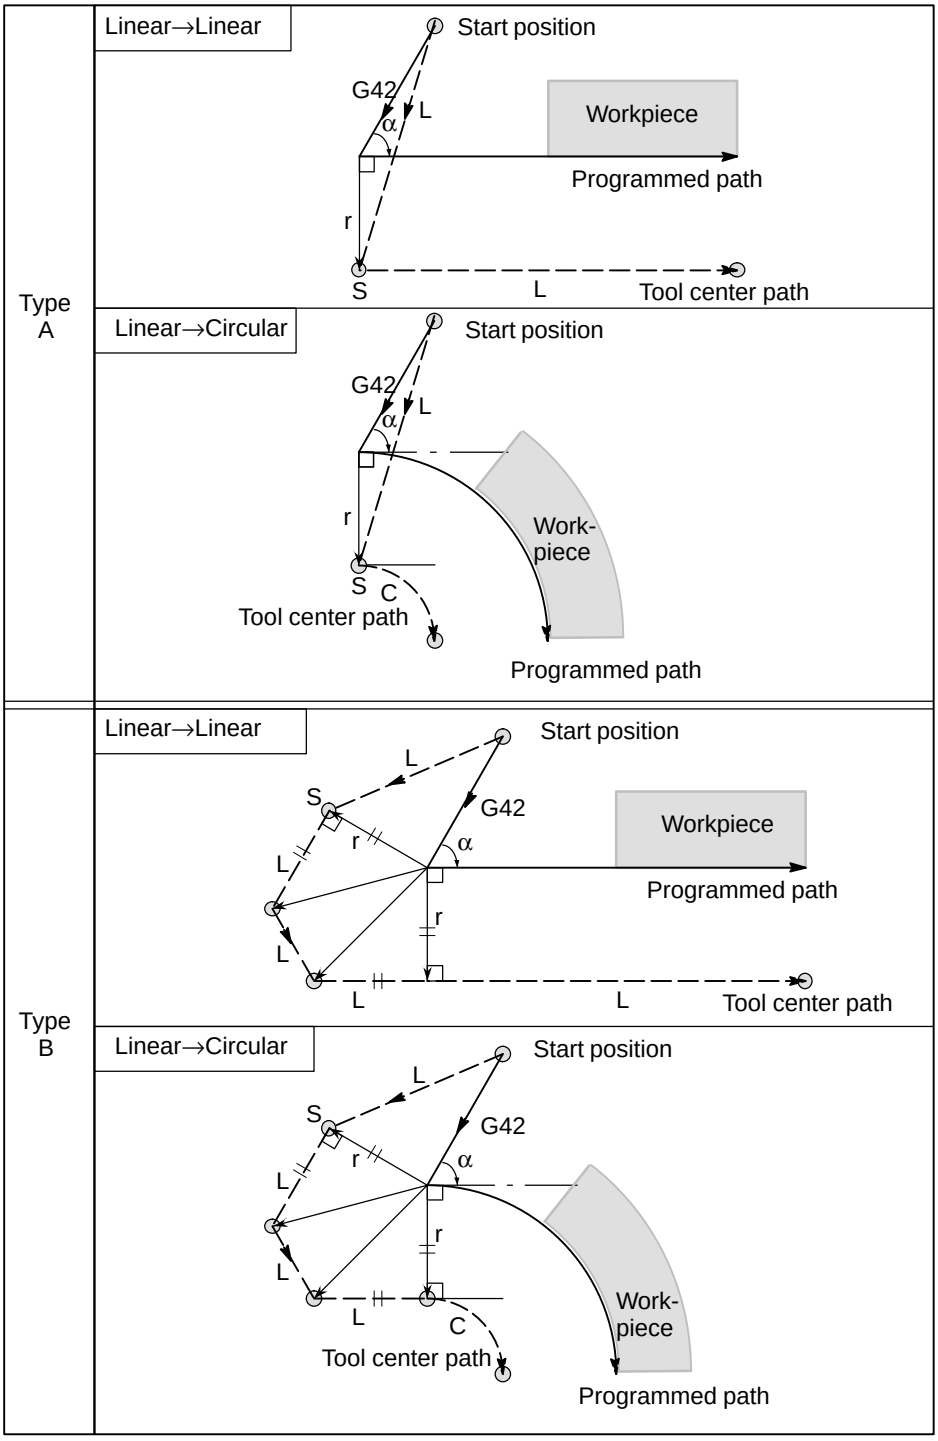

- **Tool movement around the outside linear→linear at an acute angle less than 1 degree (α<1°)**

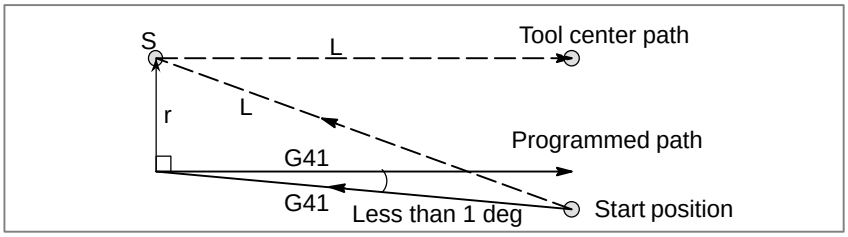

- **A block without tool movement specified at start–up**

If the command is specified at start–up, the offset vector is not created.

```
G91 G40 … ;
      :
N6 X100.0 Y100.0 ;
N7 G41 X0 ;
N8 Y–100.0 ;
N9 Y–100.0 X100.0 ;
```

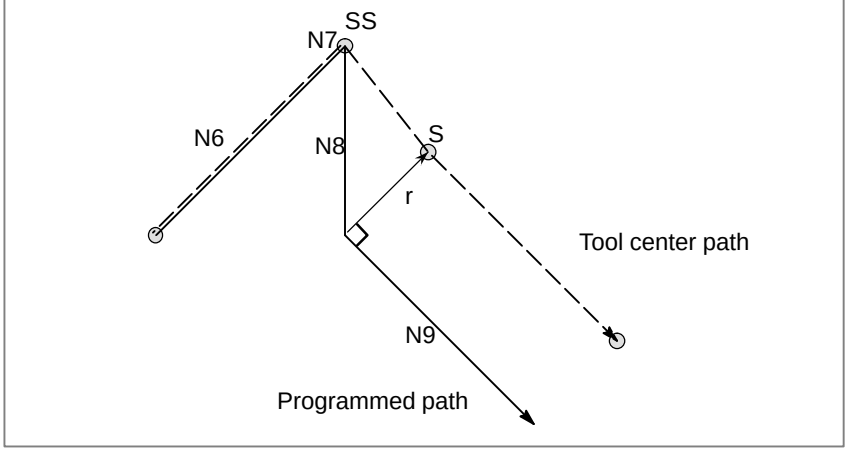

NOTE
For the definition of blocks that do not move the tool, see II–14.5.3.

14.5.3 Tool Movement in Offset Mode

In the offset mode, the tool moves as illustrated below:

Explanations

- **Tool movement around the inside of a corner (180° ≦ α)**

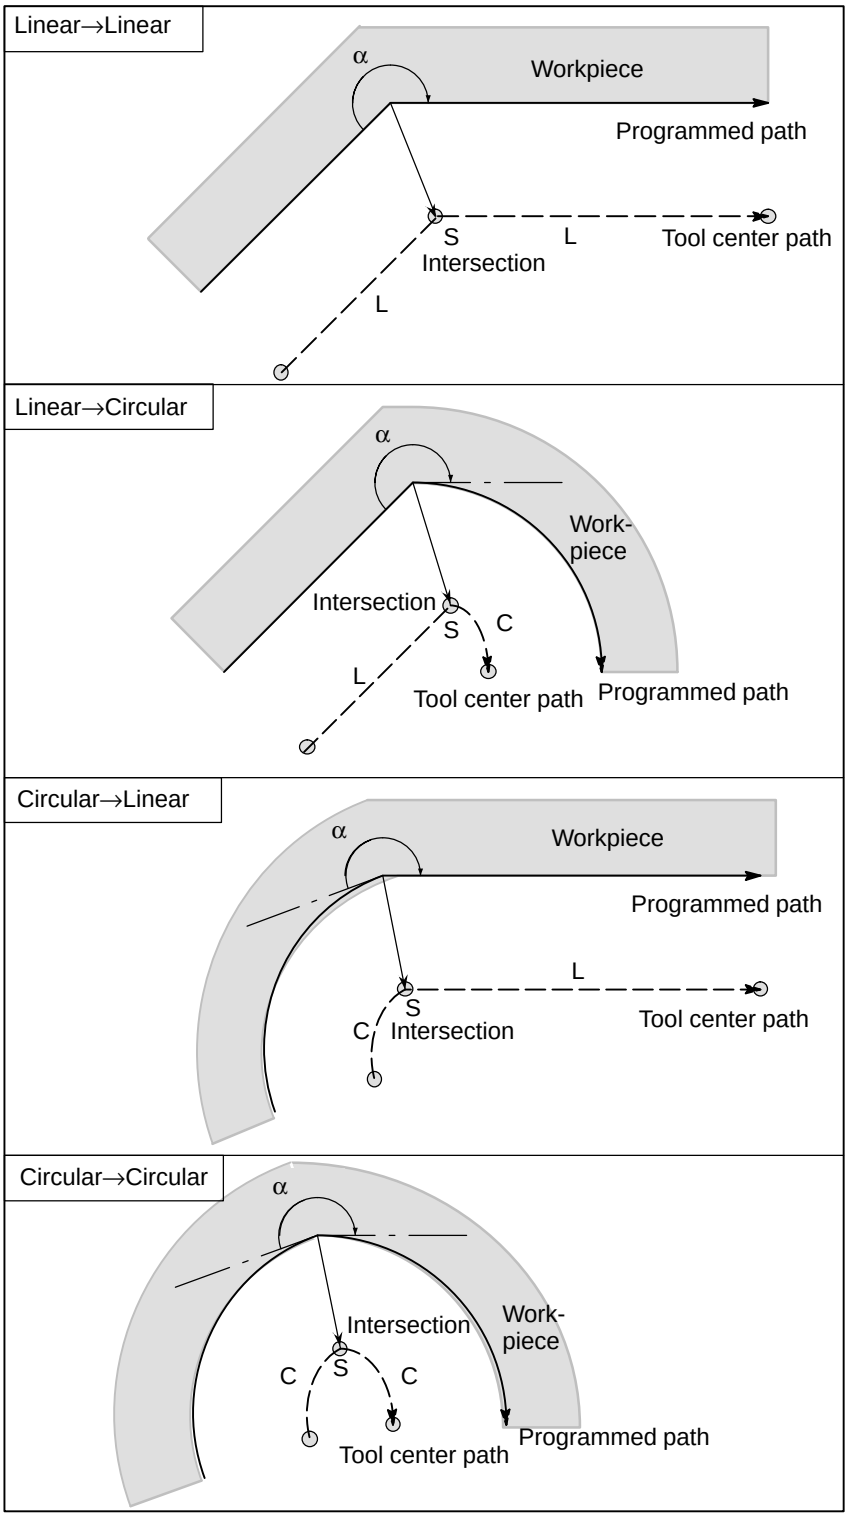

- **Tool movement around the inside (α<1°) with an abnormally long vector, linear → linear**

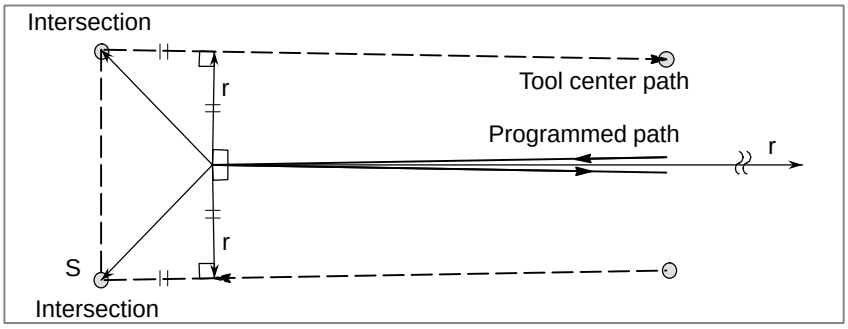

Also in case of arc to straight line, straight line to arc and arc to arc, the reader should infer in the same procedure.

- **Tool movement around the outside corner at an obtuse angle (90° ≦ α<180°)**

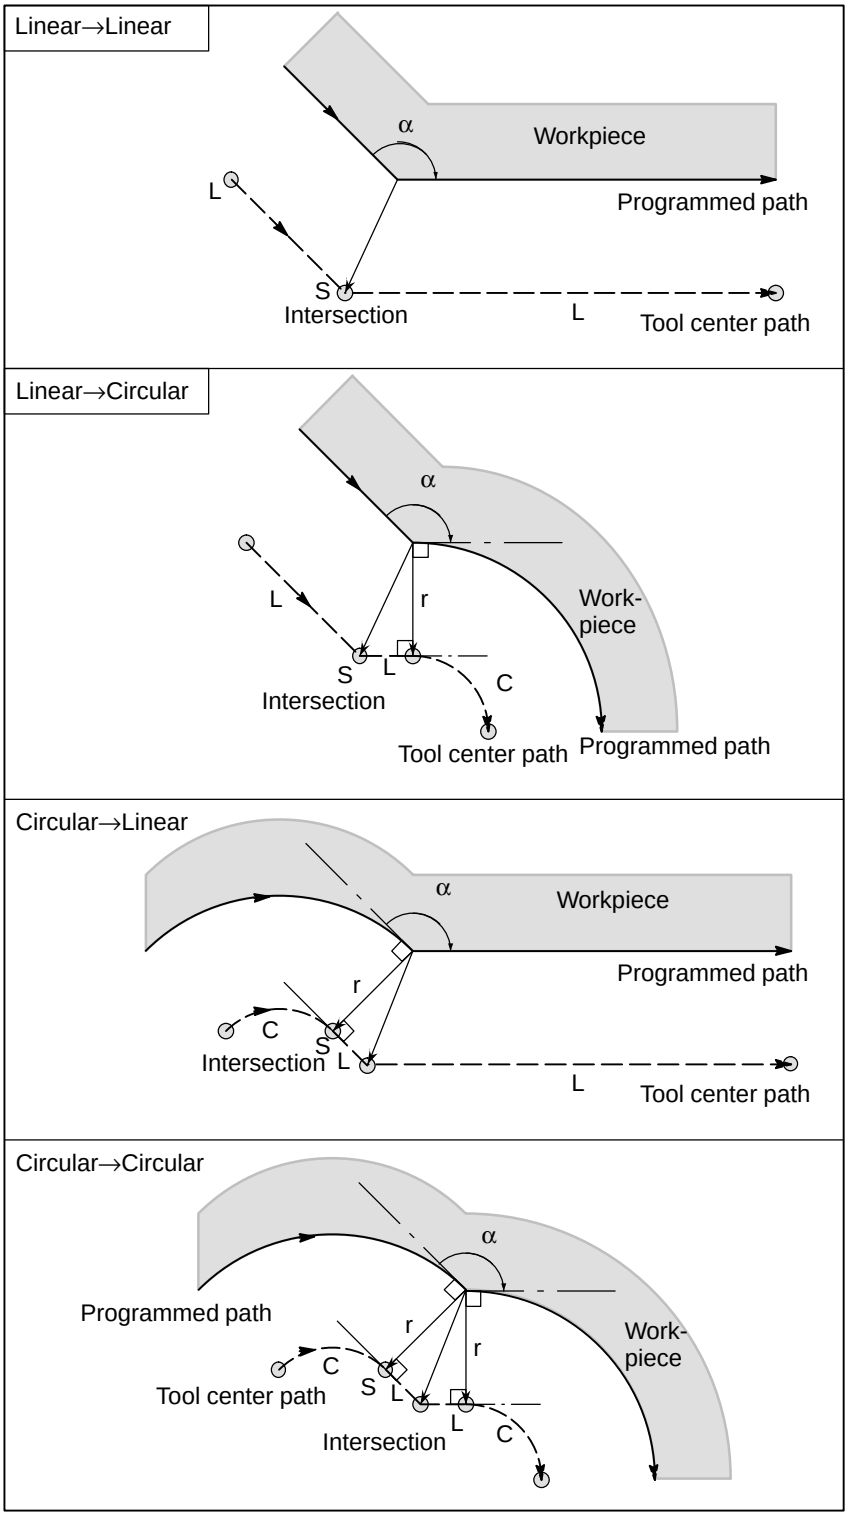

- **Tool movement around the outside corner at an acute angle (α<90°)**

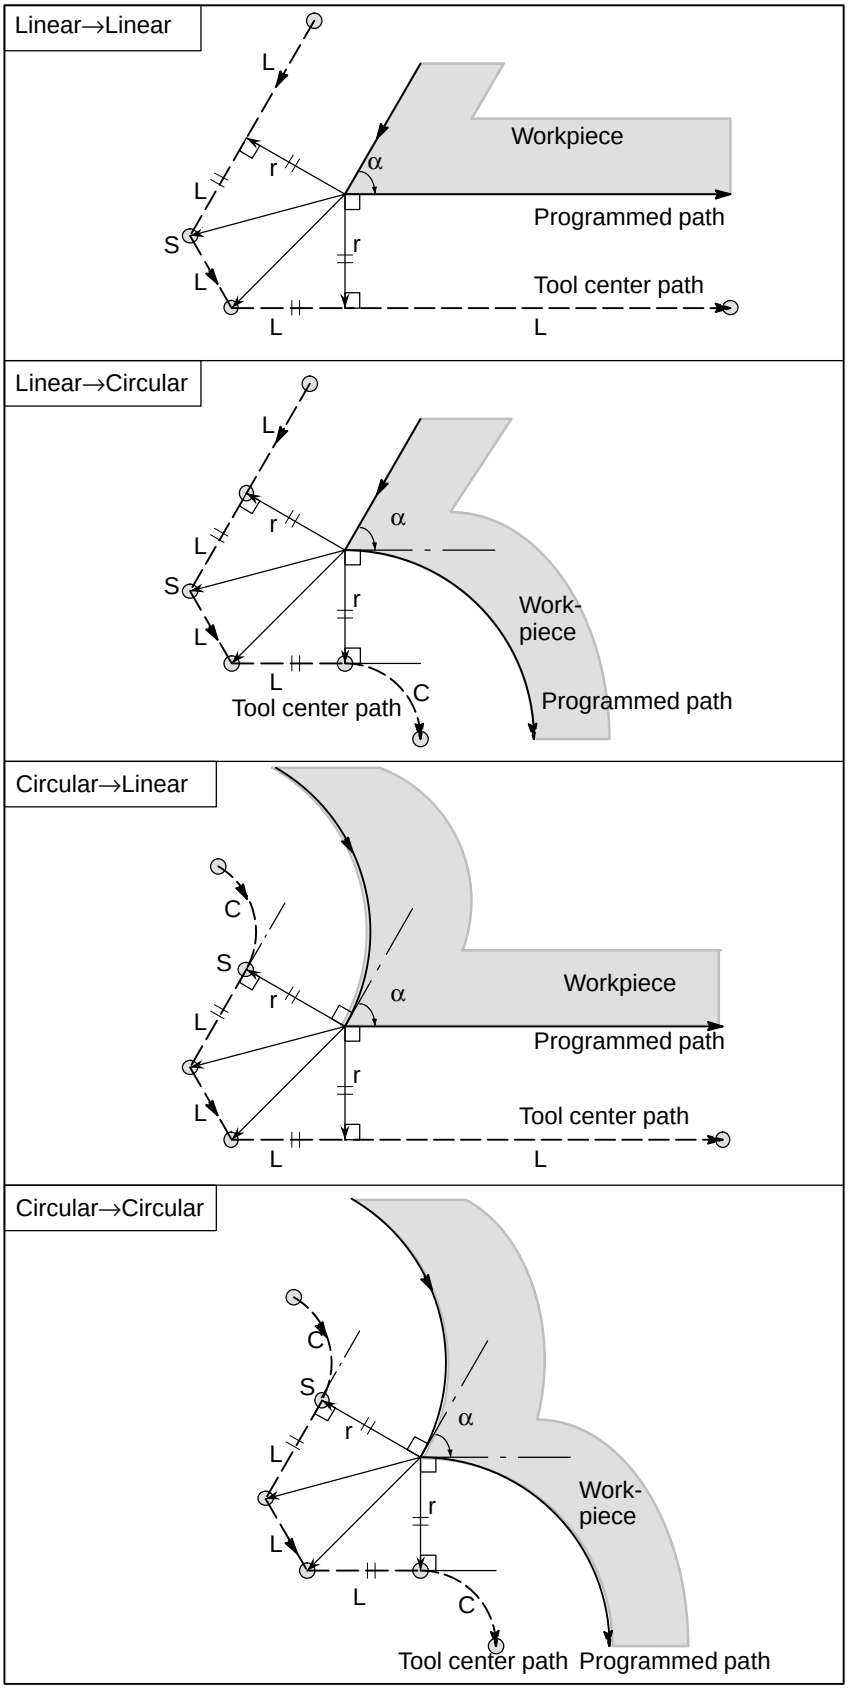

- **When it is exceptional**

End position for the arc is not on the arc

If the end of a line leading to an arc is programmed as the end of the arc by mistake as illustrated below, the system assumes that cutter compensation has been executed with respect to an imaginary circle that has the same center as the arc and passes the specified end position. Based on this assumption, the system creates a vector and carries out compensation. The resulting tool center path is different from that created by applying cutter compensation to the programmed path in which the line leading to the arc is considered straight.

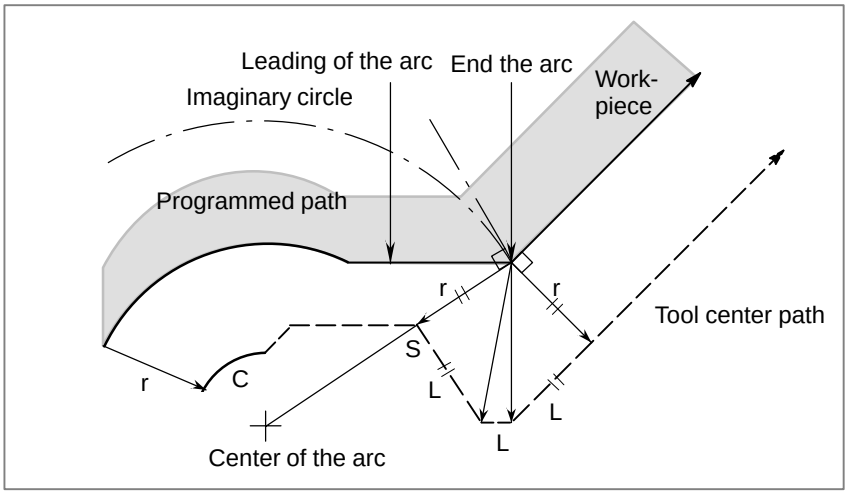

The same description applies to tool movement between two circular paths.

There is no inner intersection

If the cutter compensation value is sufficiently small, the two circular tool center paths made after compensation intersect at a position (P). Intersection P may not occur if an excessively large value is specified for cutter compensation. When this is predicted, P/S alarm No.033 occurs at the end of the previous block and the tool is stopped. In the example shown below, tool center paths along arcs A and B intersect at P when a sufficiently small value is specified for cutter compensation. If an excessively large value is specified, this intersection does not occur.

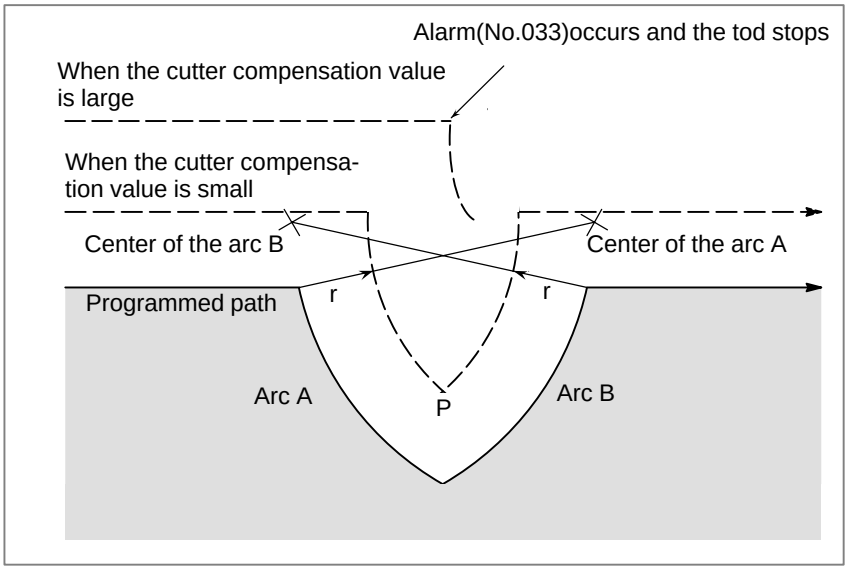

The center of the arc is identical with the start position or the end position

If the center of the arc is identical with the start position or end point, P/S alarm (No. 038) is displayed, and the tool will stop at the end position of the preceding block.

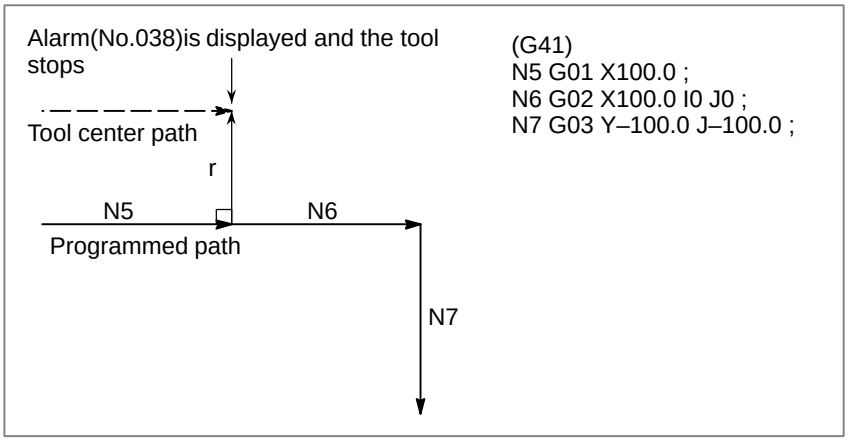

- **Change in the offset direction in the offset mode**

The offset direction is decided by G codes (G41 and G42) for cutter radius and the sign of cutter compensation value as follows.

Gcode \ Sign of offset amount	+	–
G41	Left side offset	Right side offset
G42	Right side offset	Left side offset

The offset direction can be changed in the offset mode. If the offset direction is changed in a block, a vector is generated at the intersection of the tool center path of that block and the tool center path of a preceding block. However, the change is not available in the start–up block and the block following it.

Tool center path with an intersection

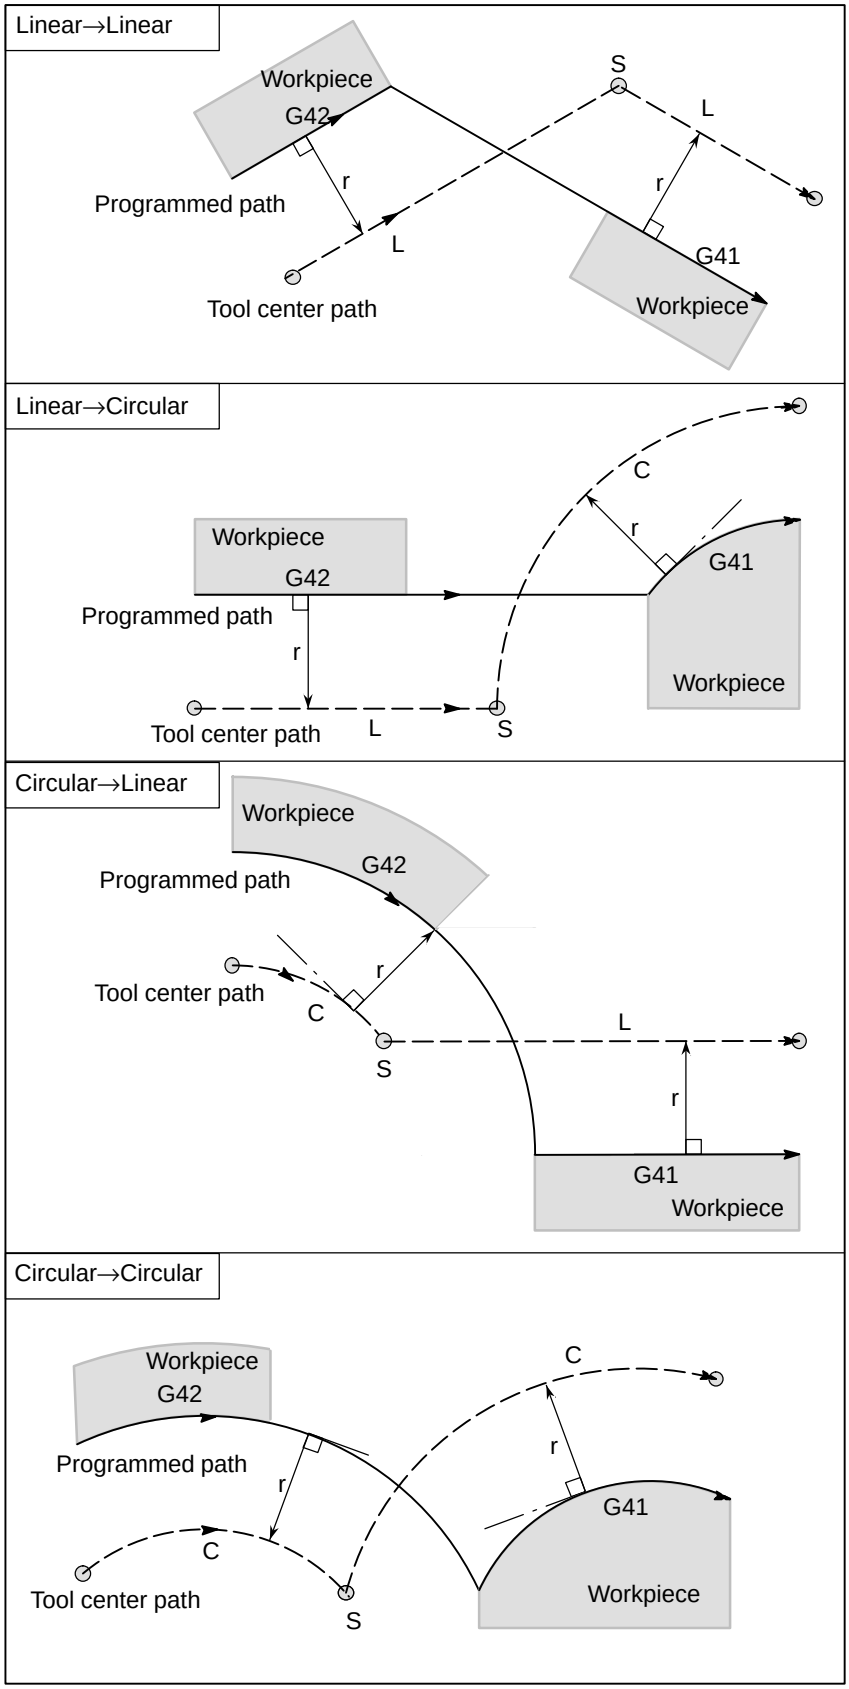

Tool center path without an intersection

When changing the offset direction in block A to block B using G41 and G42, if intersection with the offset path is not required, the vector normal to block B is created at the start point of block B.

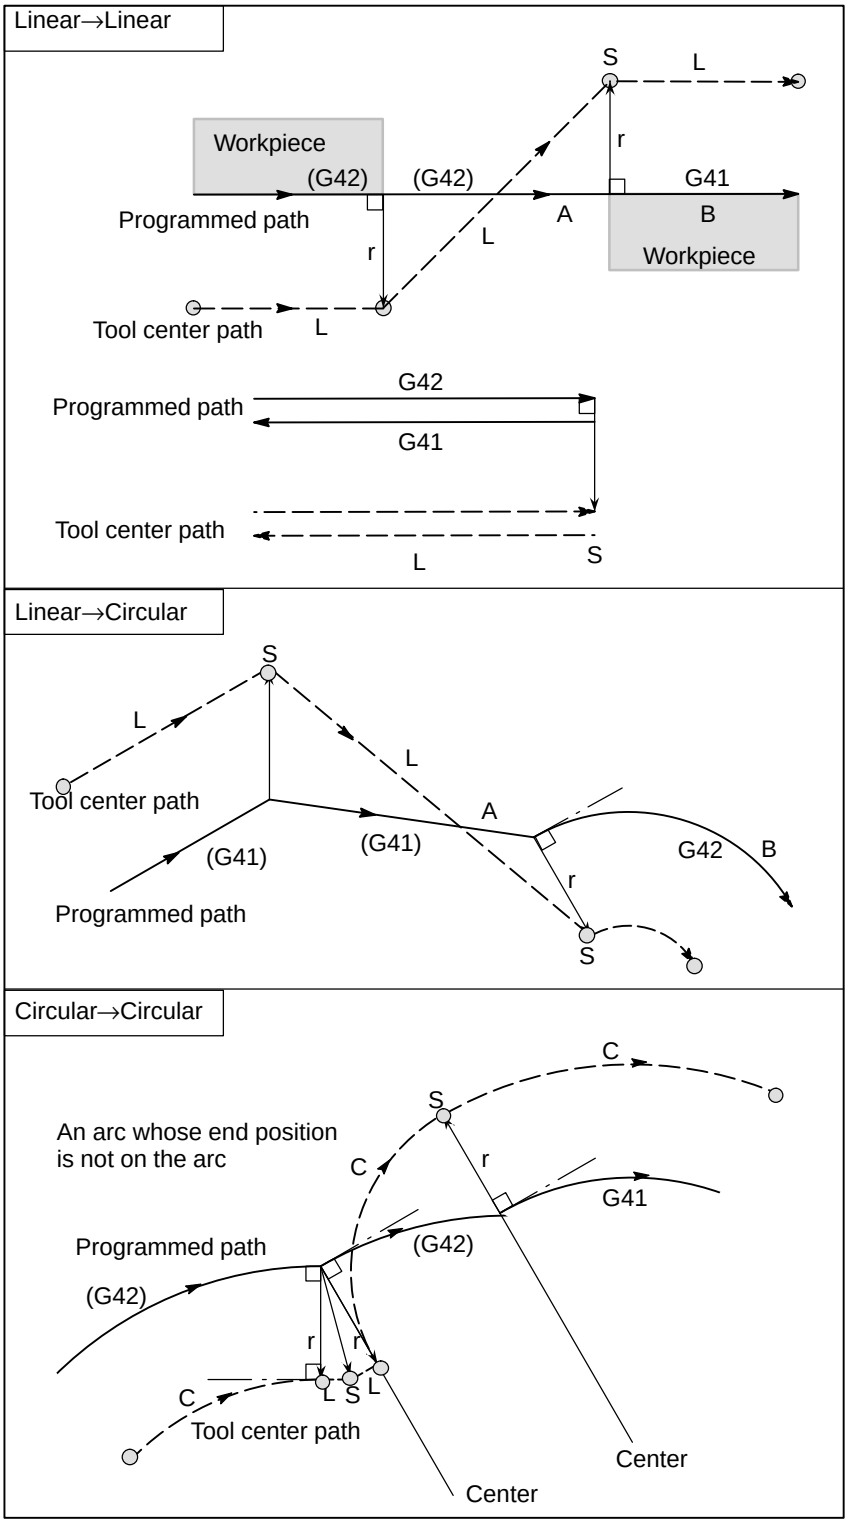

The length of tool center path larger than the circumference of a circle

Normally there is almost no possibility of generating this situation. However, when G41 and G42 are changed, or when a G40 was commanded with address I, J, and K this situation can occur.
In this case of the figure, the cutter compensation is not performed with more than one circle circumference: an arc is formed from P_1 to P_2 as shown. Depending on the circumstances, an alarm may be displayed due to the ”Interference Check” described later. To execute a circle with more than one circumference, the circle must be specified in segments.

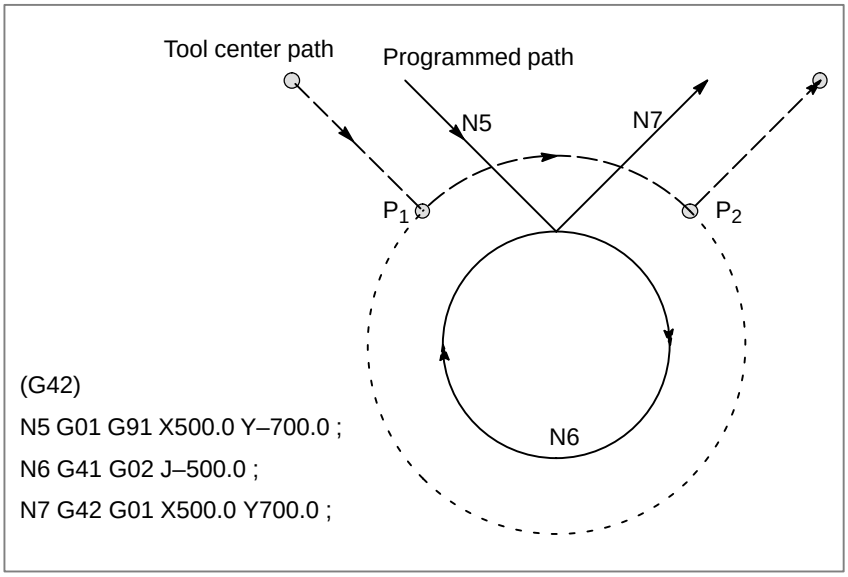

- **Temporary cutter compensation cancel**

If the following command is specified in the offset mode, the offset mode is temporarily canceled then automatically restored. The offset mode can be canceled and started as described in II–15.6.2 and 15.6.4.

Specifying G28 (automatic return to the reference position) in the offset mode

If G28 is specified in the offset mode, the offset mode is canceled at an intermediate position. If the vector still remains after the tool is returned to the reference position, the components of the vector are reset to zero with respect to each axis along which reference position return has been made.

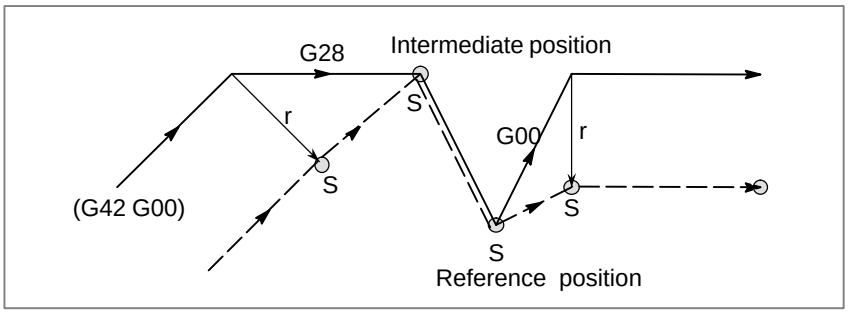

Specifying G29 (automatic return from the reference position) in the offset mode

If G29 is commanded in the offset mode, the offset will be cancelled at the intermediate point, and the offset mode will be restored automatically from the subsequent block.

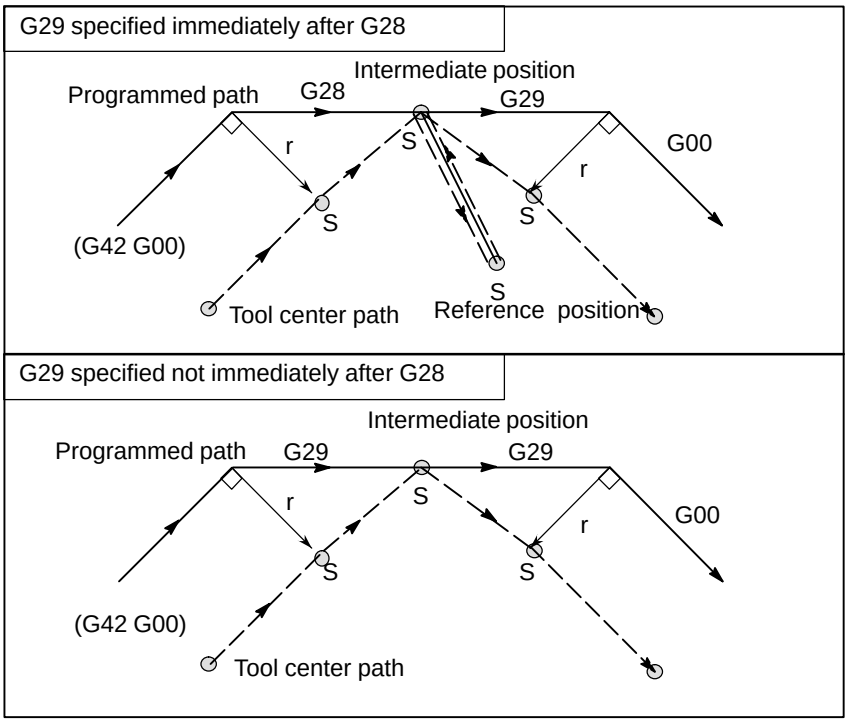

- **Cutter compensation G code in the offset mode**

The offset vector can be set to form a right angle to the moving direction in the previous block, irrespective of machining inner or outer side, by commanding the cutter compensation G code (G41, G42) in the offset mode, independently. If this code is specified in a circular command, correct circular motion will not be obtained.
When the direction of offset is expected to be changed by the command of cutter compensation G code (G41, G42), refer to Subsec.15.6.3.

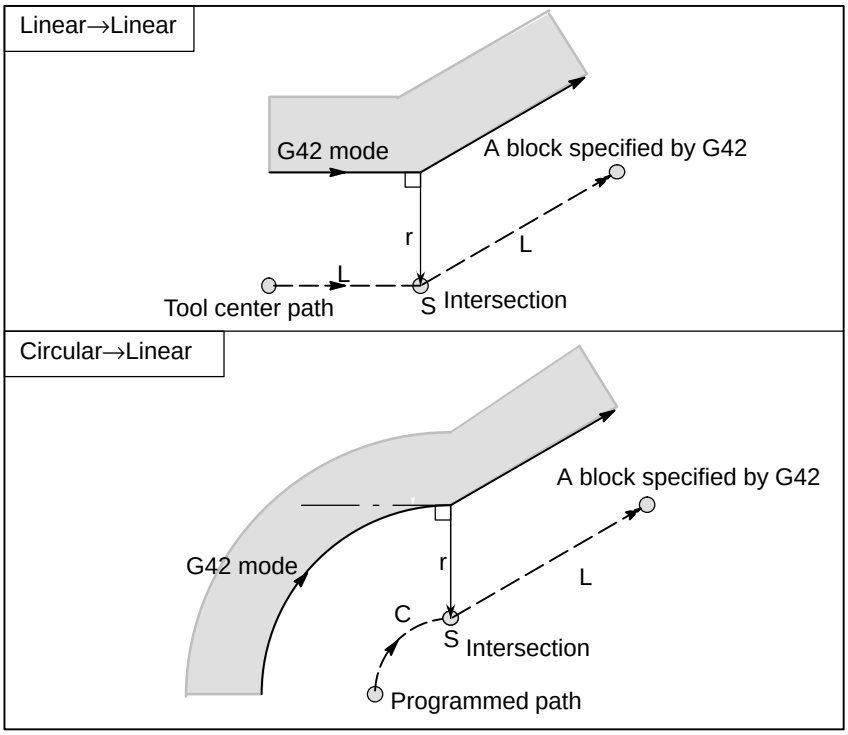

- **Command cancelling the offset vector temporarily**

During offset mode, if G92 (absolute zero point programming) is commanded,the offset vector is temporarily cancelled and thereafter offset mode is automatically restored.
In this case, without movement of offset cancel, the tool moves directly from the intersecting point to the commanded point where offset vector is canceled. Also when restored to offset mode, the tool moves directly to the intersecting point.

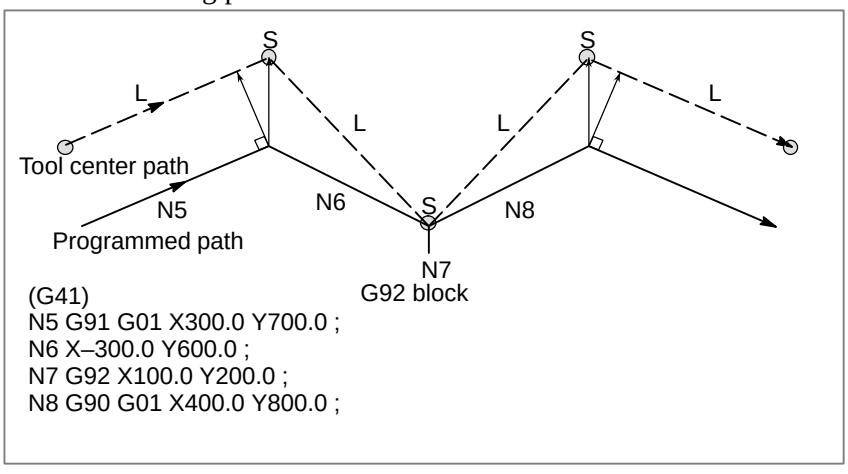

- **A block without tool movement**

The following blocks have no tool movement. In these blocks, the tool will not move even if cutter compensation is effected.

```
M05 ;  . M code output
S21 ;  . S code output
G04 X10.0 ; Dwell
G10 L11 P01 R10.0 ; Cutter compensation value setting
(G17) Z200.0 ; Move command not included in the
      offset plane.
G90 ;  . G code only
G91 X0 ;   Move distance is zero.
```

Commands (1) to (6) are of no movement.

A block without tool movement specified in offset mode

When a single block without tool movement is commanded in the offset mode, the vector and tool center path are the same as those when the block is not commanded. This block is executed at the single block stop point.

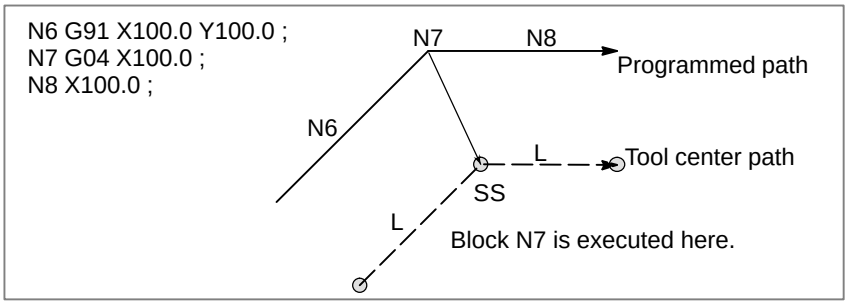

However, when the move distance is zero, even if the block is commanded singly, tool motion becomes the same as that when more than one block of without tool movement are commanded, which will be described subsequently.

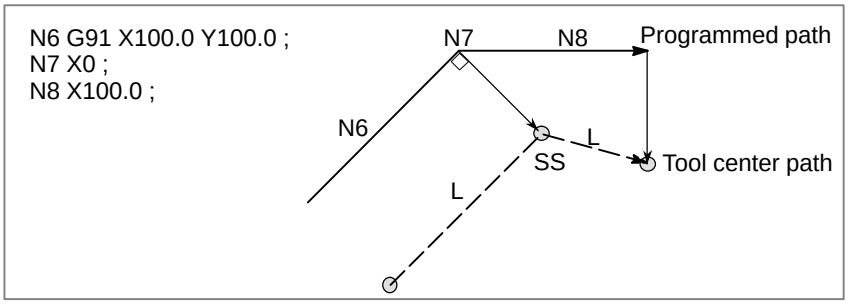

Two blocks without tool movement should not be commanded consecutively. If commanded, a vector whose length is equal to the offset value is produced in a normal direction to tool motion in earlier block, so overcutting may result.

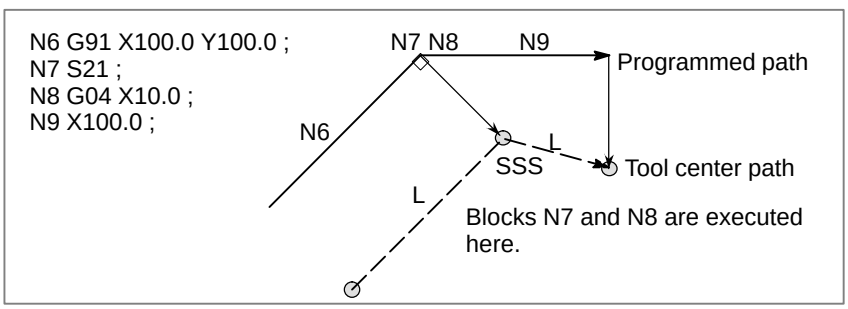

- **Corner movement**

When two or more vectors are produced at the end of a block, the tool moves linearly from one vector to another. This movement is called the corner movement.
If these vectors almost coincide with each other, the corner movement isn't performed and the latter vector is ignored.

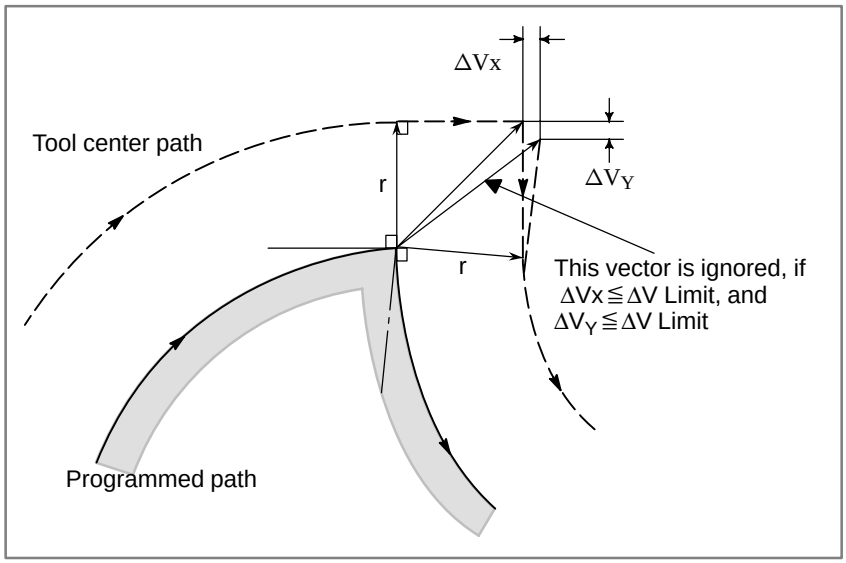

If $\Delta Vx \leqq \Delta Vlimit$ and $\Delta Vy \leqq \Delta Vlimit$, the latter vector is ignored. The $\Delta Vlimit$ is set in advance by parameter (No. 5010).
If these vectors do not coincide, a move is generated to turn around the corner. This move belongs to the latter block.

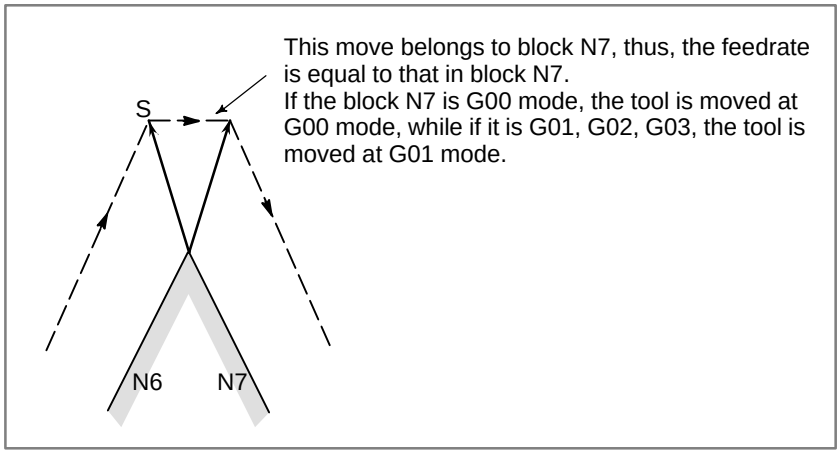

However, if the path of the next block is semicircular or more, the above function is not performed.
The reason for this is as follows:

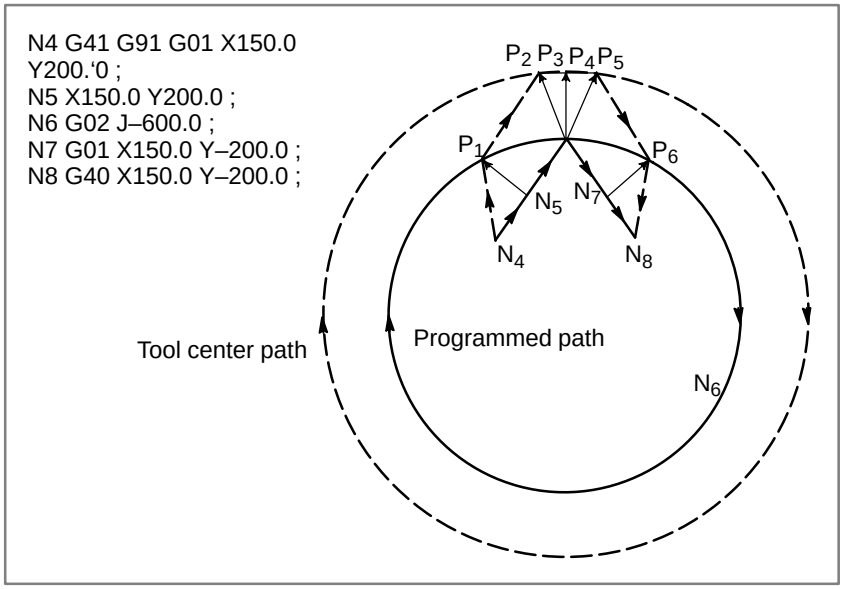

If the vector is not ignored, the tool path is as follows:
$P_1 \rightarrow P_2 \rightarrow P_3 \rightarrow$ (Circle) $\rightarrow P_4 \rightarrow P_5 \rightarrow P_6$
But if the distance between P2 and P3 is negligible, the point P3 is ignored. Therefore, the tool path is as follows:
$P_2 \rightarrow P_4$
Namely, circle cutting by the block N6 is ignored.

- **Interruption of manual operation**

For manual operation during the cutter compensation, refer to Section III–3.5, “ Manual Absolute ON and OFF.”

14.5.4 Tool Movement in Offset Mode Cancel

Explanations

- **Tool movement around an inside corner (180° ≦ α)**

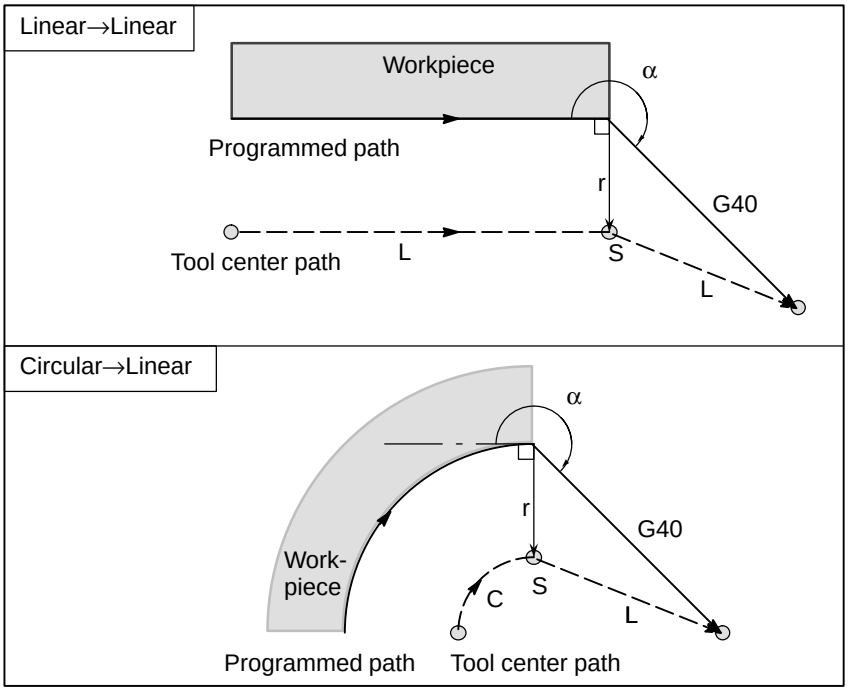

- **Tool movement around an outside corner at an obtuse angle (90° ≦ α<180°)**

Tool path has two types, A and B; and they are selected by parameter SUP (No. 5003#0).

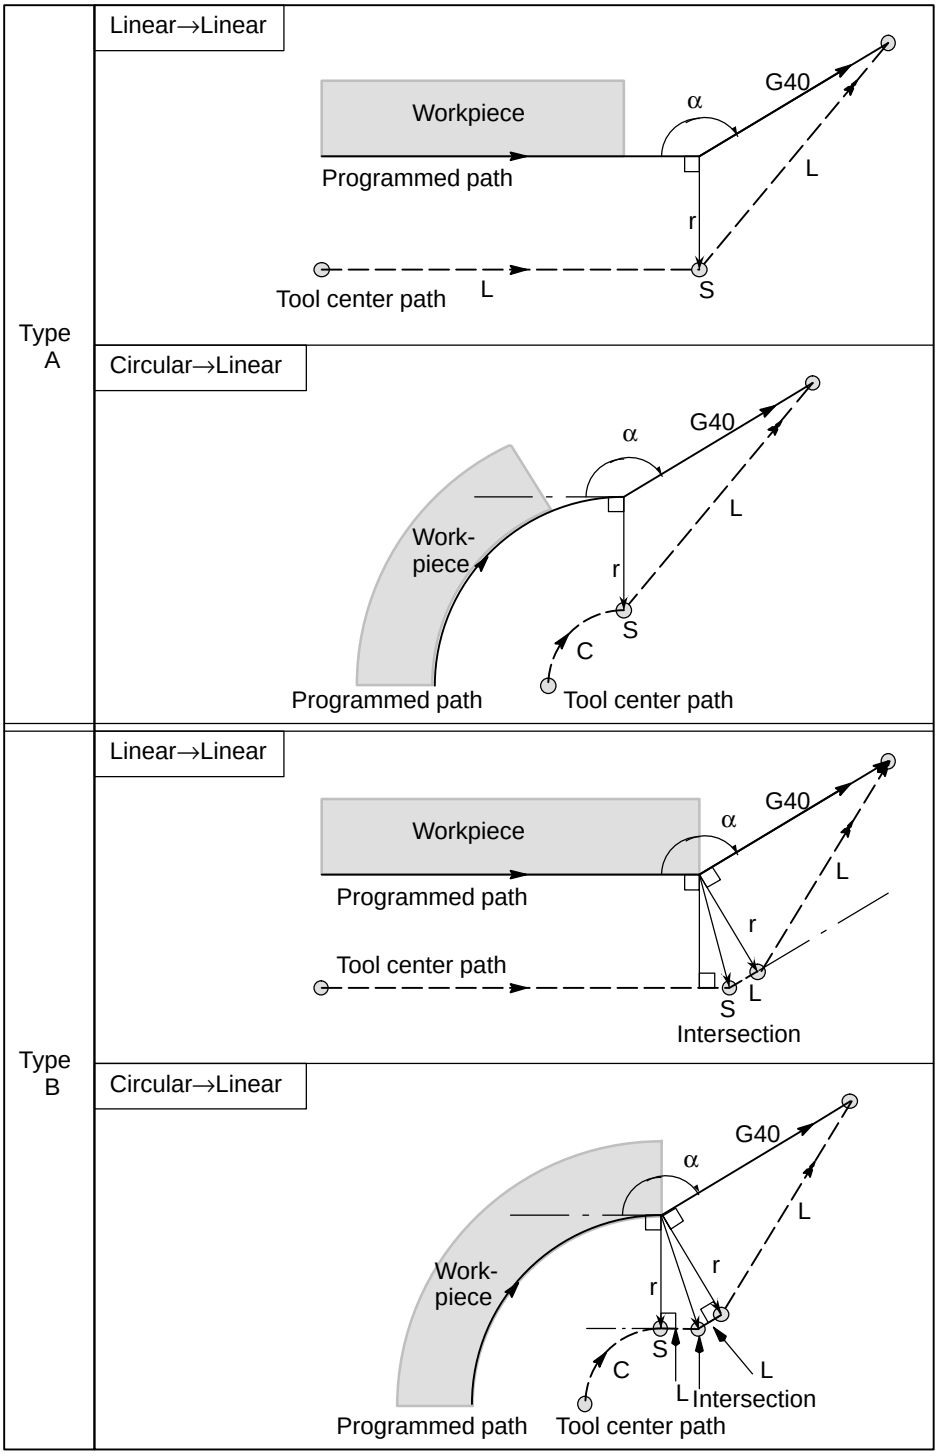

- **Tool movement around an outside corner at an acute angle (α<90°)**

Tool path has two types, A and B : and they are selected by parameter SUP (No. 5003#0)

Type A

Linear→Linear

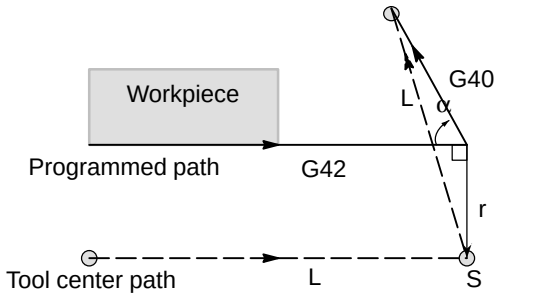

Circular→Linear

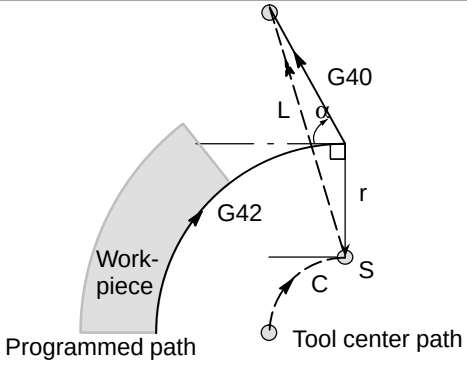

Type B

Linear→Linear

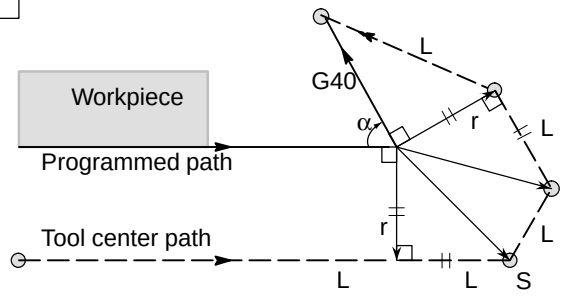

Circular→Linear

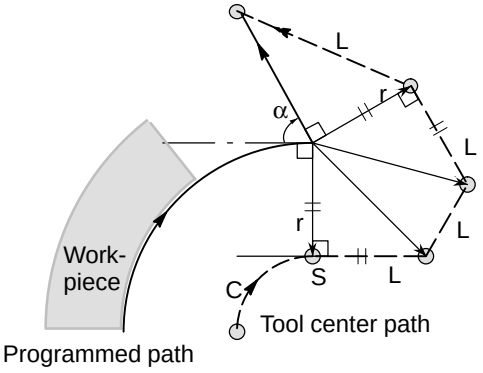

- **Tool movement around the outside linear→linear at an acute angle less than 1 degree (α<1°)**

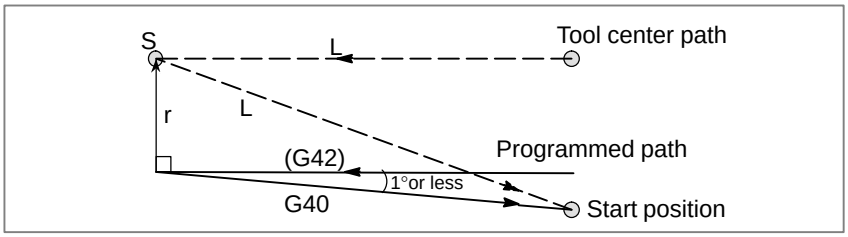

- **A block without tool movement specified together with offset cancel**

When a block without tool movement is commanded together with an offset cancel, a vector whose length is equal to the offset value is produced in a normal direction to tool motion in the earlier block, the vector is cancelled in the next move command.

```
N6 G91 X100.0 Y100.0
;
N7 G40 ;
N8 X100.0 Z0 ;
```

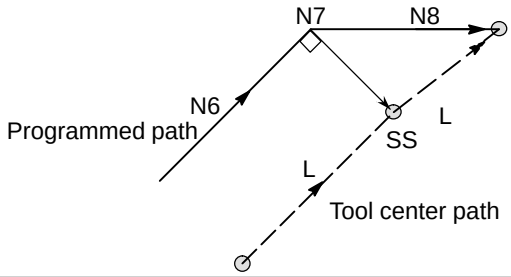

- **Block containing G40 and I_J_K_**

The previous block contains G41 or G42

If a G41 or G42 block precedes a block in which G40 and I_, J_, K_ are specified, the system assumes that the path is programmed as a path from the end position determined by the former block to a vector determined by (I,J), (I,K), or (J,K). The direction of compensation in the former block is inherited.

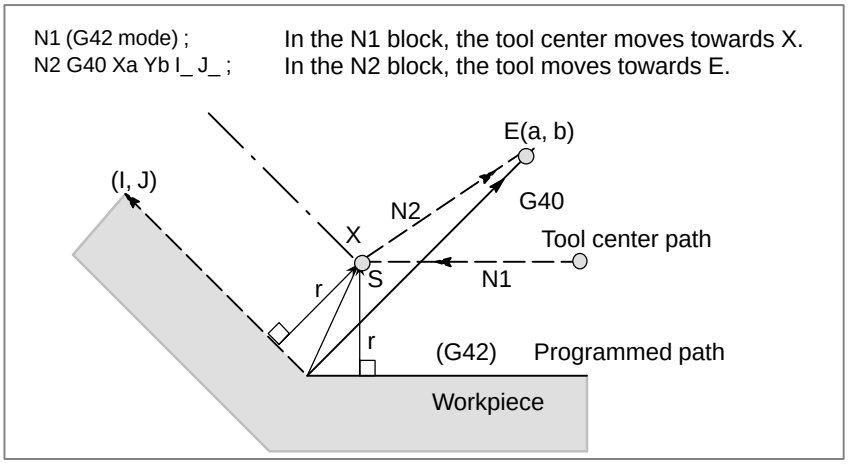

In this case, note that the CNC obtains an intersection of the tool path irrespective of whether inner or outer side machining is specified

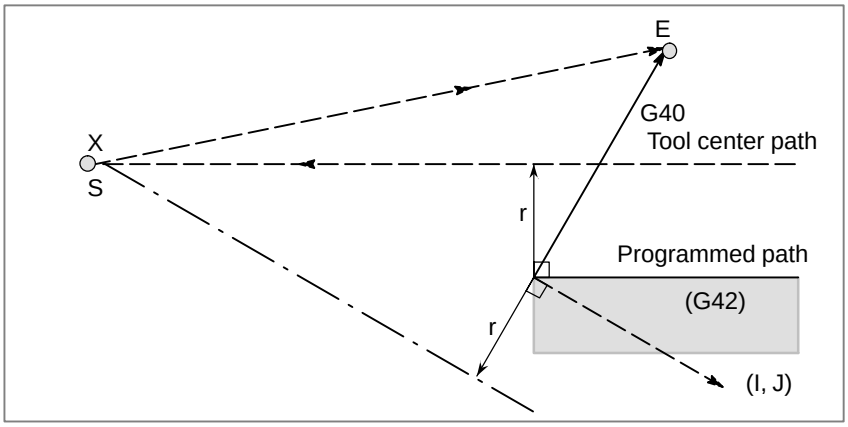

When an intersection is not obtainable, the tool comes to the normal position to the previous block at the end of the previous block.

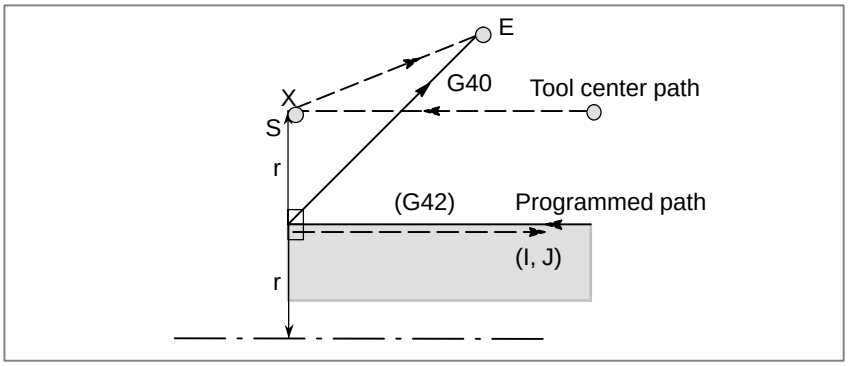

The length of the tool center path larger than the circumference of a circle

In the example shown below, the tool does not trace the circle more than once. It moves along the arc from P1 to P2. The interference check function described in II–15.6.5 may raise an alarm.

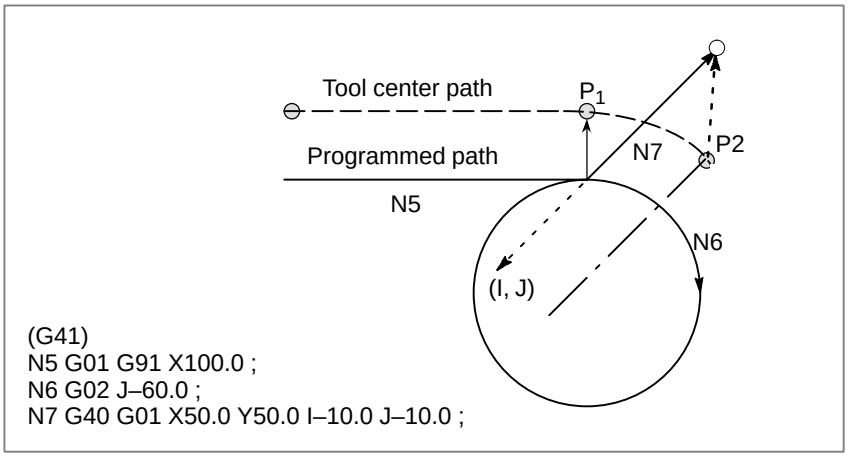

To make the tool trace a circle more than once, program two or more arcs.

14.5.5 Interference Check

Tool overcutting is called interference. The interference check function checks for tool overcutting in advance. However, all interference cannot be checked by this function. The interference check is performed even if overcutting does not occur.

Explanations

- **Criteria for detecting interference**

(1) The direction of the tool path is different from that of the programmed path (from 90 degrees to 270 degrees between these paths).

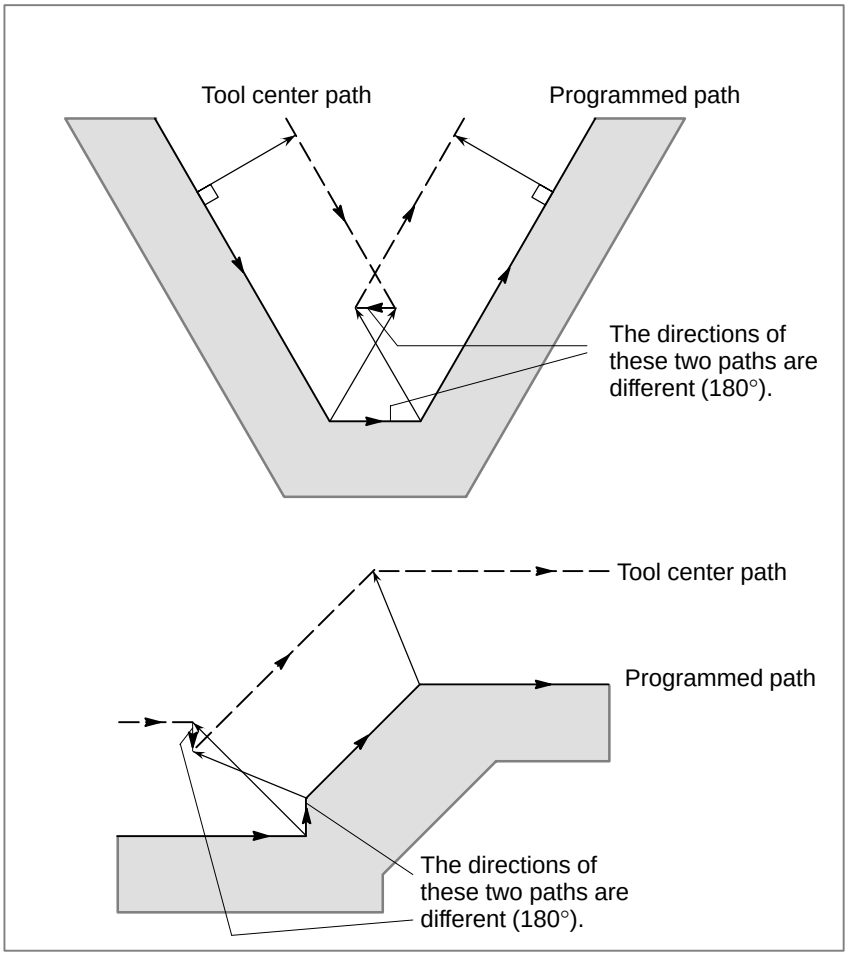

(2) In addition to the condition (1), the angle between the start point and end point on the tool center path is quite different from that between the start point and end point on the programmed path in circular machining(more than 180 degrees).

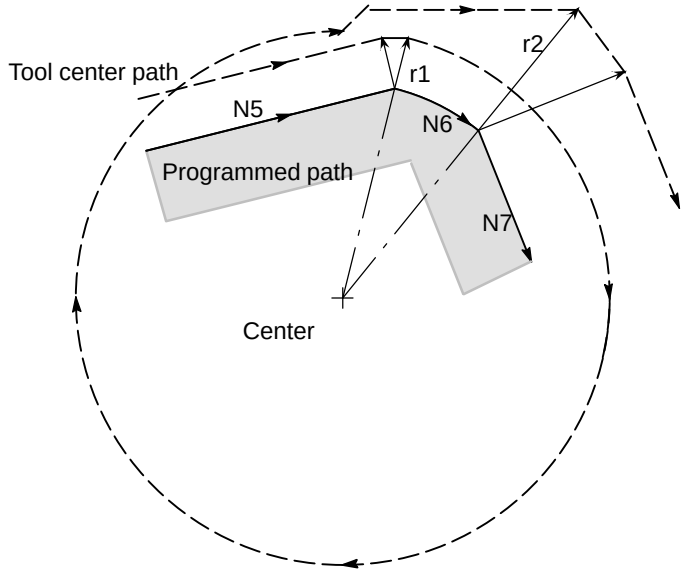

(G41)
N5 G01 G91 X800.0 Y200.0 D1 ;
N6 G02 X320.0 Y–160.0 I–200.0 J–800.0 D2 ;
N7 G01 X200.0 Y–500.0 ;
(Tool compensation value corresponding to D1 : r_1 = 200.0)
(Tool compensation value corresponding to D2 : r_2 = 600.0)

In the above example, the arc in block N6 is placed in the one quadrant. But after cutter compensation, the arc is placed in the four quadrants.

- **Correction of interference in advance**

(1) Removal of the vector causing the interference
When cutter compensation is performed for blocks A, B and C and vectors V_1, V_2, V_3 and V_4 between blocks A and B, and V_5, V_6, V_7 and V_8 between B and C are produced, the nearest vectors are checked first. If interference occurs, they are ignored. But if the vectors to be ignored due to interference are the last vectors at the corner, they cannot be ignored.
Check between vectors V_4 and V_5
Interference —— V_4 and V_5 are ignored.
Check between V_3 and V_6
Interference —— V_3 and V_6 are ignored
Check between V_2 and V_7
Interference —— V_2 and V_7 are Ignored
Check between V_1 and V_8
Interference ——— V_1 and V_8 are cannot be ignored
If while checking, a vector without interference is detected, subsequent vectors are not checked. If block B is a circular movement, a linear movement is produced if the vectors are interfered.

(Example 1) The tool moves linearly from V_1 to V_8

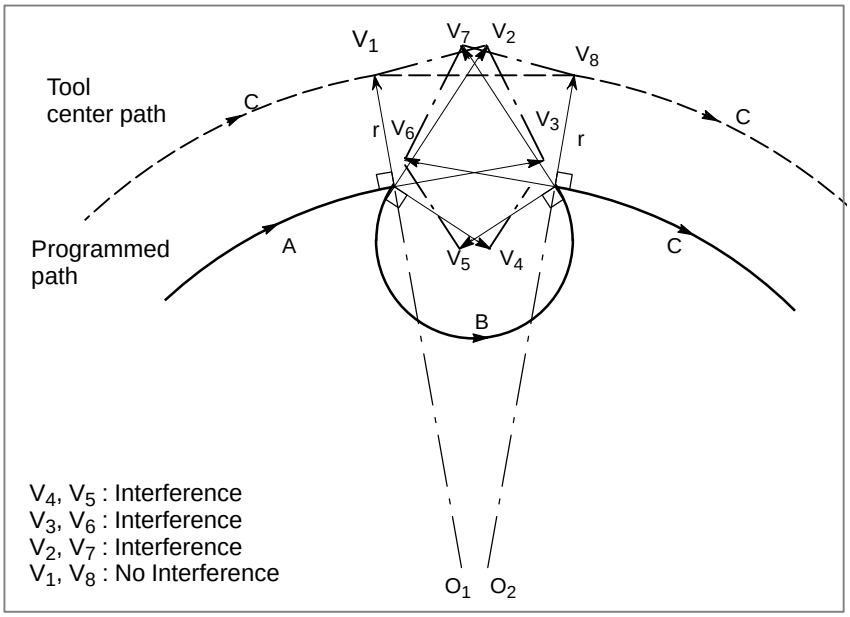

(Example 2) The tool moves linearly from V_1, V_2, V_7, to V_8

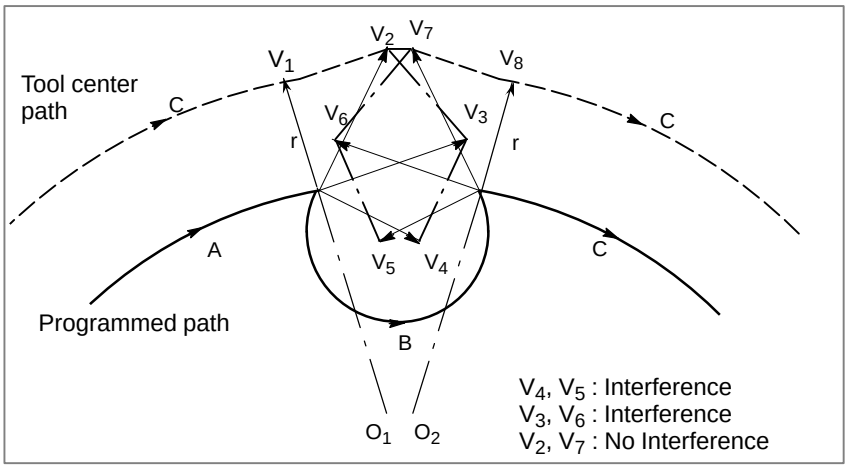

(2) If the interference occurs after correction (1), the tool is stopped with an alarm.
If the interference occurs after correction (1) or if there are only one pair of vectors from the beginning of checking and the vectors interfere, the P/S alarm (No.41) is displayed and the tool is stopped immediately after execution of the preceding block. If the block is executed by the single block operation, the tool is stopped at the end of the block.

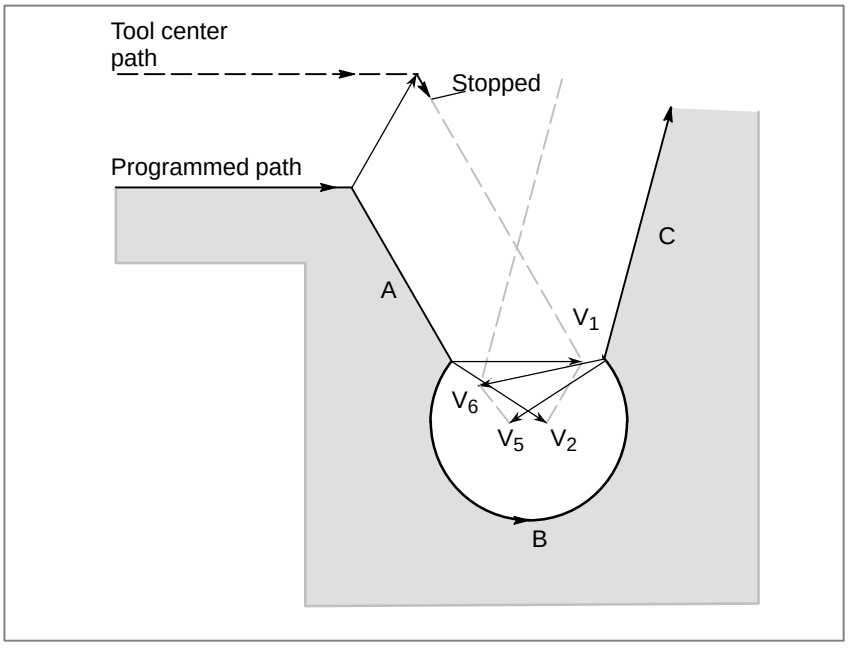

After ignoring vectors V_2 and V_5 because of interference, interference also occurs between vectors V_1 and V_6. The alarm is displayed and the tool is stopped.

- **When interference is assumed although actual interference does not occur**

(1) Depression which is smaller than the cutter compensation value

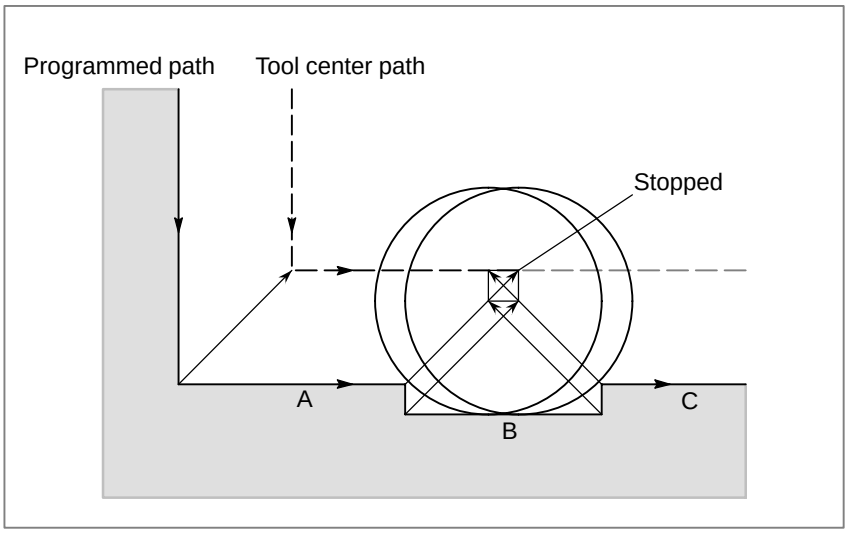

There is no actual interference, but since the direction programmed in block B is opposite to that of the path after cutter compensation the tool stops and an alarm is displayed.

(2) Groove which is smaller than the cutter compensation value

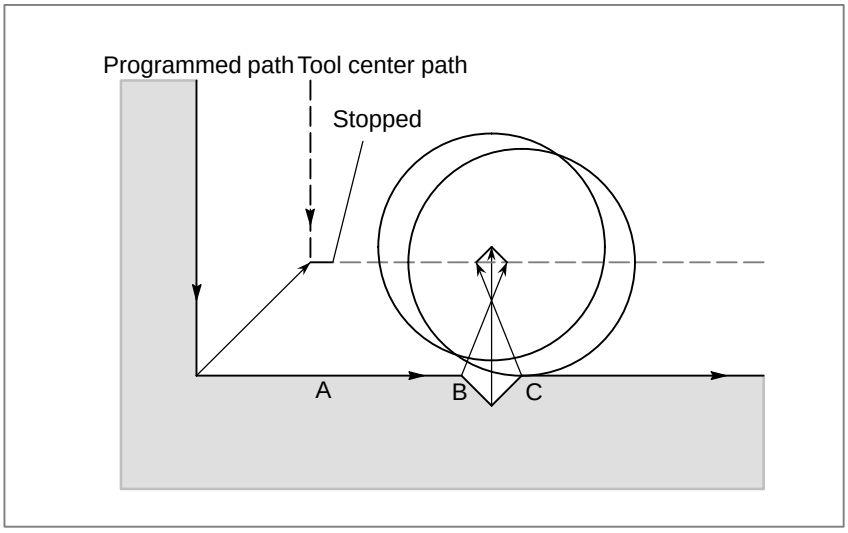

Like (1), P/S alarm is displayed because of the interference as the direction is reverse in block B.

14.5.6 Overcutting by Cutter Compensation

Explanations

- **Machining an inside corner at a radius smaller than the cutter radius**

When the radius of a corner is smaller than the cutter radius, because the inner offsetting of the cutter will result in overcuttings, an alarm is displayed and the CNC stops at the start of the block. In single block operation, the overcutting is generated because the tool is stopped after the block execution.

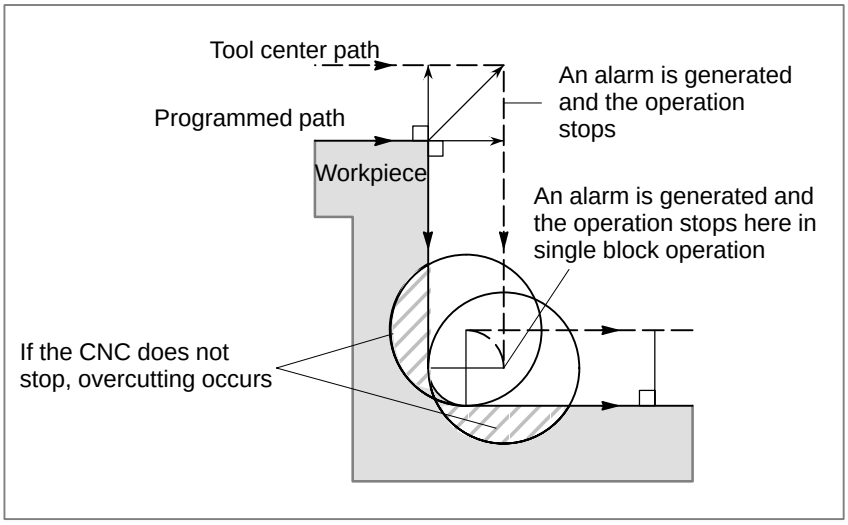

- **Machining a groove smaller than the tool radius**

Since the cutter compensation forces the path of the center of the tool to move in the reverse of the programmed direction, overcutting will result. In this case an alarm is displayed and the CNC stops at the start of the block.

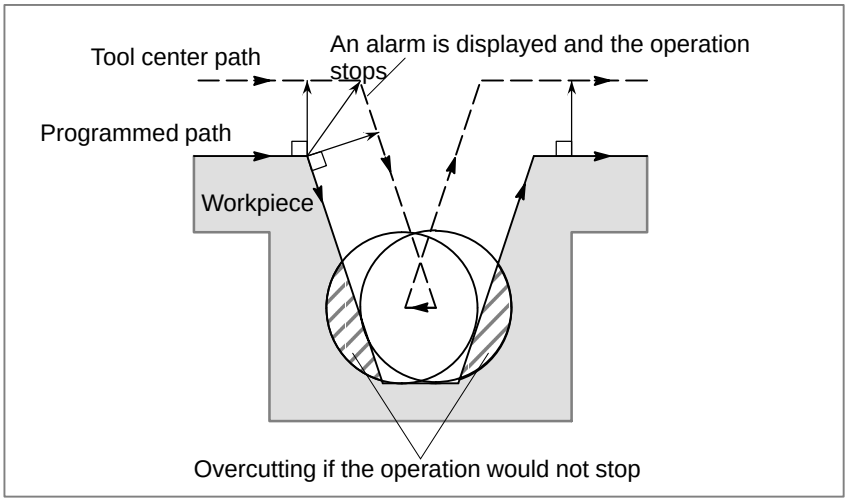

- **Machining a step smaller than the tool radius**

When machining of the step is commanded by circular machining in the case of a program containing a step smaller than the tool radius, the path of the center of tool with the ordinary offset becomes reverse to the programmed direction. In this case, the first vector is ignored, and the tool moves linearly to the second vector position. The single block operation is stopped at this point. If the machining is not in the single block mode, the cycle operation is continued. If the step is of linear, no alarm will be generated and cut correctly. However uncut part will remain.

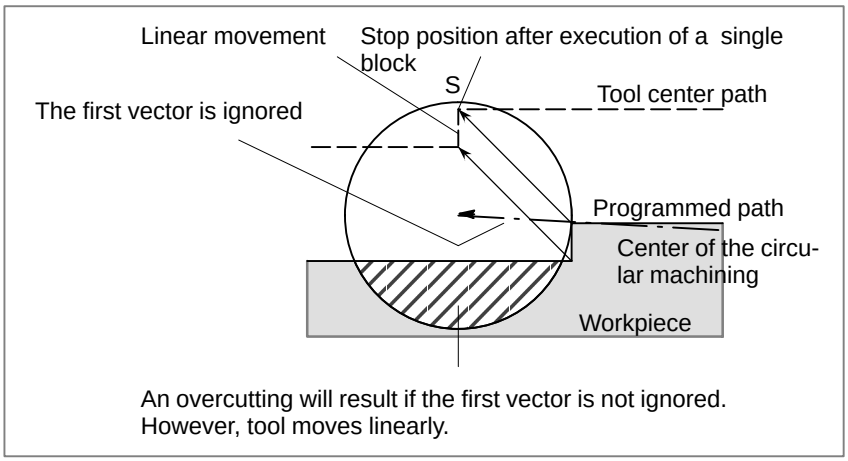

- **Starting compensation and cutting along the Z–axis**

It is usually used such a method that the tool is moved along the Z axis after the cutter compensation is effected at some distance from the workpiece at the start of the machining.
In the case above, if it is desired to divide the motion along the Z axis into rapid traverse and cutting feed, follow the procedure below.

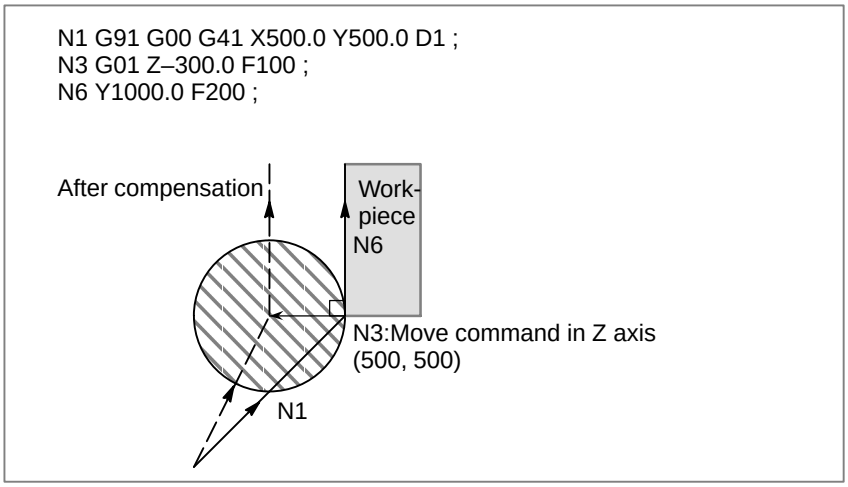

In the program example above, when executing block N1, blocks N3 and N6 are also entered into the buffer storage, and by the relationship among them the correct compensation is performed as in the figure above.
Then, if the block N3 (move command in Z axis) is divided as follows: As there are two move command blocks not included in the selected plane and the block N6 cannot be entered into the buffer storage, the tool center path is calculated by the information of N1 in the figure above. That is, the offset vector is not calculated in start–up and the overcutting may result.

The above example should be modified as follows:

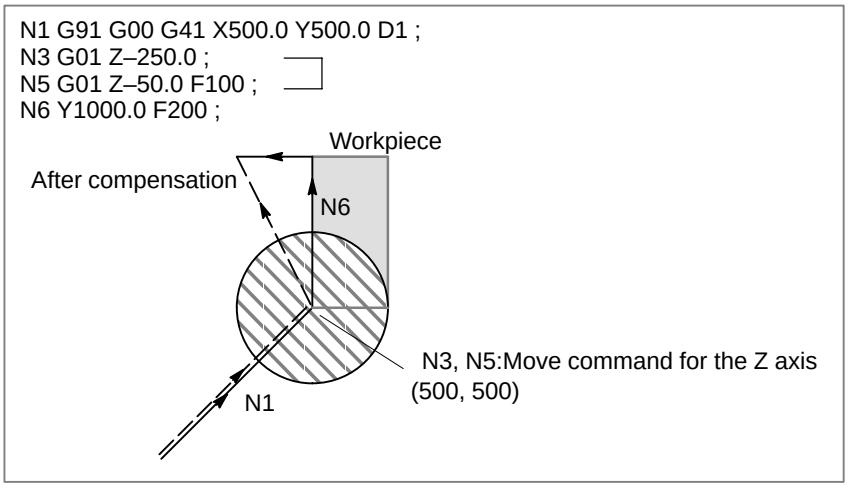

The move command in the same direction as that of the move command after the motion in Z axis should be programmed.

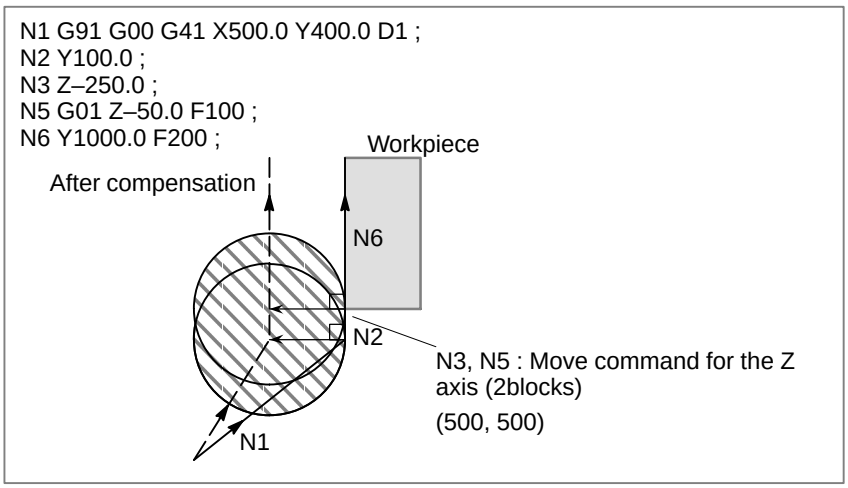

As the block with sequence No. N2 has the move command in the same direction as that of the block with sequence No. N6, the correct compensation is performed.

14.5.7 Input Command from MDI

Cutter compensation C is not performed for commands input from the MDI.
However, when automatic operation using the absolute commands is temporarily stopped by the single block function, MDI operation is performed, then automatic operation starts again, the tool path is as follows :
In this case, the vectors at the start position of the next block are translated and the other vectors are produced by the next two blocks. Therefore, from next block but one, cutter compensation C is accurately performed.

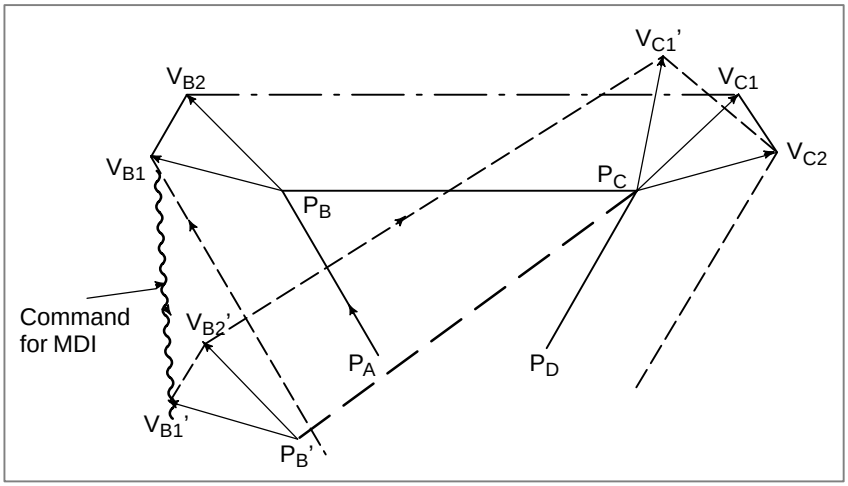

When position P_A, P_B, and P_C are programmed in an absolute command, tool is stopped by the single block function after executing the block from P_A to P_B and the tool is moved by MDI operation. Vectors V_{B1} and V_{B2} are translated to V_{B1}' and V_{B2}' and offset vectors are recalculated for the vectors V_{C1} and V_{C2} between block P_B–P_C and P_C–P_D.
However, since vector V_{B2} is not calculated again, compensation is accurately performed from position P_C.

14.5.8 G53,G28,G30,G30.1 and G29 Commands in Cutter Compensation C Mode

A function has been added which performs positioning by automatically canceling a cutter compensation vector when G53 is specified in cutter compensation C mode, then automatically restoring that cutter compensation vector with the execution of the next move command.
The cutter compensation vector restoration mode is of FS16 type when CCN (bit 2 of parameter No. 5003) is set to 0; it is of FS15 type when CCN is set to 1.

When G28, G30, or G30.1 is specified in cutter compensation C mode, automatic reference position return is performed by automatically canceling a cutter compensation vector, that cutter compensation vector automatically being restored with the execution of the next move command. In this case, the timing and format of cutter compensation vector cancellation/restoration, performed when CCN (bit 2 of parameter No. 5003) is set to 1, are changed to FS15 type.
When CCN (bit 2 of parameter No. 5003) is set to 0, the conventional specification remains applicable.

When G29 is specified in cutter compensation C mode, the cutter compensation vector is automatically canceled/restored. In this case, the timing and format of cutter compensation vector cancellation/restoration, performed when CCN (bit 2 of parameter No. 5003) is set to 1, are changed to FS15 type.
When CCN (bit 2 of parameter No. 5003) is set to 0, the conventional specification remains applicable.

Explanations

- **G53 command in cutter compensation C mode**

When G53 is specified in cutter compensation C mode, the previous block generates a vector that is perpendicular to the move direction and which has the same magnitude as the offset value. Then, the offset vector is canceled when movement to a specified position is performed in the machine coordinate system. In the next block, offset mode is automatically resumed.

Note that cutter compensation vector restoration is started when CCN (bit 2 of parameter No. 5003) is set to 0; when CCN is set to 1, an intersection vector is generated (FS15 type).

(1) G53 specified in offset mode
When CCN (bit 2 of parameter No.5003)=0

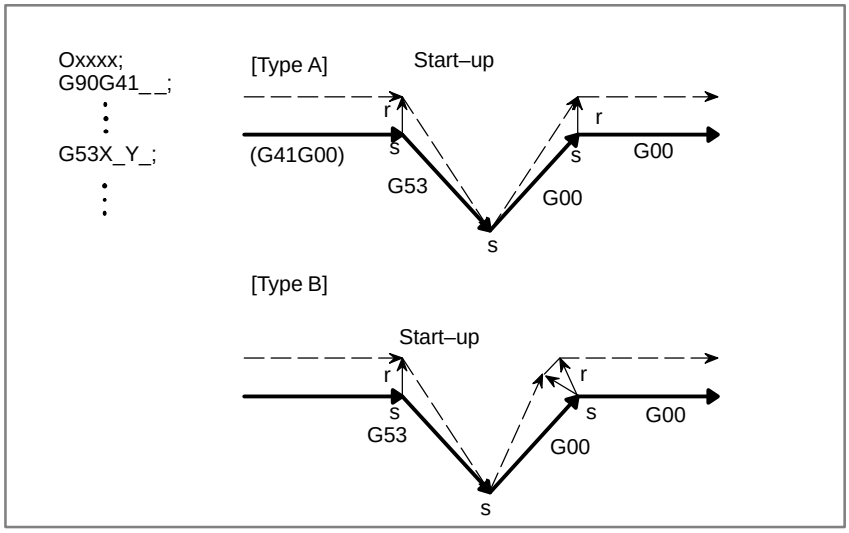

When CCN (bit 2 of parameter No.5003)=1

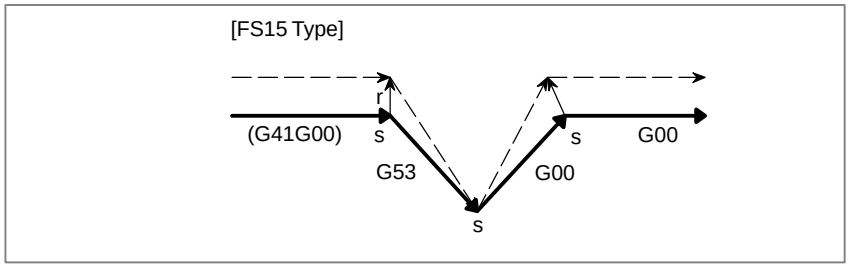

(2) Incremental G53 specified in offset mode
When CCN (bit 2 of parameter No.5003)=0

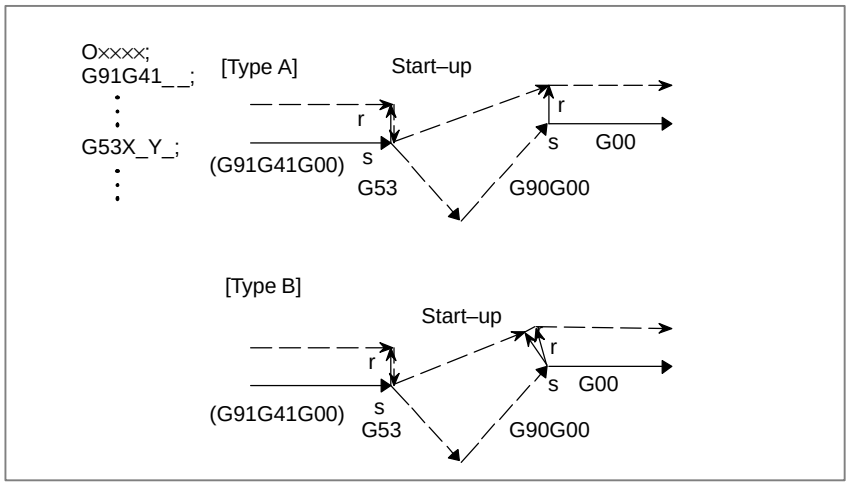

When CCN (bit2 of parameter No.5003)=1

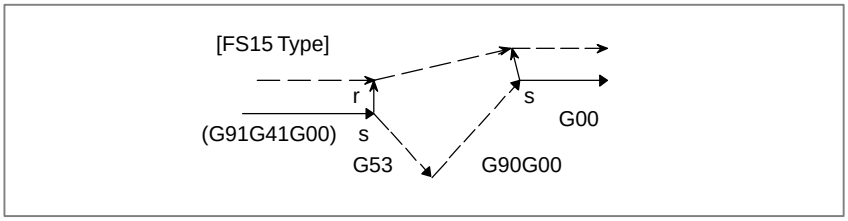

(3) G53 specified in offset mode with no movement specified

When CCN (bit2 of parameter No.5003)=0

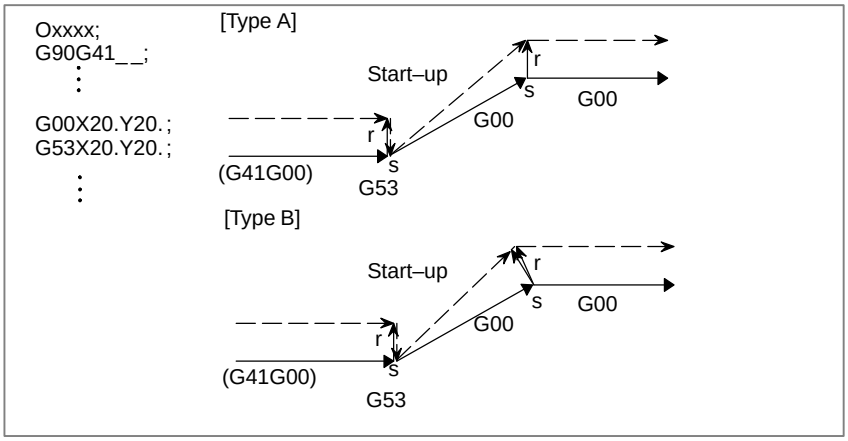

When CCN (bit2 of parameter No.5003)=1

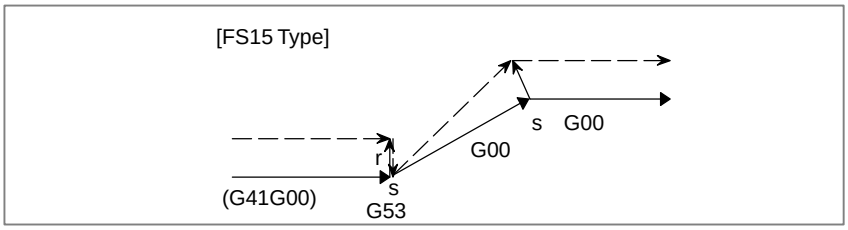

WARNING

1 When cutter compensation C mode is set and all–axis machine lock is applied, the G53 command does not perform positioning along the axes to which machine lock is applied. The vector, however, is preserved. When CCN (bit 2 of parameter No. 5003) is set to 0, the vector is canceled. (Note that even if the FS15 type is used, the vector is canceled when each–axis machine lock is applied.)

Example 1: When CCN (bit 2 of parameter No. 5003) = 0,
type A is used, and all–axis machine lock is applied

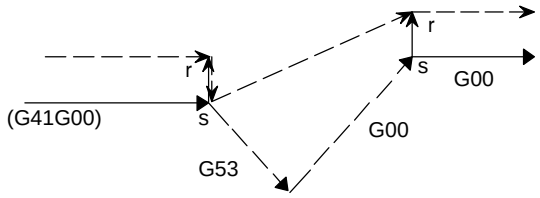

Example 2: When CCN (bit 2 of parameter No. 5003) = 1
and all–axis machine lock is applied [FS15 type]

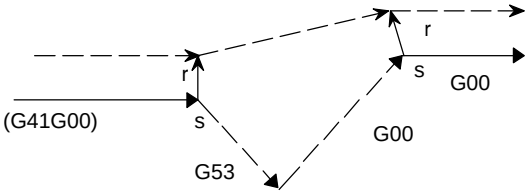

Example 3: When CCN (bit 2 of parameter No. 5003) = 1
and specified–axis machine lock is applied [FS15 type]

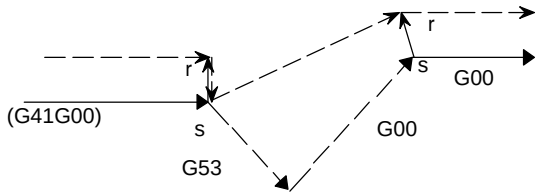

2 When G53 is specified for a compensation axis in cutter compensation mode, the vectors along the other axes are also canceled. (This also applies when CCN (bit 2 of parameter No.5003) is set to 1. When the FS15 type is used, only the vector along a specified axis is canceled. Note that the FS15 type cancellation differs from the actual FS15 specification in this point.)

Example: When CCN (bit 2 of parameter No.5003)=1[FS 15 type]

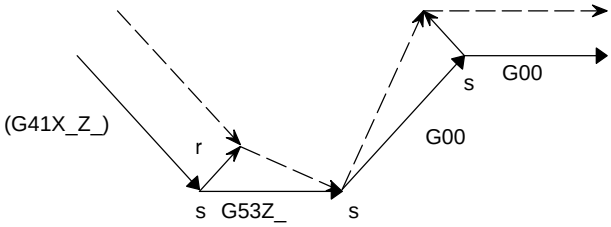

NOTE

1 When a G53 command specifies an axis that is not in the cutter compensation C plane, a perpendicular vector is generated at the end point of the previous block, and the tool does not move. In the next block, offset mode is automatically resumed (in the same way as when two or more continuous blocks do not specify any move commands).

Example: When CCN (bit 2 of parameter No. 5003) = 0, and type A is used

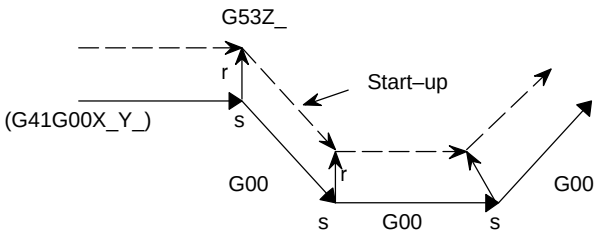

2 When a G53 block is specified to become a start–up block, the next block actually becomes the start–up block. When CCN (bit 2 of parameter No. 5003) is set to 1, an intersection vector is generated.

Example: When CCN (bit 2 of parameter No. 5003) = 0 and type A is used

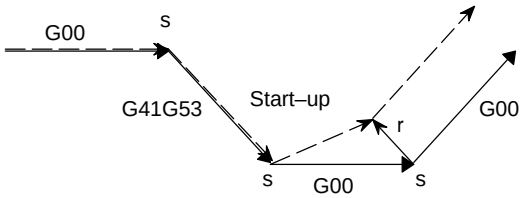

- **G28, G30, or G30.1 command in cutter compensation C mode**

When G28, G30, or G30.1 is specified in cutter compensation C mode, an operation of FS15 type is performed if CCN (bit 2 of parameter No. 5003) is set to 1.

This means that an intersection vector is generated in the previous block, and a perpendicular vector is generated at an intermediate position. Offset vector cancellation is performed when movement is made from the intermediate position to the reference position. As part of restoration, an intersection vector is generated between a block and the next block.

(1) G28, G30, or G30.1, specified in offset mode (with movement to both an intermediate position and reference position performed)

(a) For return by G29
When CCN (bit 2 of parameter No. 5003) = 0

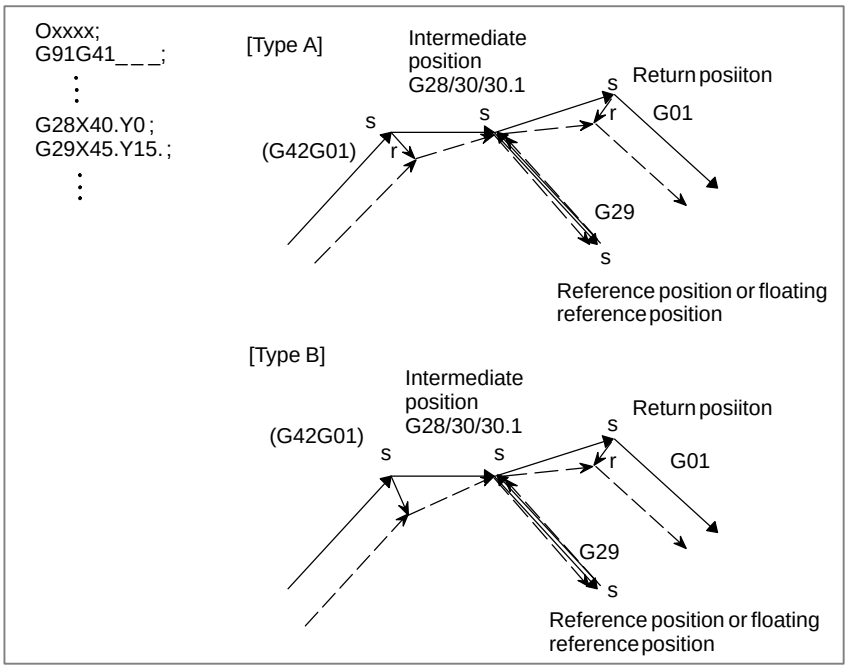

- **G29 command in cutter compensation C mode**

When CCN (bit 2 of parameter No. 5003) = 1

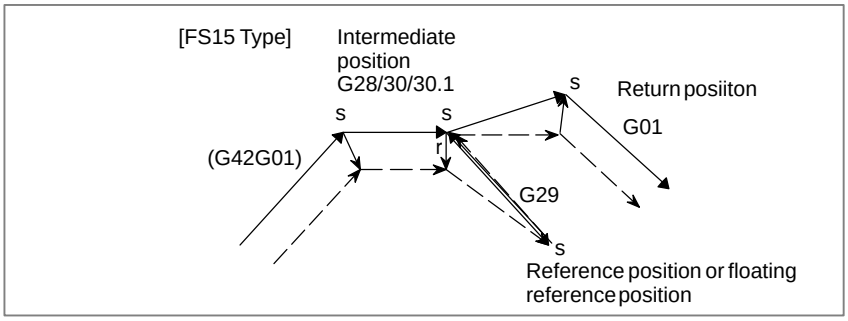

(b) For return by G00
When CCN (bit 2 of parameter No. 5003) = 0

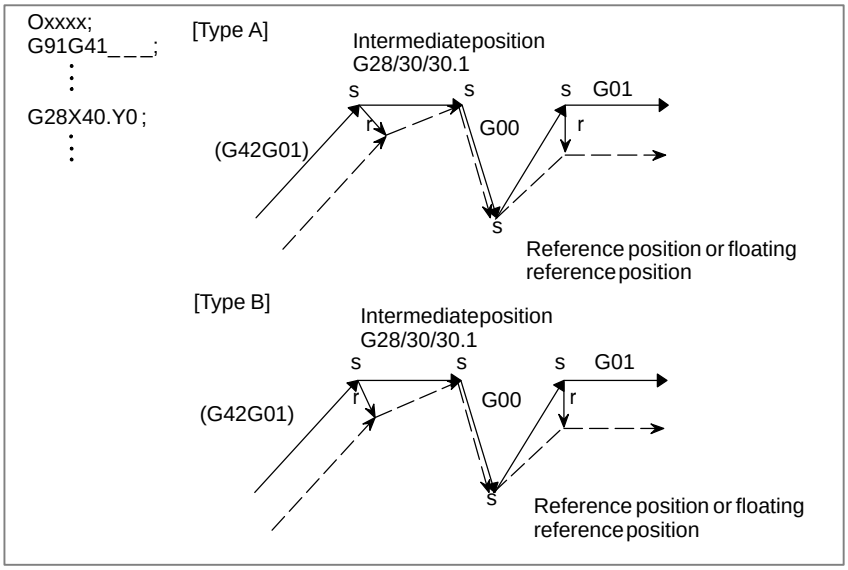

When CCN (bit 2 of parameter No. 5003) = 1

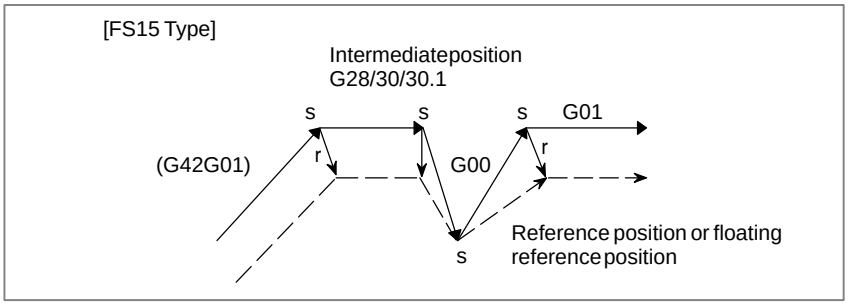

(2) G28, G30, or G30.1, specified in offset mode (with movement to an intermediate position not performed)

(a) For return by G29
When CCN (bit 2 of parameter No. 5003) = 0

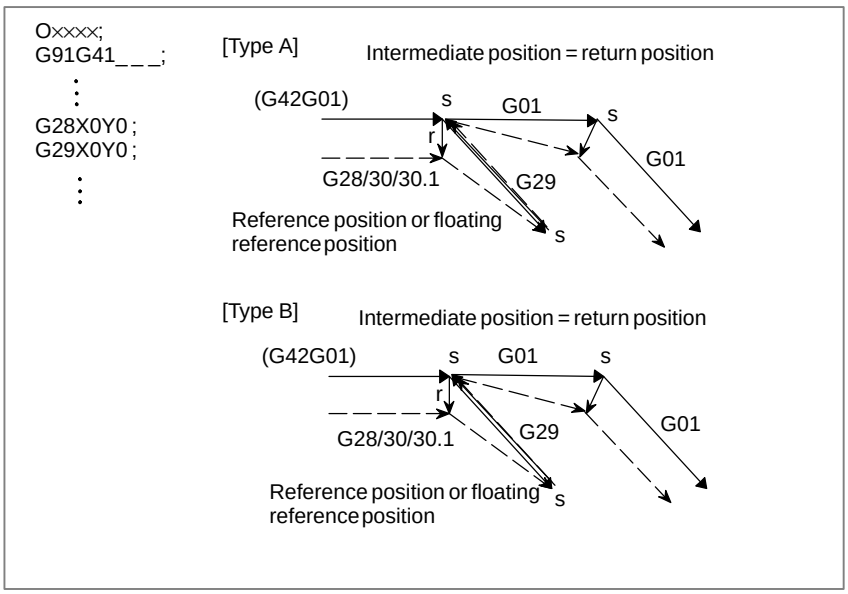

When CCN (bit 2 of parameter No. 5003) = 1

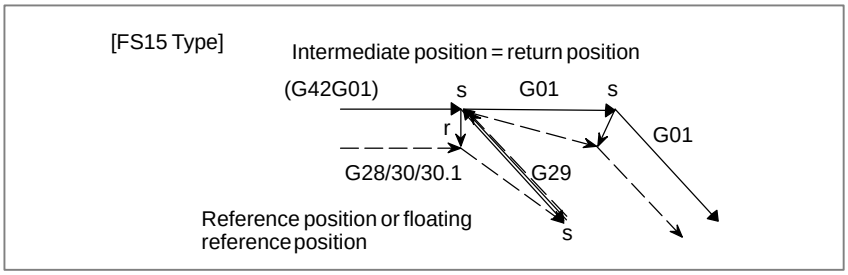

(b) For return by G00

When CCN (bit 2 of parameter No.5003)=0

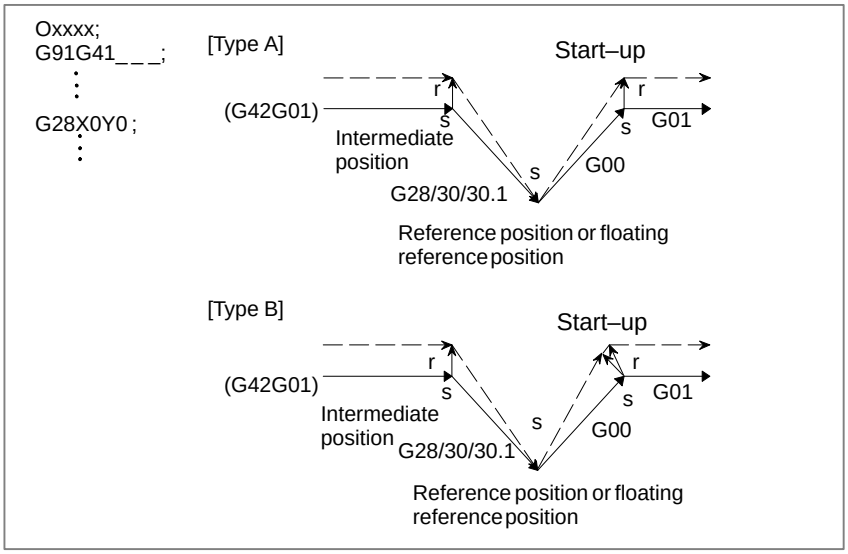

When CCN (bit 2 of parameter No.5003)=1

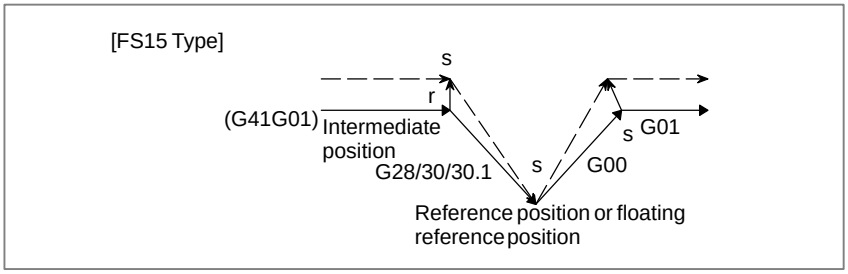

(3) G28, G30, or G30.1, specified in offset mode
(with movement to a reference position not performed)

(a) For return by G29

When CCN (bit 2 of parameter No.5003)=0

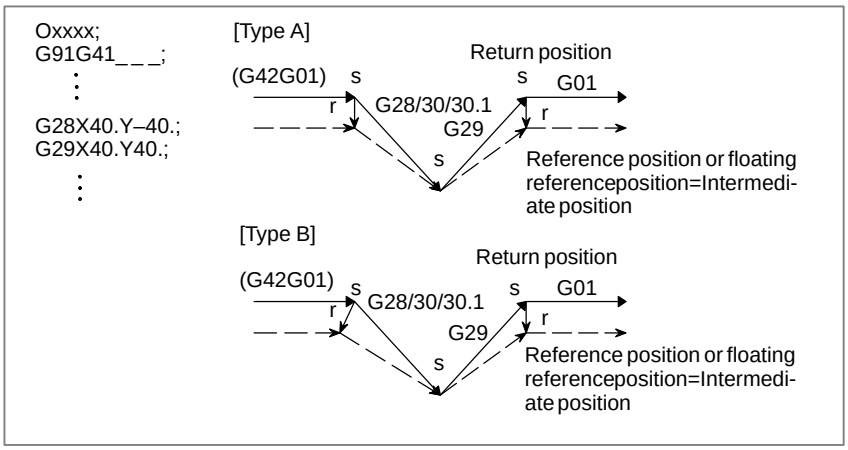

When CCN (bit 2 of parameter No.5003)=1

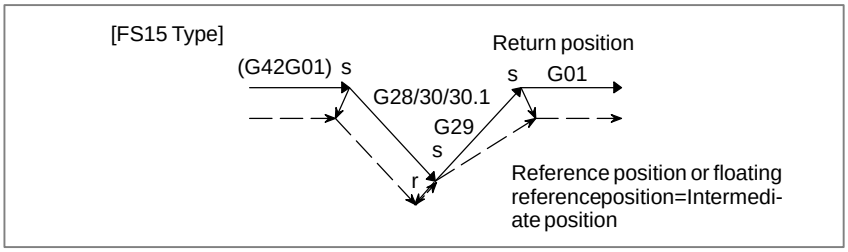

(b) For return by G00

When CCN (bit 2 of parameter No.5003)=0

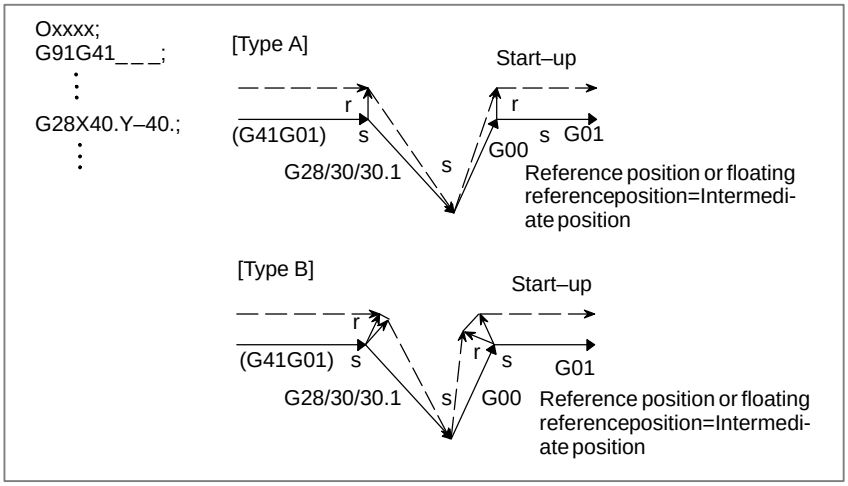

When CCN (bit 2 of parameter No.5003)=1

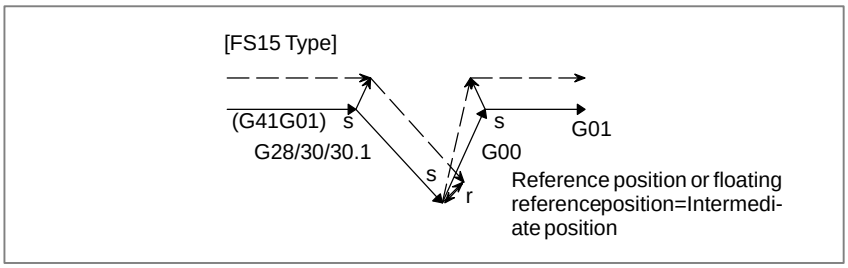

(4) G28, G30, or G30.1 specified in offset mode (with no movement performed)

(a) For return by G29

When CCN (bit 2 of parameter No.5003)=0

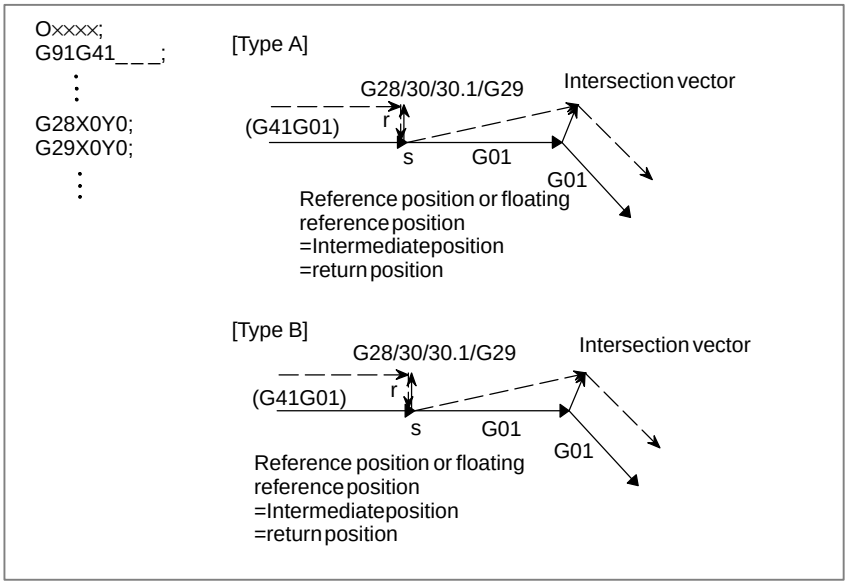

When CCN (bit 2 of parameter No.5003)=1

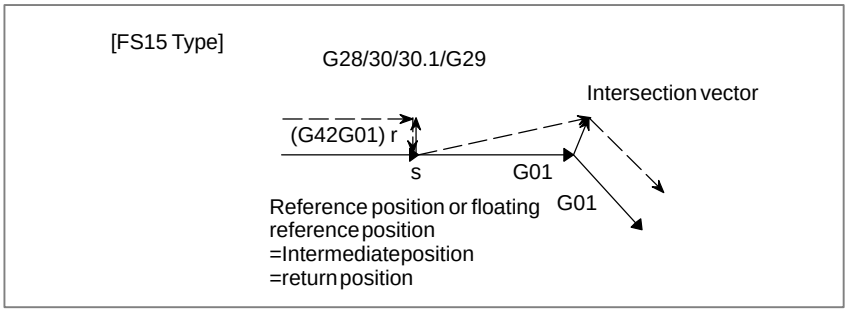

(b) For return by G00

When CCN (bit 2 of parameter No.5003)=0

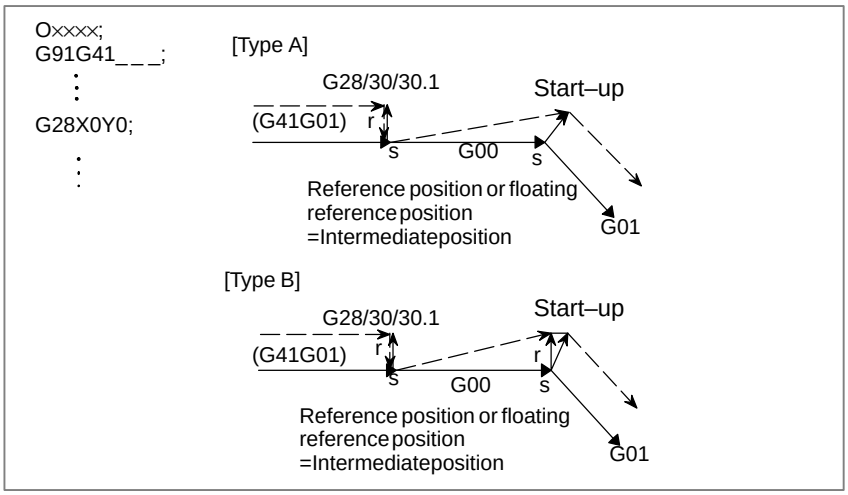

When CCN (bit 2 of parameter No.5003)=1

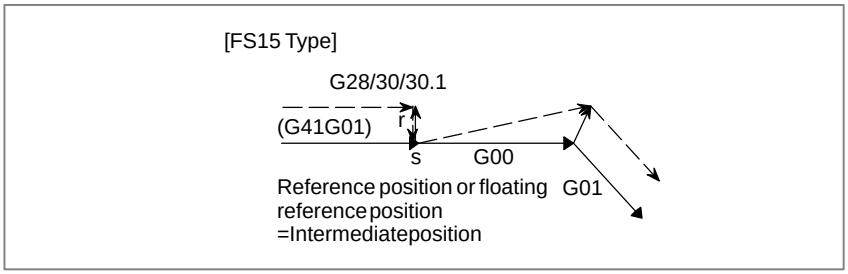

WARNING

1 When a G28, G30, or G30.1 command is specified during all–axis machine lock, a perpendicular offset vector is applied at the intermediate position, and movement to the reference position is not performed; the vector is preserved. Note, however, that even if the FS15 type is used, the vector is canceled only when each–axis machine lock is applied. (The FS15 type preserves the vector even when each–axis machine lock is applied.)

Example1: When CCN (bit 2 of parameter No.5003)=1 and all–axis machine lock is applied

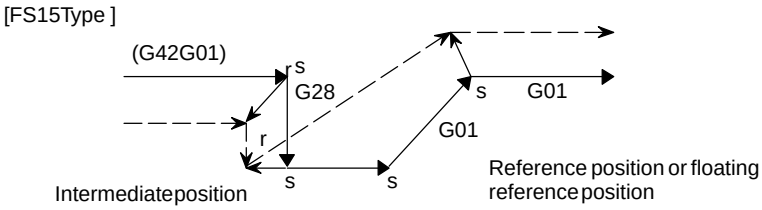

Example2: When CCN (bit 2 of parameter No.5003)=1 and each–axis machine lock is applied

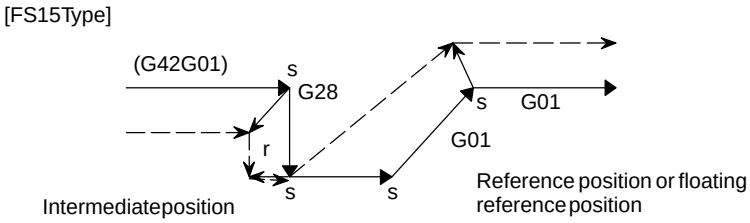

2 When G28, G30, or G30.1 is specified for a compensation axis in cutter compensation mode, the vectors along the other axes are also canceled. (This also applies when CCN (bit 2 of parameter No. 5003) is set to 1. When the FS15 type is used, only the vector along a specified axis is canceled. Note that the FS15 type cancellation differs from the actual FS15 specification in this point.)

Example: When CCN (bit 2 of parameter No.5003)=1

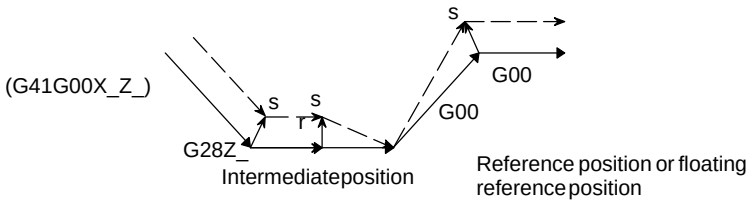

NOTE

1 When a G28, G30, or G30.1 command specifies an axis that is not in the cutter compensation C plane, a perpendicular vector is generated at the end point of the previous block, and the tool does not move. In the next block, offset mode is automatically resumed (in the same way as when two or more continuous blocks do not specify any move commands).

Example: When CCN (bit 2 of parameter No. 5003) = 1

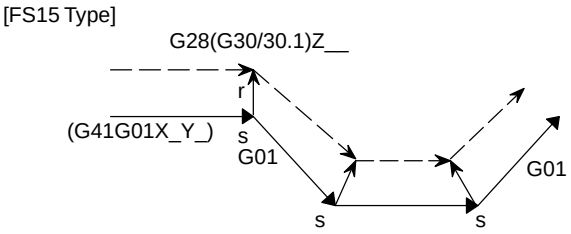

2 When a G28, G30, or G30.1 block is specified such that the block becomes a start–up block, a vector perpendicular to the move direction is generated at an intermediate position, then subsequently canceled at the reference position. In the next block, an intersection vector is generated.

Example: When CCN (bit 2 of parameter No.5003)=1

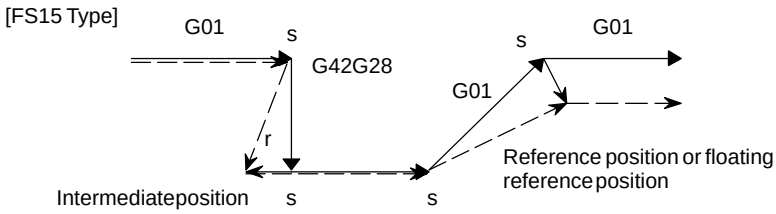

- **G29 command in cutter compensation C mode**

When G29 is specified in cutter compensation C mode, an operation of FS15 type is performed if CCN (bit 2 of parameter No. 5003) is set to 1.

This means that an intersection vector is generated in the previous block, and vector cancellation is performed when a movement to an intermediate position is performed. When movement from the intermediate position to the return position is performed, the vector is restored; an intersection vector is generated between the block and the next block.

(1) G29 specified in offset mode (with movement to both an intermediate position and reference position performed)

(a) For specification made immediately after automatic reference position return

When CCN (bit 2 of parameter No.5003)=0

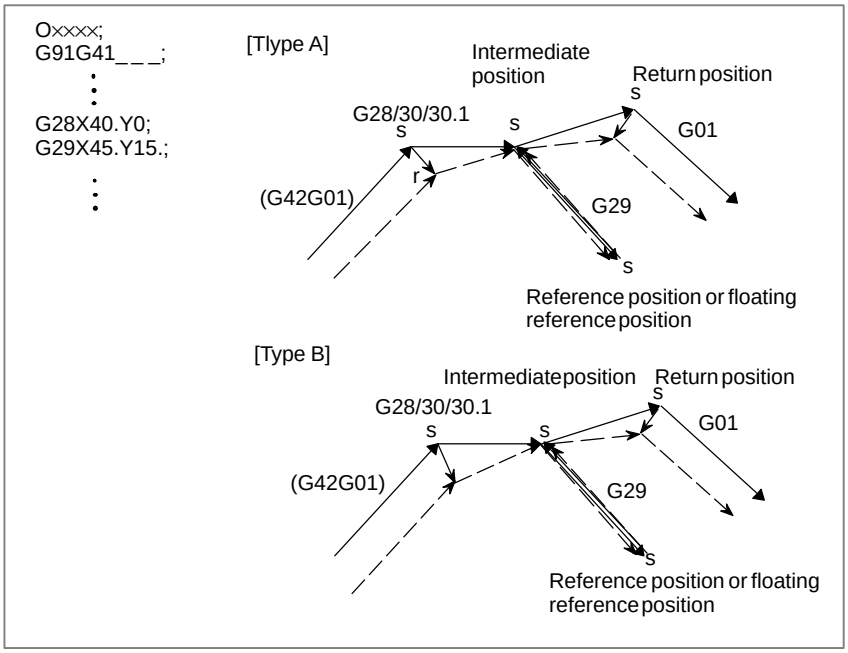

When CCN (bit 2 of parameter No.5003)=1

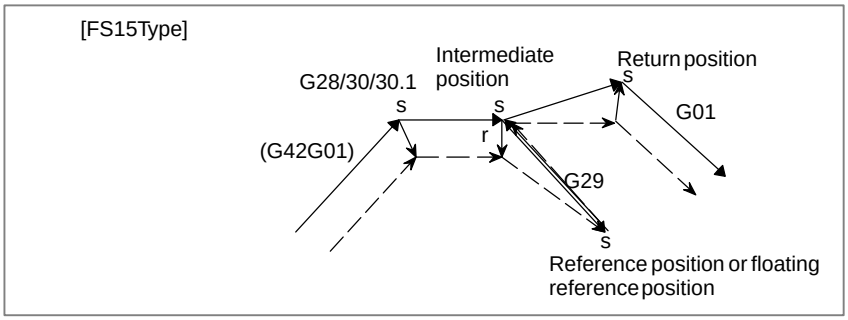

(b) For specification made other than immediately after automatic reference position return

When CCN (bit 2 of parameter No.5003)=0

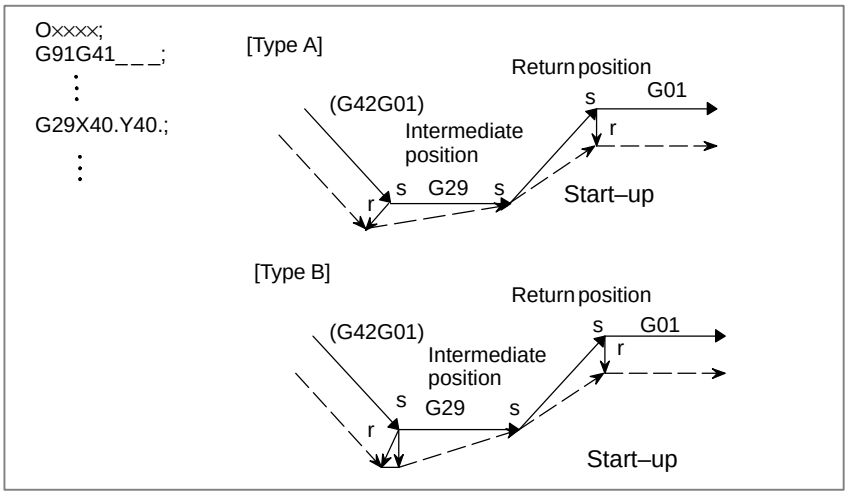

When CCN (bit 2 of parameter No.5003)=1

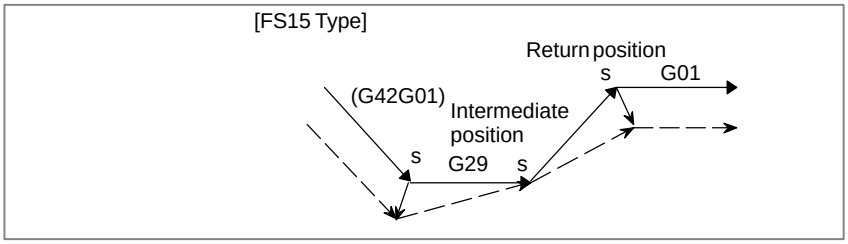

(2) G29 specified in offset mode (with movement to an intermediate position not performed)

(a) For specification made immediately after automatic reference position return

When CCN (bit 2 of parameter No.5003)=0

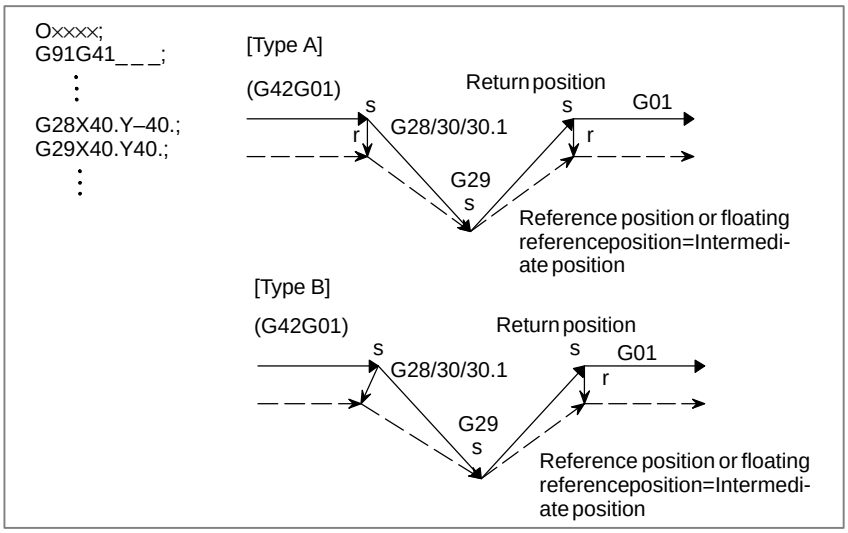

When CCN (bit 2 of parameter No.5003)=1

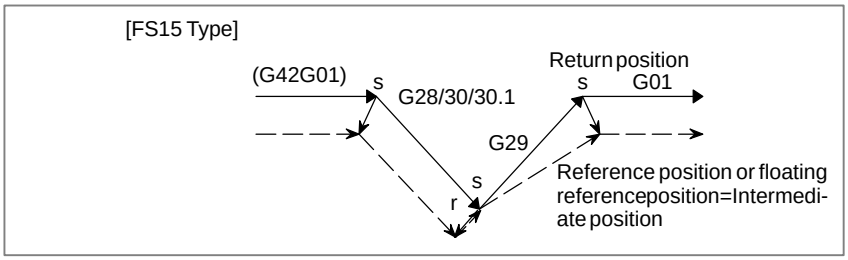

(b) For specification made other than immediately after automatic reference position return

When CCN (bit 2 of parameter No.5003)=0

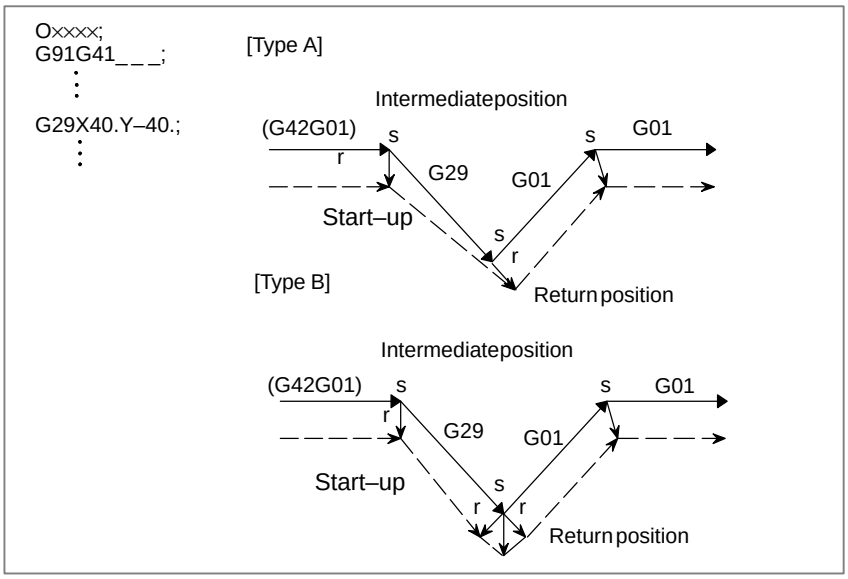

When CCN (bit 2 of parameter No.5003)=1

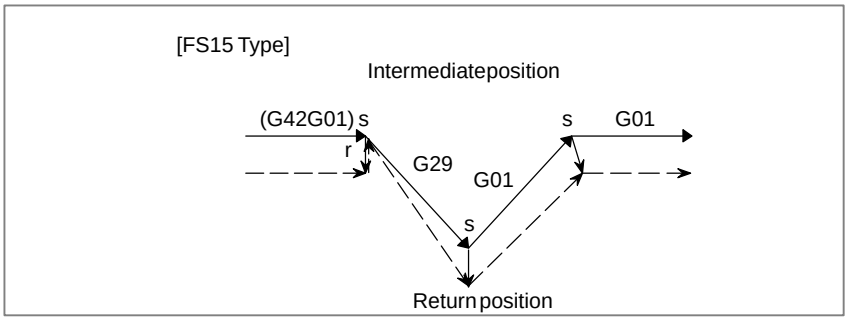

(3) G29 specified in offset mode (with movement to a reference position not performed)

(a) For specification made immediately after automatic reference position return

When CCN (bit 2 of parameter No.5003)=0

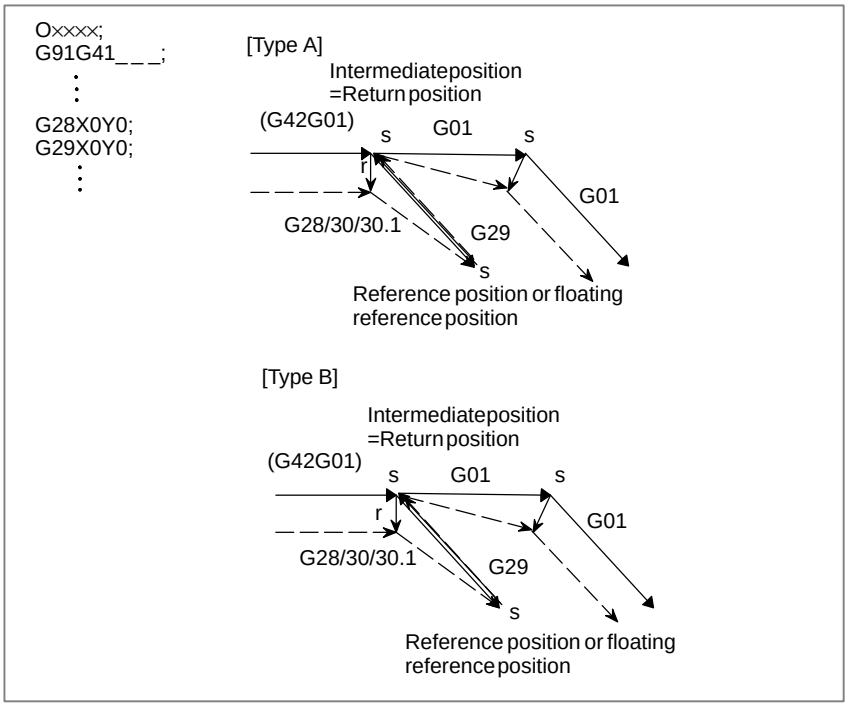

When CCN (bit 2 of parameter No.5003)=1

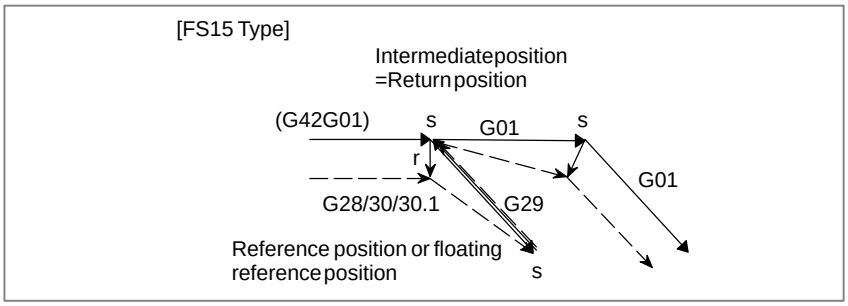

(b) For specification made other than immediately after automatic reference position return

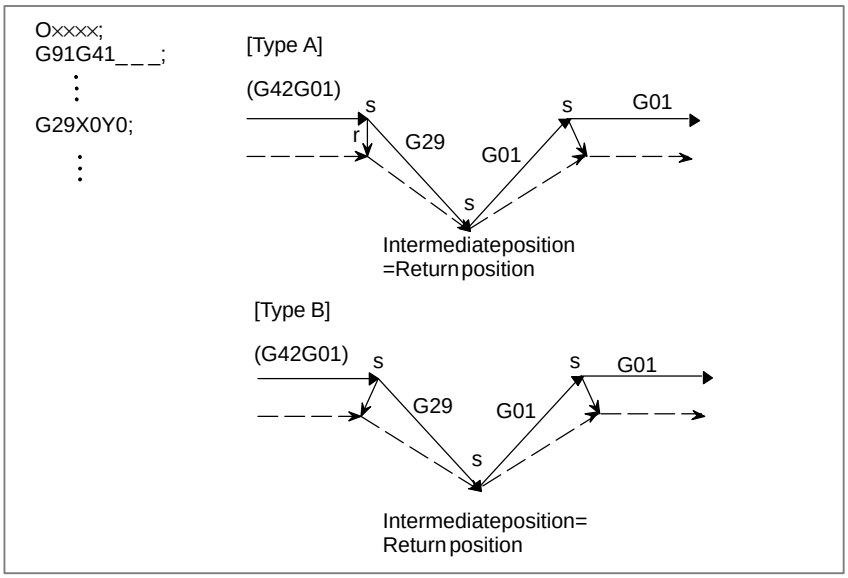

When CCN (bit 2 of parameter No.5003)=1

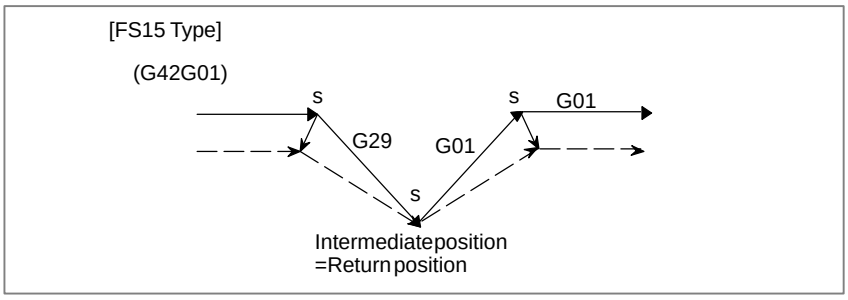

(4) G29 specified in offset mode (with movement to an intermediate position and reference position not performed)

(a) For specification made immediately after automatic reference position return

When CCN (bit 2 of parameter No.5003)=0

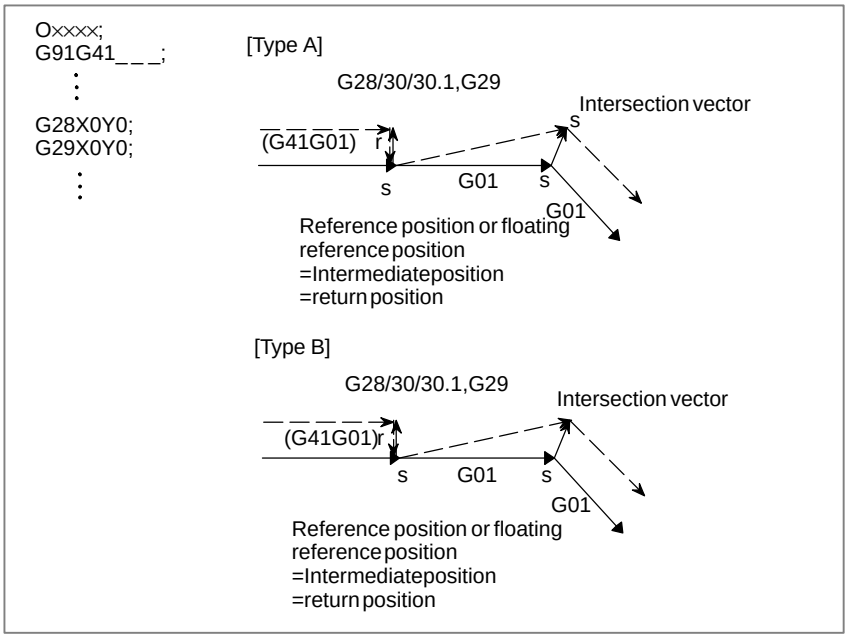

When CCN (bit 2 of parameter No.5003)=1

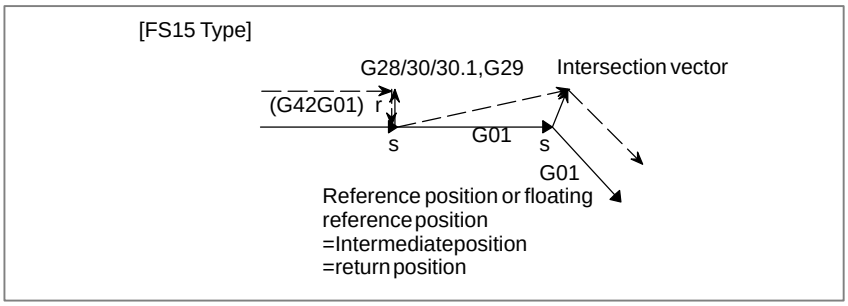

(b) For specification made other than immediately after automatic reference position return

When CCN (bit 2 of parameter No.5003)=0

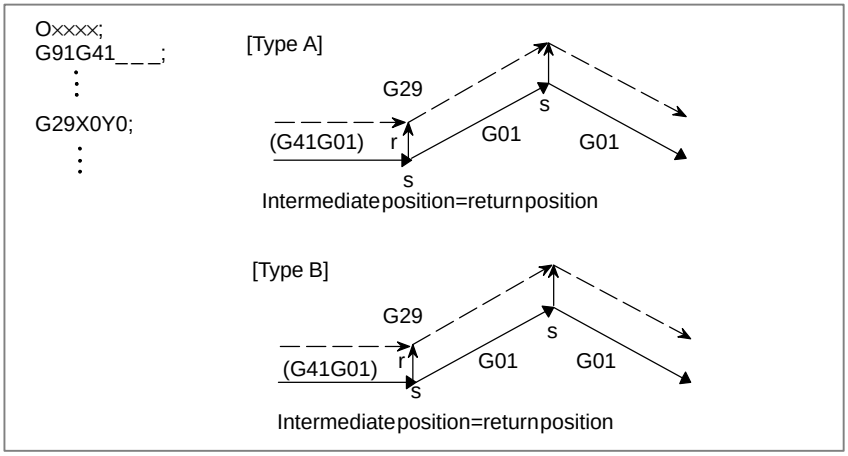

When CCN (bit 2 of parameter No.5003)=1

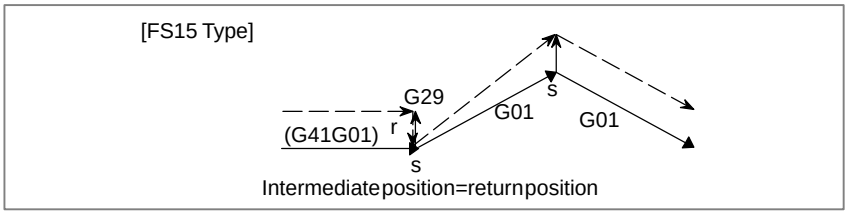

NOTE

When a G29 command is specified for an axis that is not in the cutter compensation C plane in cutter compensation C mode, a perpendicular vector is generated at the end point of the previous block, and the tool does not move. In the next block, an intersection vector is generated (in the same way as when two or more continuous blocks do not specify any move commands).

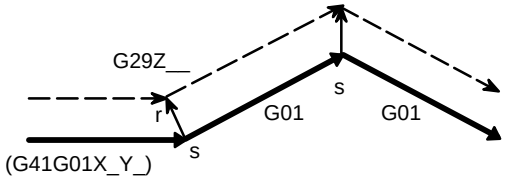

14.5.9 Corner Circular Interpolation (G39)

By specifying G39 in offset mode during cutter compensation C, corner circular interpolation can be performed. The radius of the corner circular interpolation equals the compensation value.

Format

In offset mode

G39 ;

or

G39 { **I_J_** / **I_K_** / **J_K_** } **;**

Explanations

- **Corner circular interpolation**

When the command indicated above is specified, corner circular interpolation in which the radius equals compensation value can be performed. G41 or G42 preceding the command determines whether the arc is clockwise or counterclockwise. G39 is a one–shot G code.

- **G39 without I, J, or K**

When G39; is programmed, the arc at the corner is formed so that the vector at the end point of the arc is perpendicular to the start point of the next block.

- **G39 with I, J, and K**

When G39 is specified with I, J, and K, the arc at the corner is formed so that the vector at the end point of the arc is perpendicular to the vector defined by the I, J, and K values.

Limitations

- **Move command**

In a block containing G39, no move command can be specified.

- **Non–move command**

Two or more consecutive non–move blocks must not be specified after a block containing G39 without I, J, or K. (A single block specifying a travel distance of zero is assumed to be two or more consecutive non–move blocks.) If the non–move blocks are specified, the offset vector is temporarily lost. Then, offset mode is automatically restored.

Examples

- **G39 without I, J, or K**

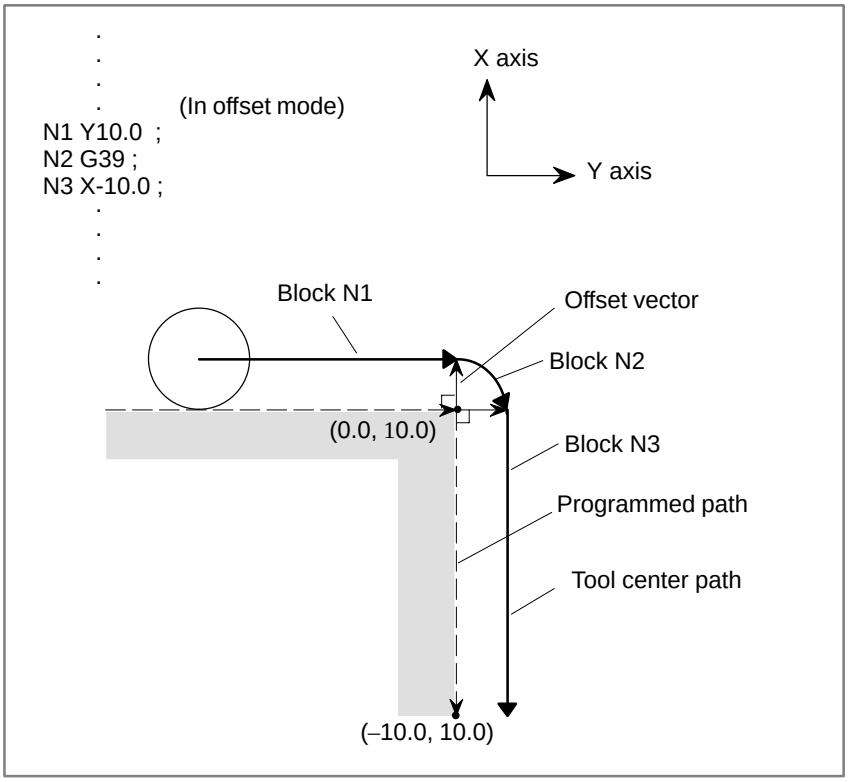

- **G39 with I, J, and K**

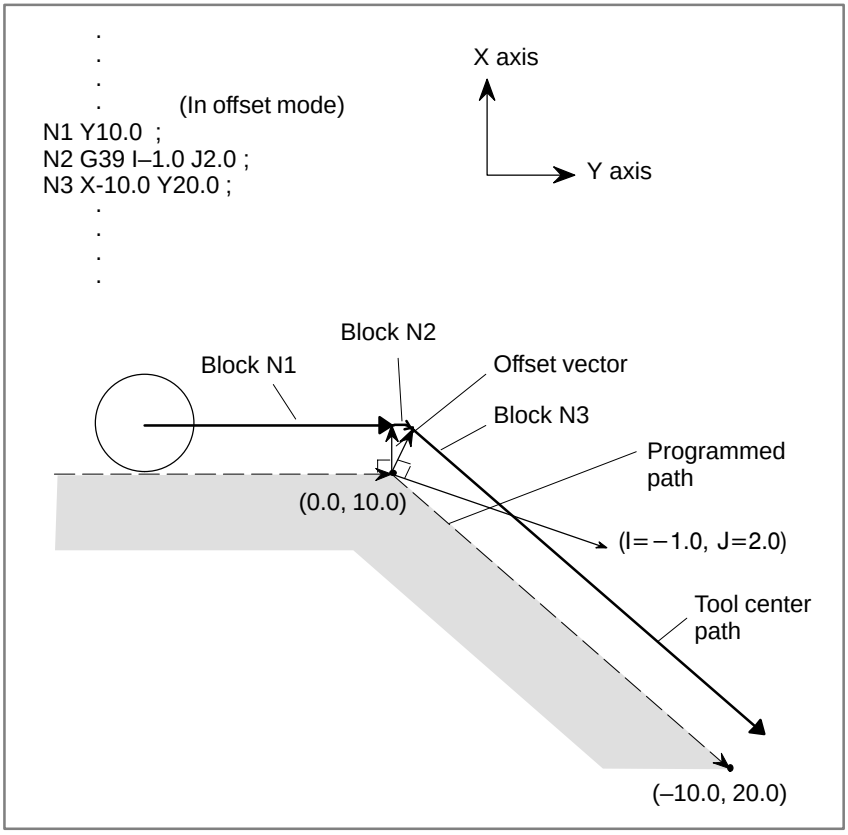

14.6 TOOL COMPENSATION VALUES, NUMBER OF COMPENSATION VALUES, AND ENTERING VALUES FROM THE PROGRAM (G10)

Tool compensation values include tool geometry compensation values and tool wear compensation (Fig. 14.6 (a)).

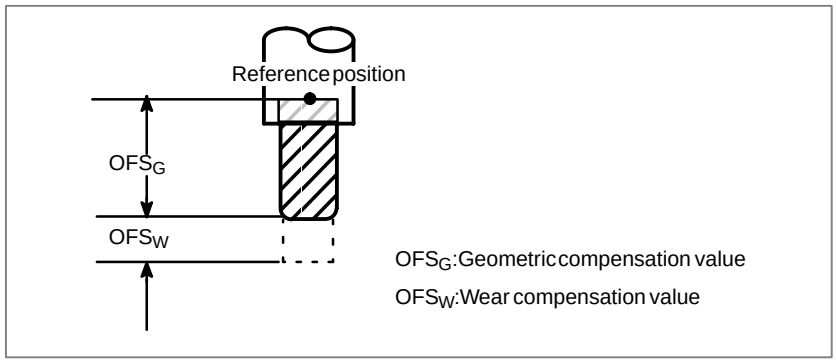

Fig. 14.6 (a) Geometric compensation and wear compensation

Tool compensation values can be entered into CNC memory from the CRT/MDI panel (see section III–11.4.1) or from a program.
A tool compensation value is selected from the CNC memory when the corresponding code is specified after address H or D in a program.
The value is used for tool length compensation, cutter compensation, or the tool offset.

Explanations

- **Valid range of tool compensation values**

Table 14.6 (a) shows the valid input range of tool compensation values.

Table 14.6 (a) The valid input range of tool compensation value

In-crement sys-tem	Geometric compensation value		Wear compensation value	
	Metric input	Inch input	Metric input	Inch input
IS–B	±999.999 mm	±99.9999inch	±99.999 mm	±9.9999 inch
IS–C	±999.9999 mm	±99.99999inch	±99.9999 mm	±9.99999 inch

- **Number of tool compensation values and the addresses to be specified**

The memory can hold 32, 64, 99, 200, or 400, tool compensation values (option).
Address D or H is used in the program. The address used depends on which of the following functions is used: tool length compensation(see II–14.1), tool offset (see II–14.3), cutter compensation B (see II–NO TAG), or cutter compensation C (see II–14.5).
The range of the number that comes after the address (D or H) depens on the number of tool compensation values : 0 to 32, 0 to 64, 0 to 99, 0 to 200, or 0 to 400.

- **Tool compensation memory and the tool compensation value to be entered**

Tool compensation memory A, B, or C can be used.
The tool compensation memory determines the tool compensation values that are entered (set) (Table 14.6 (b)).

Table14.6 (b) Setting contents tool compensation memory and tool compensation value

Tool compensation value	Tool compensation memory A	Tool compensation memory B	Tool compensation memory C
Tool geometry compensation value for address D	Set tool geometry + tool wear compensation values for addresses D and H (values can be specified with either address).	Set tool geometry compensation values for addresses D and H (values can be specified with either address).	set
Tool geometry compensation value for address H			set
Tool wear compensation for value address D		Set tool wear compensation values for addresses D and H (values can be specified with either address).	set
Tool wear compensation value for address H			set

Format

The programming format depends on which tool compensation memory is used.

- **Input of tool compensation value by programing**

Table14.6 (c) Setting range of Tool compensation memory and Tool compensation value

Variety of tool compensation memory		Format
A	Tool compensation value (geometry compensation value+wear compensation value)	G10L11P_R_;
B	Geometry compensation value	G10L10P_R_;
	Wear compensation value	G10L11P_R_;
C	Geometry compensation value for H code	G10L10P_R_;
	Geometry compensation value for D code	G10L12P_R_;
	Wear compensation value for H code	G10L11P_R_;
	Wear compensation value for D code	G10L13P_R_;

P : Number of tool compensation
R : Tool compensation value in the absolute command(G90) mode
Value to be added to the specified tool compensation value in the incremental command(G91) mode (the sum is also a tool compensation value.)

NOTE
To provide compatibility with the format of older CNC programs, the system allows L1 to be specified instead of L11.

14.7 SCALING (G50,G51)

A programmed figure can be magnified or reduced (scaling).
The dimensions specified with X_, Y_, and Z_ can each be scaled up or down with the same or different rates of magnification.
The magnification rate can be specified in the program.
Unless specified in the program, the magnification rate specified in the parameter is applied.

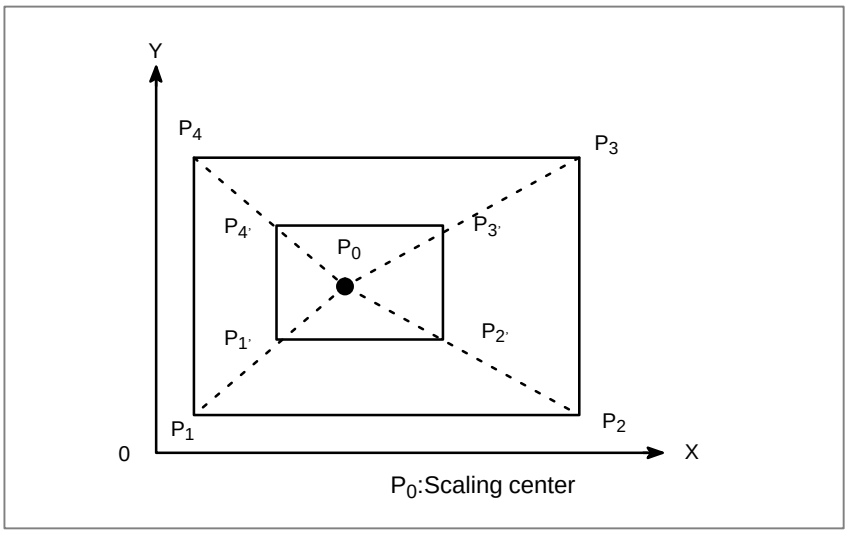

Fig. 14.7 (a) Scaling(P_1 P_2 P_3 P_4→P_1',P_2',P_3',P_4')

Format

SCALING UP OR DOWN ALONG ALL AXES AT THE SAME RATE OF MAGNIFICATION	
Format	Meaning of command
G51X_Y_Z_P_ ; Scaling start ⋮ } Scaling is effective. (Scaling mode) **G50 ;** Scaling cancel	**X_Y_Z–_** : Absolute command for center coordinate value of scaling **P_** : Scaling magnification

Scaling up or down along each axes at a different rate of magnification (mirror image)	
Format	Meaning of command
G51_X_Y_Z_I_J_K_;Scaling start ⋮ } Scaling is effective. (Scaling mode) **G50** Scaling cancel	**X_Y_Z_** Absolute command for center coordinate value of scaling **I_J_K_** Scaling magnification for X axis Y axis and Z axis respectively

WARNING
Specify G51 in a separate block. After the figure is enlarged or reduced, specify G50 to cancel the scaling mode.

Explanations

- **Scaling up or down along all axes at the same rate of magnification**

Least input increment of scaling magnification is: 0.001 or 0.00001 It is depended on parameter SCR (No. 5400#7) which value is selected. Then, set parameter SCLx (No.5401#0) that enables scaling for each axis. If scaling P is not specified on the block of scaling (G51X_Y_Z_P_ ;), the scaling magnification set to parameter (No. 5411) is applicable. If X,Y,Z are omitted, the tool position where the G51 command was specified serves as the scaling center.

- **Scaling of each axis, programmable mirror image (negative magnification)**

Each axis can be scaled by different magnifications. Also when a negative magnification is specified, a mirror image is applied. First of all, set a parameter XSC (No. 5400#6) which validates each axis scaling (mirror image).
Then, set parameter SCLx (No. 5401#0) to enable scaling along each axis.
Least input increment of scaling magnification of each axis (I, J, K) is 0.001 or 0.00001(set parameter SCR (No. 5400#7)).
Magnification is set to parameter 5421 within the range +0.00001 to +9.99999 or +0.001 to +999.999
If a negative value is set, mirror image is effected.
If magnification I, J or K is not commanded, a magnification value set to parameter (No. 5421) is effective. However, a value other than 0 must be set to the parameter.

NOTE
Decimal point programming can not be used to specify the rate of magnification (I, J, K).

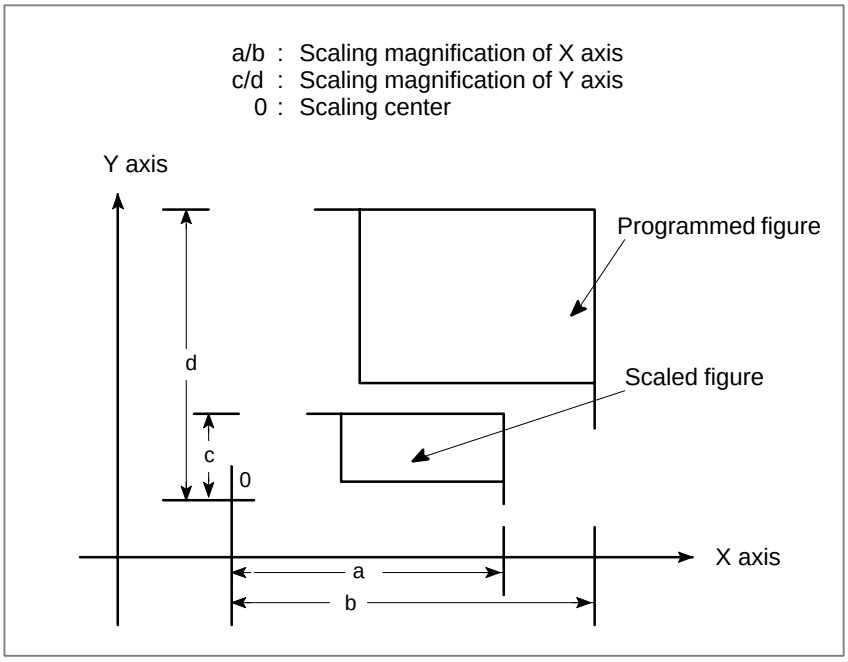

Fig14.7 (b) Scaling of each axis

- **Scaling of circular interpolation**

Even if different magnifications are applie to each axis in circular interpolation, the tool will not trace an ellipse.
When different magnifications are applied to axes and a circular interpolation is specified with radius R, it becomes as following figure 14.7 (c) (in the example shown below, a magnification of 2 is applied to the X–component and a magnification of 1 is applied to the Y–component.).

```
G90 G00 X0.0 Y100.0 ;
G51 X0.0 Y0.0 Z0.0 I2000 J1000;
G02 X100.0 Y0.0 R100.0 F500 ;

Above commands are equivalent to the following command:

G90 G00 X0.0 Y100.0 Z0.0 ;
G02 X200.0 Y0.0 R200.0 F500 ;

Magnification of radius R depends on I, or J whichever is larger.
```

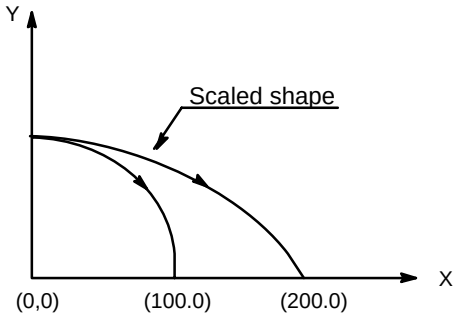

Fig. 14.7 (c) Scaling for circular interpolation1

When different magnifications are applied to axes and a circular interpolation is specified with I, J and K, it becomes as following figure 14.7 (d) (In the example shown below, a magnification of 2 is applied to the X–component and a magnification of 1 is applied to the Y–component.).

```
G90 G00 X0.0 Y0.0 ;
G51 X0.0 Y0.0 I2000 J1000;
G02 X100.0 Y0.0 I0.0 J–100.0 F500 ;

Above commands are equivalent to the following commands.

G90 G00 X0.0 Y100.0;
G02 X200.0 Y0.0 I0.0 J–100.0 F500 ;

In this case, the end point does not beet the radius, a linear section is
included.
```

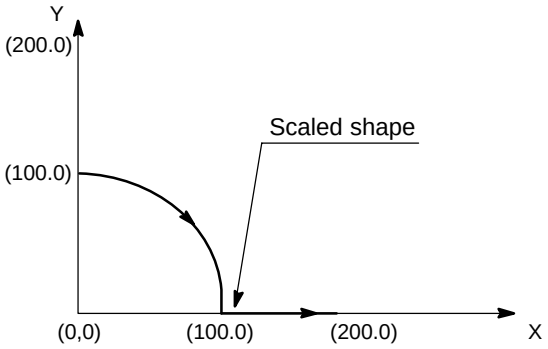

Fig. 14.7 (d) Scaling for circular interpolation 2

- **Tool compensation**

This scaling is not applicable to cutter compensation values, tool length offset values, and tool offset values (Fig. 14.7 (e)).

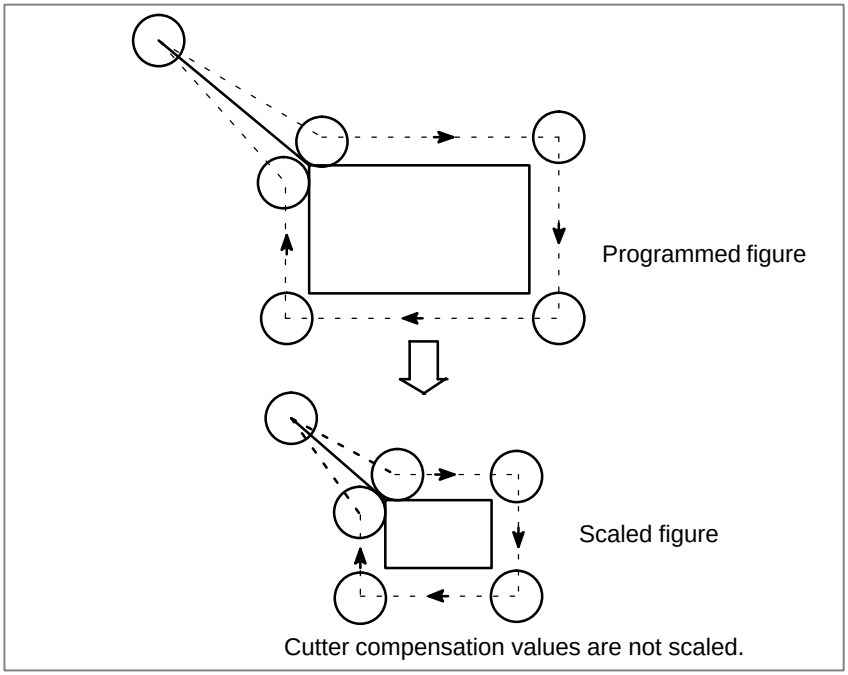

Fig. 14.7 (e) Scaling during cutter compensation

- **Invalid scaling**

Scaling is not applicable to the Z–axis movement in case of the following canned cycle.
·Cut–in value Q and retraction value d of peck drilling cycle (G83, G73).
·Fine boring cycle (G76)
·Shift value Q of X and Y axes in back boring cycle (G87).
In manual operation, the travel distance cannot be increased or decreased using the scaling function.

- **Commands related to reference position return and coordinate system**

In scaling mode, G28, G30, or commands related to the coordinate system (G52 to G59) must not be specified. When any of these G codes is necessary, specify it after canceling scaling mode.

WARNING
1 If a parameter setting value is employed as a scaling magnification without specifying P, the setting value at G51 command time is employed as the scaling magnification, and a!change of this value, if any, is not effective.
2 Before specifying the G code for reference position return (G27, G28, G29, G30) or!coordinate system setting (G92), cancel the scaling mode.
3 If scaling results are rounded by counting fractions of 5 and over as a unit and disregarding the rest, the move amount may become zero. In this case, the block is!regarded as a no movement block, and therefore, it may affect the tool movement by!cutter compensation C. See the description of blocks that do not move the tool at II–14.5.3.

NOTE
1 The position display represents the coordinate value after scaling.
2 When a mirror image was applied to one axis of the specified plane, the following!results:
(1)Circular command Direction of rotation is reversed.
(2)Cutter compensation C . . . . . Offset direction is reversed.
(3)Coordinate system rotation . . . . . Rotation angle is reversed.

Examples

Example of a mirror image program
Subprogram
```
O9000 ;
G00 G90 X60.0 Y60.0;
G01 X100.0 F100;
G01 Y100.0;
G01 X60.0 Y60.0;
M99;
```
Main program
```
N10 G00 G90;
N20M98P9000;
N30 G51 X50.0 Y50.0 I–1000 J1000;
N40 M98 P9000;
N50 G51 X50.0 Y50.0 I–1000 J–1000;
N60 M98 P9000;
N70 G51 X50.0 Y50.0 I1000 J–1000
N80 M98 P9000;
N90 G50;
```

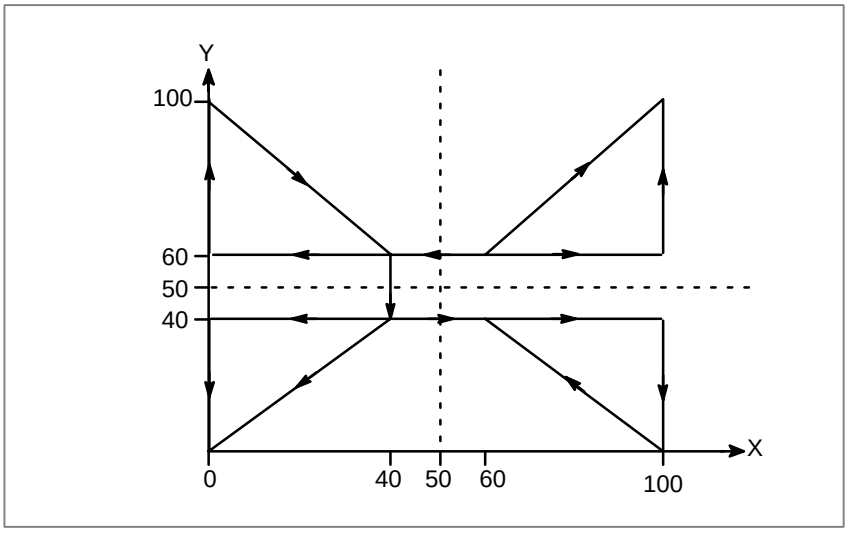

Fig. 14.7 (f) Example of a mirror image program

14.8 COORDINATE SYSTEM ROTATION (G68, G69)

A programmed shape can be rotated. By using this function it becomes possible, for example, to modify a program using a rotation command when a workpiece has been placed with some angle rotated from the programmed position on the machine.Further, when there is a pattern comprising some identical shapes in the positions rotated from a shape, the time required for programming and the length of the program can be reduced by preparing a subprogram of the shape and calling it after rotation.

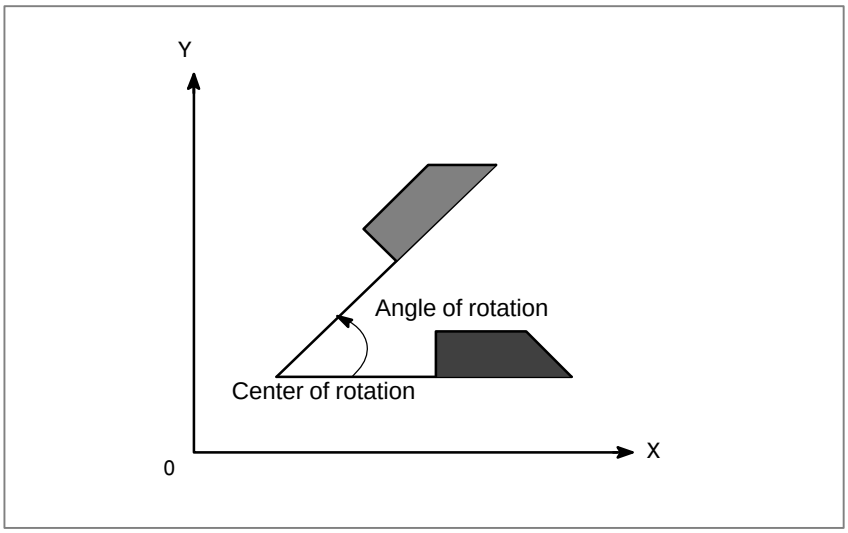

Fig. 14.8 (a) Coordinate system rotation

Format

Format
{**G17** / **G18** / **G19**} **G68** α_β_**R**_ ; Start rotation of a coordinate system. Coordinate system rotation mode (The coordinate system is rotated.) **G69 ;** Coordinate system rotation cancel command
Meaning of command
G17 (G18 or G19) : Select the plane in which contains the figure to be rotated. α_β_ Absolute command for two of the x_,y_,and Z_ axes that correspond to the current plane selected by a command (G17, G18, or G19). The command specifies the coordinates of the center of rotation for the values specified subsequent to G68. **R**_ Angular displacement with a positive value indicates counter clockwise rotation. Bit 0 of parameter 5400 selects whether the specified angular displacement is alwarys considered an absolute value or is considered an absolute or incremental value depending on the specified G code (G90 or G91). **Least input increment**: 0.001 deg **Valid data range** : –360,000 A360,000

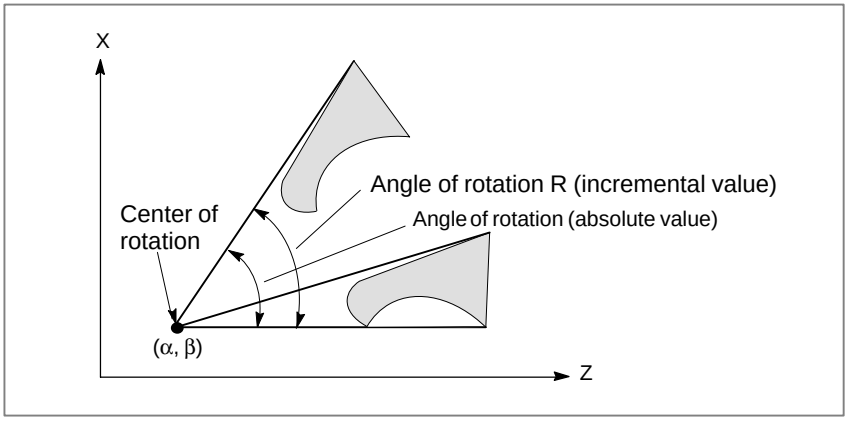

Fig. 14.8 (b) Coordinate system rotation

NOTE
When a decimal fraction is used to specify angular displacement (R_), the 1's digit corresponds to degree units.

Explanations

- **G code for selecting a plane: G17,G18 or G19**

The G code for selecting a plane (G17,G18,or G19) can be specified before the block containing the G code for coordinate system rotation (G68). G17, G18 or G19 must not be designated in the mode of coordinate system rotation.

- **Incremental command in coordinate system rotation mode**

The center of rotation for an incremental command programmed after G68 but before an absolute command is the tool position when G68 was programmed (Fig. 14.8 (c)).

- **Center of rotation**

When α_β_ is not programmed, the tool position when G68 was programmed is assumed as the center of rotation.

- **Angular displacement**

When R_ is not specified, the value specified in parameter 5410 is assumed as the angular displacement.

- **Coordinate system rotation cancel command**

The G code used to cancel coordinate system rotation (G69) may be specified in a block in which another command is specified.

- **Tool compensation**

Cutter compensation, tool length compensation, tool offset, and other compensation operations are executed after the coordinate system is rotated.

Limitations

- **Commands related to reference position return and the coordinate system**

In coordinate system rotation mode, G codes related to reference position return (G27, G28, G29, G30, etc.) and those for changing the coordinate system (G52 to G59, G92, etc.) must not be specified. If any of these G codes is necessary, specify it only after canceling coordinate system rotation mode.

- **Incremental command**

The first move command after the coordinate system rotation cancel command (G69) must be specified with absolute values. If an incremental move command is specified, correct movement will not be performed.

Explanations

Absolute/Incremental position commands

```
N1 G92 X – 5000 Y – 5000 G69 G17 ;
N2 G68 X7000 Y3000 R60000 ;
N3 G90 G01 X0 Y0 F200 ;
  (G91X5000Y5000)
N4 G91 X10000 ;
N5 G02 Y10000 R10000 ;
N6 G03 X – 10000 I – 5000 J – 5000 ;
N7 G01 Y – 10000 ;
N8 G69 G90 X – 5000 Y – 5000 M02 ;
```

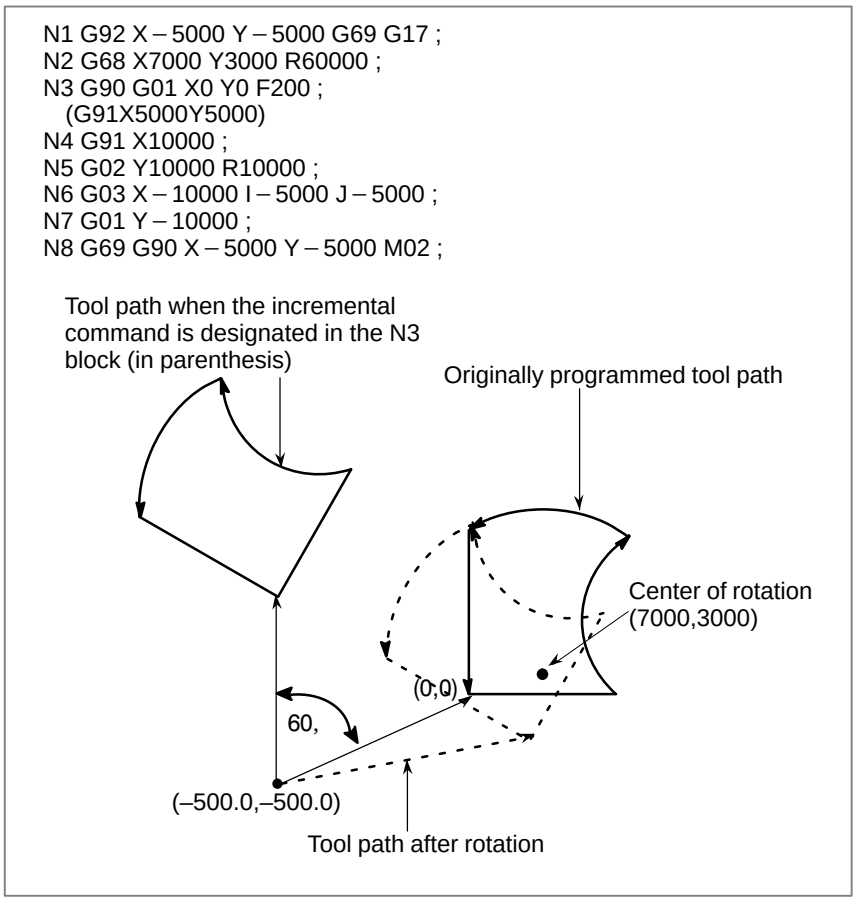

Fig. 14.8 (c) Absolute/incremental command during coordinate system rotation

Examples

- **Cutter compensation C and coordinate system rotation**

It is possible to specify G68 and G69 in cutter compensation C mode. The rotation plane must coincide with the plane of cutter compensation C.

```
N1 G92 X0 Y0 G69 G01 ;
N2 G42 G90 X1000 Y1000 F1000 D01 ;
N3 G68 R – 30000 ;
N4 G91 X2000 ;
N5 G03 Y1000 R1000 J500 ;
N6 G01 X – 2000 ;
N7 Y – 1000 ;
N8 G69 G40 G90 X0 Y0 M30 ;
```

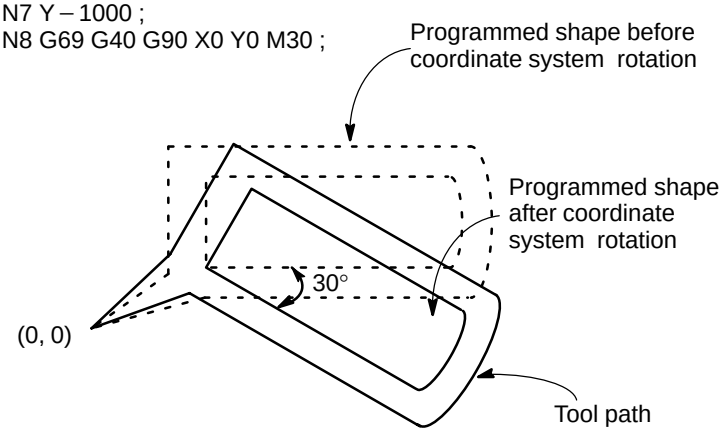

Fig. 14.8 (d) Cutter compensation C and coordinate system rotation

- **Scaling and coordinate system rotation**

If a coordinate system rotation command is executed in the scaling mode (G51 mode), the coordinate value (α,β,) of the rotation center will also be scaled, but not the rotation angle (R). When a move command is issued, the scaling is applied first and then the coordinates are rotated.
A coordinate system rotation command (G68) should not be issued in cutter compensation C mode (G41, G42) on scaling mode (G51). The coordinate system rotation command should always be specified prior to setting the cutter compensation C mode.

1. When the system is not in cutter compensation mode C, specify the commands in the following order :

```
G51 ;   scaling mode start
G68 ;   coordinate system rotation mode start
  :
G69 ;   coordinate system rotation mode cancel
G50 ;   scaling mode cancel
```

2. When the system is in cutter compensation model C, specify the commands in the following order (Fig.14.8(e)) :
   (cutter compensation C cancel)
   G51 ; scaling mode start
   G68 ; coordinate system rotation start
   :
   G41 ; cutter compensation C mode start
   :

```
G92 X0 Y0 ;
G51 X300.0 Y150.0 P500 ;
G68 X200.0 Y100.0 R45.0 ;
G01 X400.0 Y100.0 ;
Y100.0 ;
X–200.0 ;
Y–100.0 ;
X200.0 ;
```

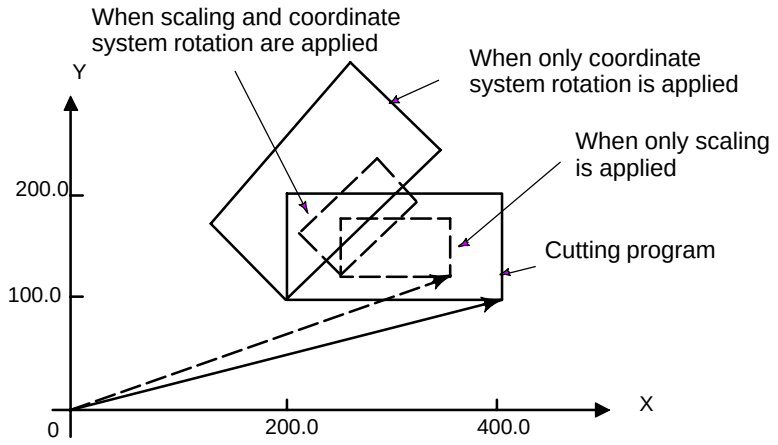

Fig. 14.8 (e) Scaling and coordinate system rotation in cutter compensation C mode

- **Repetitive commands for coordinate system rotation**

It is possible to store one program as a subprogram and recall subprogram by changing the angle.

Sample program for when the RIN bit (bit 0 of parameter 5400) is set to 1.
The specified angular displacement is treated as an absolute or incremental value depending on the specified G code (G90 or G91).

```
  G92 X0 Y0 G69 G17;
  G01 F200 H01 ;
  M98 P2100 ;
  M98 P072200 ;
  G00 G90 X0 Y0 M30 ;

O 2200 G68 X0 Y0 G91 R45.0 ;
  G90 M98 P2100 ;
  M99 ;

O 2100 G90 G01 G42 X0 Y–10.0 ;
  X4.142 ;
  X7.071 Y–7.071 ;
  G40 ;
  M99 ;
```

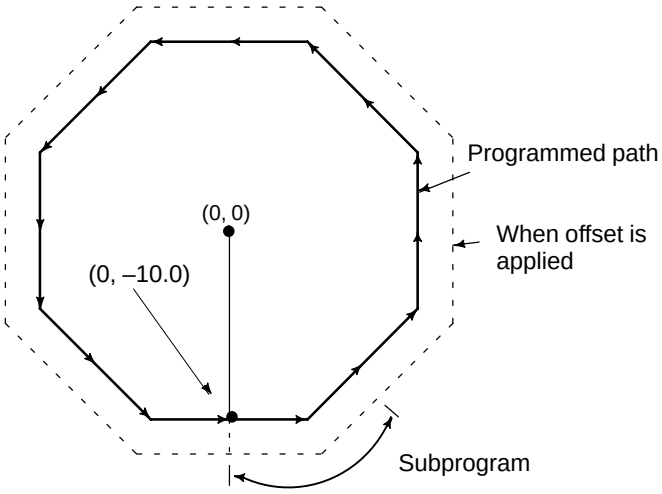

Fig. 14.8 (f) Coordinate system rotation command

14.9 NORMAL DIRECTION CONTROL (G40.1, G41.1, G42.1 OR G150, G151, G152)

When a tool with a rotation axis (C–axis) is moved in the XY plane during cutting, the normal direction control function can control the tool so that the C–axis is always perpendicular to the tool path (Fig. 14.9 (a)).

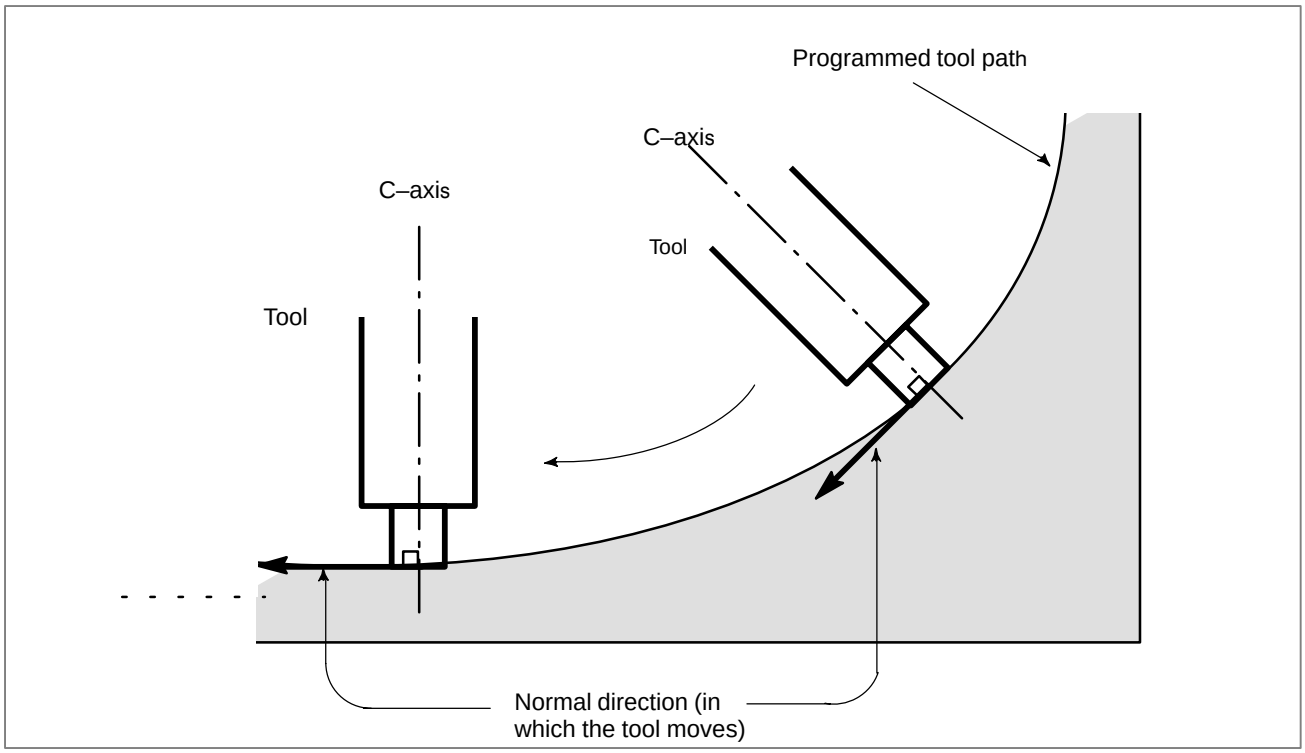

Fig. 14.9 (a) Sample Movement of the tool

Format

G code	Function	Explanation
G41.1 or **G151**	Normal direction control left	If the workpiece is to the right of the tool path looking toward the direction in which the tool advances, the normal direction control left (G41.1 or G151) function is specified. After G41.1 (or G151) or G42.1 (or G152) is specified, the normal direction control function is enabled (normal direction control mode). When G40.1 (or G150) is specified, the normal direction control mode is canceled.
G42.1 or **G152**	Normal direction control right	
G40.1 or **G150**	Normal direction control cancel	

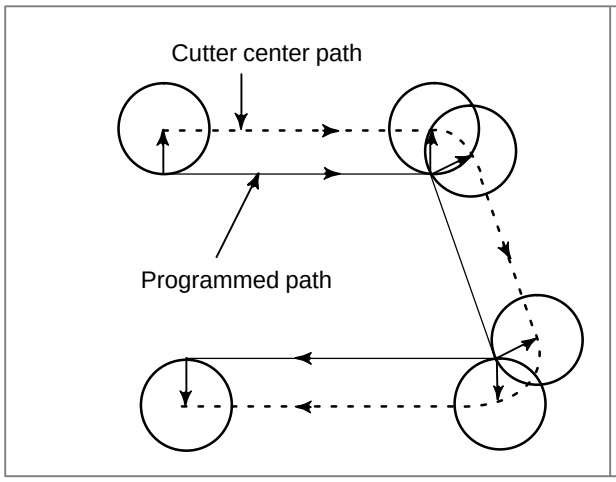

Fig. 14.9 (b) Normal direction control left (G41.1)

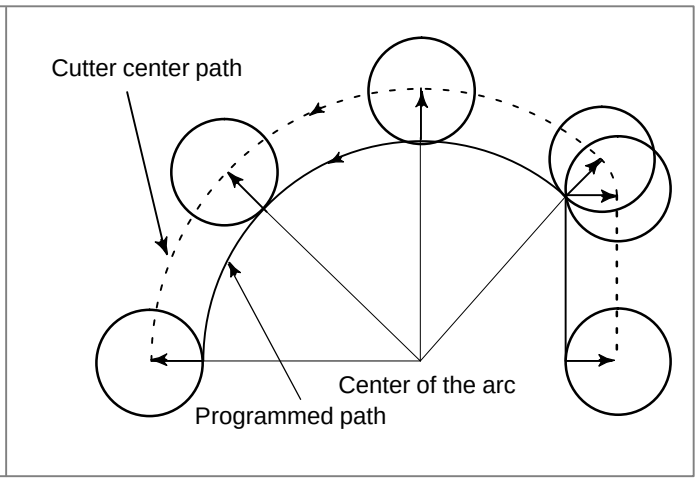

Fig. 14.9 (c) Normal direction control right (G42.1)

Explanations

- **Angle of the C axis**

When viewed from the center of rotation around the C–axis, the angular displacement about the C–axis is determined as shown in Fig. 14.9 (d). The positive side of the X–axis is assumed to be 0 , the positive side of the Y–axis is 90°, the negative side of the X–axis is 180°, and the negative side of the Y–axis is 270°.

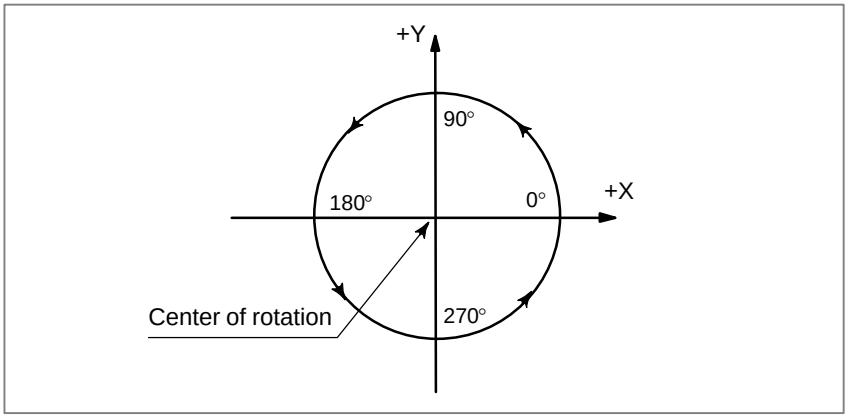

Fig. 14.9 (d) Angle of the C axis

- **Normal direction control of the C axis**

When the cancel mode is switched to the normal direction control mode, the C–axis becomes perpendicular to the tool path at the beginning of the block containing G41.1 or G42.1.
In the interface between blocks in the normal direction control mode, a command to move the tool is automatically inserted so that the C–axis becomes perpendicular to the tool path at the beginning of each block. The tool is first oriented so that the C–axis becomes perpendicular to the tool path specified by the move command, then it is moved along the X– and Y axes.
In the cutter compensation mode, the tool is oriented so that the C–axis becomes perpendicular to the tool path created after compensation.
In single–block operation, the tool is not stopped between a command for rotation of the tool and a command for movement along the X– and Y–axes. A single–block stop always occurs after the tool is moved along the X– and Y–axes.

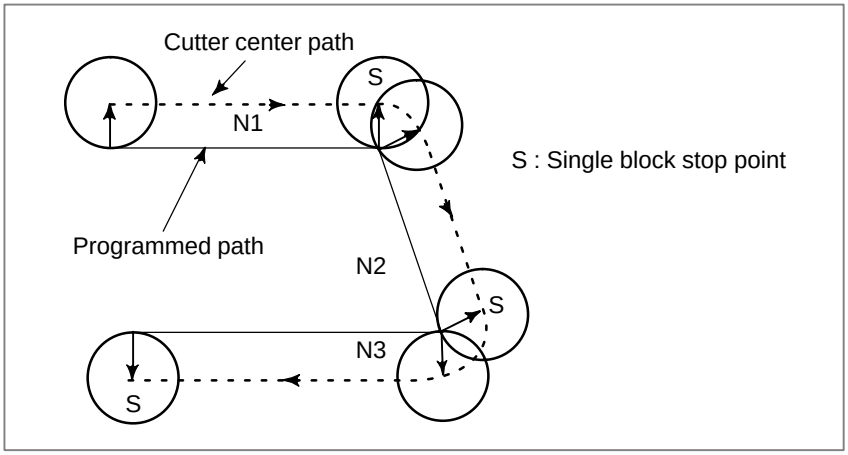

Fig. 14.9 (e) Point at which a Single–Block Stop Occurs in the Normal Direction Control Mode

Before circular interpolation is started, the C–axis is rotated so that the C–axis becomes normal to the arc at the start point. During circular interpolation, the tool is controlled so that the C–axis is always perpendicular to the tool path determined by circular interpolation.

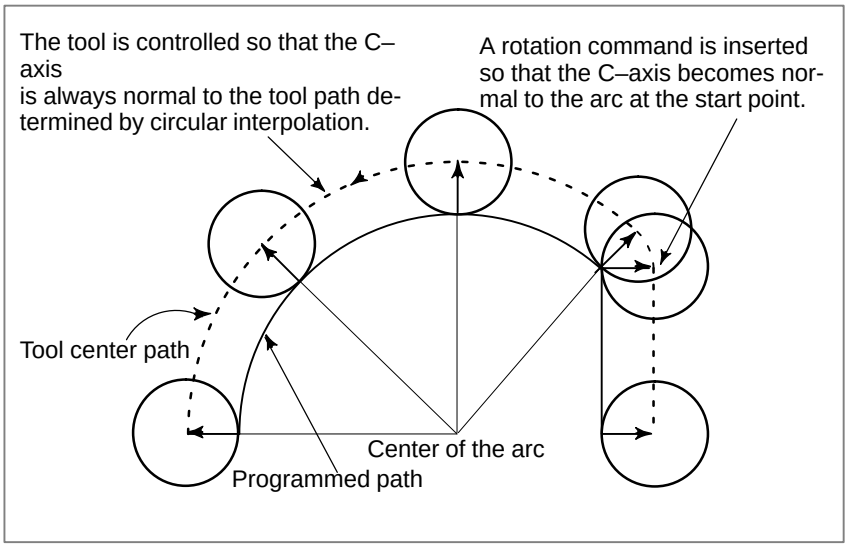

Fig. 14.9 (f) Normal direction control of the circular interpolation

NOTE

During normal direction control, the C axis always rotates through an angle less than 180 deg. I.e., it rotates in whichever direction provides the shorter route.

- **C axis feedrate**

Movement of the tool inserted at the beginning of each block is executed at the feedrate set in parameter 5481. If dry run mode is on at that time, the dry run feedrate is applied. If the tool is to be moved along the X–and Y–axes in rapid traverse (G00) mode, the rapid traverse feedrate is applied.

The federate of the C axis during circular interpolation is defined by the following formula.

$$F\times \frac{\text{Amount of movement of the C axis (deg)}}{\text{Length of arc (mm or inch)}} \text{(deg/min)}$$

F : Federate (mm/min or inch/min) specified by the corresponding block of the arc

Amount of movement of the C axis : The difference in angles at the beginning and the end of the block.

NOTE
If the federate of the C axis exceeds the maximum cutting speed of the C axis specified to parameter No. 1422, the federate of each of the other axes is clamped to keep the federate of the C axis below the maximum cutting speed of the C axis.

- **Normal direction control axis**

A C–axis to which normal–direction control is applied can be assigned to any axis with parameter No. 5480.

- **Angle for which figure insertion is ignored**

When the rotation angle to be inserted, calculated by normal–direction control, is smaller than the value set with parameter No. 5482, the corresponding rotation block is not inserted for the axis to which normal–direction control is applied. This ignored rotation angle is added to the next rotation angle to be inserted, the total angle being subject to the same check at the next block.
If an angle of 360 degrees or more is specified, the corresponding rotation block is not inserted.
If an angle of 180 degrees or more is specified in a block other than that for circular interpolation with a C–axis rotation angle of 180 degrees or more, the corresponding rotation block is not inserted.

- **Movement for which arc insertion is ignored**

Specify the maximum distance for which machining is performed with the same normal direction as that of the preceding block.

- **Linear movement**

  When distance N2, shown below, is smaller than the set value, machining for block N2 is performed using the same direction as that for block N1.

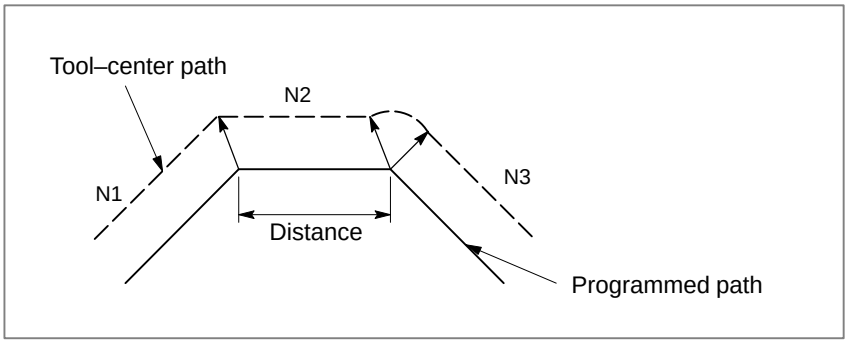

- **Circular movement**

  When the diameter of block N2, shown below, is smaller than the set value, machining for block N2 is performed using the same normal direction as that for block N1. The orientation of the axis to which normal–direction control is applied, relative to the normal direction of block N2, does not change as machining proceeds along the arc.

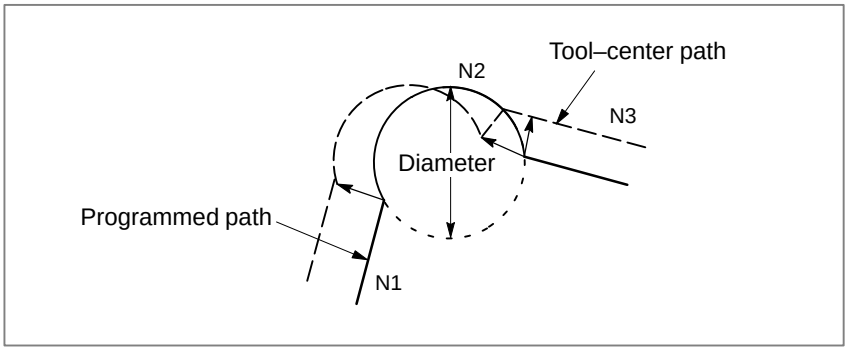

NOTE

1 Do not specify any command to the C axis during normal direction control. Any command specified at this time is ignored.
2 Before processing starts, it is necessary to correlate the workpiece coordinate of the C axis with the actual position of the C axis on the machine using the coordinate system setting (G92) or the like.
3 The helical cutting option is required to use this function. Helical cutting cannot be specified in the normal direction control mode.
4 Normal direction control cannot be performed by the G53 move command.
5 The C–axis must be a rotation axis.

14.10 PROGRAMMABLE MIRROR IMAGE (G50.1, G51.1)

A mirror image of a programmed command can be produced with respect to a programmed axis of symmetry (Fig. 14.10 (a)).

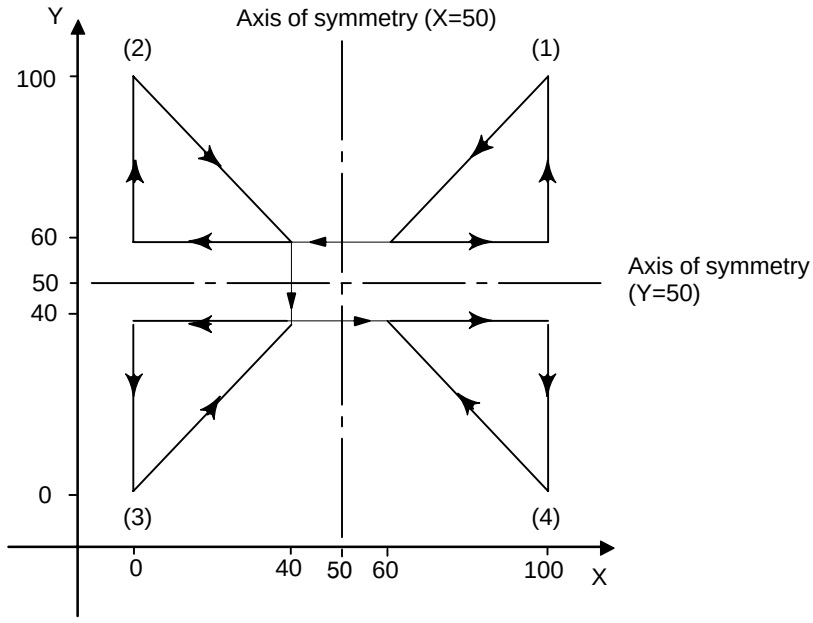

(1) Original image of a programmed command

(2) Image symmetrical about a line parallel to the Y–axis and crossing the X–axis at 50

(3) Image symmetrical about point (50, 50)

(4) Image symmetrical about a line parallel to the X–axis and crossing the Y–axis at 50

Fig. 14.10 (a) Programmable Mirror image

Format

G51.1 IP_ **;** Setting a programmable image

A mirror image of a command specified in these blocks is produced with respect to the axis of symmetry specified by G51.1IP _;.

G50.1 IP_ **;** Canceling a programmable mirror image

IP_ : Point (position) and axis of symmetry for producing a mirror image when specified with G51.1.
Axis of symmetry for producing a mirror image when specified with G50.1. Point of symmetry is not speci–fied.

Explanations

- **Mirror image by setting**

If the programmable mirror image function is specified when the command for producing a mirror image is also selected by a CNC external switch or CNC setting (see III–4.7), the programmable mirror image function is executed first.

- **Mirror image on a single axis in a specified plane**

Applying a mirror image to one of the axes on a specified plane changes the following commands as follows :

Command	Explanation
Circular command	G02 and G03 are interchanged.
Cutter compensation	G41 and G42 are interchanged.
Coordinate rotation	CW and CCW (directions of rotation) are interchanged.

Limitations

- **Scaling/coordinate system rotation**

Processing proceeds from program mirror image to scaling and coordinate rotation in the stated order. The commands should be specified in this order, and, for cancellation, in the reverse order. Do not specify G50.1 or G51.1 during scaling or coordinate rotation mode.

- **Commands related to reference position return and coordinate system**

In programmable mirror image mode, G codes related to reference position return (G27, G28, G29, G30, etc.) and those for changing the coordinate system (G52 to G59, G92, etc.) must not be specified. If any of these G codes is necessary, specify it only after canceling the programmable mirror image mode.

15 CUSTOM MACRO

Although subprograms are useful for repeating the same operation, the custom macro function also allows use of variables, arithmetic and logic operations, and conditional branches for easy development of general programs such as pocketing and user–defined canned cycles.A machining program can call a custom macro with a simple command, just like a subprogram.

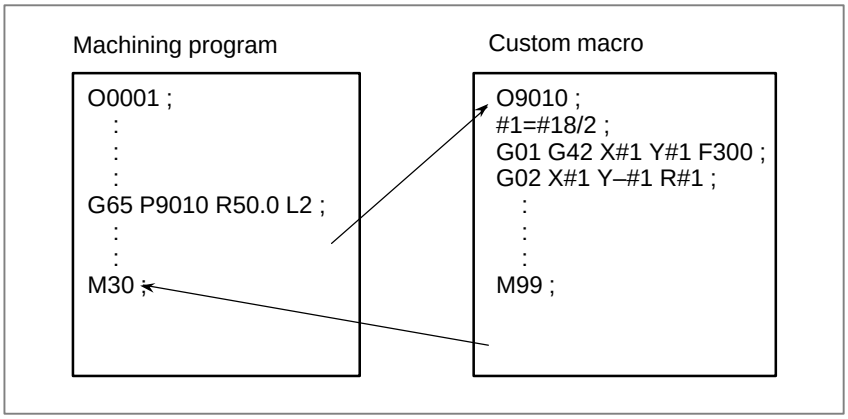

15.1 VARIABLES

An ordinary machining program specifies a G code and the travel distance directly with a numeric value; examples are G100 and X100.0.
With a custom macro, numeric values can be specified directly or using a variable number. When a variable number is used, the variable value can be changed by a program or using operations on the MDI panel.

```
#1=#2+100 ;

G01 X#1 F300 ;
```

Explanation

- **Variable representation**

When specifying a variable, specify a number sign (#) followed by a variable number. General–purpose programming languages allow a name to be assigned to a variable, but this capability is not available for custom macros.

Example: #1

An expression can be used to specify a variable number. In such a case, the expression must be enclosed in brackets.

Example: #[#1+#2–12]

- **Types of variables**

Variables are classified into four types by variable number.

Table 15.1 Types of variables

Variable number	Type of variable	Function
#0	Always null	This variable is always null. No value can be assigned to this variable.
#1 – #33	Local variables	Local variables can only be used within a macro to hold data such as the results of operations. When the power is turned off, local variables are initialized to null. When a macro is called, arguments are assigned to local variables.
#100 – #149 (#199) #500 – #531 (#999)	Common variables	Common variables can be shared among different macro programs. When the power is turned off, variables #100 to #149 are initialized to null. Variables #500 to #531 hold data even when the power is turned off. As an option, common variables #150 to #199 and #532 to #999 are also available. However, when these values are using.
#1000 –	System variables	System variables are used to read and write a variety of NC data items such as the current position and tool compensation values.

NOTE
Common variables #150 to #199 and #532 to #999 are optional.

- **Range of variable values**

Local and common variables can have value 0 or a value in the following ranges :
-10^{47} to -10^{-29}
10^{-29} to 10^{47}
If the result of calculation turns out to be invalid, an P/S alarm No. 111 is issued.

- **Omission of the decimal point**

When a variable value is defined in a program, the decimal point can be omitted.

Example:
When #1=123; is defined, the actual value of variable #1 is 123.000.

- **Referencing variables**

To reference the value of a variable in a program, specify a word address followed by the variable number. When an expression is used to specify a variable, enclose the expression in brackets.

Example: G01X[#1+#2]F#3;

A referenced variable value is automatically rounded according to the least input increment of the address.

Example:
When G00X#1; is executed on a 1/1000–mm CNC with 12.3456 assigned to variable #1, the actual command is interpreted as G00X12.346;.

To reverse the sign of a referenced variable value, prefix a minus sign (–) to #.

Example: G00X–#1;

When an undefined variable is referenced, the variable is ignored up to an address word.

Example:
When the value of variable #1 is 0, and the value of variable #2 is null, execution of G00X#1Y#2; results in G00X0;.

- **Common custom macro variables for tow paths (two–path control)**

For two–path control, macro variables are provided for each path. Some common variables, however, can be used for both paths, by setting parameters No. 6036 and 6037 accordingly.

- **Undefined variable**

When the value of a variable is not defined, such a variable is referred to as a “null” variable. Variable #0 is always a null variable. It cannot be written to, but it can be read.

(a) Quotation
When an undefined variable is quotated, the address itself is also ignored.

[Example] When #1 is 0 and #2 is null, the result of executing G00 X#1 Y#2; will be the same as when G00 X0; is executed.

(b) Operation

< vacant > is the same as 0 except when replaced by < vacant>

When #1 = < vacant >	When #1 = 0
#2 = #1 ↓ #2 = < vacant >	#2 = #1 ↓ #2 = 0
#2 = #1*5 ↓ #2 = 0	#2 = #1*5 ↓ #2 = 0
#2 = #1+#1 ↓ #2 = 0	#2 = #1 + #1 ↓ #2 = 0

(c) Conditional expressions

< vacant > differs from 0 only for EQ and NE.

When #1 = < vacant >	When #1 = 0
#1 EQ #0 ↓ Established	#1 EQ #0 ↓ Not established
#1 NE 0 ↓ Established	#1 NE 0 ↓ Not established
#1 GE #0 ↓ Established	#1 GE #0 ↓ Established
#1 GT 0 ↓ Not established	#1 GT 0 ↓ Not established

```
VARIABLE                                  O1234 N12345
  NO.        DATA          NO.          DATA
  100        123.456       108
  101          0.000       109
  102                      110
  103                      111
  104                      112
  105                      113
  106                      114
  107                      115

ACTUAL POSITION (RELATIVE)
     X         0.000            Y         0.000
     Z         0.000            B         0.000

MEM **** *** ***          18:42:15
[ MACRO ] [ MENU ] [  OPR  ] [     ] [ (OPRT) ]
```

- When the value of a variable is blank, the variable is null.
- The mark ******** indicates an overflow (when the absolute value of a variable is greater than 99999999) or an underflow (when the absolute value of a variable is less than 0.0000001).

Limitations

Program numbers, sequence numbers, and optional block skip numbers cannot be referenced using variables.

Example:

Variables cannot be used in the following ways:
O#1;
/#2G00X100.0;
N#3Y200.0;

15.2 SYSTEM VARIABLES

System variables can be used to read and write internal NC data such as tool compensation values and current position data. Note, however, that some system variables can only be read. System variables are essential for automation and general–purpose program development.

Explanations

- **Interface signals**

Signals can be exchanged between the programmable machine controller (PMC) and custom macros.

Table 15.2 (a) System variables for interface signals

Variable number	Function
#1000–#1015 #1032	A 16–bit signal can be sent from the PMC to a custom macro. Variables #1000 to #1015 are used to read a signal bit by bit. Variable #1032 is used to read all 16 bits of a signal at one time.
#1100–#1115 #1132	A 16–bit signal can be sent from a custom macro to the PMC. Variables #1100 to #1115 are used to write a signal bit by bit. Variable #1132 is used to write all 16 bits of a signal at one time.
#1133	Variable #1133 is used to write all 32 bits of a signal at one time from a custom macro to the PMC. Note, that values from –99999999 to +99999999 can be used for #1133.

For detailed information, refer to the connection manual (B–63523EN–1).

- **Tool compensation values**

Tool compensation values can be read and written using system variables. Usable variable numbers depend on the number of compensation pairs, whether a distinction is made between geometric compensation and wear compensation, and whether a distinction is made between tool length compensation and cutter compensation. When the number of compensation pairs is not greater than 200, variables #2001 to #2400 can also be used.

Table 15.2 (b) System variables for tool compensation memory A

Compensation number	System variable
1 : 200 : 400	#10001(#2001) : #10200(#2200) : #10400

Table 15.2 (c) System variables for tool compensation memory B

Compensation number	Geometry compensation	Wear compensation
1 : 200 : 400	#11001 (#2201) : #11200 (#2400) : #11400	#10001 (#2001) : #10200 (#2200) : #10400

Table 15.2 (d) System variables for tool compensation memory C

Compensation number	Tool length compensation (H)		Cutter compensation (D)	
	Geometric compensation	Wear compensation	Geometric compensation	Wear compensation
1 : 200 : 400	#11001(#2201) : #11201(#2400) : #11400	#10001(#2001) : #10201(#2200) : #10400	#13001 : : #13400	#12001 : : #12400

- **Macro alarms**

Table 15.2 (e) System variable for macro alarms

Variable number	Function
#3000	When a value from 0 to 200 is assigned to variable #3000, the CNC stops with an alarm. After an expression, an alarm message not longer than 26 characters can be described. The CRT screen displays alarm numbers by adding 3000 to the value in variable #3000 along with an alarm message.

Example:
#3000=1(TOOL NOT FOUND);
→ The alarm screen displays ”3001 TOOL NOT FOUND.”

- **Stop with a message**

Execution of the program can be stopped, and then a message can be displayed.

Variable number	Function
#3006	When “#3006=1 (MESSAGE);” is commanded in the macro, the program executes blocks up to the immediately previous one and then stops. When a message of up to 26 characters, which is enclosed by a control–in character (“(”) and control–out character (“)”), is programmed in the same block, the message is displayed on the external operator message screen.

• Time information

Time information can be read and written.

Table 15.2 (f) System variables for time information

Variable number	Function
#3001	This variable functions as a timer that counts in 1–millisecond increments at all times. When the power is turned on, the value of this variable is reset to 0. When 2147483648 milliseconds is reached, the value of this timer returns to 0.
#3002	This variable functions as a timer that counts in 1–hour increments when the cycle start lamp is on. This timer preserves its value even when the power is turned off. When 9544.371767 hours is reached, the value of this timer returns to 0.
#3011	This variable can be used to read the current date (year/month/day). Year/month/day information is converted to an apparent decimal number. For example, September 28, 2001 is represented as 20010928.
#3012	This variable can be used to read the current time (hours/minutes/seconds). Hours/minutes/seconds information is converted to an apparent decimal number. For example, 34 minutes and 56 seconds after 3 p.m. is represented as 153456.

• Automatic operation control

The control state of automatic operation can be changed.

Table 15.2 (g) System variable (#3003) for automatic operation control

#3003	Single block	Completion of an auxiliary function
0	Enabled	To be awaited
1	Disabled	To be awaited
2	Enabled	Not to be awaited
3	Disabled	Not to be awaited

- When the power is turned on, the value of this variable is 0.
- When single block stop is disabled, single block stop operation is not performed even if the single block switch is set to ON.
- When a wait for the completion of auxiliary functions (M, S, and T functions) is not specified, program execution proceeds to the next block before completion of auxiliary functions. Also, distribution completion signal DEN is not output.

Table 15.2 (h) System variable (#3004) for automatic operation control

#3004	Feed hold	Feedrate Override	Exact stop
0	Enabled	Enabled	Enabled
1	Disabled	Enabled	Enabled
2	Enabled	Disabled	Enabled
3	Disabled	Disabled	Enabled
4	Enabled	Enabled	Disabled
5	Disabled	Enabled	Disabled
6	Enabled	Disabled	Disabled
7	Disabled	Disabled	Disabled

- When the power is turned on, the value of this variable is 0.
- When feed hold is disabled:

(1) When the feed hold button is held down, the machine stops in the single block stop mode. However, single block stop operation is not performed when the single block mode is disabled with variable #3003.

(2) When the feed hold button is pressed then released, the feed hold lamp comes on, but the machine does not stop; program execution continues and the machine stops at the first block where feed hold is enabled.

- When feedrate override is disabled, an override of 100% is always applied regardless of the setting of the feedrate override switch on the machine operator's panel.
- When exact stop check is disabled, no exact stop check (position check) is made even in blocks including those which do not perform cutting.

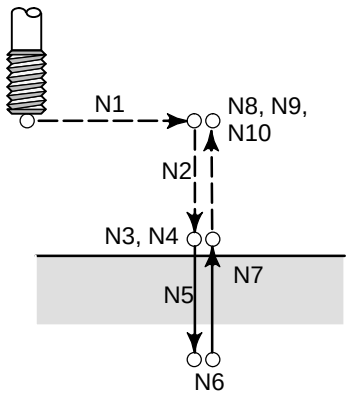


```
O0001 ;
N1  G00 G91 X#24 Y#25 ;
N2  Z#18 ;
  G04 ;
N3  #3003=3 ;
N4  #3004=7 ;
N5  G01 Z#26 F#9 ;
N6  M04 ;
N7  G01
Z–[ROUND[#18]+ROUND[#26]] ;
  G04 ;
N8  #3004=0 ;
N9  #3003=0 ;
N10 M03 ;
  M99 ;
```

Fig. 15.2 Example of using variable #3004 in a tapping cycle

- **Settings**

Settings can be read and written. Binary values are converted to decimals.

#3005

	#15	#14	#13	#12	#11	#10	#9	#8
Setting							FCV	

	#7	#6	#5	#4	#3	#2	#1	#0
Setting			SEQ			INI	ISO	TVC

#9 (FCV) : Whether to use the FS15 tape format conversion capability
#5 (SEQ) : Whether to automatically insert sequence numbers
#2 (INI) : Millimeter input or inch input
#1 (ISO) : Whether to use EIA or ISO as the output code
#0 (TVC) : Whether to make a TV check

- **Mirror image**

The mirror–image status for each axis set using an external switch or setting operation can be read through the output signal (mirror–image check signal). The mirror–image status present at that time can be checked. (See III–4.6)
The value obtained in binary is converted into decimal notation.

#3007

	#7	#6	#5	#4	#3	#2	#1	#0
Setting					4th axis	3th axis	2th axis	1th axis

For each bit, 0 (mirror–image function is disabled) or 1 (mirror–image function is enabled) is indicated.

Example : If #3007 is 3, the mirror–image function is enabled for the first and second axes.

- When the mirror–image function is set for a certain axis by both the mirror–image signal and setting, the signal value and setting value are ORed and then output.
- When mirror–image signals for axes other than the controlled axes are turned on, they are still read into system variable #3007.
- System variable #3007 is a write–protected system variable. If an attempt is made to write data in the variable, P/S 116 alarm “WRITE PROTECTED VARIABLE” is issued.

- **Number of machined parts**

The number (target number) of parts required and the number (completion number) of machined parts can be read and written.

Table 15.2(i) System variables for the number of parts required and the number of machined parts

Variable number	Function
#3901	Number of machined parts (completion number)
#3902	Number of required parts (target number)

NOTE
Do not substitute a negative value.

- **Modal information**

Modal information specified in blocks up to the immediately preceding block can be read.

Table 15.2 (j) System variables for modal information

Variable number	Function	
#4001	G00, G01, G02, G03, G33	(Group 01)
#4002	G17, G18, G19	(Group 02)
#4003	G90, G91	(Group 03)
#4004		(Group 04)
#4005	G94, G95	(Group 05)
#4006	G20, G21	(Group 06)
#4007	G40, G41, G42	(Group 07)
#4008	G43, G44, G49	(Group 08)
#4009	G73, G74, G76, G80–G89	(Group 09)
#4010	G98, G99	(Group 10)
#4011	G50, G51	(Group 11)
#4012	G66, G67	(Group 12)
#4013	G96,G97	(Group 13)
#4014	G54–G59	(Group 14)
#4015	G61–G64	(Group 15)
#4016	G68, G69	(Group 16)
:	:	:
#4022		(Group 22)
#4102	B code	
#4107	D code	
#4109	F code	
#4111	H code	
#4113	M code	
#4114	Sequence number	
#4115	Program number	
#4119	S code	
#4120	T code	
#4130	P code (number of the currently selected additional workpiece coordinate system)	

Example:

When #1=#4001; is executed, the resulting value in #1 is 0, 1, 2, 3, or 33.

If the specified system variable for reading modal information corresponds to a G code group which cannot be used, a P/S alarm is issued.

● Current position

Position information cannot be written but can be read.

Table 15.2 (k) System variables for position information

Variable number	Position information	Coordinate system	Tool compensation value	Read operation during movement
#5001–#5004	Block end point	Workpiece coordinate system	Not included	Enabled
#5021–#5024	Current position	Machine coordinate system	Included	Disabled
#5041–#5044	Current position	Workpiece coordinate system		
#5061–#5064	Skip signal position			Enabled
#5081–#5084	Tool length offset value			Disabled
#5101–#5104	Deviated servo position			

- The first digit (from 1 to 4) represents an axis number.
- The tool length offset value currently used for execution rather than the immediately preceding tool offset value is held in variables #5081 to 5088.
- The tool position where the skip signal is turned on in a G31 (skip function) block is held in variables #5061 to #5068. When the skip signal is not turned on in a G31 block, the end point of the specified block is held in these variables.
- When read during movement is “disabled,” this means that expected values cannot be read due to the buffering (preread) function.

- **Workpiece coordinate system compensation values (workpiece zero point offset values)**

Workpiece zero point offset values can be read and written.

Table 15.2 (l) System variables for workpiece zero point offset values

Variable number	Function
#5201 : #5204	First–axis external workpiece zero point offset value : Fourth–axis external workpiece zero point offset value
#5221 : #5224	First–axis G54 workpiece zero point offset value : Fourth–axis G54 workpiece zero point offset value
#5241 : #5244	First–axis G55 workpiece zero point offset value : Fourth–axis G55 workpiece zero point offset value
#5261 : #5264	First–axis G56 workpiece zero point offset value : Fourth–axis G56 workpiece zero point offset value
#5281 : #5284	First–axis G57 workpiece zero point offset value : Fourth–axis G57 workpiece zero point offset value
#5301 : #5304	First–axis G58 workpiece zero point offset value : Fourth–axis G58 workpiece zero point offset value
#5321 : #5324	First–axis G59 workpiece zero point offset value : Fourth–axis G59 workpiece zero point offset value
#7001 : #7004	First–axis workpiece zero point offset value (G54.1 P1) : Fourth–axis workpiece zero point offset value
#7021 : #7024	First–axis workpiece zero point offset value (G54.1 P2) : Fourth–axis workpiece zero point offset value
:	:
#7941 : #7944	First–axis workpiece zero point offset value (G54.1 P48) : Fourth–axis workpiece zero point offset value

The following variables can also be used:

Axis	Function	Variable number	
First axis	External workpiece zero point offset	#2500	#5201
	G54 workpiece zero point offset	#2501	#5221
	G55 workpiece zero point offset	#2502	#5241
	G56 workpiece zero point offset	#2503	#5261
	G57 workpiece zero point offset	#2504	#5281
	G58 workpiece zero point offset	#2505	#5301
	G59 workpiece zero point offset	#2506	#5321
Second axis	External workpiece zero point offset	#2600	#5202
	G54 workpiece zero point offset	#2601	#5222
	G55 workpiece zero point offset	#2602	#5242
	G56 workpiece zero point offset	#2603	#5262
	G57 workpiece zero point offset	#2604	#5282
	G58 workpiece zero point offset	#2605	#5302
	G59 workpiece zero point offset	#2606	#5322
Third axis	External workpiece zero point offset	#2700	#5203
	G54 workpiece zero point offset	#2701	#5223
	G55 workpiece zero point offset	#2702	#5243
	G56 workpiece zero point offset	#2703	#5263
	G57 workpiece zero point offset	#2704	#5283
	G58 workpiece zero point offset	#2705	#5303
	G59 workpiece zero point offset	#2706	#5323
Fourth axis	External workpiece zero point offset	#2800	#5204
	G54 workpiece zero point offset	#2801	#5224
	G55 workpiece zero point offset	#2802	#5244
	G56 workpiece zero point offset	#2803	#5264
	G57 workpiece zero point offset	#2804	#5284
	G58 workpiece zero point offset	#2805	#5304
	G59 workpiece zero point offset	#2806	#5324

NOTE

To use variables #2500 to #2806 and #5201 to #5328, optional variables for the workpiece coordinate systems are necessary.

Optional variables for 48 additional workpiece coordinate systems are #7001 to #7948 (G54.1 P1 to G54.1 P48).

15.3 ARITHMETIC AND LOGIC OPERATION

The operations listed in Table 15.3(a) can be performed on variables. The expression to the right of the operator can contain constants and/or variables combined by a function or operator. Variables #j and #K in an expression can be replaced with a constant. Variables on the left can also be replaced with an expression.

Table 15.3 (a) Arithmetic and logic operation

Function	Format	Remarks
Definition	#i=#j	
Sum Difference Product Quotient	#i=#j+#k; #i=#j–#k; #i=#j*#k; #i=#j/#k;	
Sine Arcsine Cosine Arccosine Tangent Arctangent	#i=SIN[#j]; #i=ASIN[#j]; #i=COS[#j]; #i=ACOS[#j]; #i=TAN[#j]; #i=ATAN[#j]/[#k];	An angle is specified in degrees. 90 degrees and 30 minutes is represented as 90.5 degrees.
Square root Absolute value Rounding off Rounding down Rounding up Natural logarithm Exponential function	#i=SQRT[#j]; #i=ABS[#j]; #i=ROUND[#j]; #i=FIX[#j]; #i=FUP[#j]; #i=LN[#j]; #i=EXP[#j];	
OR XOR AND	#i=#j OR #k; #i=#j XOR #k; #i=#j AND #k;	A logical operation is performed on binary numbers bit by bit.
Conversion from BCD to BIN Conversion from BIN to BCD	#i=BIN[#j]; #i=BCD[#j];	Used for signal exchange to and from the PMC

Explanations

- **Angle units**

The units of angles used with the SIN, COS, ASIN, ACOS, TAN, and ATAN functions are degrees. For example, 90 degrees and 30 minutes is represented as 90.5 degrees.

- **ARCSIN #i = ASIN[#j];**

  - The solution ranges are as indicated below:
    When the NAT bit (bit 0 of parameter 6004) is set to 0: 270° to 90°
    When the NAT bit (bit 0 of parameter 6004) is set to 1: –90° to 90°
  - When #j is beyond the range of –1 to 1, P/S alarm No. 111 is issued.
  - A constant can be used instead of the #j variable.

- **ARCCOS #i = ACOS[#j];**

  - The solution ranges from 180° to 0°.
  - When #j is beyond the range of –1 to 1, P/S alarm No. 111 is issued.
  - A constant can be used instead of the #j variable.

- **ARCTAN #i = ATAN[#j]/[#k];**

  - Specify the lengths of two sides, separated by a slash (/).
  - The solution ranges are as follows:

    When the NAT bit (bit 0 of parameter 6004) is set to 0: 0o to 360°

    [Example] When #1 = ATAN[–1]/[–1]; is specified, #1 is 225.0.

    When the NAT bit (bit 0 of parameter 6004) is set to 1: –180° to 180°

    [Example] When #1 = ATAN[–1]/[–1]; is specified, #1 is –135.0.0.
  - A constant can be used instead of the #j variable.

- **Natural logarithm #i = LN[#j];**

  - Note that the relative error may become 10^{-8} or greater.
  - When the antilogarithm (#j) is zero or smaller, P/S alarm No. 111 is issued.
  - A constant can be used instead of the #j variable.

- **Exponential function #i = EXP[#j];**

  - Note that the relative error may become 10^{-8} or greater.
  - When the result of the operation exceeds 3.65×10^{47} (j is about 110), an overflow occurs and P/S alarm No. 111 is issued.
  - A constant can be used instead of the #j variable.

- **ROUND function**

  - When the ROUND function is included in an arithmetic or logic operation command, IF statement, or WHILE statement, the ROUND function rounds off at the first decimal place.

  Example:

  When #1=ROUND[#2]; is executed where #2 holds 1.2345, the value of variable #1 is 1.0.

  - When the ROUND function is used in NC statement addresses, the ROUND function rounds off the specified value according to the least input increment of the address.

  Example:

  Creation of a drilling program that cuts according to the values of variables #1 and #2, then returns to the original position
  Suppose that the increment system is 1/1000 mm, variable #1 holds 1.2345, and variable #2 holds 2.3456. Then,
  G00 G91 X–#1; Moves 1.235 mm.
  G01 X–#2 F300; Moves 2.346 mm.
  G00 X[#1+#2]; Since 1.2345 + 2.3456 = 3.5801, the travel distance is 3.580, which does not return the tool to the original position.
  This difference comes from whether addition is performed before or after rounding off. G00X–[ROUND[#1]+ROUND[#2]] must be specified to return the tool to the original position.

- **Rounding up and down to an integer**

With CNC, when the absolute value of the integer produced by an operation on a number is greater than the absolute value of the original number, such an operation is referred to as rounding up to an integer. Conversely, when the absolute value of the integer produced by an operation on a number is less than the absolute value of the original number, such an operation is referred to as rounding down to an integer. Be particularly careful when handling negative numbers.

Example:

Suppose that #1=1.2 and #2=–1.2.
When #3=FUP[#1] is executed, 2.0 is assigned to #3.
When #3=FIX[#1] is executed, 1.0 is assigned to #3.
When #3=FUP[#2] is executed, –2.0 is assigned to #3.
When #3=FIX[#2] is executed, –1.0 is assigned to #3.

- **Abbreviations of arithmetic and logic operation commands**

When a function is specified in a program, the first two characters of the function name can be used to specify the function (See III–9.7).

Example:

ROUND → RO
FIX → FI

- **Priority of operations**

[1] Functions
[2] Operations such as multiplication and division (*, /, AND)
[3] Operations such as addition and subtraction (+, –, OR, XOR)

Example) #1=#2+#3*SIN[#4];

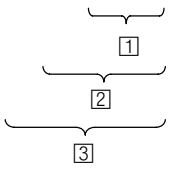

[1], [2] and [3] indicate the order of operations.

- **Bracket nesting**

Brackets are used to change the order of operations. Brackets can be used to a depth of five levels including the brackets used to enclose a function. When a depth of five levels is exceeded, P/S alarm No. 118 occurs.

Example) #1=SIN [[[#2+#3] *#4 +#5] *#6] ;

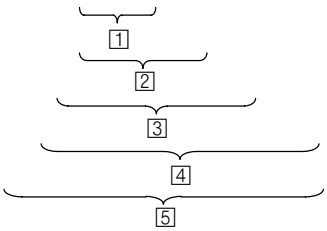

[1] to [5] indicate the order of operations.

Limitations

- **Brackets**

Brackets ([,]) are used to enclose an expression. Note that parentheses are used for comments.

- **Operation error**

Errors may occur when operations are performed.

Table 15.3 (b) Errors involved in operations

Operation	Average error	Maximum error	Type of error
a = b*c	1.55×10^{-10}	4.66×10^{-10}	Relative error(*1) $\left\|\frac{\varepsilon}{a}\right\|$
a = b / c	4.66×10^{-10}	1.88×10^{-9}	
$a = \sqrt{b}$	1.24×10^{-9}	3.73×10^{-9}	
a = b + c a = b – c	2.33×10^{-10}	5.32×10^{-10}	(*2) $\mathrm{Min}\left\|\frac{\varepsilon}{b}\right\|, \left\|\frac{\varepsilon}{c}\right\|$
a = SIN [b] a = COS [b]	5.0×10^{-9}	1.0×10^{-8}	Absolute error(*3) $\left\|\varepsilon\right\|$ degrees
a = ATAN [b] / [c] (*4)	1.8×10^{-6}	3.6×10^{-6}	

NOTE
1 The relative error depends on the result of the operation.
2 Smaller of the two types of errors is used.
3 The absolute error is constant, regardless of the result of the operation.
4 Function TAN performs SIN/COS.
5 When parameter No.6004#1 is set to 1, if the operation result of an SIN, COS, or TAN function is less than 1.0×10^{-8} or does not fall to 0 due to the restraints of operation precision, the operation result can be normalized to 0.

- The precision of variable values is about 8 decimal digits. When very large numbers are handled in an addition or subtraction, the expected results may not be obtained.

Example:

When an attempt is made to assign the following values to variables #1 and #2:

#1=9876543210123.456
#2=9876543277777.777

the values of the variables become:

#1=9876543200000.000
#2=9876543300000.000

In this case, when #3=#2–#1; is calculated, #3=100000.000 results. (The actual result of this calculation is slightly different because it is performed in binary.)

- Also be aware of errors that can result from conditional expressions using EQ, NE, GE, GT, LE, and LT.

Example:

IF[#1 EQ #2] is effected by errors in both #1 and #2, possibly resulting in an incorrect decision.
Therefore, instead find the difference between the two variables with IF[ABS[#1–#2]LT0.001].
Then, assume that the values of the two variables are equal when the difference does not exceed an allowable limit (0.001 in this case).

- Also, be careful when rounding down a value.

Example:

When #2=#1*1000; is calculated where #1=0.002;, the resulting value of variable #2 is not exactly 2 but 1.99999997.
Here, when #3=FIX[#2]; is specified, the resulting value of variable #1 is not 2.0 but 1.0. In this case, round down the value after correcting the error so that the result is greater than the expected number, or round it off as follows:
#3=FIX[#2+0.001]
#3=ROUND[#2]

● Divisor

When a divisor of zero is specified in a division or TAN[90], P/S alarm No. 112 occurs.

15.4 MACRO STATEMENTS AND NC STATEMENTS

The following blocks are referred to as macro statements:
• Blocks containing an arithmetic or logic operation (=)
• Blocks containing a control statement (such as GOTO, DO, END)
• Blocks containing a macro call command (such as macro calls by G65, G66, G67, or other G codes, or by M codes) Any block other than a macro statement is referred to as an NC statement.

Explanations

● Differences from NC statements

- Even when single block mode is on, the machine does not stop. Note, however, that the machine stops in the single block mode when bit 5 of parameter SBM No. 6000 is 1.
- Macro blocks are not regarded as blocks that involve no movement in the cutter compensation mode (seeII–15.7).

● NC statements that have the same property as macro statements

- NC statements that include a subprogram call command (such as subprogram calls by M98 or other M codes, or by T codes) and not include other command addresses except an O,N or L address have the same property as macro statements.
- The blocks not include other command addresses except an O,N,P or L address have the same property as macro statements.

15.5 BRANCH AND REPETITION

In a program, the flow of control can be changed using the GOTO statement and IF statement. Three types of branch and repetition operations are used:

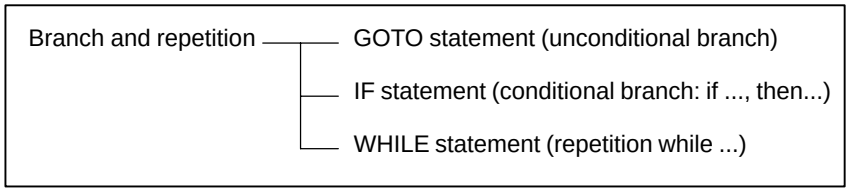

15.5.1 Unconditional Branch (GOTO Statement)

A branch to sequence number n occurs. When a sequence number outside of the range 1 to 99999 is specified, P/S alarm No. 128 occurs. A sequence number can also be specified using an expression.

```
GOTO n ;    n: Sequence number (1 to 99999)
```

Example:

```
GOTO1;
GOTO#10;
```

15.5.2 Conditional Branch (IF Statement)

Specify a conditional expression after IF.

IF[<conditional expression>]GOTOn

If the specified conditional expression is satisfied, a branch to sequence number n occurs. If the specified condition is not satisfied, the next block is executed.

If the value of variable #1 is greater than 10, a branch to sequence number N2 occurs.

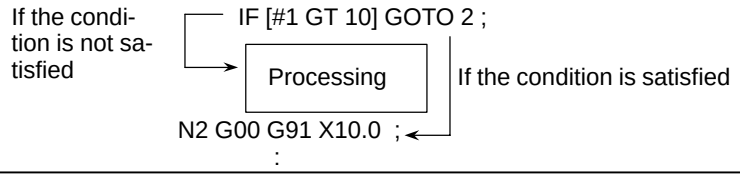

IF[<conditional expression>]THEN

If the specified conditional expression is satisfied, a predetermined macro statement is executed. Only a single macro statement is executed.

If the values of #1 and #2 are the same, 0 is assigned to #3.

```
IF [#1 EQ #2] THEN#3=0 ;
```

Explanations

- **Conditional expression**

A conditional expression must include an operator inserted between two variables or between a variable and constant, and must be enclosed in brackets ([,]). An expression can be used instead of a variable.

- **Operators**

Operators each consist of two letters and are used to compare two values to determine whether they are equal or one value is smaller or greater than the other value. Note that the inequality sign cannot be used.

Table 15.5.2 Operators

Operator	Meaning
EQ	Equal to(=)
NE	Not equal to(≠)
GT	Greater than(>)
GE	Greater than or equal to(≧)
LT	Less than(<)
LE	Less than or equal to(≦)

Sample program

The sample program below finds the total of numbers 1 to 10.

```
O9500;
 #1=0;Initial value of the variable to hold the sum
 #2=1;Initial value of the variable as an addend
N1 IF[#2 GT 10] GOTO 2; . Branch to N2 when the addend is greater than
10
 #1=#1+#2;  Calculation to find the sum
 #2=#2+1; Next addend
 GOTO 1;  Branch to N1
N2 M30;End of program
```

15.5.3 Repetition (While Statement)

Specify a conditional expression after WHILE. While the specified condition is satisfied, the program from DO to END is executed. If the specified condition is not satisfied, program execution proceeds to the block after END.

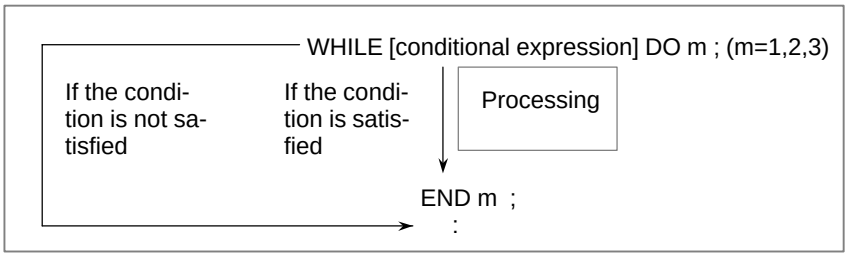

Explanations

While the specified condition is satisfied, the program from DO to END after WHILE is executed. If the specified condition is not satisfied, program execution proceeds to the block after END. The same format as for the IF statement applies. A number after DO and a number after END are identification numbers for specifying the range of execution. The numbers 1, 2, and 3 can be used. When a number other than 1, 2, and 3 is used, P/S alarm No. 126 occurs.

- **Nesting**

The identification numbers (1 to 3) in a DO–END loop can be used as many times as desired. Note, however, when a program includes crossing repetition loops (overlapped DO ranges), P/S alarm No. 124 occurs.

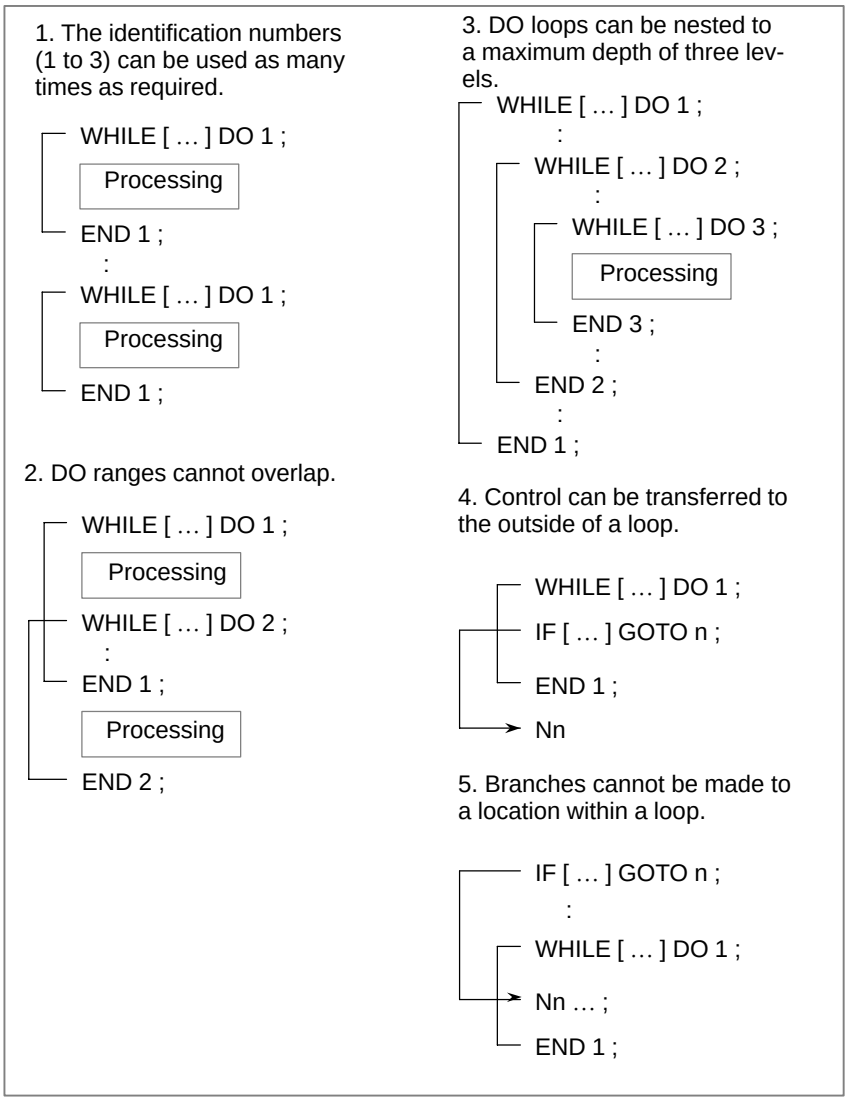

Limitations

- **Infinite loops**

When DO m is specified without specifying the WHILE statement, an infinite loop ranging from DO to END is produced.

- **Processing time**

When a branch to the sequence number specified in a GOTO statement occurs, the sequence number is searched for. For this reason, processing in the reverse direction takes a longer time than processing in the forward direction. Using the WHILE statement for repetition reduces processing time.

- **Undefined variable**

In a conditional expression that uses EQ or NE, a <vacant> and zero have different effects. In other types of conditional expressions, a <vacant> is regarded as zero.

Sample program

The sample program below finds the total of numbers 1 to 10.

```
O0001;
#1=0;
#2=1;
WHILE[#2 LE 10]DO 1;
#1=#1+#2;
#2=#2+1;
END 1;
M30;
```

15.6 MACRO CALL

A macro program can be called using the following methods:

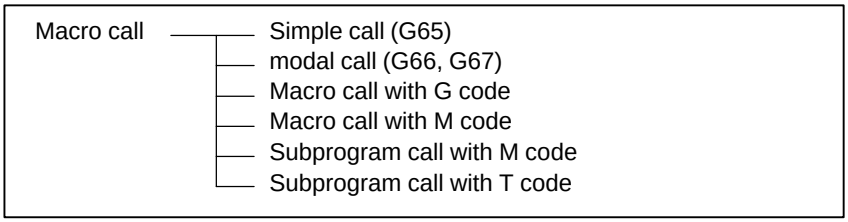

Limitations

- **Differences between macro calls and subprogram calls**

Macro call (G65) differs from subprogram call (M98) as described below.

- With G65, an argument (data passed to a macro) can be specified. M98 does not have this capability.
- When an M98 block contains another NC command (for example, G01 X100.0 M98Pp), the subprogram is called after the command is executed. On the other hand, G65 unconditionally calls a macro.
- When an M98 block contains another NC command (for example, G01 X100.0 M98Pp), the machine stops in the single block mode. On the other hand, G65 does not stops the machine.
- With G65, the level of local variables changes. With M98, the level of local variables does not change.

15.6.1 Simple Call (G65)

When G65 is specified, the custom macro specified at address P is called. Data (argument) can be passed to the custom macro program.

G65 P p L ℓ <argument–specification> ;

P : Number of the program to call
ℓ : Repetition count (1 by default)
Argument : Data passed to the macro

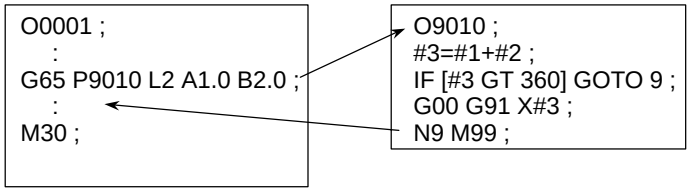

Explanations

● Call

- After G65, specify at address P the program number of the custom macro to call.
- When a number of repetitions is required, specify a number from 1 to 9999 after address L. When L is omitted, 1 is assumed.
- By using argument specification, values are assigned to corresponding local variables.

● Argument specification

Two types of argument specification are available. Argument specification I uses letters other than G, L, O, N, and P once each. Argument specification II uses A, B, and C once each and also uses I, J, and K up to ten times. The type of argument specification is determined automatically according to the letters used.

Argument specification I

Address	Variable number
A	#1
B	#2
C	#3
D	#7
E	#8
F	#9
H	#11

Address	Variable number
I	#4
J	#5
K	#6
M	#13
Q	#17
R	#18
S	#19

Address	Variable number
T	#20
U	#21
V	#22
W	#23
X	#24
Y	#25
Z	#26

- Addresses G, L, N, O, and P cannot be used in arguments.
- Addresses that need not be specified can be omitted. Local variables corresponding to an omitted address are set to null.
- Addresses do not need to be specified alphabetically. They conform to word address format.
  I, J, and K need to be specified alphabetically, however.

Example

B_A_D_ … J_K_ Correct
B_A_D_ … J_I_ Incorrect

Argument specification II

Argument specification II uses A, B, and C once each and uses I, J, and K up to ten times. Argument specification II is used to pass values such as three–dimensional coordinates as arguments.

Address	Variable number
A	#1
B	#2
C	#3
I_1	#4
J_1	#5
K_1	#6
I_2	#7
J_2	#8
K_2	#9
I_3	#10
J_3	#11

Address	Variable number
K_3	#12
I_4	#13
J_4	#14
K_4	#15
I_5	#16
J_5	#17
K_5	#18
I_6	#19
J_6	#20
K_6	#21
I_7	#22

Address	Variable number
J_7	#23
K_7	#24
I_8	#25
J_8	#26
K_8	#27
I_9	#28
J_9	#29
K_9	#30
I_{10}	#31
J_{10}	#32
K_{10}	#33

- Subscripts of I, J, and K for indicating the order of argument specification are not written in the actual program.

Limitations

- **Format**

G65 must be specified before any argument.

- **Mixture of argument specifications I and II**

The CNC internally identifies argument specification I and argument specification II. If a mixture of argument specification I and argument specification II is specified, the type of argument specification specified later takes precedence.

Example

G65 A1.0 B2.0 I–3.0 I4.0 D5.0 P1000;

<Variables>
#1:1.0
#2:2.0
#3:
#4:–3.0
#5:
#6:
#7: 5.0

When both the I4.0 and D5.0 arguments are commanded for variable #7 in this example, the latter, D5.0, is valid.

- **Position of the decimal point**

The units used for argument data passed without a decimal point correspond to the least input increment of each address. The value of an argument passed without a decimal point may vary according to the system configuration of the machine. It is good practice to use decimal points in macro call arguments to maintain program compatibility.

- **Call nesting**

Calls can be nested to a depth of four levels including simple calls (G65) and modal calls (G66). This does not include subprogram calls (M98).

- **Local variable levels**

- Local variables from level 0 to 4 are provided for nesting.

- The level of the main program is 0.
- Each time a macro is called (with G65 or G66), the local variable level is incremented by one. The values of the local variables at the previous level are saved in the CNC.
- When M99 is executed in a macro program, control returns to the calling program. At that time, the local variable level is decremented by one; the values of the local variables saved when the macro was called are restored.

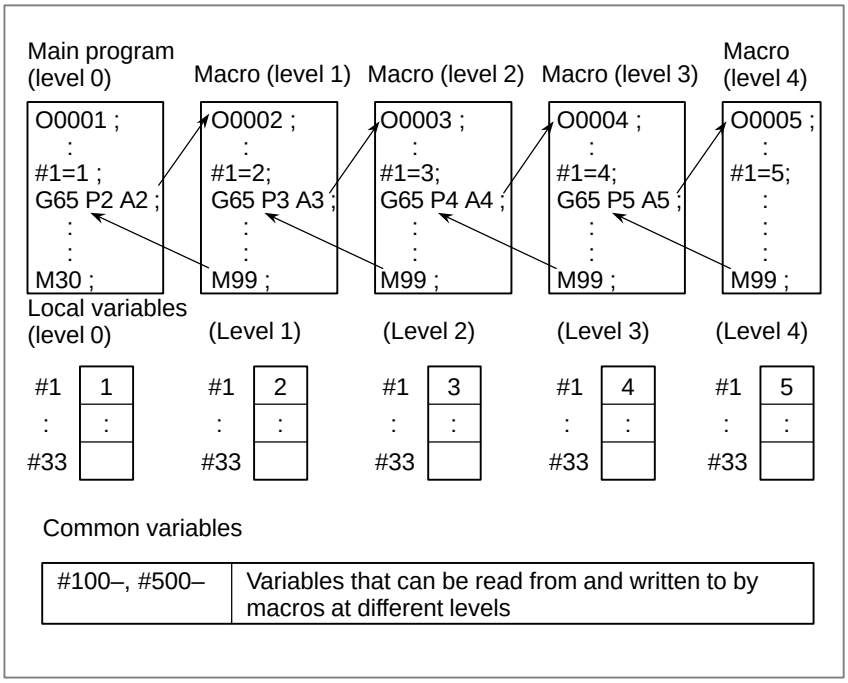

Sample program (bolt hole circle)

A macro is created which drills H holes at intervals of B degrees after a start angle of A degrees along the periphery of a circle with radius I. The center of the circle is (X,Y). Commands can be specified in either the absolute or incremental mode. To drill in the clockwise direction, specify a negative value for B.

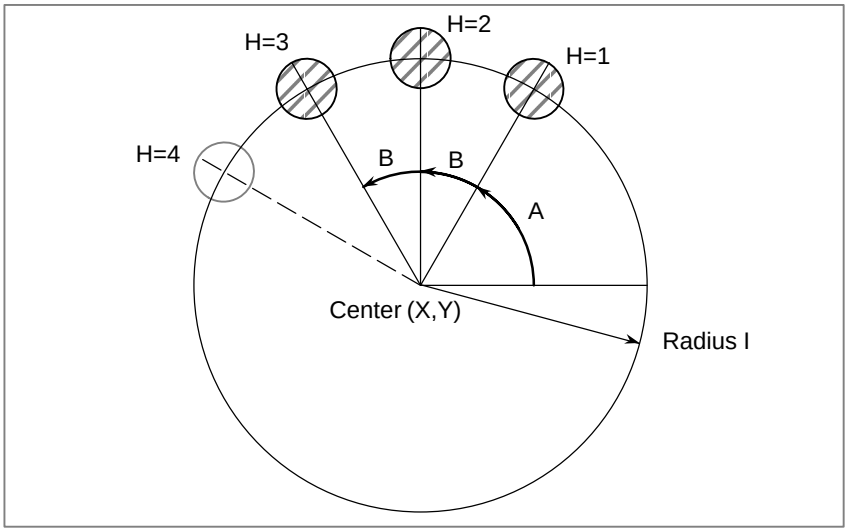

- **Calling format**

```
G65 P9100 Xx Yy Zz Rr Ff Ii Aa Bb Hh;
```

X: X coordinate of the center of the circle
(absolute or incremental specification) . . . . . (#24)
Y: Y coordinate of the center of the circle
(absolute or incremental specification) . . . . . (#25)
Z: Hole depth . . . . . (#26)
R: Coordinates of an approach point . . . . . (#18)
F: Cutting feedrate . . . . . (#9)
I : Radius of the circle . . . . . (#4)
A: Drilling start angle . . . . . (#1)
B: Incremental angle
(clockwise when a negative value is specified) . . . . . (#2)
H: Number of holes . . . . . (#11)

- **Program calling a macro program**

```
O0002;
G90 G92 X0 Y0 Z100.0;
G65 P9100 X100.0 Y50.0 R30.0 Z–50.0 F500 I100.0 A0 B45.0 H5;
M30;
```

- **Macro program (called program)**

```
O9100;
  #3=#4003; . . . . . Stores G code of group 3.
  G81 Z#26 R#18 F#9 K0; (Note) . . . . . Drilling cycle.
  . . . . . Note: L0 can also be used.
  IF[#3 EQ 90]GOTO 1; . . . . . Branches to N1 in the G90 mode.
  #24=#5001+#24; . . . . . Calculates the X coordinate of the center.
  #25=#5002+#25; . . . . . Calculates the Y coordinate of the center.
N1 WHILE[#11 GT 0]DO 1;
 . . . . . Until the number of remaining holes reaches 0
  #5=#24+#4*COS[#1]; . . . . Calculates a drilling position on the X–axis.
  #6=#25+#4*SIN[#1]; . . . . Calculates a drilling position on the Y–axis.
  G90 X#5 Y#6; . Performs drilling after moving to the target position.
  #1=#1+#2; . . . . . Updates the angle.
  #11=#11–1; . . . . . Decrements the number of holes.
  END 1;
  G#3 G80; . . . . . Returns the G code to the original state.
  M99;
```

Meaning of variables:
#3: Stores the G code of group 3.
#5: X coordinate of the next hole to drill
#6: Y coordinate of the next hole to drill

15.6.2 Modal Call (G66)

Once G66 is issued to specify a modal call a macro is called after a block specifying movement along axes is executed. This continues until G67 is issued to cancel a modal call.

G66 P p L ℓ <argument–specification> ;

P : Number of the program to call
ℓ : Repetition count (1 by default)
Argument : Data passed to the macro

```
O0001 ;
   :
G66 P9100 L2 A1.0 B2.0 ;
G00 G90 X100.0 ;
Y200.0 ;
X150.0 Y300.0 ;
G67 ;
   :
M30 ;
```

```
O9100 ;
   :
G00 Z–#1 ;
G01 Z–#2 F300 ;
   :
   :
   :
   :
M99 ;
```

Explanations

• Call

- After G66, specify at address P a program number subject to a modal call.
- When a number of repetitions is required, a number from 1 to 9999 can be specified at address L.
- As with a simple call (G65), data passed to a macro program is specified in arguments.

• Cancellation

When a G67 code is specified, modal macro calls are no longer performed in subsequent blocks.

• Call nesting

Calls can be nested to a depth of four levels including simple calls (G65) and modal calls (G66). This does not include subprogram calls (M98).

• Modal call nesting

Modal calls can be nested by specifying another G66 code during a modal call.

Limitations

- In a G66 block, no macros can be called.
- G66 needs to be specified before any arguments.
- No macros can be called in a block which contains a code such as a miscellaneous function that does not involve movement along an axis.
- Local variables (arguments) can only be set in G66 blocks. Note that local variables are not set each time a modal call is performed.

Sample program

The same operation as the drilling canned cycle G81 is created using a custom macro and the machining program makes a modal macro call. For program simplicity, all drilling data is specified using absolute values.

The canned cycle consists of the following basic operations:

Operation 1:
Positioning along the X–axis and Y–axis

Operation 2:
Rapid traverse to point R

Operation 3:
Cutting feed to point Z

Operation 4:
Rapid traverse to point R or I

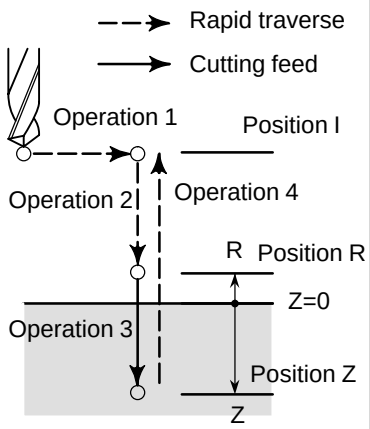

• Calling format

```
G65 P9110 X x Y y Z z R r F f L l ;
```

X: X coordinate of the hole (absolute specification only) .... (#24)
Y: Y coordinate of the hole (absolute specification only) .... (#25)
Z: Coordinates of position Z (absolute specification only) ... (#26)
R: Coordinates of position R (absolute specification only) ... (#18)
F: Cutting feedrate ..... (#9)
L: Repetition count

• Program that calls a macro program

```
O0001;
G28 G91 X0 Y0 Z0;
G92 X0 Y0 Z50.0;
G00 G90 X100.0 Y50.0;
G66 P9110 Z–20.0 R5.0 F500;
G90 X20.0 Y20.0;
X50.0;
Y50.0;
X70.0 Y80.0;
G67;
M30;
```

• Macro program (program called)

```
O9110;
  #1=#4001; ..... Stores G00/G01.
  #3=#4003; ..... Stores G90/G91.
  #4=#4109; ..... Stores the cutting feedrate.
  #5=#5003; ..... Stores the Z coordinate at the start of drilling.
  G00 G90 Z#18; ..... Positioning at position R
  G01 Z#26 F#9; ..... Cutting feed to position Z
  IF[#4010 EQ 98]GOTO 1; ..... Return to position I
  G00 Z#18; ..... Positioning at position R
  GOTO 2;
N1 G00 Z#5; ..... Positioning at position I
N2 G#1 G#3 F#4; ..... Restores modal information.
  M99;
```

15.6.3 Macro Call Using G Code

By setting a G code number used to call a macro program in a parameter, the macro program can be called in the same way as for a simple call (G65).

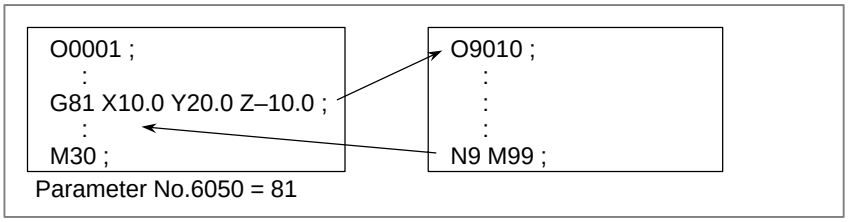

Explanations

By setting a G code number from 1 to 9999 used to call a custom macro program (O9010 to O9019) in the corresponding parameter (N0.6050 to No.6059), the macro program can be called in the same way as with G65. For example, when a parameter is set so that macro program O9010 can be called with G81, a user–specific cycle created using a custom macro can be called without modifying the machining program.

- **Correspondence between parameter numbers and program numbers**

Program number	Parameter number
O9010	6050
O9011	6051
O9012	6052
O9013	6053
O9014	6054
O9015	6055
O9016	6056
O9017	6057
O9018	6058
O9019	6059

- **Repetition**

As with a simple call, a number of repetitions from 1 to 9999 can be specified at address L.

- **Argument specification**

As with a simple call, two types of argument specification are available: Argument specification I and argument specification II. The type of argument specification is determined automatically according to the addresses used.

Limitations

- **Nesting of calls using G codes**

In a program called with a G code, no macros can be called using a G code. A G code in such a program is treated as an ordinary G code. In a program called as a subprogram with an M or T code, no macros can be called using a G code. A G code in such a program is also treated as an ordinary G code.

15.6.4 Macro Call Using an M Code

By setting an M code number used to call a macro program in a parameter, the macro program can be called in the same way as with a simple call (G65).

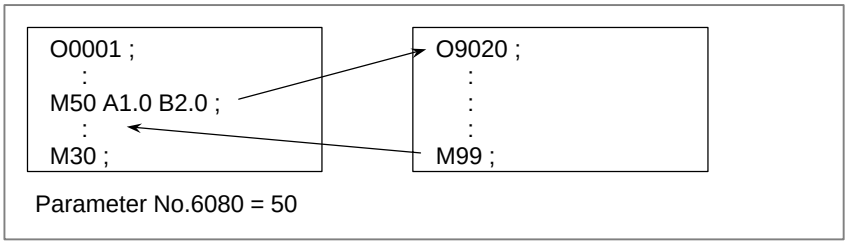

Explanations

By setting an M code number from 1 to 99999999 used to call a custom macro program (9020 to 9029) in the corresponding parameter (No.6080 to No.6089), the macro program can be called in the same way as with G65.

- **Correspondence between parameter numbers and program numbers**

Program number	Parameter number
O9020	6080
O9021	6081
O9022	6082
O9023	6083
O9024	6084
O9025	6085
O9026	6086
O9027	6087
O9028	6088
O9029	6089

- **Repetition**

As with a simple call, a number of repetitions from 1 to 9999 can be specified at address L.

- **Argument specification**

As with a simple call, two types of argument specification are available: Argument specification I and argument specification II. The type of argument specification is determined automatically according to the addresses used.

Limitations

- An M code used to call a macro program must be specified at the start of a block.
- In a macro called with a G code or in a program called as a subprogram with an M or T code, no macros can be called using an M code. An M code in such a macro or program is treated as an ordinary M code.

15.6.5 Subprogram Call Using an M Code

By setting an M code number used to call a subprogram (macro program) in a parameter, the macro program can be called in the same way as with a subprogram call (M98).

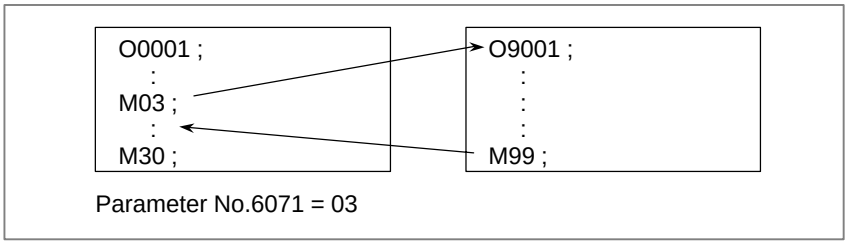

Explanations

By setting an M code number from 1 to 99999999 used to call a subprogram in a parameter (No.6071 toNo. 6079), the corresponding custom macro program (O9001 to O9009) can be called in the same way as with M98.

- **Correspondence between parameter numbers and program numbers**

Program number	Parameter number
O9001	6071
O9002	6072
O9003	6073
O9004	6074
O9005	6075
O9006	6076
O9007	6077
O9008	6078
O9009	6079

- **Repetition**

As with a simple call, a number of repetitions from 1 to 9999 can be specified at address L.

- **Argument specification**

Argument specification is not allowed.

- **M code**

An M code in a macro program that has been called is treated as an ordinary M code.

Limitations

In a macro called with a G code or in a program called with an M or T code, no subprograms can be called using an M code. An M code in such a macro or program is treated as an ordinary M code.

15.6.6 Subprogram Calls Using a T Code

By enabling subprograms (macro program) to be called with a T code in a parameter, a macro program can be called each time the T code is specified in the machining program.

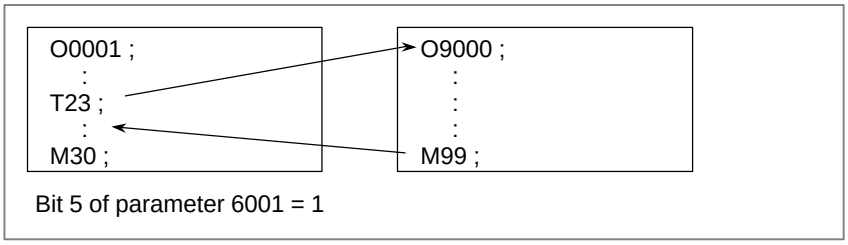

Explanations

- **Call**

By setting bit 5 of parameter TCS No.6001 to 1, the macro program O9000 can be called when a T code is specified in the machining program. A T code specified in a machining program is assigned to common variable #149.

Limitations

In a macro called with a G code or in a program called with an M or T code, no subprograms can be called using a T code. A T code in such a macro or program is treated as an ordinary T code.

15.6.7 Sample Program

By using the subprogram call function that uses M codes, the cumulative usage time of each tool is measured.

Conditions

- The cumulative usage time of each of tools T01 to T05 is measured. No measurement is made for tools with numbers greater than T05.
- The following variables are used to store the tool numbers and measured times:

#501	Cumulative usage time of tool number 1
#502	Cumulative usage time of tool number 2
#503	Cumulative usage time of tool number 3
#504	Cumulative usage time of tool number 4
#505	Cumulative usage time of tool number 5

- Usage time starts being counted when the M03 command is specified and stops when M05 is specified. System variable #3002 is used to measure the time during which the cycle start lamp is on. The time during which the machine is stopped by feed hold and single block stop operation is not counted, but the time used to change tools and pallets is included.

Operation check

- **Parameter setting**

Set 3 in parameter No.6071, and set 05 in parameter No.6072.

- **Variable value setting**

Set 0 in variables #501 to #505.

- **Program that calls a macro program**

```
O0001;
T01 M06;
M03;

M05; ..... Changes #501.
T02 M06;
M03;

M05; ..... Changes #502.
T03 M06;
M03;

M05; ..... Changes #503.
T04 M06;
M03;

M05; ..... Changes #504.
T05 M06;
M03;

M05; ..... Changes #505.
M30;
```

Macro program (program called)

```
O9001(M03); ..... Macro to start counting
  M01;
  IF[#4120 EQ 0]GOTO 9; ..... No tool specified
  IF[#4120 GT 5]GOTO 9; ..... Out–of–range tool number
  #3002=0; ..... Clears the timer.
N9 M03; ..... Rotates the spindle in the forward direction.
  M99;

O9002(M05); ..... Macro to end counting
  M01;
  IF[#4120 EQ 0]GOTO 9; ..... No tool specified
  IF[#4120 GT 5]GOTO 9; ..... Out–of–range tool number
  #[500+#4120]=#3002+#[500+#4120]; .. Calculates cumulative time.

N9 M05; ..... Stops the spindle.
  M99;
```

15.7 PROCESSING MACRO STATEMENTS

For smooth machining, the CNC prereads the NC statement to be performed next. This operation is referred to as buffering. During AI advanced preview control mode, the CNC prereads not only the next block but also the multiple blocks. And in the cutter compensation mode (G41, G42), the CNC prereads the NC statements two or three blocks ahead to find intersections even if the CNC is not in AI advanced preview control mode. Macro statements for arithmetic expressions and conditional branches are processed as soon as they are read into the buffer. Therefore, the timing of the macro statement execution is not always the specified order.
At the blocks containing M00, M01, M02 or M30, blocks containing M–codes for which buffering is suppressed by setting parameter (No.3411–3432), and blocks containing prevention buffering G codes such as G53, the CNC stops to preread the NC statement after that. Then, the stop of the macro statement execution is guaranteed until such M codes or G codes complete its execution.

15.7.1 Details of NC statements and macro statements execution

- **When the next block is not buffered (M codes that are not buffered, G53, G31, etc.)**

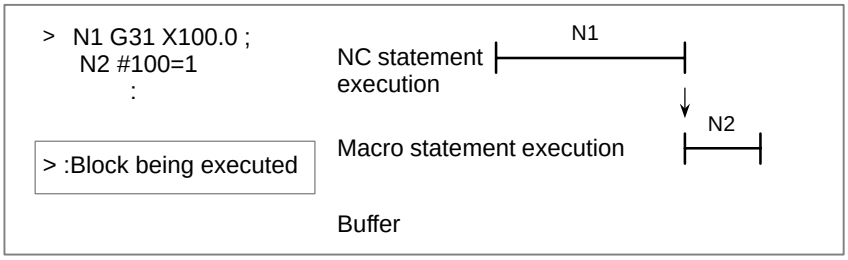

NOTE
In case that you need to execute the macro statement after completing the block just before the macro statement, specify M code or G code that are not buffered just before the macro statement. Specially, in case of reading / writing the system variables to control signals, coordinates, offset value, etc., it may different system variable data by the timing of the NC statement execution. To avoid this phenomenon, specify such M codes or G codes before the macro statement, if necessary.

- **Buffering the next block in other than cutter compensation mode (G41, G42) (normally prereading one block)**

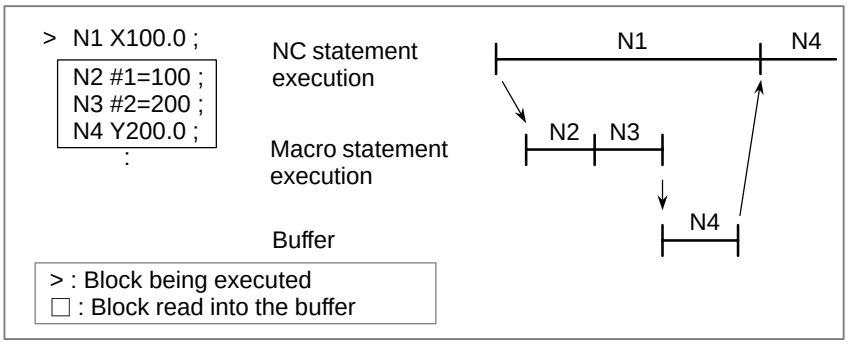

When N1 is being executed, the next NC statement (N4) is read into the buffer.The macro statements (N2, N3) between N1 and N4 are processed during execution of N1.

- **Buffering the next block in cutter compensation mode (G41, G42)**

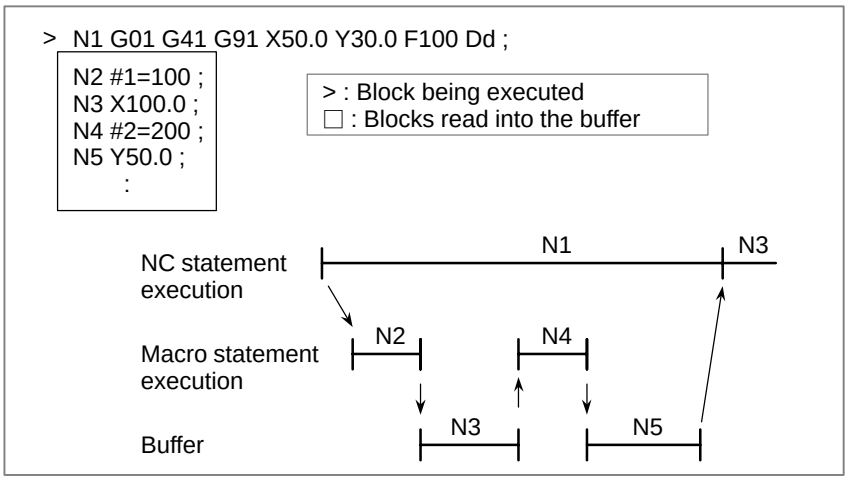

When N1 is being executed, the NC statements in the next two blocks (up to N5) are read into the buffer. The macro statements (N2, N4) between N1 and N5 are processed during execution of N1.

- **When the next block involves no movement in cutter compensation C (G41, G42) mode**

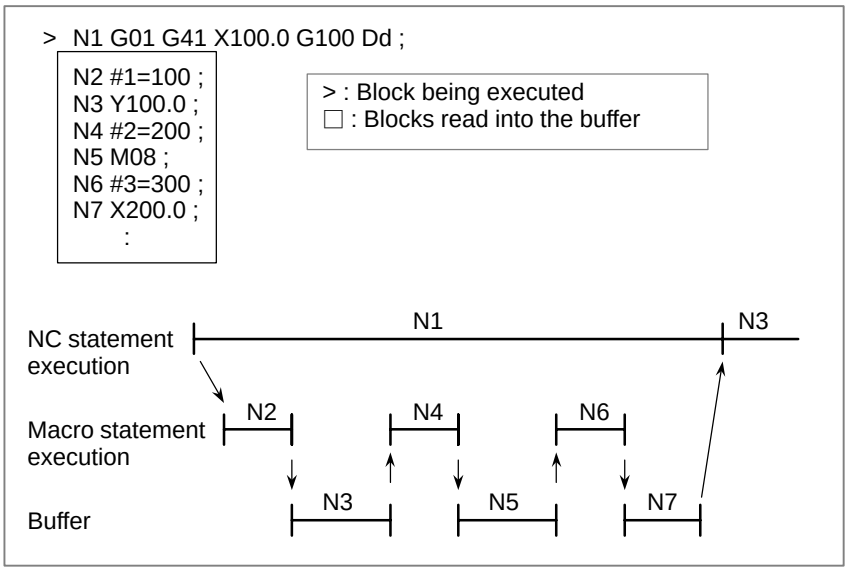

When the N1 is being executed, the NC statements in the next two blocks (up to N5) are read into the buffer. Since N5 is a block that involves no movement, an intersection cannot be calculated. In this case, the NC statements in the next three blocks (up to N7) are read. The macro statements (N2, N4, and N6) between N1 and N7 are processed during execution of N1.

15.7.2 Caution for using system variables

In case of using the following system variables (Table 15.7.2 (a)) in macro program and you need to execute the macro program after completing the block execution just before the macro program, M code which can prevent buffering (parameter No.3411–3432) or G53 command block is necessary just before the macro program.

Table 15.7.2 (a)

Meaning	Read Write	Number of Variable	Note (In case not to command M code preventing buffering or G53 block.)
Interface signals	Read	#1000 – #1015 , #1032	The data is read at buffering a macro program.
	Write	#1100 – #1115 , #1132	The data is written at buffering a macro program.
Tool compensation values	Write	#10001 –	The data is written at buffering a macro program.
Macro alarms	Write	#3000	Macro alarm is generated at maximum 2 blocks before a macro program.

Table 15.7.2 (a)

Meaning	Read Write	Number of Variable	Note (In case not to command M code preventing buffering or G53 block.)
Program stop with message	Write	#3006	Program stops at maximum 2 blocks before a macro program.
Time information	Read Write	#3001,#3002	The data is read / written at buffering a macro program.
	Read	#3011,#3012	The data is read at buffering a macro program.
Automatic operation control	Write	#3003, #3004	Setting data is available at maximum 2 blocks before a macro program.
Settings	Write	#3005	The data is written at buffering a macro program.
Mirror image	Read	#3007	The data is read at buffering a macro program.
Currently selected additional workpiece coordinate system	Read	#4130(P) #4014 (G54 – G59)	The data is read at maximum 3 blocks before a macro program.
Current position (Machine coordinate system)	Read	#5021 – #5028	The uncertain position in moving is read.
Current position (Workpiece coordinate system)	Read	#5041 – #5048	The uncertain position in moving is read.
Tool length offset value	Read	#5081 – #5088	The offset value of current execution block is read.
Deviated servo position	Read	#5101 – #5108	The uncertain deviation in moving is read.
Workpiece zero point offset value	Write	#5201 – #5328 #7001 – #7948	The data is written at buffering a macro program.

Example)

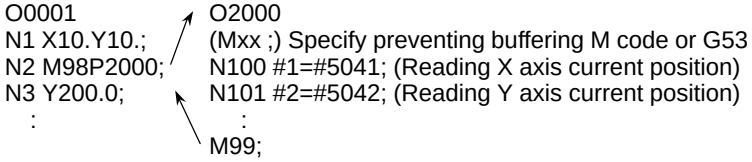

In above case, the buffering of N2 block is done and the macro program of O2000 is read and executed during N1 block of main program O1000 execution. Therefore, the current position readings are executed during axes movements at N1 block. So the unexpected position data can be read to #1 and #2 because of axes movements. In this case, please specify M code preventing buffering Mxx ; (or G53 ;) just before N100 block of O2000. By this, the position data at completing the execution of N1 block can be read to #1 and #2 because O2000 is executed after completing the execution of N1 block of O0001.

NOTE

G53 can not be specified during the canned cycle mode. (In this case, the P/S alarm No.44 is generated.) Therefore, in order to prevent buffering during the canned cycle mode, please specify preventing buffering M code.

15.8 REGISTERING CUSTOM MACRO PROGRAMS

Custom macro programs are similar to subprograms. They can be registered and edited in the same way as subprograms. The storage capacity is determined by the total length of tape used to store both custom macros and subprograms.

15.9 LIMITATIONS

- **MDI operation**

  The macro call command can be specified in MDI mode. During automatic operation, however, it is impossible to switch to the MDI mode for a macro program call.

- **Sequence number search**

  A custom macro program cannot be searched for a sequence number.

- **Single block**

  Even while a macro program is being executed, blocks can be stopped in the single block mode.
  A block containing a macro call command (G65, G66, or G67) does not stop even when the single block mode is on. Blocks containing arithmetic operation commands and control commands can be stopped in single block mode by setting SBM (bit 5 of parameter 6000) to 1.
  Single block stop operation is used for testing custom macro programs. Note that when a single block stop occurs at a macro statement in cutter compensation C mode, the statement is assumed to be a block that does not involve movement, and proper compensation cannot be performed in some cases. (Strictly speaking, the block is regarded as specifying a movement with a travel distance 0.)

- **Optional block skip**

  A / appearing in the middle of an <expression> (enclosed in brackets [ ] on the right–hand side of an arithmetic expression) is regarded as a division operator; it is not regarded as the specifier for an optional block skip code.

- **Operation in EDIT mode**

  By setting NE8 (bit 0 of parameter 3202) and NE9 (bit 4 of parameter 3202) to 1, deletion and editing are disabled for custom macro programs and subprograms with program numbers 8000 to 8999 and 9000 to 9999. This prevents registered custom macro programs and subprograms from being destroyed by accident. When the entire memory is cleared (by pressing the RESET and DELETE keys at the same time to turn on the power), the contents of memory such as custom macro programs are deleted.

- **Reset**

  With a reset operation, local variables and common variables #100 to #149 are cleared to null values. They can be prevented from clearing by setting, CLV and CCV (bits 7 and 6 of parameter 6001). System variables #1000 to #1133 are not cleared.
  A reset operation clears any called states of custom macro programs and subprograms, and any DO states, and returns control to the main program.

- **Display of the PROGRAM RESTART**

  As with M98, the M and T codes used for subprogram calls are not displayed.

- **Feed hold**

  When a feed hold is enabled during execution of a macro statement, the machine stops after execution of the macro statement. The machine also stops when a reset or alarm occurs.

- **Constant values that can be used in <expression>**

  +0.0000001 to +99999999
  –99999999 to –0.0000001
  The number of significant digits is 8 (decimal). If this range is exceeded, P/S alarm No. 003 occurs.

15.10 EXTERNAL OUTPUT COMMANDS

In addition to the standard custom macro commands, the following macro commands are available. They are referred to as external output commands.

- **BPRNT**
- **DPRNT**
- **POPEN**
- **PCLOS**

These commands are provided to output variable values and characters through the reader/punch interface.

Explanations

Specify these commands in the following order:

Open command: POPEN
Before specifying a sequence of data output commands, specify this command to establish a connection to an external input/output device.

Data output command: BPRNT or DPRNT
Specify necessary data output.

Close command: PCLOS
When all data output commands have completed, specify PCLOS to release a connection to an external input/output device.

- **Open command POPEN**

POPEN
POPEN establishes a connection to an external input/output device. It must be specified before a sequence of data output commands. The CNC outputs a DC2 control code.

- **Data output command BPRNT**

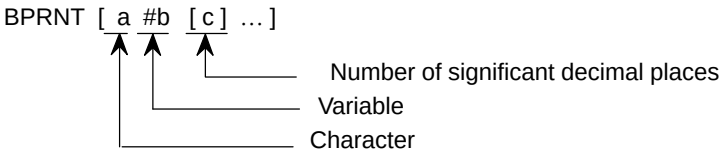

The BPRNT command outputs characters and variable values in binary.

(i) Specified characters are converted to the codes according to the setting data (ISO) that is output at that time.
Specifiable characters are as follows:
- **Letters (A to Z)**
- **Numbers**
- **Special characters (*, /, +, –, etc.)**

An asterisk (*) is output by a space code.

(ii) All variables are stored with a decimal point. Specify a variable followed by the number of significant decimal places enclosed in brackets. A variable value is treated as 2–word (32–bit) data, including the decimal digits. It is output as binary data starting from the highest byte.

(iii) When specified data has been output, an EOB code is output according to the setting code (ISO).

(iv) Null variables are regarded as 0.

Example)

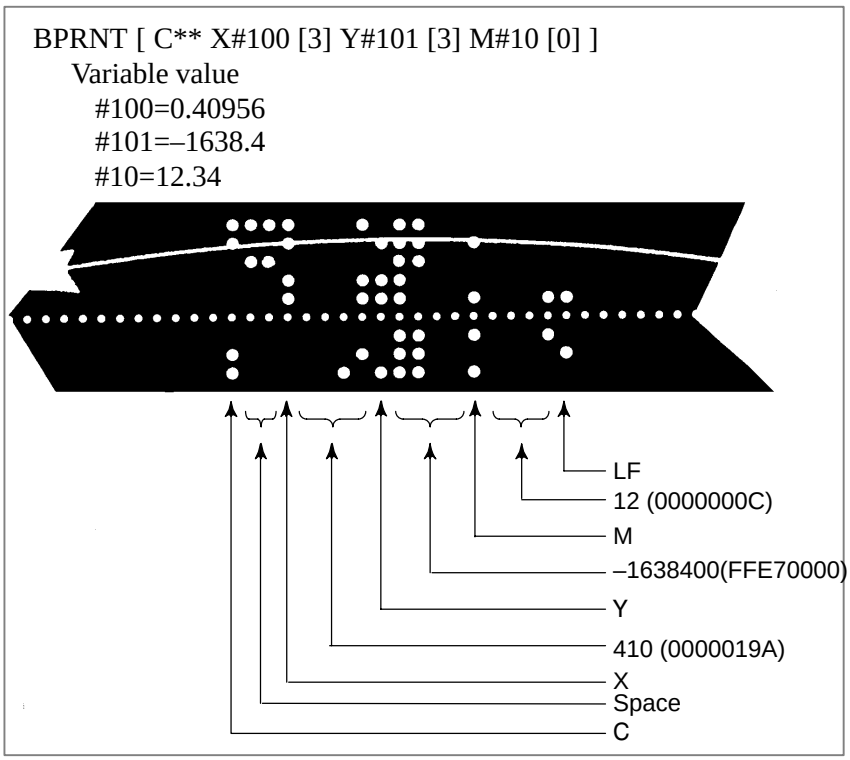

- **Data output command DPRNT**

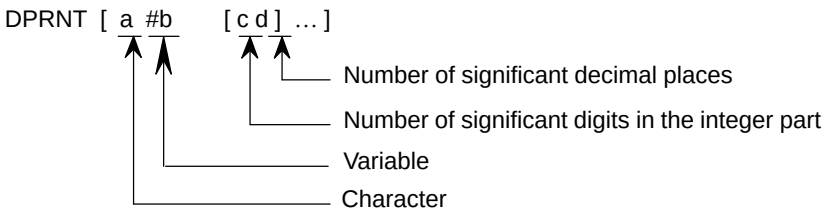

The DPRNT command outputs characters and each digit in the value of a variable according to the code set in the settings (ISO).

(i) For an explanation of the DPRNT command, see Items (i), (iii), and (iv) for the BPRNT command.

(ii) When outputting a variable, specify # followed by the variable number, then specify the number of digits in the integer part and the number of decimal places enclosed in brackets.
One code is output for each of the specified number of digits, starting with the highest digit. For each digit, a code is output according to the settings (ISO). The decimal point is also output using a code set in the settings (ISO).
Each variable must be a numeric value consisting of up to eight digits. When high–order digits are zeros, these zeros are not output if PRT (bit1 of parameter 6001) is 1. If parameter PRT is 0, a space code is output each time a zero is encountered.
When the number of decimal places is not zero, digits in the decimal part are always output. If the number of decimal places is zero, no decimal point is output.
When PRT (bit 1 of parameter 6001) is 0, a space code is output to indicate a positive number instead of +; if parameter PRT is 1, no code is output.

Example)

DPRNT [X#2 [53] Y#5 [53] T#30 [20]]
Variable value
#2=128.47398
#5=–91.2
#30=123.456

(1) Parameter PRT(No.6001#1)=0

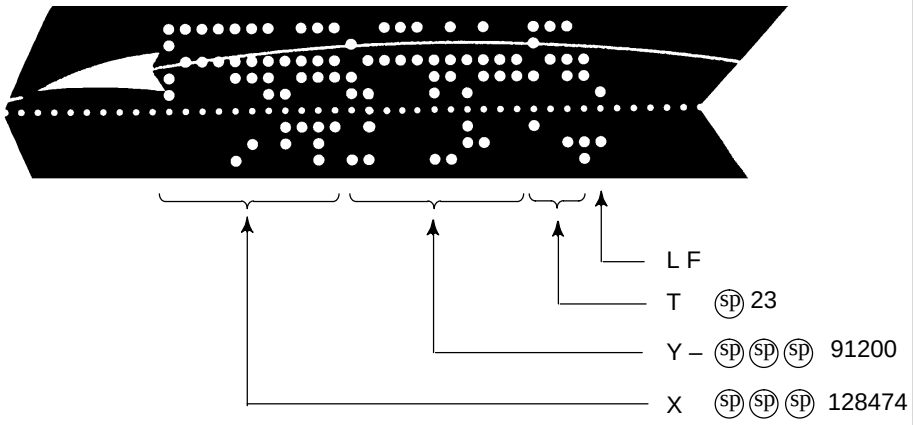

(2) Parameter PRT(No.6001#1)=0

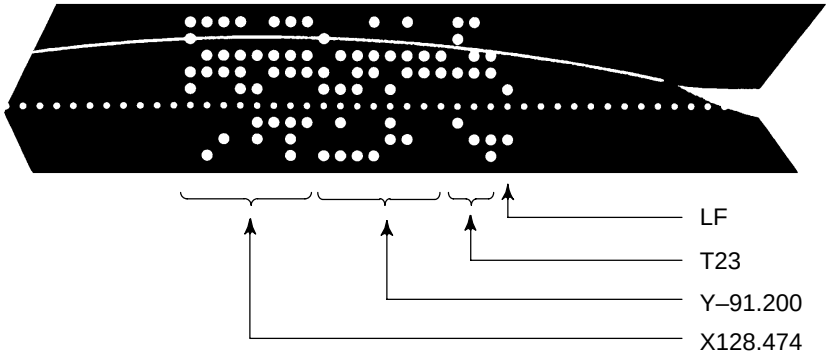

- **Close command PCLOS**

PCLOS ;

The PCLOS command releases a connection to an external input/output device. Specify this command when all data output commands have terminated. DC4 control code is output from the CNC.

- **Required setting**

Specify the channel use for setting data (I/O channel). According to the specification of this data, set data items (such as the baud rate) for the reader/punch interface.

I/O channel 0 : Parameters (No.101, No.102 and No.103)
I/O channel 1 : Parameters (No.111, No.112 and No.113)
I/O channel 2 : Parameters (No.112, No.122 and No.123)

Never specify the output device FANUC Cassette or Floppy for punching.
When specifying a DPRNT command to output data, specify whether leading zeros are output as spaces (by setting PRT (bit 1 of parameter 6001) to 1 or 0).
To indicate the end of a line of data in ISO code, specify whether to use only an LF (CRO, of bit 4 of parameter 6001 is 0) or an LF and CR (CRO of bit 4 of parameter 6001 is 1).

NOTE

1 It is not necessary to always specify the open command (POPEN), data output command (BPRNT, DPRNT), and close command (PCLOS) together. Once an open command is specified at the beginning of a program, it does not need to be specified again except after a close command was specified.
2 Be sure to specify open commands and close commands in pairs. Specify the close command at the end of the program. However, do not specify a close command if no open command has been specified.
3 When a reset operation is performed while commands are being output by a data output command, output is stopped and subsequent data is erased. Therefore, when a reset operation is performed by a code such as M30 at the end of a program that performs data output, specify a close command at the end of the program so that processing such as M30 is not performed until all data is output.
4 Abbreviated macro words enclosed in brackets [ ] remains unchanged. However, note that when the characters in brackets are divided and input several times, the second and subsequent abbreviations are converted and input.
5 O can be specified in brackets [ ]. Note that when the characters in brackets [ ] are divided and input several times, O is omitted in the second and subsequent inputs.

15.11 INTERRUPTION TYPE CUSTOM MACRO

When a program is being executed, another program can be called by inputting an interrupt signal (UINT) from the machine. This function is referred to as an interruption type custom macro function. Program an interrupt command in the following format:

Format

M96 P○○○○ ;	Enables custom macro interrupt
M97 ;	Disables custom macro interrupt

Explanations

Use of the interruption type custom macro function allows the user to call a program during execution of an arbitrary block of another program. This allows programs to be operated to match situations which vary from time to time.

(1) When a tool abnormality is detected, processing to handle the abnormality is started by an external signal.

(2) A sequence of machining operations is interrupted by another machining operation without the cancellation of the current operation.

(3) At regular intervals, information on current machining is read.
Listed above are examples like adaptive control applications of the interruption type custom macro function.

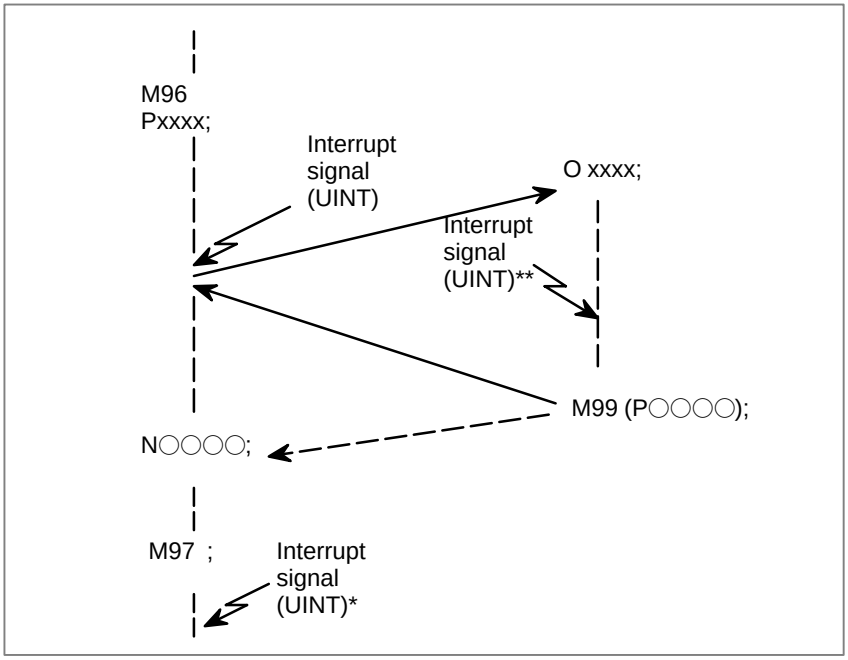

Fig 15.11 Interruption type sustom macro function

When M96Pxxxx is specified in a program, subsequent program operation can be interrupted by an interrupt signal (UINT) input to execute the program specified by Pxxxx.

CAUTION
When the interrupt signal (UINT, marked by * in Fig. 15.11) is input after M97 is specified, it is ignored. And the interrupt signal must not be input during execution of the interrupt program.

15.11.1 Specification Method

Explanations

- **Interrupt conditions**

A custom macro interrupt is available only during program execution. It is enabled under the following conditions

– When memory operation or MDI operation is selected
– When STL (start lamp) is on
– When a custom macro interrupt is not currently being processed

- **Specification**

Generally, the custom macro interrupt function is used by specifying M96 to enable the interrupt signal (UINT) and M97 to disable the signal.
Once M96 is specified, a custom macro interrupt can be initiated by the input of the interrupt signal (UINT) until M97 is specified or the NC is reset. After M97 is specified or the NC is reset, no custom macro interrupts are initiated even when the interrupt signal (UINT) is input. The interrupt signal (UINT) is ignored until another M96 command is specified.

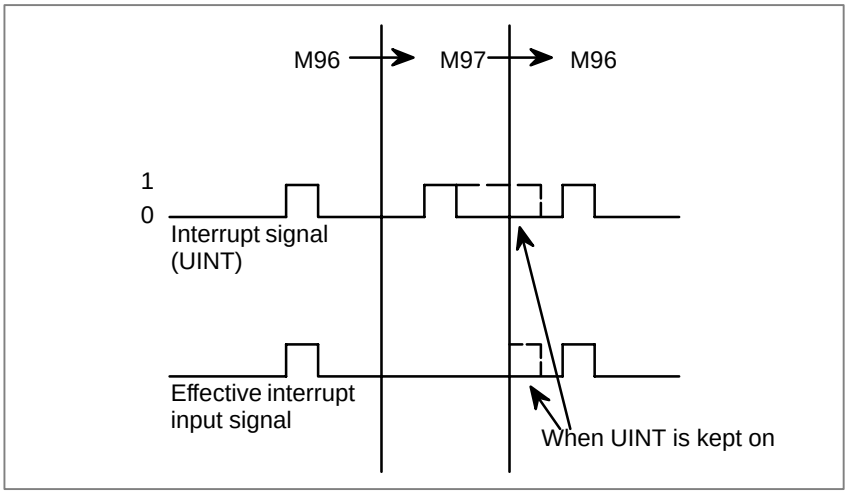

The interrupt signal (UINT) becomes valid after M96 is specified. Even when the signal is input in M97 mode, it is ignored. When the signal input in M97 mode is kept on until M96 is specified, a custom macro interrupt is initiated as soon as M96 is specified (only when the status–triggered scheme is employed); when the edge–triggered scheme is employed, the custom macro interrupt is not initiated even when M96 is specified.

NOTE
For the status–triggered and edge–triggered schemes, see Item “Custom macro interrupt signal (UINT)” of II– 15.11.2.

15.11.2 Details of Functions

Explanations

- **Subprogram–type interrupt and macro–type interrupt**

There are two types of custom macro interrupts: Subprogram–type interrupts and macro–type interrupts. The interrupt type used is selected by MSB (bit 5 of parameter 6003).

(a) Subprogram–type interrupt
An interrupt program is called as a subprogram. This means that the levels of local variables remain unchanged before and after the interrupt. This interrupt is not included in the nesting level of subprogram calls.

(b) Macro–type interrupt
An interrupt program is called as a custom macro. This means that the levels of local variables change before and after the interrupt. The interrupt is not included in the nesting level of custom macro calls. When a subprogram call or a custom macro call is performed within the interrupt program, this call is included in the nesting level of subprogram calls or custom macro calls. Arguments cannot be passed from the current program even when the custom macro interrupt is a macro–type interrupt.

- **M codes for custom macro interrupt control**

In general, custom macro interrupts are controlled by M96 and M97. However, these M codes, may already being used for other purposes (such as an M function or macro M code call) by some machine tool builders. For this reason, MPR (bit 4 of parameter 6003) is provided to set M codes for custom macro interrupt control.
When specifying this parameter to use the custom macro interrupt control M codes set by parameters, set parameters 6033 and 6034 as follows:
Set the M code to enable custom macro interrupts in parameter 6033, and set the M code to disable custom macro interrupts in parameter 6034.
When specifying that parameter–set M codes are not used, M96 and M97 are used as the custom macro control M codes regardless of the settings of parameters 6033 and 6034.
The M codes used for custom macro interrupt control are processed internally (they are not output to external units). However, in terms of program compatibility, it is undesirable to use M codes other than M96 and M97 to control custom macro interrupts.

- **Custom macro interrupts and NC statements**

When performing a custom macro interrupt, the user may want to interrupt the NC statement being executed, or the user may not want to perform the interrupt until the execution of the current block is completed. MIN (bit 2 of parameter 6003)is used to select whether to perform interrupts even in the middle of a block or to wait until the end of the block.

Type I (when an interrupt is performed even in the middle of a block)

(i) When the interrupt signal (UINT) is input, any movement or dwell being performed is stopped immediately and the interrupt program is executed.

(ii) If there are NC statements in the interrupt program, the command in the interrupted block is lost and the NC statement in the interrupt program is executed. When control is returned to the interrupted program, the program is restarted from the next block after the interrupted block.

(iii) If there are no NC statements in the interrupt program, control is returned to the interrupted program by M99, then the program is restarted from the command in the interrupted block.

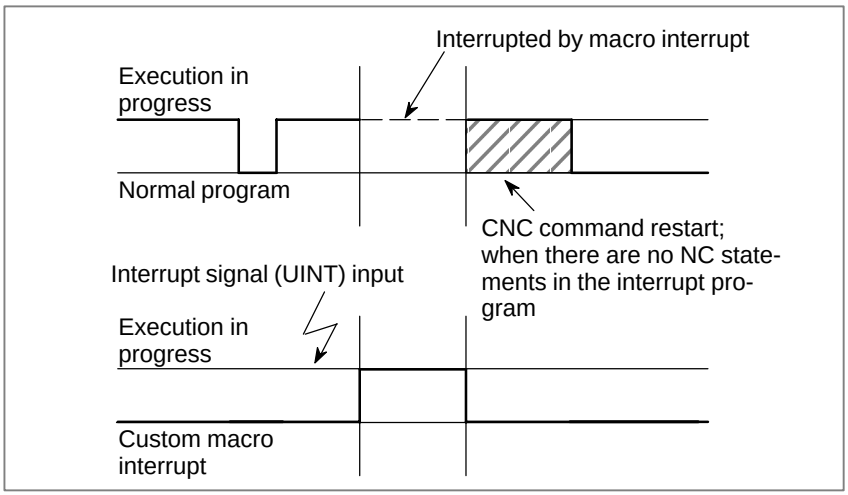

Type II (when an interrupt is performed at the end of the block)

(i) If the block being executed is not a block that consists of several cycle operations such as a drilling canned cycle and automatic reference position return (G28), an interrupt is performed as follows:
When an interrupt signal (UINT) is input, macro statements in the interrupt program are executed immediately unless an NC statement is encountered in the interrupt program. NC statements are not executed until the current block is completed.

(ii) If the block being executed consists of several cycle operations, an interrupt is performed as follows:
When the last movement in the cycle operations is started, macro statements in the interrupt program are executed unless an NC statement is encountered. NC statements are executed after all cycle operations are completed.

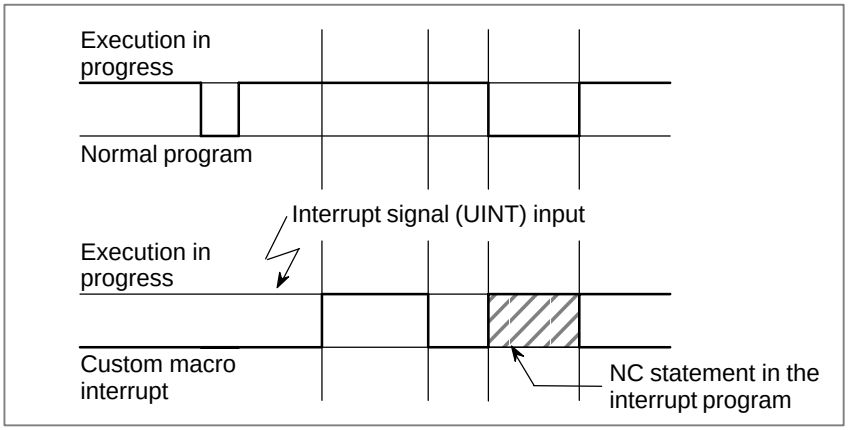

- **Conditions for enabling and disabling the custom macro interrupt signal**

The interrupt signal becomes valid after execution starts of a block that contains M96 for enabling custom macro interrupts. The signal becomes invalid when execution starts of a block that contains M97.
While an interrupt program is being executed, the interrupt signal becomes invalid. The signal become valid when the execution of the block that immediately follows the interrupted block in the main program is started after control returns from the interrupt program. In type I, if the interrupt program consists of only macro statements, the interrupt signal becomes valid when execution of the interrupted block is started after control returns from the interrupt program.

- **Custom macro interrupt during execution of a block that involves cycle operation**

For type I

Even when cycle operation is in progress, movement is interrupted, and the interrupt program is executed. If the interrupt program contains no NC statements, the cycle operation is restarted after control is returned to the interrupted program. If there are NC statements, the remaining operations in the interrupted cycle are discarded, and the next block is executed.

For type II

When the last movement of the cycle operation is started, macro statements in the interrupt program are executed unless an NC statement is encountered. NC statements are executed after cycle operation is completed.

- **Custom macro interrupt signal (UINT)**

There are two schemes for custom macro interrupt signal (UINT) input: The status–triggered scheme and edge– triggered scheme. When the status–triggered scheme is used, the signal is valid when it is on. When the edge triggered scheme is used, the signal becomes valid on the rising edge when it switches from off to on status.
One of the two schemes is selected with TSE (bit 3 of parameter 6003). When the status–triggered scheme is selected by this parameter, a custom macro interrupt is generated if the interrupt signal (UINT) is on at the time the signal becomes valid. By keeping the interrupt signal (UINT) on, the interrupt program can be executed repeatedly.
When the edge–triggered scheme is selected, the interrupt signal (UINT) becomes valid only on its rising edge. Therefore, the interrupt program is executed only momentarily (in cases when the program consists of only macro statements). When the status–triggered scheme is inappropriate, or when a custom macro interrupt is to be performed just once for the entire program (in this case, the interrupt signal may be kept on), the edge–triggered scheme is useful.
Except for the specific applications mentioned above, use of either scheme results in the same effects. The time from signal input until a custom macro interrupt is executed does not vary between the two schemes.

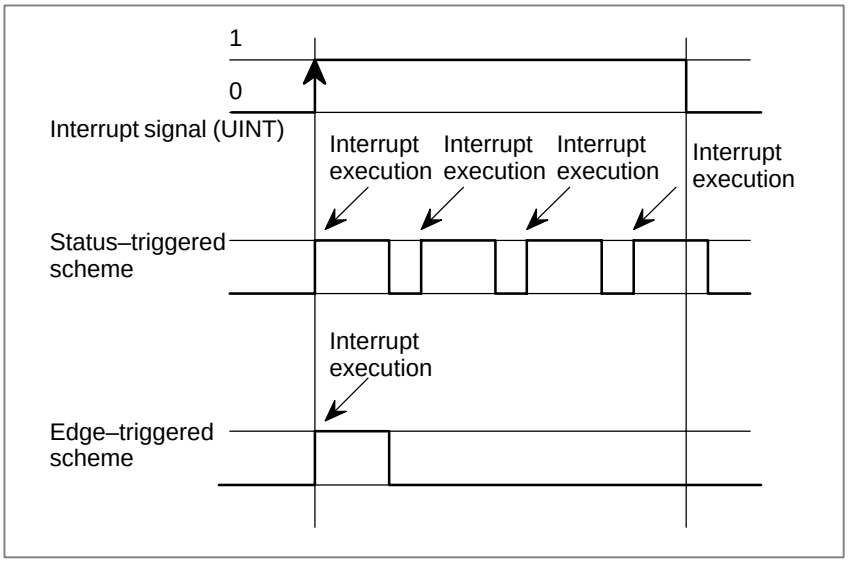

In the above example, an interrupt is executed four times when the status triggered scheme is used; when the edge– triggered scheme is used, the interrupt is executed just once.

- **Return from a custom macro interrupt**

To return control from a custom macro interrupt to the interrupted program, specify M99. A sequence number in the interrupted program can also be specified using address P. If this is specified, the program is searched from the beginning for the specified sequence number. Control is returned to the first sequence number found.
When a custom macro interrupt program is being executed, no interrupts are generated. To enable another interrupt, execute M99. When M99 is specified alone, it is executed before the preceding commands terminate. Therefore, a custom macro interrupt is enabled for the last command of the interrupt program. If this is inconvenient, custom macro interrupts should be controlled by specifying M96 and M97 in the program.
When a custom macro interrupt is being executed, no other custom macro interrupts are generated; when an interrupt is generated, additional interrupts are inhibited automatically. Executing M99 makes it possible for another custom macro interrupt to occur. M99 specified alone in a block is executed before the previous block terminates. In the following example, an interrupt is enabled for the Gxx block of O1234. When the signal is input, O1234 is executed again. O5678 is controlled by M96 and M97. In this case, an interrupt is not enabled for O5678 (enabled after control is returned to O1000).

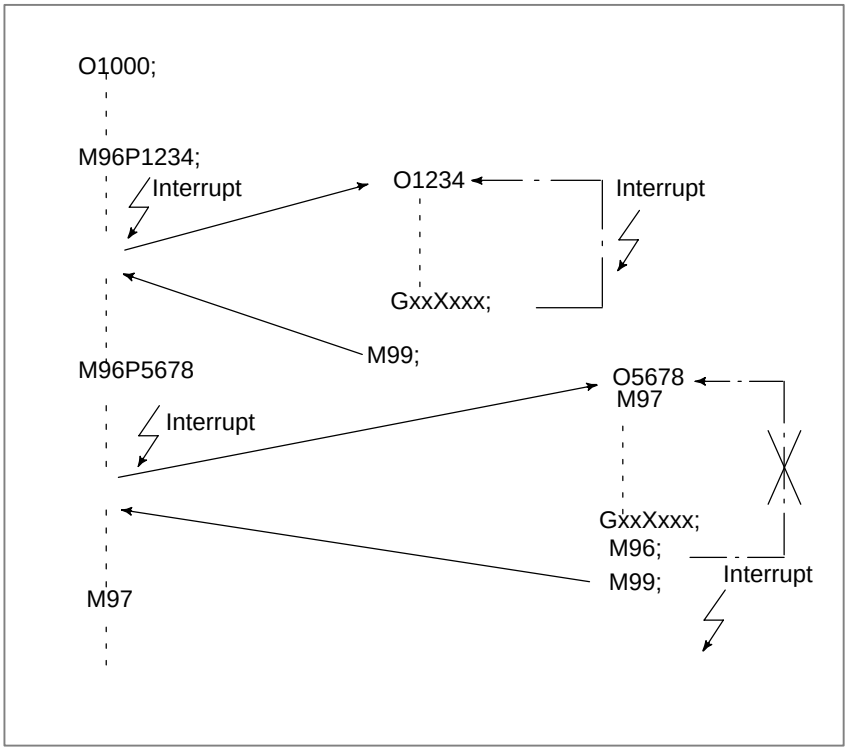

NOTE
When an M99 block consists only of address O, N, P, L, or M, this block is regarded as belonging to the previous block in the program. Therefore, a single–block stop does not occur for this block. In terms of programming, the following [1] and [2] are basically the same. (The difference is whether G○○ is executed before M99 is recognized.)
[1] G○○ X○○○ ;
M99 ;
[2] G○○ X○○○ M99 ;

- **Custom macro interrupt and modal information**

A custom macro interrupt is different from a normal program call. It is initiated by an interrupt signal (UINT) during program execution. In general, any modifications of modal information made by the interrupt program should not affect the interrupted program.
For this reason, even when modal information is modified by the interrupt program, the modal information before the interrupt is restored when control is returned to the interrupted program by M99.
When control is returned from the interrupt program to the interrupted program by M99 Pxxxx, modal information can again be controlled by the program. In this case, the new continuous information modified by the interrupt program is passed to the interrupted program. Restoration of the old modal information present before the interrupt is not desirable. This is because after control is returned, some programs may operate differently depending on the modal information present before the interrupt. In this case, the following measures are applicable:

(1) The interrupt program provides modal information to be used after control is returned to the interrupted program.

(2) After control is returned to the interrupted program, modal information is specified again as necessary.

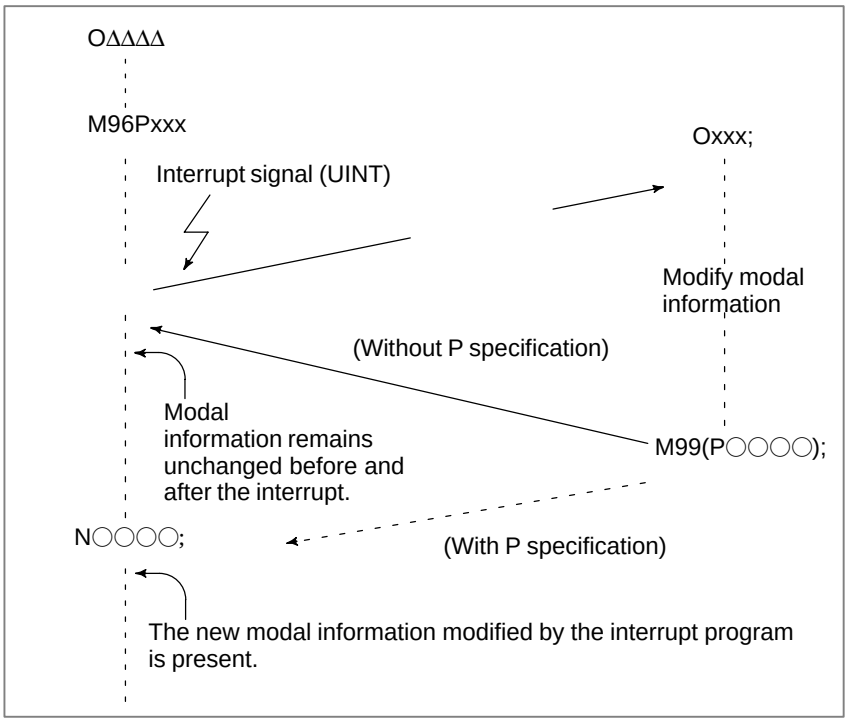

Modal information when control is returned by M99

The modal information present before the interrupt becomes valid. The new modal information modified by the interrupt program is made invalid.

Modal information when control is returned by M99 P○○○○

The new modal information modified by the interrupt program remains valid even after control is returned. The old modal information which was valid in the interrupted block can be read using custom macro system variables #4001 to #4120.
Note that when modal information is modified by the interrupt program, system variables #4001 to #4120 are not changed.

- **System variables (position information values) for the interrupt program**

- The coordinates of point A can be read using system variables #5001 and up until the first NC statement is encountered.
- The coordinates of point A' can be read after an NC statement with no move specifications appears.
- The machine coordinates and workpiece coordinates of point B' can be read using system variables #5021 and up and #5041 and up.

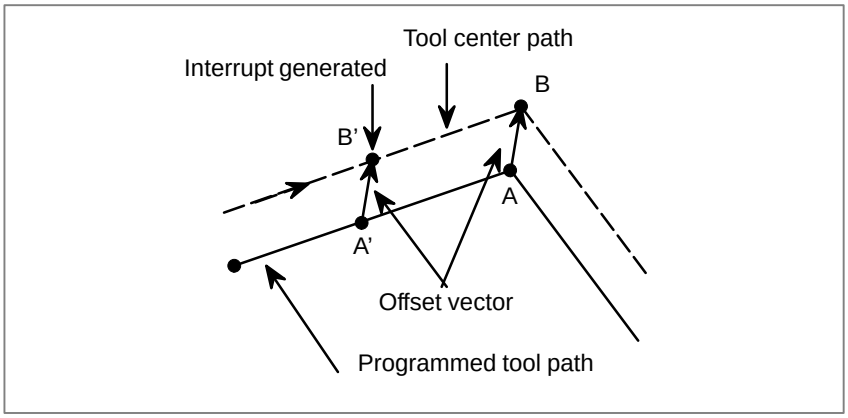

- **Custom macro interrupt and custom macro modal call**

When the interrupt signal (UINT) is input and an interrupt program is called, the custom macro modal call is canceled (G67). However, when G66 is specified in the interrupt program, the custom macro modal call becomes valid. When control is returned from the interrupt program by M99, the modal call is restored to the state it was in before the interrupt was generated. When control is returned by M99Pxxxx;, the modal call in the interrupt program remains valid.

- **Custom macro interrupt and program restart**

When the interrupt signal (UINT) is input while a return operation is being performed in the dry run mode after the search operation for program restart, the interrupt program is called after restart operation terminates for all axes. This means that interrupt type II is used regardless of the parameter setting.

- **DNC operation and Interruption type custom macro**

“Interruption type custom macro” cannot be done during DNC operation or executing a program with an external input–output device.

16 PATTERN DATA INPUT FUNCTION

This function enables users to perform programming simply by extracting numeric data (pattern data) from a drawing and specifying the numerical values from the MDI panel.
This eliminates the need for programming using an existing NC language.

With the aid of this function, a machine tool builder can prepare the program of a hole machining cycle (such as a boring cycle or tapping cycle) using the custom macro function, and can store it into the program memory.
This cycle is assigned pattern names, such as BOR1, TAP3, and DRL2.

An operator can select a pattern from the menu of pattern names displayed on the screen.
Data (pattern data) which is to be specified by the operator should be created in advance with variables in a drilling cycle.
The operator can identify these variables using names such as DEPTH, RETURN RELIEF, FEED, MATERIAL or other pattern data names. The operator assigns values (pattern data) to these names.

16.1 DISPLAYING THE PATTERN MENU

Pressing the [OFFSET SETTING] key and [▷] **[MENU]** is displayed on the following pattern menu screen.

```
MENU : HOLE PATTERN            O0000 N00000

     1.  BOLT HOLE
     2.  GRID
     3.  LINE ANGLE
     4.  TAPPING
     5.  DRILLING
     6.  BORING
     7.  POCKET
     8.  PECK
     9.  TEST PATRN
    10.  BACK


> _
MDI **** *** ***      16:05:59
[ MACRO ] [ MENU ] [  OPR  ] [     ] [(OPRT)]
```

HOLE PATTERN : This is the menu title. An arbitrary character string consisting of up to 12 characters can be specified.

BOLT HOLE : This is the pattern name. An arbitrary character string consisting of up to 10 characters can be specified, including katakana.

The machine tool builder should specify the character strings for the menu title and pattern name using the custom macro, and load the character strings into program memory as a subprogram of program No. 9500.

- **Macro commands specifying the menu title**

Menu title : C_1 C_2 C_3 C_4 C_5 C_6 C_7 C_8 $C_9$$C_{10}$ C_{11} C_{12}

C_1,C_2, ,C_{12} : Characters in the menu title (12 characters)

Macro instruction

G65 H90 P_p Q_q R_r I_i J_j K_k :

H90:Specifies the menu title

p : Assume a1 and a2 to be the codes of characters C1 and C2. Then,

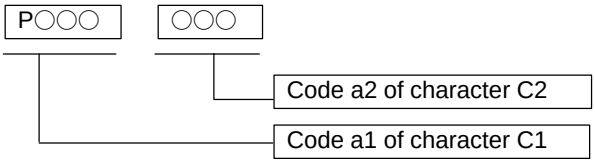

q : Assume a_3 and a_4 to be the codes of characters C_3 and C_4. Then,
$q=a_3 10^3+a_4$

r : Assume a_5 and a_6 to be the codes of characters C_5 and C_6. Then,
$r=a_5 10^3+a_6$

i : Assume a_7 and a_8 to be the codes of characters C_7 and C_8. Then,
$i=a_7 10^3+a_8$

j : Assume a_9 and a_{10} to be the codes of characters C_9 and C_{10}. Then,
$j=a_9 10^3+a_{10}$

k : Assume a_{11} and a_{12} to be the codes of characters C_{11} and C_{12}.Then,
$k=a_{11} 10^3+a_{12}$

Example) If the title of the menu is"HOLE PATTERN" then the macro instruction is as follows:

G65 H90 P072079 Q076069 R032080
HO LE ␣ P
I065084 J084069 K082078;
AT TE RN

For codes corresponding to these characters, refer to the Table 16.3 (a) in II–16.3.

- **Macro instruction describing the pattern name**

Pattern name: C_1 C_2 C_3 C_4 C_5 C_6 C_7 C_8 C_9C_{10}
C_1, C_2, ,C_{10}: Characters in the pattern name (10 characters)
Macro instruction
G65 H91 P_n Q_q R_r I_i J_j K_k ;
H91: Specifies the menu title
n : Specifies the menu No. of the pattern name
n=1 to 10
q : Assume a_1 and a_2 to be the codes of characters C_1 and C_2. Then,
$q=a_1 \times 10^3+a_2$
r : Assume a_3 and a_4 to be the codes of characters C_3 and C_4. Then,
$r=a_3 \times 10^3+a_4$
i : Assume a_5 and a_6 to be the codes of characters C_5 and C_6. Then,
$i=a_5 \times 10^3+a_6$
j : Assume a_7 and a_8 to be the codes of characters C_7 and C_8. Then,
$j=a_7 \times 10^3+a_8$
k : Assume a_9 and a_{10} to be the codes of characters C_9 and C_{10}. Then,
$k=a_9 \times 10^3+a_{10}$
Example) If the pattern name of menu No. 1 is ”BOLT HOLE” then the macro instruction is as follows.

G65 H91 P1 Q066079 R076084 I032072 J079076 K069032 ;
BO LT ␣H OL E␣

For codes corresponding to these characters, refer to the Table 16.3 (a) in II–16.3.

- **Pattern No. selection**

To select a pattern from the pattern menu screen, enter the corresponding pattern No. The following is an example.

[1] [INPUT]

The selected pattern No. is assigned to system variable #5900. The custom macro of the selected pattern can be started by starting a fixed program (external program No. search) with an external signal then referring to the system variable #5900 in the program.

NOTE
If each characters of P, Q, R, I, J, and K are not specified in a macro instruction, two spaces are assigned to each omitted character.

Example

Custom macros for the menu title and hole pattern names.

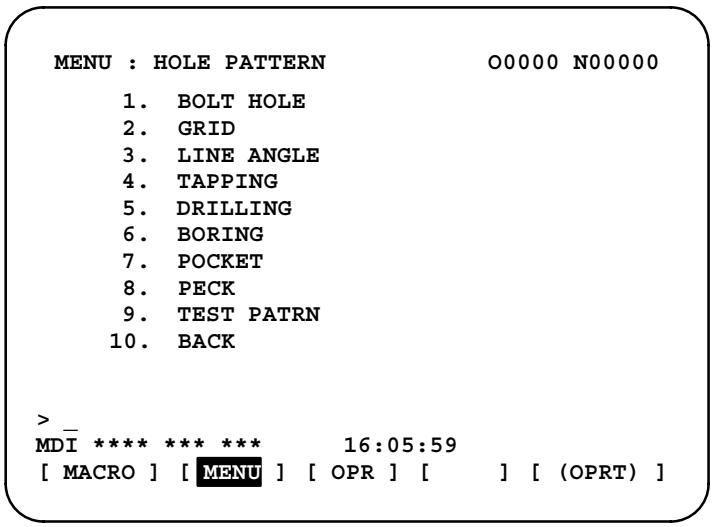

O9500 ;

```
N1 G65 H90 P072079 Q076069 R032080 I065084 J084069 K082078 ;          HOLE PATTERN
N2 G65 H91 P1 Q066079 R076084 I032072 J079076 K069032 ;               1.BOLT HOLE
N3 G65 H91 P2 Q071082 R073068 ;                                       2.GRID
N4 G65 H91 P3 Q076073 R078069 I032065 J078071 K076069 ;               3.LINE ANGLE
N5 G65 H91 P4 Q084065 R080080 I073078 J071032 ;                       4.TAPPING
N6 G65 H91 P5 Q068082 R073076 I076073 J078071 ;                       5.DRILLING
N7 G65 H91 P6 Q066079 R082073 I078071 ;                               6.BORING
N8 G65 H91 P7 Q080079 R067075 I069084 ;                               7.POCKET
N9 G65 H91 P8 Q080069 R067075 ;                                       8.PECK
N10 G65 H91 P9 Q084069 R083084 I032080 J065084 K082078 ;              9.TEST PATRN
N11 G65 H91 P10 Q066065 R0670750 ;                                    10.BACK
N12 M99 ;
```

16.2 PATTERN DATA DISPLAY

When a pattern menu is selected, the necessary pattern data is displayed.

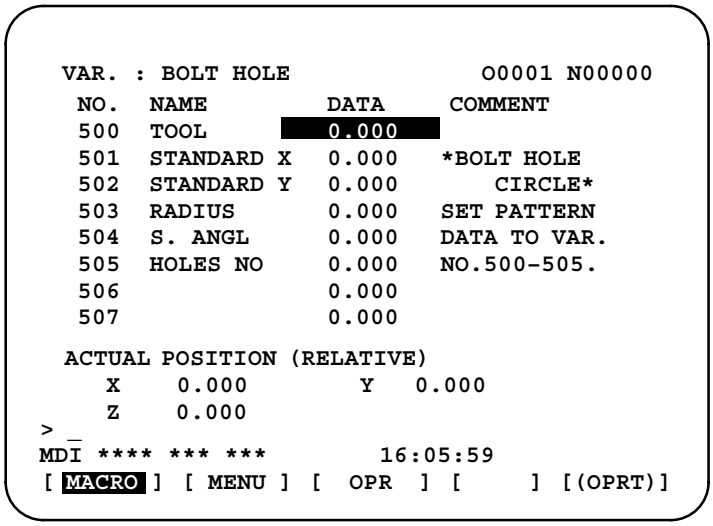

BOLT HOLE : This is the pattern data title. A character string consisting of up to 12 characters can be set.

TOOL : This is the variable name. A character string consisting of up to 10 characters can be set.

BOLT HOLE CIRCLE :
This is a comment statement. A character string can be displayed consisting of up to 8 lines, 12 characters per line.

(It is permissible to use katakana in a character string or line.)
The machine tool builder should program the character strings of pattern data title, pattern name, and variable name using the custom macro, and load them into the program memory as a subprogram whose No. is 9500 plus the pattern No. (O9501 to O9510).

Macro instruction specifying the pattern data title (the menu title)

Menu title : C_1 C_2 C_3 C_4 C_5 C_6 C_7 C_8 $C_9$$C_{10}$$C_{11}$$C_{12}$
C_1 ,$C_{2,\cdots}$, C_{12} : Characters in the menu title (12 characters)
Macro instruction
G65 H92 P_p Q_q R_r I_i J_j K_k ;
H92 : Specifies the pattern name
p : Assume a_1 and a_2 to be the codes of characters C_1 and C_2. Then, $p=a_1\times10^3+a_2$
q : Assume a_3 and a_4 to be the codes of characters C_3 and C_4. Then, $q=a_3\times10^3+a_4$
r : Assume a_5 and a_6 to be the codes of characters C_5 and C_6. Then, $r=a_5\times10^3+a_6$
i : Assume a_7 and a_8 to be the codes of characters C_7 and C_8. Then, $i=a_7\times10^3+a_8$
j : Assume a_9 and a_{10} to be the codes of characters C_9 and C_{10}. Then, $j=a_9\times10^3+a_{10}$
k : Assume a_{11} and a_{12} to be the codes of characters C_{11} and C_{12}. Then, $k=a_{11}\times10^3+a_{12}$
Example) Assume that the pattern data title is ”BOLT HOLE.”The macro instruction is given as follows:

G65 H92 P066079 Q076084 R032072 I079076 J069032;
BO LT ␣ H OL E

For codes corresponding to these characters, refer to the Table 16.3 (a) in II–16.3.

• Macro instruction specifying the variable name

Variable name : C_1 C_2 C_3 C_4 C_5 C_6 C_7 C_8 $C_9$$C_{10}$
C_1, $C_{2,\cdots}$, C_{10} : Characters in the variable name (10 characters)
Macro instruction
G65 H93 P_p Q_q R_r I_i J_j K_k ;
H93 : Specifies the variable name
p : Specifies the No. of the variable
p=100 to 149 (199), 500 to 531 (999)
q : Assume a_1 and a_2 to be the codes of characters C_1 and C_2. Then, $q=a_1\times10^3+a_2$
r : Assume a_3 and a_4 to be the codes of characters C_3 and C_4. Then, $r=a_3\times10^3+a_4$
i : Assume a_5 and a_6 to be the codes of characters C_5 and C_6. Then, $i=a_5\times10^3+a_6$
j : Assume a_7 and a_8 to be the codes of characters C_7 and C_8. Then, $j=a_7\times10^3+a_8$
k : Assume a_9 and a_{10} to be the codes of characters C_9 and C_{10}. Then, $k=a_9\times10^3a+a_{10}$
Example) Assume that the variable name of the variable No. 503 is “RADIUS.” The macro instruction is given as follows:

G65 H93 P503 Q082065 R068073 I085083 ;
RA DI US

For codes corresponding to these characters, refer to the Table 16.3 (a) in II–16.3.

- **Macro instruction to describe a comment**

One comment line: C_1 C_2 C_3 C_4 C_5 C_6 C_7 C_8 C_9 C_{10} C_{11} C_{12}
C_1, C_2, ···, C_{12} : Character string in one comment line (12 characters)
Macro instruction
G65 H94 P_p Q_q R_r I_i J_j K_k ;
H94 : Specifies the comment
p : Assume a_1 and a_2 to be the codes of characters C_1 and C_2. Then, $p=a_1 \times 10^3+a_2$
q : Assume a_3 and a_4 to be the codes of characters C_3 and C_4. Then, $q=a_3 \times 10^3+a_4$
r : Assume a_5 and a_6 to be the codes of characters C_5 and C_6. Then, $r=a_5 \times 10^3+a_6$
i : Assume a_7 and a_8 to be the codes of characters C_7 and C_8. Then, $i=a_7 \times 10^3+a_8$
j : Assume a_9 and a_{10} to be the codes of characters C_9 and C_{10}. Then, $j=a_9 \times 10^3+a_{10}$
k : Assume a_{11} and a_{12} to be the codes of characters C_{11} and C_{12}. Then, $k=a_{11} \times 10^3+a_{12}$
A comment can be displayed in up to eight lines. The comment consists of the first line to the eighth line in the programmed sequence of G65 H94 for each line.
Example) Assume that the comment is “BOLT HOLE.” The macro instruction is given as follows:

G65 H94 P042066 Q079076 R084032 I072079 J076069;
*B OL T␣ HO LE
For codes corresponding to these characters, refer to the Table 16.3 (a) in II–16.3.

Examples

Macro instruction to describe a parameter title , the variable name, and a comment.

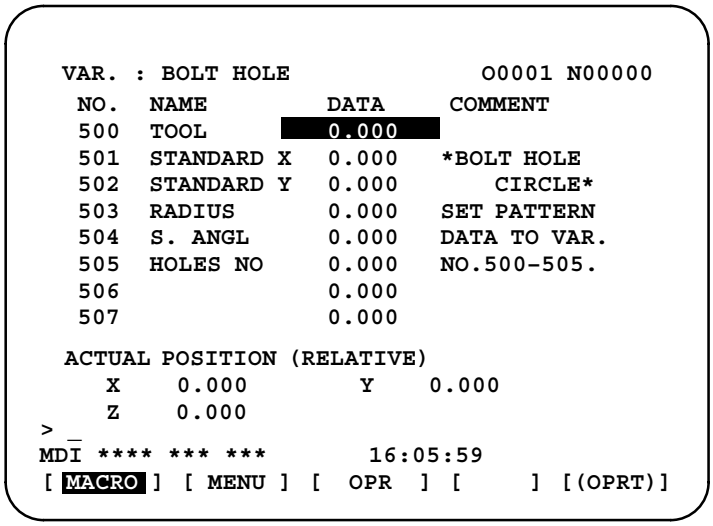

O9501 ;

```
N1 G65 H92 P066079 Q076084 R032072 I079076 J069032 ;          VAR : BOLT HOLE
N2 G65 H93 P500 Q084079 R079076 ;                             #500 TOOL
N3 G65 H93 P501 Q075073 R074085 I078032 J088032 ;             #501 KIJUN X
N4 G65 H93 P502 Q075073 R074085 I078032 J089032 ;             #502 KIJUN Y
N5 G65 H93 P503 Q082065 R068073 I085083 ;                     #503 RADIUS
N6 G65 H93 P504 Q083046 R032065 I078071 J076032 ;             #504 S.ANGL
N7 G65 H93 P505 Q072079 R076069 I083032 J078079 K046032 ;     #505 HOLES NO
N8 G65 H94 ;                                                  Comment
N9 G65 H94 P042066 Q079076 R084032 I072079 J076069 ;          *BOLT HOLE
N10 G65 H94 R032067 I073082 J067076 K069042 ;                 CIRCLE*
N11 G65 H94 P083069 Q084032 080065 I084084 J069082 K078032 ;  SET PATTERN
N12 G65 H94 P068065 Q084065 R032084 I079032 J086065 K082046 ; DATA NO VAR.
N13 G65 H94 P078079 Q046053 R048048 I045053 J048053 K046032;  No.500–505
N14 M99 ;
```

16.3 CHARACTERS AND CODES TO BE USED FOR THE PATTERN DATA INPUT FUNCTION

Table.16.3(a) Characters and codes to be used for the pattern data input function

Char-acter	Code	Comment	Char-acter	Code	Comment
A	065		6	054	
B	066		7	055	
C	067		8	056	
D	068		9	057	
E	069			032	Space
F	070		!	033	Exclama–tion mark
G	071		”	034	Quotation mark
H	072		#	035	Hash sign
I	073		$	036	Dollar sign
J	074		%	037	Percent
K	075		&	038	Ampersand
L	076		’	039	Apostrophe
M	077		(	040	Left parenthesis
N	078		)	041	Right parenthesis
O	079		*	042	Asterisk
P	080		+	043	Plus sign
Q	081		,	044	Comma
R	082		–	045	Minus sign
S	083		.	046	Period
T	084		/	047	Slash
U	085		:	058	Colon
V	086		;	059	Semicolon
W	087		<	060	Left angle bracket
X	088		=	061	Equal sign
Y	089		>	062	Right angle bracket
Z	090		?	063	Question mark
0	048		@	064	HAt”mark
1	049		[	091	Left square bracket
2	050		^	092	
3	051		¥	093	Yen sign
4	052		]	094	Right squar bracket
5	053		_	095	Underscore

NOTE
Right and left parentheses cannot be used.

Table 16.3 (b)Numbers of subprograms employed in the pattern data input function

Subprogram No.	Function
O9500	Specifies character strings displayed on the pattern data menu.
O9501	Specifies a character string of the pattern data corresponding to pattern No.1
O9502	Specifies a character string of the pattern data corresponding to pattern No.2
O9503	Specifies a character string of the pattern data corresponding to pattern No.3
O9504	Specifies a character string of the pattern data corresponding to pattern No.4
O9505	Specifies a character string of the pattern data corresponding to pattern No.5
O9506	Specifies a character string of the pattern data corresponding to pattern No.6
O9507	Specifies a character string of the pattern data corresponding to pattern No.7
O9508	Specifies a character string of the pattern data corresponding to pattern No.8
O9509	Specifies a character string of the pattern data corresponding to pattern No.9
O9510	Specifies a character string of the pattern data corresponding to pattern No.10

Table. 16.3 (c)Macro instructions used in the pattern data input function

G code	H code	Function
G65	H90	Specifies the menu title.
G65	H91	Specifies the pattern name.
G65	H92	Specifies the pattern data title.
G65	G93	Specifies the variable name.
G65	H94	Specifies the comment.

Table. 16.3 (d)System variables employed in the pattern data input function

System variable	Function
#5900	Pattern No. selected by user.

17 PROGRAMMABLE PARAMETER ENTRY (G10)

General

The values of parameters can be entered in a lprogram. This function is used for setting pitch error compensation data when attachments are changed or the maximum cutting feedrate or cutting time constants are changed to meet changing machining conditions.

Format

Format
G10L50; Parameter entry mode setting **N_R_;** For parameters other than the axis type **N_P_R_;** For axis type parameters ⋮ **G11;** Parameter entry mode cancel
Meaning of command
N_: Parameter No. (4digids) or compensation position No. for pitch errors compensation +10,000 (5digid) **R_:** Parameter setting value (Leading zeros can be omitted.) **P_:** Axis No. 1 to 8 (Used for entering axis type parameters)

Explanations

- **Parameter setting value (R_)**

Do not use a decimal point in a value set in a parameter (R_).
a decimal point cannot be used in a custom macro variable for R_either.

- **Axis No.(P_)**

Specify an axis number (P_) from 1 to 8 (up to eight axes) for an axis type parameter. The control axes are numbered in the order in which they are displayed on theCNC display.
For example, specity P2 for the control axis which is displayed second.

WARNING

1 Do not fail to perform reference point return manually after changing the pitch error compensation data or backlash compensation data. Without this, the machine position can deviate from the correct position.
2 The canned–cycle mode must be cancelled before entering of parameters. When not cancelled, the drilling motion may be activated.

NOTE

Other NC statements cannot be specified while in parameter input mode.

Examples

1. Set bit 2 (SBP) of bit type parameter No. 3404

```
G10L50 ;                Parameter entry mode
N3404 R 00000100 ;      SBP setting
G11 ;                   cancel parameter entry mode
```

2. Change the values for the Z–axis (3rd axis) and A–axis (4th axis) in axis type parameter No. 1322 (the coordinates of stored stroke limit 2 in the positive direction for each axis).

```
G10L50 ;                Parameter entry mode
N1322P3R4500 ;          Modify Z axis
N1322P4R12000 ;         Modify A axis
G11 ;                   cancel parameter entry mode
```

18 MEMORY OPERATION USING FS10/11 TAPE FORMAT

General

Memory operation of the program registered by FS10/11 tape format is possible with setting of the setting parameter (No. 0001#1).

Explanations

Data formats for cutter compensation, subprogram calling, and canned cycles are different between this Series and Series 10/11. The Series 10/11 data formats can be processed for memory operation.Other data formats must comply with this Series. When a value out of the specified range for this Series is registered, an alarm occurs. Functions not available in this Series cannot be registered or used for memory operation.

- **Address for the cutter compensation offset number**

Offset numbers are specified by address D in the Series 10/11. When an offset number is specified by address D, the modal value specified by address H is replaced with the offset number specified by address D.

- **Subprogram call**

If a subprogram number of more than four digits is specified, the four low–order digits are regarded as the subprogram number. If no repeat count is specified, 1 is assumed.

Table 18 (a) Subprogram call data format

CNC	Data format
Series 10/11	**M98 P**○○○○○ **L**○○○○ **;** P : Subprogram number L : Repetition count
Series 16/18/21	**M98 P**○○○○ □□□□ **;** Repetition count Subprogram number

- **Address for the canned cycle repetition count**

The Series 10/11 and Series 16/18/21 use different addresses for the repeat count for canned cycles as listed in Table 18 (b).

Table 18 (b) Address for times of repetition of canned cycle

CNC	Address
Series 10/11	L
Series 16/18/21	K

19 HIGH SPEED CUTTING FUNCTIONS

19.1 FEEDRATE CLAMPING BY ARC RADIUS

When an arc is cut at a high speed in circular interpolation, a radial error exists between the actual tool path and the programmed arc. An approximation of this error can be obtained from the following expression:

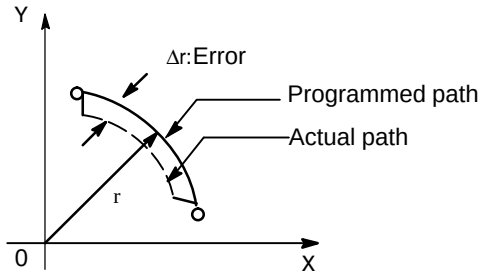

$$\Delta r = \frac{1}{2} (T_1^2 + T_2^2) \frac{v^2}{r}$$

Δr	:	Maximum radial error (mm)
v	:	Feedrate (mm/s)
r	:	Arc radius (mm)
T_1	:	Time constant (s) for exponential acceleration/deceleration of cutting feed
T_2	:	Time constant of the servo motor (s)

When actual machining is performed, radius r of the arc to be machined and permissible error Δr are given. Then, maximum allowable feedrate v (mm/min) is determined from the above expression.

The function for clamping the feedrate by the arc radius automatically clamps the feedrate of arc cutting to the value set in a parameter. This function is effective when the specified feedrate may cause the radial error for an arc with a programmed radius to exceed the permissible degree of error.

For details, refer to the relevant manual published by the machine tool builder.

19.2 ADVANCED PREVIEW CONTROL (G08)

This function is designed for high–speed precise machining. With this function, the delay due to acceleration/deceleration and the delay in the servo system which increase as the feedrate becomes higher can be suppressed.
The tool can then follow specified values accurately and errors in the machining profile can be reduced.
This function becomes effective when advanced preview control mode is entered.
For details, refer to the relevant manual published by the machine tool builder.

Format

G08 P_

P1 : Turn on advanced preview control mode.
P0 : Turn off advanced preview control mode.

Explanations

- **Available functions**

In advanced preview control mode, the following functions are available:
(1) Linear acceleration/deceleration before interpolation
(2) Automatic corner deceleration function
For details on the above functions, see the descriptions of the functions. Each function, specific parameters are provided.

- **Reset**

Advanced preview control mode is canceled by reset.

Limitations

- **G08 command**

Specify G08 code only in a block.

- **Functions that can be specified**

In the advanced preview control mode, the optional functions listed below can be specified.

NOTE
To use a function other than the following optional functions, turn the advanced preview control mode off, specify the desired function, then turn the mode on again.

· Axis control by the PMC
(Bits 4 (G8R) and 3 (G8C) of parameter No. 8004 can be set to also use this function in the advanced preview control mode.)
· Single direction positioning
· Polar coordinate command
· Helical interpolation
· Rigid tapping
(Bit 5 (G8S) of parameter No. 1602 can be set to also use this function in the look–ahead control mode. The serial spindle parameters must also be set.)
· Program restart

- External deceleration
- Simple synchronous control
- Sequence number comparison and stop
- Position switch
  (Bit 3 (PSF) of parameter No. 6901 can be set to also use this function in the advanced preview control mode. Setting this parameter to 1 changes the timing when the signal is output. So, it may become necessary to change the ladder.)
- Cs contour control
  (Bit 5 (G8S) of parameter No. 1602 can be set to also use this function in the advanced preview control mode. The serial spindle parameters must also be set.)
- Constant surface speed control
- Spindle synchronous control
- Simple spindle synchronization
- Custom macro B
- Arbitrary angle chamfering/corner rounding
- Inch/metric conversion
- Programmable mirror image
- Canned cycle
- Automatic corner override
  (Only the internal circular cutting feedrate change is valid.)
- Scaling
- Coordinate system rotation
- Workpiece coordinate system
- Workpiece coordinate system preset
- Cutter compensation C
- Corner circular interpolation
- Tool offset
- Tool life management
- Tool length measurement
- Graphic display
- Dynamic graphic display
- Feed per revolution

19.3 HIGH–SPEED REMOTE BUFFER

A remote buffer can continuously supply a large amount of data to the CNC at high speeds when connected to the host computer or input/output equipment via a serial interface.

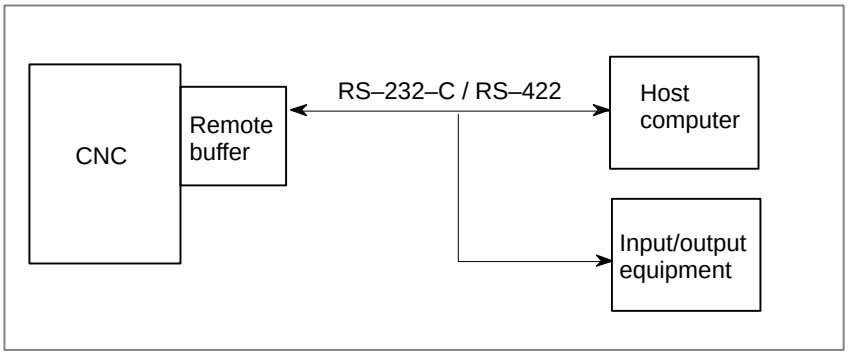

When the remote buffer is connected online to the host computer, fast and reliable DNC operation is possible.
The remote buffer function includes high–speed remote buffer A and high–speed remote buffer B for high–speed machining. High–speed remote buffer A uses binary data. High–speed remote buffer B uses NC language. For details on remote buffer specifications, refer to the “Remote Buffer Supplement” (B–61802E–1).

19.3.1 High–speed remote buffer A (G05)

Specify G05 only in a block using normal NC command format. Then specify move data in the special format explained below. When zero is specified as the travel distance along all axes, normal NC command format can be used again for subsequent command specification.

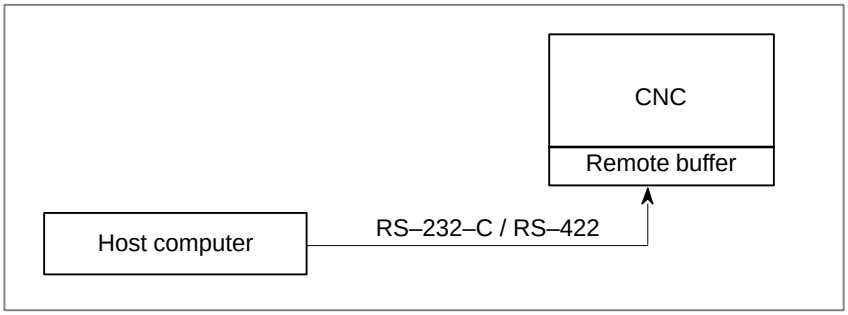

Format

VBinary input operation enabled : G05;
VBinary input operation disabled : The travel distance along all axes are set to zero.

VData format for binary input operation

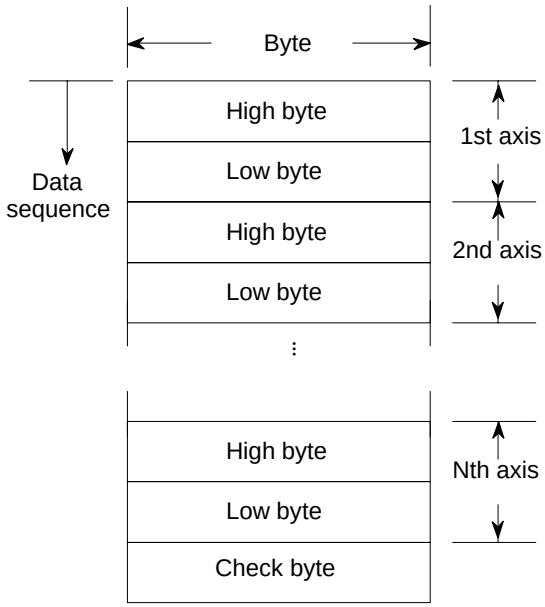

In the data format for binary input operation, the travel distance along each axis (2 bytes) per unit time is specified. The travel distances along all axes are placed sequentially from the first axis, then a check byte is added. (The data length for one block is [2 x N + 1] bytes).
All data must be specified in binary.

Explanations

- **Selecting the unit time**

The unit time (in ms) can be selected by setting bits 4, 5, and 6 of parameter IT0,IT1,IT2 No. 7501.

- **Travel distance data**

The following unit is used for specifying the travel distance along each axis. (A negative travel distance is indicated in 2's complement.)

Increment system	IS–B	IS–C	Unit
Millimeter machine	0.001	0.0001	mm
Inch machine	0.0001	0.00001	inch

The data format of the travel distance is as follows. The bits marked * are used to specify a travel distance per unit time.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
*	*	*	*	*	*	*	0	*	*	*	*	*	*	*	0

Example: When the travel distance is 700 μm per unit time
(millimeter machine with increment system IS–B)

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	0	0	0	1	0	1	0	0	1	1	1	1	0	0	0

- **Check Byte**

  All bytes of the block except for the check byte ([2*N] bytes) are summed up, and any bits above 8th bit are discarded.

- **Transfer speed**

  The CNC reads (2 x N + 1)–byte data (where N is the number of axes) for every unit time that is set in the parameter. To allow the CNC to continue machining without interruption, the following minimum baud rate is required for data transfer between the host and remote buffer:

  $$(2\times N+1) \times \frac{11}{T} \times 1000 \text{ baud (T : Unit time)}$$

- **Cutter compensation**

  If G05 is specified in cutter compensation mode, the P/S 178 alarm is issued.

- **Feed hold and interlock**

  Feed hold and interlock are effective.

- **Mirror image**

  The mirror image function (programmable mirror image and setting mirror image) cannot be turned on or off in the G05 mode.

- **Acceleration / deceleration type**

  In binary input operation mode, when tool movement starts and stops in cutting feed mode, exponential acceleration/deceleration is performed (the acceleration/deceleration time constant set in parameter No. 1622 is used).

Limitations

- **Modal command**

  In binary input operation mode, only linear interpolation as specified in the defined data format is executed (equivalent to the incremental command for linear interpolation).

- **Invalid functions**

  The single block, feedrate override, and maximum cutting feedrate clamp functions have no effect. The program restart, block restart, and high–speed machining functions cannot be used. In addition, miscella–neous functions cannot be executed in binary operation.

- **Memory registration**

  No data can be stored in memory.

19.3.2 High–speed remote buffer B (G05)

High–speed remote buffer A uses binary data. On the other hand, high–speed remote buffer B can directly use NC language coded with equipment such as an automatic programming unit to perform high–speed machining.

Format

G05P01 ; Start high–speed machining mode
G05P00 ; End high–speed machining mode

```
Example :  O1234 ;
             ⋮
           G05P01 ; ← Start high–speed machining mode
           X_ Y_ Z_ ;
             ⋮
           G05P00 ; ← End high–speed machining mode
             ⋮
           M02 ;
```

Explanations

- **Specified data**

The following data can be specified during high–speed machining mode:

Address	Data
X	Travel distance along the X–axis
Y	Travel distance along the Y–axis
Z	Travel distance along the Z–axis
F	Cutting feedrate

Data other than the above cannot be specified.

- **Number of controlled axes**

Be sure to set 3 in parameter No. 7510 as the number of controlled axes.

Limitations

- **Incremental command**

Move commands can be specified only in incremental mode.

- **Functions that cannot be specified**

Cutter compensation B and C cannot be specified. The feedrate cannot be overridden.

- **Feedrate clamp**

The maximum cutting feedrate clamp function is disabled.

- **Binary data format**

The format of high–speed remote buffer A can also be used for high–speed remote buffer B. This format, however, cannot be used together with NC language within the same program.

19.4 AI ADVANCED PREVIEW CONTROL

Format

G05.1 Q_ ;
Q 1 : AI advanced preview control mode on
Q 0 : AI advanced preview control mode off

NOTE
1 Please command G05.1 with an independent block.
2 AI advanced preview control mode is released by the reset.

Explanations

- **Effective functions**

The following functions become effective in the AI advanced preview control mode

(1) Multiple blocks look ahead linear acceleration / deceleration function before interpolation (Maximum 15 blocks)

(2) Automatic corner deceleration function

(3) Feedrate clamp based on acceleration function

(4) Feedrate clamp based on arc radius function

(5) Block overlap function (5 blocks)

(6) Advanced preview feed forward function

- **AI advanced preview control mode (AIAPC mode)**

This function becomes enabled when AI advanced preview control mode is entered.AI advanced preview control mode is also called AIAPC mode.

(1) Look ahead linear acceleration / deceleration before interpolation

When feed per minute is specified, this function reads maximum 15 blocks ahead to perform linear acceleration / deceleration before interpolation, that is, to apply acceleration / deceleration to the specified feedrate.

When acceleration / deceleration after interpolation is used, acceleration / deceleration is applied to the interpolated data. Consequently, the interpolated data is changed by acceleration / deceleration. However, when acceleration / deceleration before interpolation is used, acceleration / deceleration is applied to the feedrate data before interpolation. Consequently, the interpolated data is not changed by acceleration / deceleration. Accordingly, interpolation data ensures that the machining follows a specified line or curve at all times, thus eliminating the machining profile errors that result from delays in acceleration / deceleration.

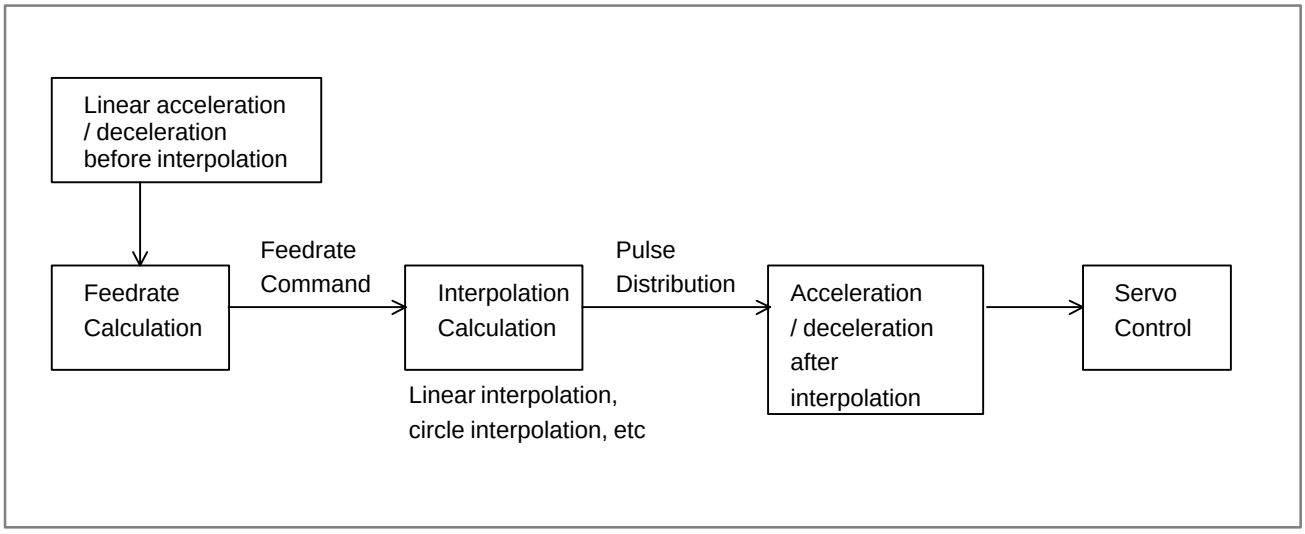

(Example of deceleration)

To ensure that the feedrate specified for a block is reached when the block is executed, deceleration is started in the previous block.

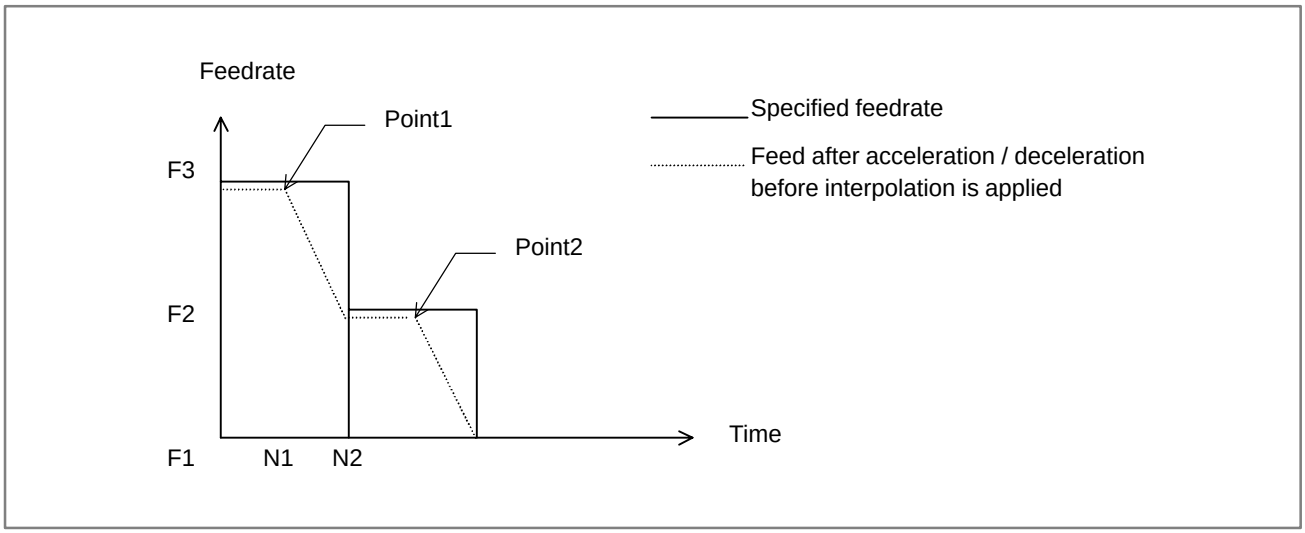

To reduce feedrate F3 to feedrate F2, deceleration must be started at P1.
To reduce feedrate F2 to feedrate F1, deceleration must be started at P2.

The tool can be decelerated over several blocks, because maximum 15 blocks are read in advance.

(Example of acceleration)

Acceleration is started to reach the specified feedrate for a block when the block is executed.

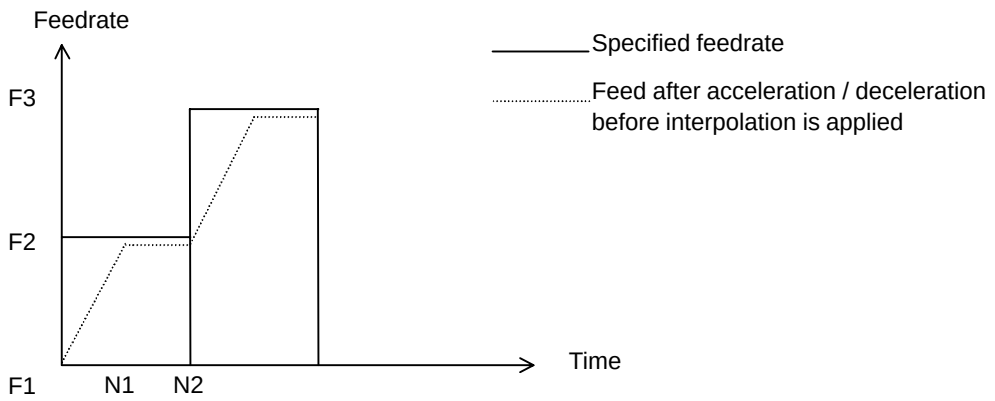

(2) Automatic corner deceleration

The feedrate at a corner is calculated for the axis for which the permissible feedrate difference between two blocks (parameter No.1783) is exceeded with the highest ratio of actual feedrate difference to permissible feedrate difference, as shown below. The feedrate is reduced to the calculated value in the previous block.

When the axis is to move at the specified feedrate F, a comparison is made between the feedrate change along each axis (V_X, V_Y,...) and the value (V_{PRM-X}, V_{PRM-Y},...) specified in parameter No.1783. If the parameter setting value is exceeded by a feedrate change along any axis, the axis is decelerated at the corner to the required feedrate F_C

$$F_C = F \times \frac{1}{R_{max}}$$

where R_{max} is the largest value of $R = \frac{V}{V_{PRM}}$

$$R_{max} = \max\left[\frac{V_X}{V_{PRM-X}}, \frac{V_Y}{V_{PRM-Y}}, \ \ldots\right]$$

For example, if the direction of movement is changed from the X–axis to the Y–axis, that is through 90 degrees, and if the programmed feedrate is 1000 mm/min and the permissible feedrate difference specified in parameter No.1783 is 500 mm/min, the axis will decelerate as shown below.

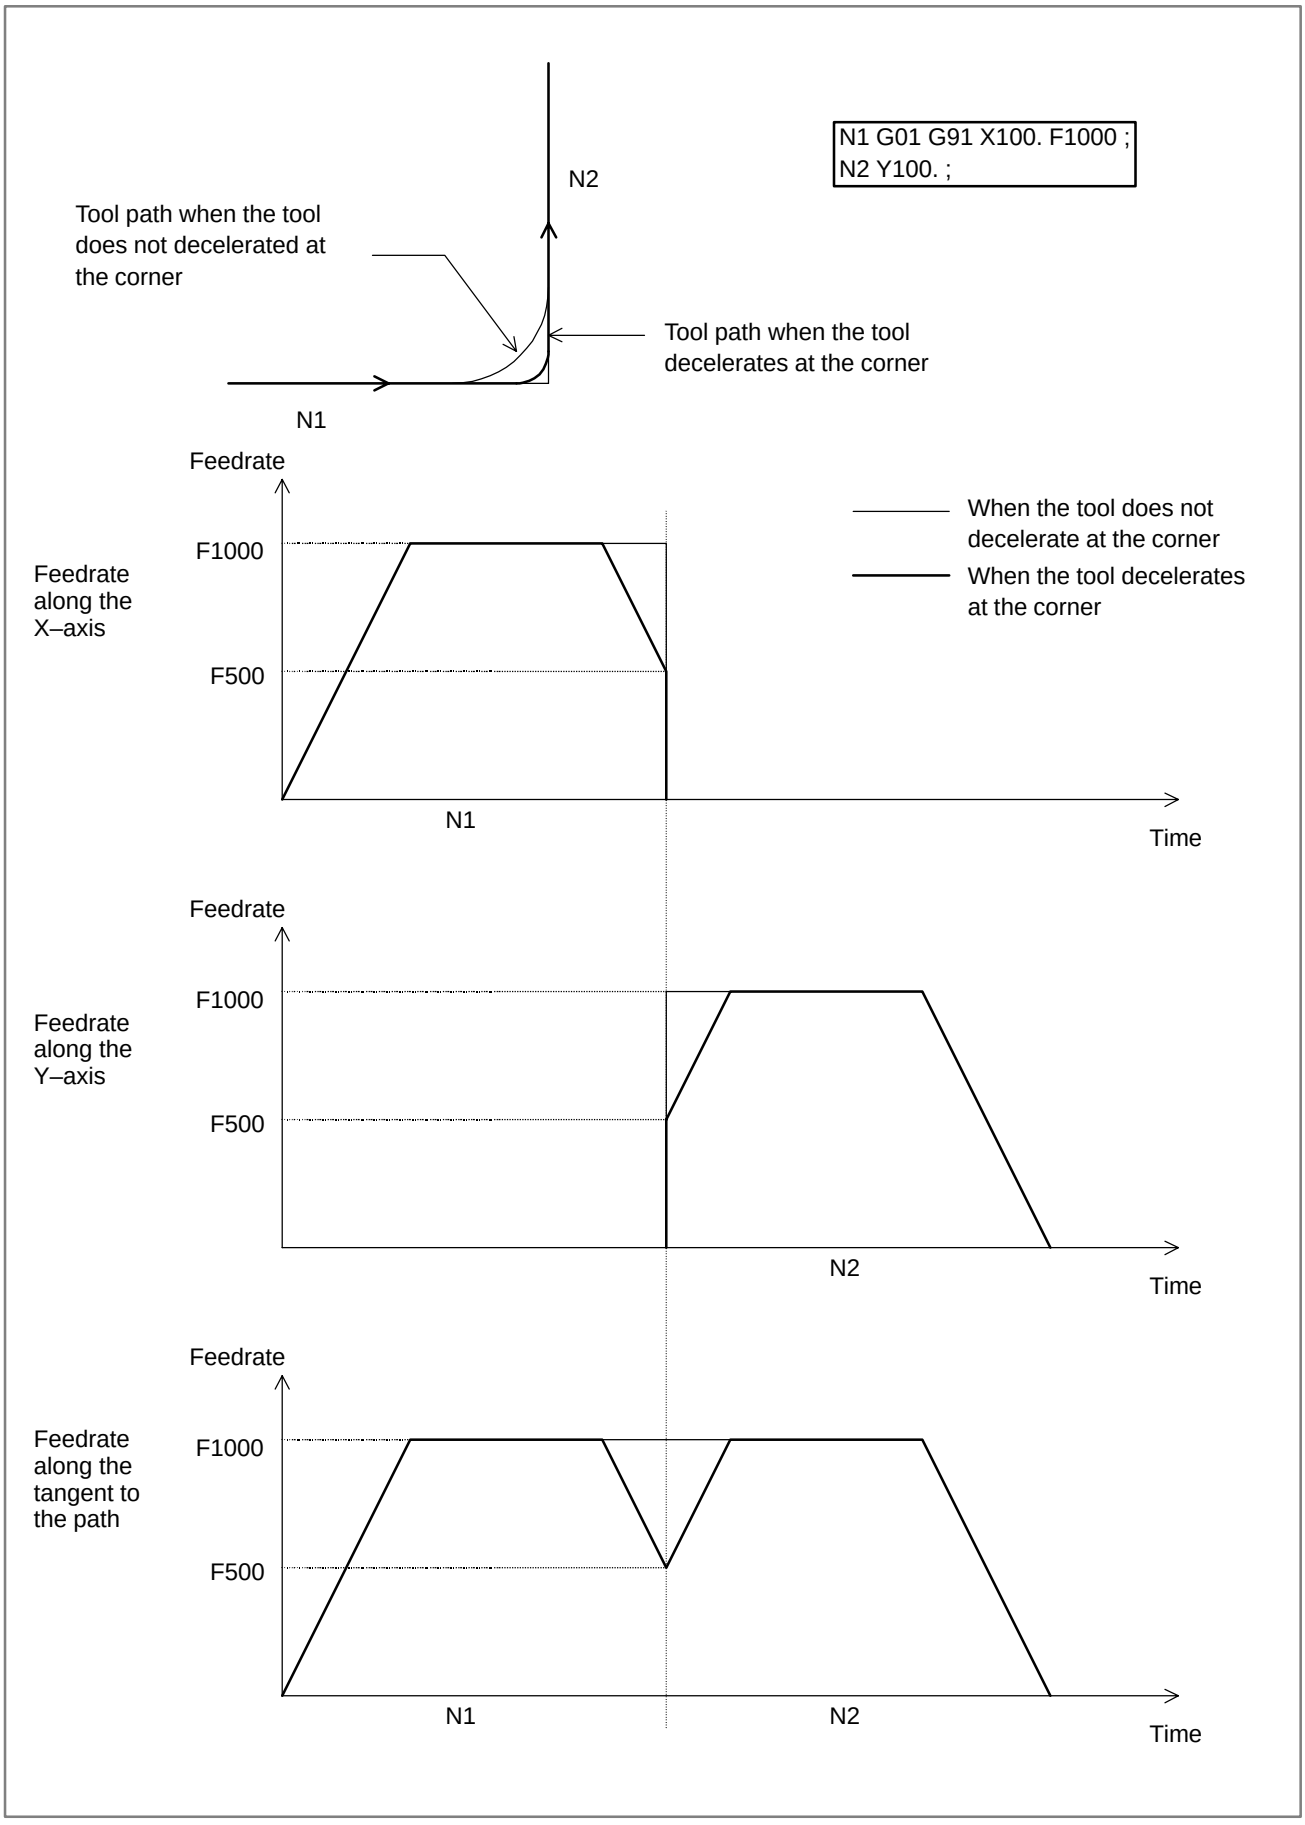
N1 G01 G91 X100. F1000 ;
N2 Y100. ;
N2
Tool path when the tool does not decelerated at the corner
Tool path when the tool decelerates at the corner
N1
Feedrate
When the tool does not decelerate at the corner
When the tool decelerates at the corner
Feedrate along the X–axis
F1000
F500
N1
Time
Feedrate
Feedrate along the Y–axis
F1000
F500
N2
Time
Feedrate
Feedrate along the tangent to the path
F1000
F500
N1
N2
Time

(3) Feedrate clamp based on acceleration

As shown below, when a curve is formed by very short successive line segments, there is no significant feedrate difference along each axis at each corner. Consequently, the tool need not be decelerated to compensate for feedrate differences. When taken as a whole, however, successive feedrate differences generate a large acceleration along each axis.

In this case, the tool must be decelerated to minimize the stress and strain imposed on the machine, as well as the machining error that may result from such excessive acceleration. The tool is decelerated to the feedrate at which the acceleration along each axis, found from the formula below, is equal to or less than a specified allowable acceleration.

The allowable acceleration is determined from a maximum cutting feedrate (set in parameter No.1432) and the time needed to reach the maximum cutting feedrate (set in parameter No.1785).

$$\text{Acceleration along each axis} = \frac{\text{feedrate difference along each axis at a corner}}{\max\left(\frac{\text{travel in the previous block}}{F}, \frac{\text{travel in the next block}}{F}\right)}$$

The reduced feedrate required for each corner is calculated. The tool is decelerated to the decreased feedrate found at either the start point or the end point of each block, whichever is smaller.

(Example)
In the example shown below, the tool is decelerated from N2 to N4 and from N6 to N8 because the acceleration (as indicated by the dashed–line inclinations in the feedrate graphs) is large.

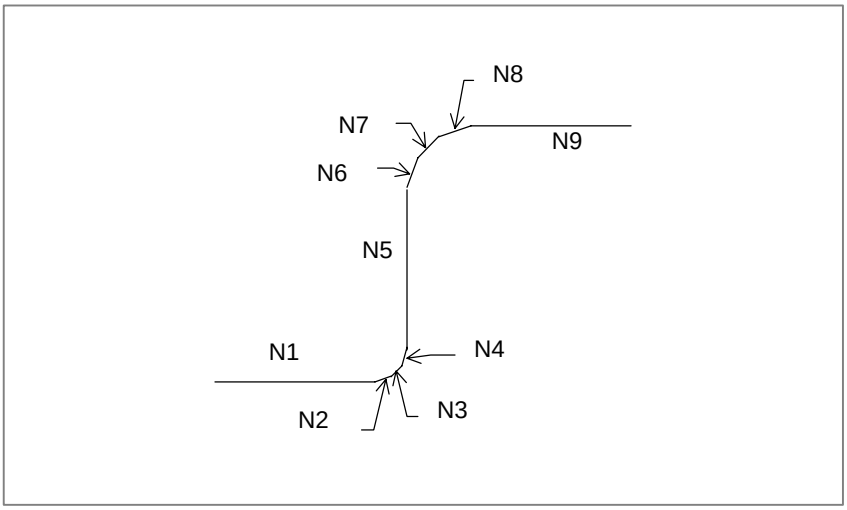

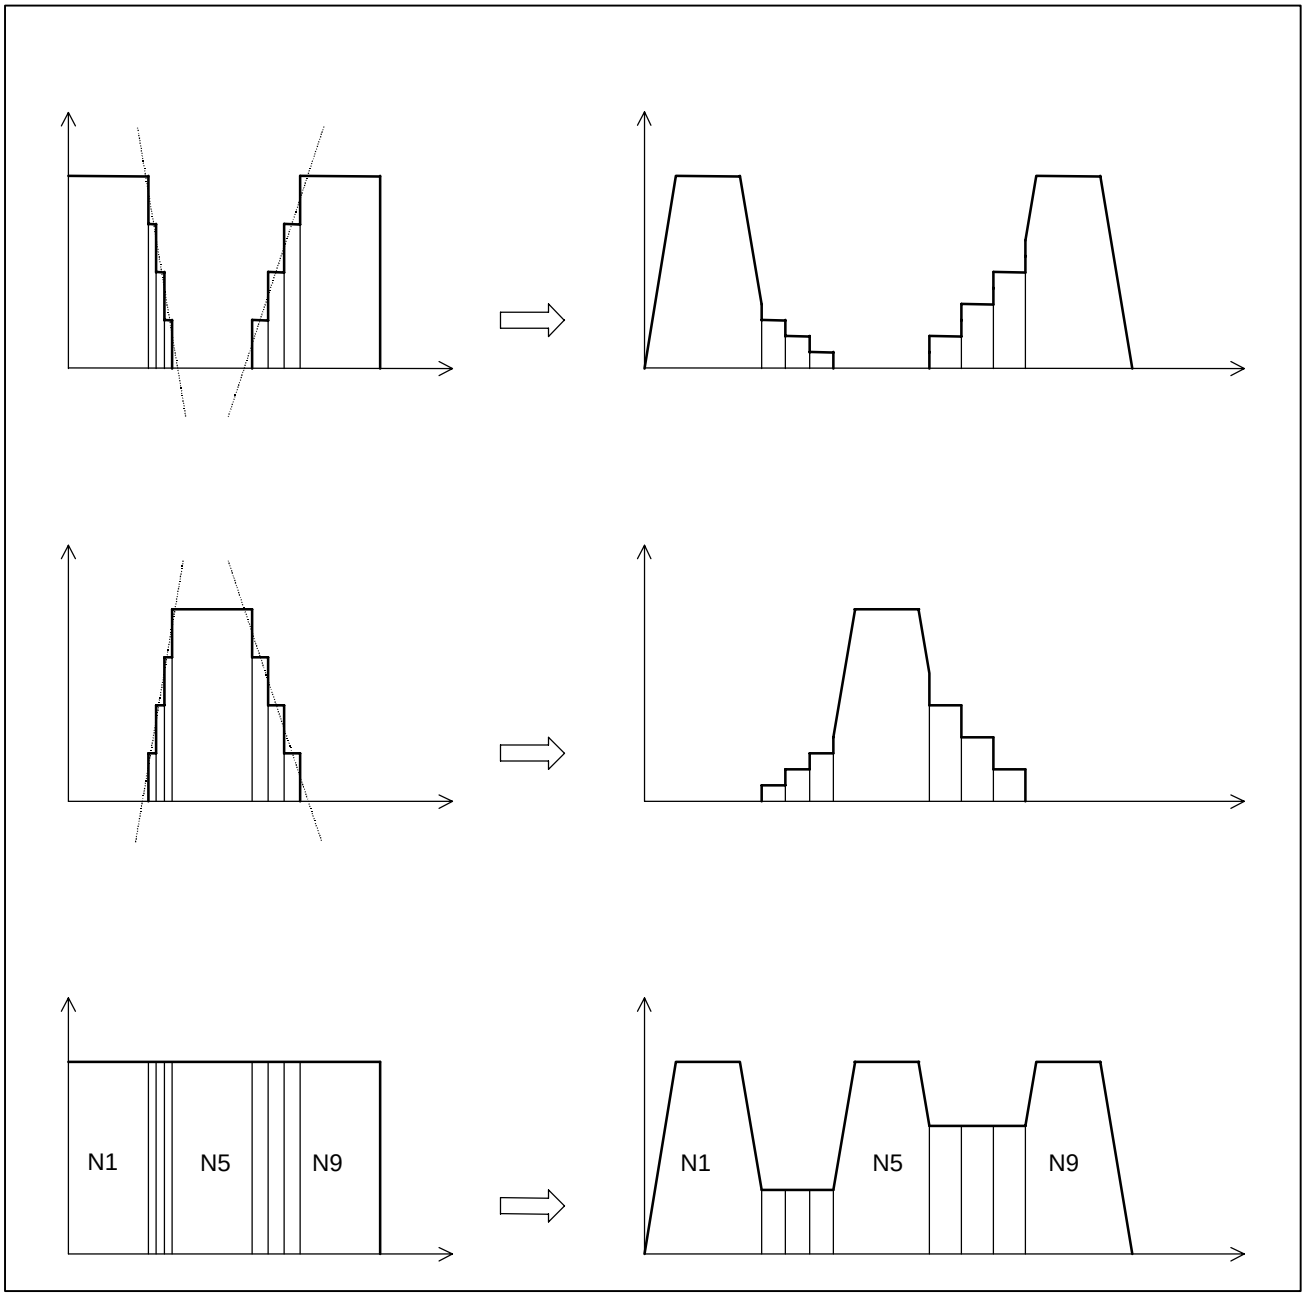

(4) Feedrate clamp based on arc radius

In order that the acceleration in a circular interpolation block must become a permissible value, the maximum permissible feedrate v for the programmed circle radius r is calculated from the maximum permissible feedrate V (parameter setting) in radius R as follows. When the specified feedrate exceeds the calculated feedrate v, the feedrate is clamped automatically at the calculated feedrate v.

$$\text{Maximum permissible acceleration} = \frac{V^2}{R}$$

R : Circle radius V : Feedrate in circle radius R

The maximum permissible feedrate v for the programmed circle radius r is obtained in the following expressions.

$$v = \sqrt{\frac{r}{R}} \times V$$

NOTE
The maximum permissible feedrate v lowers as the circle radius becomes small. When the calculated feedrate is lower than the parameter setting value (No.1732), the maximum permissible feedrate v will be assumed to be the parameter setting value (No.1732).

(5) Rapid traverse

Either a linear interpolation or nonlinear interpolation type can be selected for rapid traverse by parameter setting. If a linear interpolation type is selected, the tool accelerates/decelerates before interpolation is applied, and is positioned according to linear interpolation type positioning. In addition, either a linear or bell–shaped acceleration/ deceleration type can be selected. The feedrate at movement and the acceleration for linear acceleration/deceleration before interpolation are obtained as explained below.

1) Feedrate at movement

The smallest value of the following expressions among the moving axes is assumed to be the feedrate at movement.

$$\text{rapid traverse rate for each axis (No.1420)} \times \frac{\text{distance of block}}{\text{distance of each axis}}$$

2) Acceleration for linear acceleration / deceleration before interpolation

– In case of linear type acceleration / deceleration

The smallest value of the following expressions among the moving axes is assumed to be the acceleration for linear acceleration / deceleration before interpolation.

$$\frac{\text{rapid traverse rate for each axis (No.1420)}}{\text{time constant for each axis (No.1620)}} \times \frac{\text{distance of block}}{\text{distance of each axis}}$$

– In case of bell–shaped type acceleration / deceleration

The parameter No.1621 (Time constant t used for bell–shaped acceleration / deceleration in rapid traverse for each axis) of the axis that the value which is calculated by the above expression is the smallest value becomes effective to the feedrate that is calculated as linear type acceleration / deceleration.

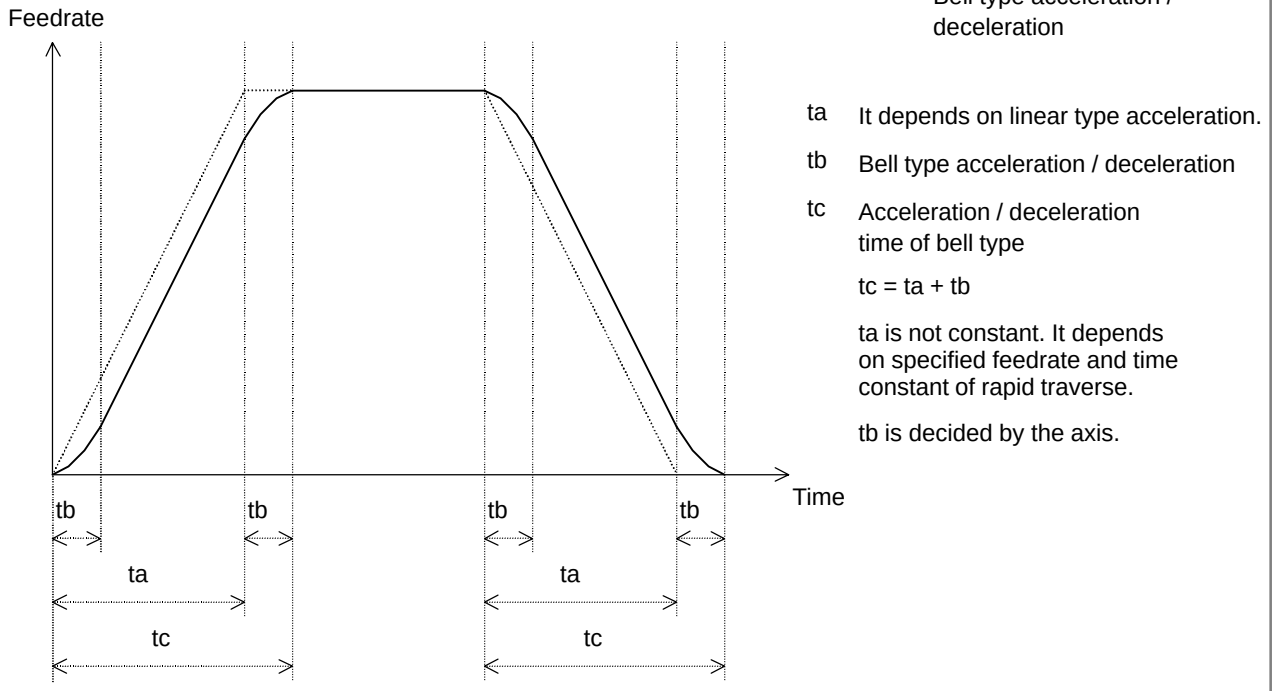

When supposing that the feedrate is F, the acceleration at linear type is A and the time constant of bell–shaped type is T, the time for acceleration / deceleration is as follows.

Time for acceleration / deceleration = F / A (in case of linear type)
= F / A + T (in case of bell–shaped type)

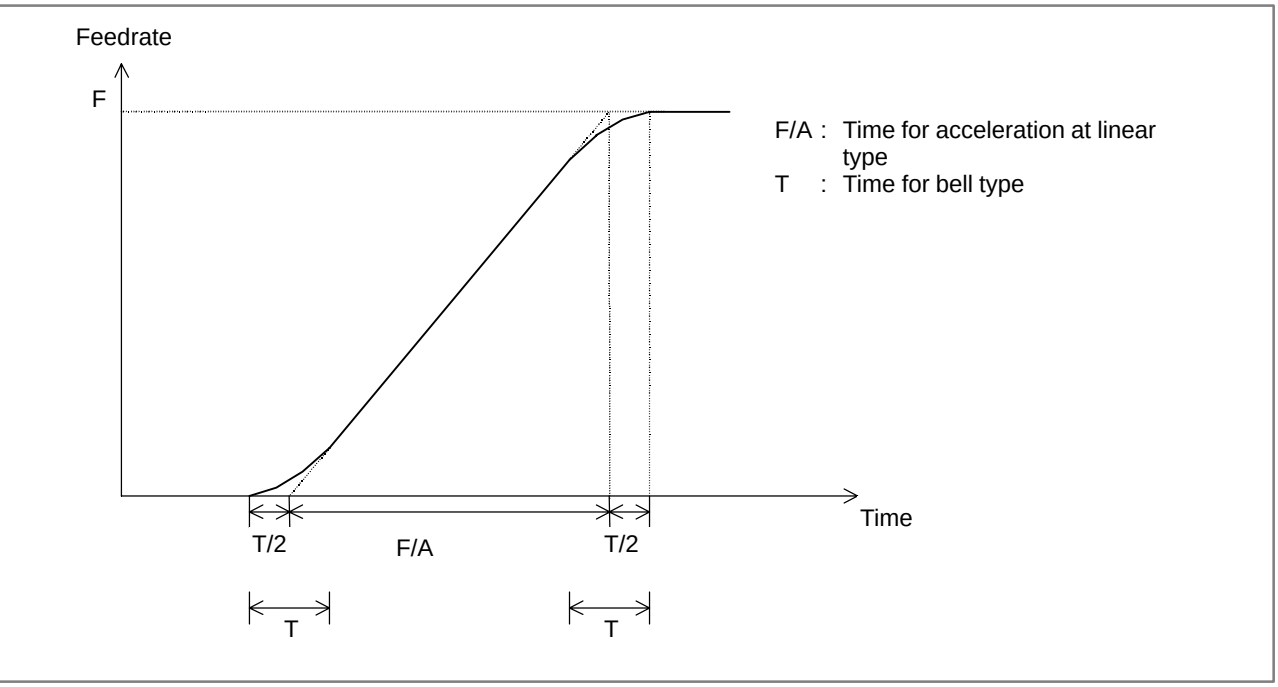

NOTE
1 The overlapping rapid traverse blocks is ineffective.
2 In case of using bell–shaped type acceleration / deceleration, the option of rapid traverse bell–shaped acceleration / deceleration is necessary.

(6) Specifications list

Controlled axis ○ : It is possible to command.
× : It is not possible to command.

Item	Function
Controlled axes number	3 axes – 4 axes In case of using 4 axes, the option of controlled axes expansion is needed.
Simultaneously controlled axes	Max. 4 axes In case that the simultaneously controlled axes are more than 3 axes, the option of simultaneously controlled axes expansion is needed.
Axis name	Basic 3 axes are X, Y, Z. Others are optional from U, V, W, A, B, C.
Least input increment	0.001mm, 0.001deg, 0.0001inch
Increment system 1/10	0.0001mm, 0.0001deg, 0.00001inch The option of increment system 1/10 is needed. Increment system 1/10 for each axis can not be used.
Inch/metric conversion (G20,G21)	○(The option of inch/metric conversion is needed) (Note2)

InterpolationFunction ○ : It is possible to command.
× : It is not possible to command.

Item	Function
Positioning (G00)	○
Single direction positioning (G60)	×
Exact stop (G09)	○
Exact stop mode (G61)	○
Tapping mode (G63)	○
Automatic corner override (G62)	×
Linear interpolation (G01)	○
Circular interpolation (G02, G03)	○ (Multi–quadrant is possible.)

Item	Function
Helical interpolation (G02, G03)	○ (Circular inter polation+Linear interpolation (up to 2 axes)
Dwell (G04)	○ (Dwell in seconds and dwell in revolution) In case of dwell in revolution, the option of threading, synchronous cutting is needed.
Cylindrical interpolation (G07.1)	×
Threading, synchronous cutting (G33)	×
SkipFunction (G31)	○ (Note)
High–speed skip function (G31)	○(The option of high–speed skip function is needed.) (Note)
Reference position return (G28)	○ (Note) When the reference point has not been established, the alarm 90 is generated.
Reference position return check (G27)	○ (Note)
2^{nd} / 3^{rd} / 4^{th} reference position return (G30)	○ (Note) (In case of 3rd or 4th reference position return, the option of 3rd/4th reference position return is needed.)
Canned cycles (G73 – G89)	○(The option of canned cycle is needed.) (Note)
Rigid tapping	○(The option of rigid tapping is needed.) (Note)
Return to initial point (G98) / Return to R point (G99)	○ (Note)
Normal direction control (G41.1, G42.1)	×
Index table indexing-Function	×
Absolute programming (G90) / Incremental programming (G91)	○

Feed Function ○ : It is possible to command.
× : It is not possible to command.

Item	Function
Rapid traverse feedrate	Max. 240 m/min (0.001mm)
	Max. 100 m/min (0.0001mm)
Rapid traverse override	F0, 25, 50, 100 %

Item	Function
Rapid traverse override 1% step	0 – 100 %
Feed per minute (G94)	○
Feed per revolution (G95)	×
Rapid traverse bell–shaped Acceleration / deceleration	○
Linear acceleration / deceleration Before cutting feed interpolation	○ (Maximum 15 blocks are read in advance.)
Feedrate override	0 – 254 %
One–digit F code feed	×
External deceleration	○(The option of external deceleration is needed.) (Note)

Program input ○ : It is possible to command.
× : It is not possible to command.

Item	Function
Plane selection (G17, G18, G19)	○
Local coordinate system (G52)	○(The option of workpiece coordinate system is needed.) (Note)
Machine coordinate system (G53)	○(The option of workpiece coordinate system is needed.) (Note)
Workpiece coordinate system (G54 – G59, G54.1 Pxx)	○(The option of workpiece coordinate system is needed.) (Note) (The option of adding workpiece coordinate system is needed.)
Workpiece coordinate system (G92)	(Note)
Workpiece coordinate system preset (G92.1)	○(The option of workpiece coordinate system preset is needed.) (Note)
Programmable data input (G10)	○(Tool offset value, workpiece origin offset value and parameter can be changed.) (Note) (The option of programmable data input is needed.)
Custom macro B	○(The option of custom macro B is needed.) (Note)
Interruption type custom macro	×

Item	Function
Programmable mirror image (G51.1)	○(The option of programmable mirror image is needed.)
Scaling (G51)	○(The option of scaling is needed.)
Coordinate system rotation (G68)	○(The option of coordinate system rotation is needed.)

Tool compensation ○ : It is possible to command.
× : It is not possible to command.

Item	Function
Cutter compensation C (G40, G41, G42)	○(The option of cutter compensation C is needed.)
Tool length compensation (G43, G44, G49)	○

Others ○ : It is possible to command.
× : It is not possible to command.

Item	Function
Cycle start / Feed hold	○
Dry run	○
Single block	○
Interlock	○
Machine lock	○(When the machine lock signal for each axis (MLK1 A MLK4) is operated, the acceleration / deceleration of the axis to which the machine lock is done is ineffective.)
Control in / out ( )	○
Optional block skip (/n)	○(The option of optional block skip is needed.)
MiscellaneousFunction (Mxxxx)	○(A code signal and a strobe signal are only sent to the machine.)
Spindle speedFunction (Sxxxx)	○
ToolFunction (Txxxx)	○(A code signal and a strobe signal are only sent to the machine.)
Second auxiliaryFunction (Bxxxx)	○(The option of second auxiliary function is needed.) (A code signal and a strobe signal are only sent to the machine.)
Simple synchronous control	○(The option of simple synchronous control is needed.) (The mode can not be switched.)
Program restart	×

Item	Function
Tool life management-Function	×
Macro executer (Execution macro)	×
MDI operation	○
Manual intervention	× (When the manual intervention is done, it is necessary to return coordinate to the position intervened at program restart. If the coordinate does not return to former position, the alarm No.5114 occurs.)

NOTE
The multi blocks look ahead is stopped.

- **Normal / Look–ahead control / AI advanced preview control parameter number correspondence**

(1) Linear acceleration / deceleration before interpolation

Meaning of parameter	Parameter No.		
	Normal	Advanced preview control	AI advanced preview
Switch of acceleration / deceleration type	FWB/1602#0		–
Maximum machining speed during linear Acceleration / deceleration before Interpolation	1630	1770	
Time used to reach the maximum machining speed during linear acceleration / deceleration before interpolation	1631	1771	
Feedrate when overtravel alarm has occurred	1784		

(2) Automatic corner deceleration

Meaning of parameter	Parameter No.		
	Normal	Advanced preview control	AI advanced preview
Switch of automatic corner deceleration type	CSD/1602#4		–
Minimum feedrate (controlled by angle)	1778	1777	–
Critical angle (controlled by angle)	1740	1779	–

Meaning of parameter	Parameter No.		
	Normal	Advanced preview control	AI advanced preview
Allowable feedrate difference (controlled by feedrate difference)	1780		–
Allowable feedrate difference for each axis (controlled by feedrate difference)	1783		

(3) Feedrate clamp based on acceleration

Meaning of parameter	Parameter No.		
	Normal	Advanced preview control	AI advanced preview
Allowable acceleration determination	–		1785

(4) Feedrate clamp based on arc radius

Meaning of parameter	Parameter No.		
	Normal	Advanced preview control	AI advanced preview
Arc radius value corresponding to a maximum feedrate	1731		
Maximum feedrate for arc radius R	1730		
Minimum value (RVmin)	1732		

(5) Others

Meaning of parameter	Parameter No.		
	Normal	Advanced preview control	AI advanced preview
Accuracy of radius error in circular Interpolation	PCIR1/3403#0		–
Maximum cutting feedrate	1422	1431	1422
Maximum cutting feedrate for each axis	1430	1432	
Rapid traverse type	LRP/1401#1		AIR/7054#1 LRP/1401#1
Time constant for bell–shaped acceleration / deceleration in rapid traverse for each axis	1621		RBL/1603#6 1621

- **Alarm**

No	Message	Contents
5110	IMPROPER G–CODE (G05.1 Q1 MODE)	A G–code which can not be used in the AI advanced preview control mode is specified.
5111	IMPROPER MODAL G–CODE (G05.1 Q1)	When the AI advanced preview control mode is specified, a modal G–code is not correct.
5112	G08 CAN NOT BE COMMANDED	The look–ahead control (G08) is specified during the AI advanced preview control mode.
5114	NOT STOP POSITION (G05.1 Q1)	The axis does not return to the coordinate at stop when the program restarts after the manual intervention.
5156	ILLEGAL AXIS OPERATION (AICC)	The control axis select signals (PMC axis control / G136) are changed during the AI advanced preview control mode. The simple synchronous axis select signals (G138) are changed during the AI advanced preview control mode.
5157	PARAMETER ZERO (AICC)	The maximum cutting feedrate (parameter No.1422 or No.1432) is 0. The acceleration / deceleration setting (parameter No.1770 or No.1771) is 0.

Limitations

- **Conditions to enter AI advanced preview control mode**

The model data when G05.1 P1 is specified should be as follows. If these conditions are not filled, the P/S alarm No.5111 occurs.

G code	Meaning
G00 G01 G02 G03	Positioning Linear interpolation Circular interpolation / Helical interpolation (CW) Circular interpolation / Helical interpolation (CCW)
G25	Spindle speed fluctuation detection off
G40	Cutter compensation cancel
G40.1	Normal direction control cancel mode
G49	Tool length compensation cancel
G50	Scaling cancel
G50.1	Programmable mirror image cancel
G64	Cutting mode
G67	Macro modal call cancel
G69	Coordinate system rotation cancel
G80	Canned cycle cancel
G94	Feed per minute
G97	Constant surface speed control cancel

NOTE

1 When this function is used, the option of the AI advanced preview control is needed. And when there is the AI advanced preview control option, it is possible to specify the look–ahead control (G08 P1).
2 The deceleration of the axis is started when the total travel of the axis in the blocks read in advance is less than the distance required to decelerate the axis from the current feedrate. When the total travel of the axis in the blocks read in advance increases at the end of deceleration, the axis is accelerated. When blocks specifying a short travel are specified in succession, the axis may be decelerated, then accelerated, then decelerated, and so on, resulting in an unstable feedrate. In such a case, specify a smaller feedrate.
3 When the dryrun signal changes from 0 to 1 or from 1 to 0 during the axis movement, the feedrate accelerates or decelerates to the commanded velocity without the deceleration to 0.
4 When a block without movement or one–shot G–code such as G04 is specified in the AI advanced preview control mode, the deceleration stop is done at the previous block.
5 In case of using the acceleration / deceleration after cutting feed interpolation, please use linear type or bell–shaped type. It is not possible to use exponential type.
6 During changing to the AI advanced preview control mode, the manual handle interruption becomes ineffective.

20 AXIS CONTROL FUNCTIONS

20.1 SIMPLE SYNCHRONOUS CONTROL

It is possible to change the operating mode for two or more specified axes to either synchronous operation or normal operation by an input signal from the machine.
Synchronous control can be performed for up to four pairs of axes with the Series 16, or up to three pairs with the Series 18, according to the parameter setting (parameter No. 8311).
The following operating modes are applicable to machines having two tables driven independently by separate control axes. The following example is of a machine with two tables driven independently by the Y axis and V axis. If the axis names and axis sets that are actually being used differ from those in the example, substitute the actual names for those below.

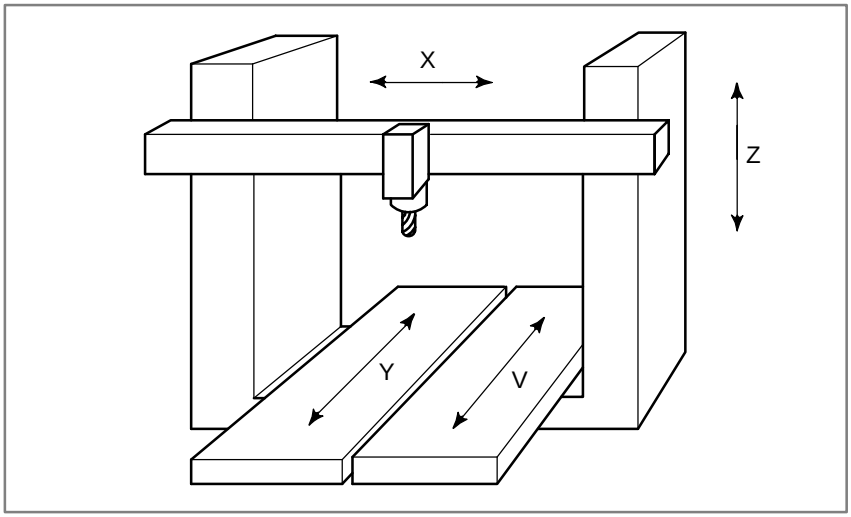

Fig. 20.1 Example of axis configuration of the machine operated by simple synchronous control

Explanations

- **Synchronous operation**

This mode is used for, for example, machining large workpieces that extend over two tables.
While operating one axis with a move command, it is possible to synchronously move the other axis. In the synchronous mode, the axis to which the move command applies is called the master axis, and the axis that moves synchronously with the master axis is called the slave axis. In this example, it is assumed that Y axis is the master axis and V axis is the slave axis. Here, the Y axis and the V axis move synchronously in accordance with program command Yyyyy issued to the Y axis (master axis).
Synchronous operation is possible during automatic operation, jog feed, manual handle feed using the manual pulse generator, and incremental feed, but is not possible during manual reference position return.

- **Normal operation**

This operating mode is used for machining different workpieces on each table. The operation is the same as in ordinary CNC control, where the movement of the master axis and slave axis is controlled by the independent axis address (Y and V). It is possible to issue the move commands to both the master axis and slave axis in the same block.

(1) The Y axis moves normally according to program command Yyyyy issued to the master axis.

(2) The V axis moves normally according to program command Vvvvv issued to the slave axis.

(3) The Y axis and the V axis move simultaneously according to program command YyyyyVvvvv.
Both automatic and manual operations are the same as in ordinary CNC control.

- **Switching between synchronous operation and normal operation**

For how to switch between the synchronous operation and normal operation modes, refer to the relevant manual published by the machine tool builder.

- **Automatic reference position return**

When the automatic reference position return command (G28) and the 2nd/3rd/4th reference position return command (G30) are issued during synchronous operation, the V axis follows the same movement as the Y axis returns to the reference position. After the return movement is complete, the reference position return complete signal of the V axis goes on when that of the Y axis goes on.
As a rule, commands G28 and G30 must be issued in the normal operating mode.

- **Automatic reference position return check**

When the automatic reference position return check command (G27) is issued during synchronous operation, the V axis and Y axis move in tandem. If both the Y axis and the V axis have reached their respective reference positions after the movement is complete, the reference position return complete signals go on. If either axis is not at the reference position, an alarm is issued. As a rule, command G27 must be issued in the normal operating mode.

- **Specifying the slave axis**

When a move command is issued to the slave axis during synchronous operation, a P/S alarm (No. 213) is issued.

- **Master axis and slave axis**

The axis to be used as the master axis is set in parameter No. 8311.
The slave axis is selected by an external signal.

- **Displaying actual speed for master axis only**

Setting bit 7 (SMF) of parameter No. 3105 to 1 suppresses display of the actual speed of the slave axes.

Limitations

- **Setting a coordinate system**

  In synchronous axis control, commands that require no axis motion, such as the workpiece coordinate system setup command (G92) and the local coordinate system setup command (G52), are set to the Y axis by program command Yyyyy issued to the master axis.

- **Externally–requested deceleration, interlock, and machine lock**

  For signals such as external deceleration, interlock, and machine lock, only the signals issued to the master axis are valid in the synchronous operating mode. Signals issued to other axes are ignored.

- **Pitch error compensation**

  Both the pitch error and backlash are compensated independently for the master axis and the slave axis.

- **Manual absolute**

  Turn on the manual absolute switch during synchronous operation. If it is off, the slave axis may not move correctly.

- **Synchronization error check using positional deviation**

  The difference between the master axis and slave axis in servo positional deviation is always monitored. If the difference exceeds the parameter–set limit, an P/S alarm (No. 213) is issued.

- **Synchronization error check using machine coordinates**

  The difference between the master axis and slave axis in machine coordinates is always monitored. If the difference exceeds the parameter–set limit, an servo alarm (No. 407) is issued.

- **Synchronization**

  When the power is turned on, compensation pulses are output for the slave axis to match the machine position of the master axis with the machine position of the slave axis. (This is enabled only when the absolute position detection function is used.)

- **Compensation for out–of–synchronism**

  Compensation for out–of–synchronism (where the difference between the master and slave axes in servo positional deviation is always monitored and the servo motor for the slave axis is compensated to reduce the difference) is not performed.

- **Manual reference position return**

  When the machine is manually returned to the reference position during synchronous operation, both the master axis and the slave axis move synchronously until the acceleration movement is complete. However, grid detection thereafter is carried out independently.

20.2 ROTARY AXIS ROLL–OVER

The roll–over function prevents coordinates for the rotation axis from overflowing. The roll–over function is enabled by setting bit 0 of parameter ROAx 1008 to 1.

Explanations

For an incremental command, the tool moves the angle specified in the command. For an absolute command, the coordinates after the tool has moved are values set in parameter No. 1260, and rounded by the angle corresponding to one rotation. The tool moves in the direction in which the final coordinates are closest when bit 1 of parameter RABx No. 1008 is set to 0. Displayed values for relative coordinates are also rounded by the angle corresponding to one rotation when bit 2 of parameter RRLx No. 1008 is set to 1.

Examples

Assume that axis A is the rotating axis and that the amount of movement per rotation is 360.000 (parameter No. 1260 = 360000). When the following program is executed using the roll–over function of the rotating axis, the axis moves as shown below.

G90 A0 ;	**Sequence number**	**Actual movement value**	**Absolute coordinate value after movement end**
N1 G90 A–150.0 ;	N1	–150	210
N2 G90 A540.0 ;	N2	–30	180
N3 G90 A–620.0 ;	N3	–80	100
N4 G91 A380.0 ;	N4	+380	120
N5 G91 A–840.0 ;	N5	–840	0

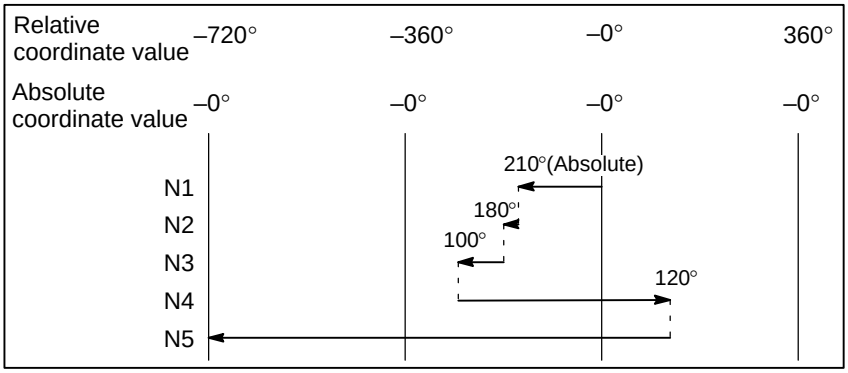

NOTE
This function cannot be used together with the indexing function of the index table.

III. OPERATION

1 GENERAL

1.1 MANUAL OPERATION

Explanations

- **Manual reference position return (See Section III–3.1)**

The CNC machine tool has a position used to determine the machine position.
This position is called the reference position, where the tool is replaced or the coordinate are set. Ordinarily, after the power is turned on, the tool is moved to the reference position.
Manual reference position return is to move the tool to the reference position using switches and pushbuttons located on the operator's panel.

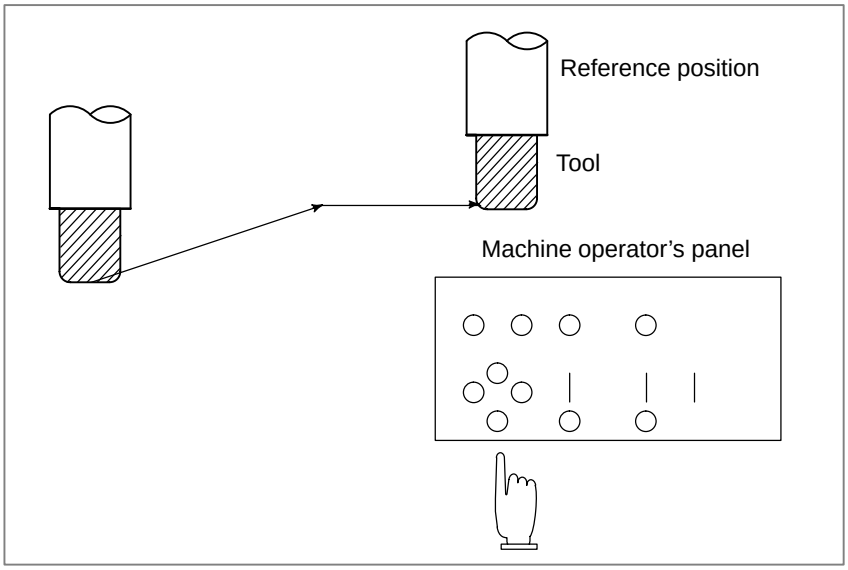

Fig. 1.1 (a) Manual reference position return

The tool can be moved to the reference position also with program commands.
This operation is called automatic reference position return (See Section II–6).

- **The tool movement by manual operation**

Using machine operator's panel switches, pushbuttons, or the manual handle, the tool can be moved along each axis.

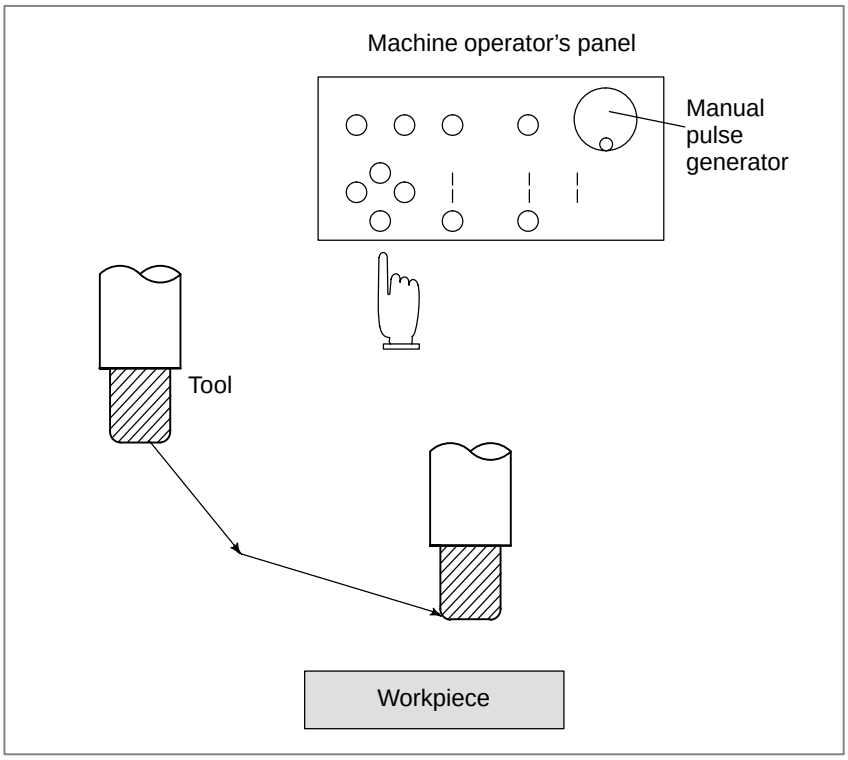

Fig. 1.1 (b) The tool movement by manual operation

The tool can be moved in the following ways:

(i) Jog feed (See Section III–3.2)
The tool moves continuously while a pushbutton remains pressed.

(ii) Incremental feed (See Section III–3.3)
The tool moves by the predetermined distance each time a button is pressed.

(iii) Manual handle feed (See Section III–3.4)
By rotating the manual handle,the tool moves by the distance corresponding to the degree of handle rotation.

1.2 TOOL MOVEMENT BY PROGRAMMING– AUTOMATIC OPERATION

Automatic operation is to operate the machine according to the created program. It includes memory, MDI and DNC operations. (See Section III–4).

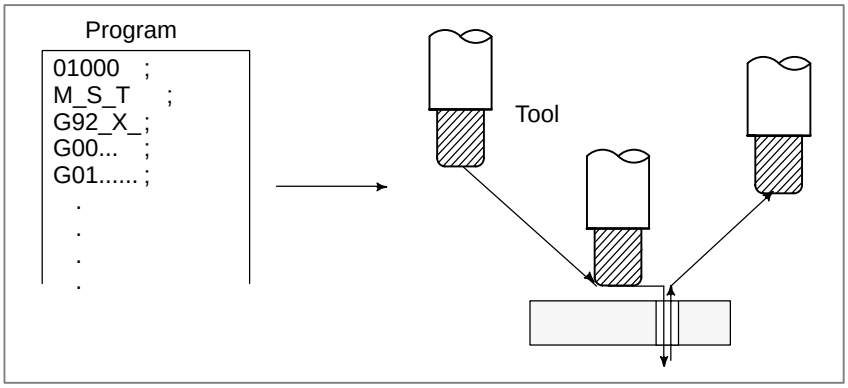

Fig.1.2 (a) Tool movement by programming

Explanations

- **Memory operation**

After the program is once registered in memory of CNC, the machine can be run according to the program instructions. This operation is called memory operation.

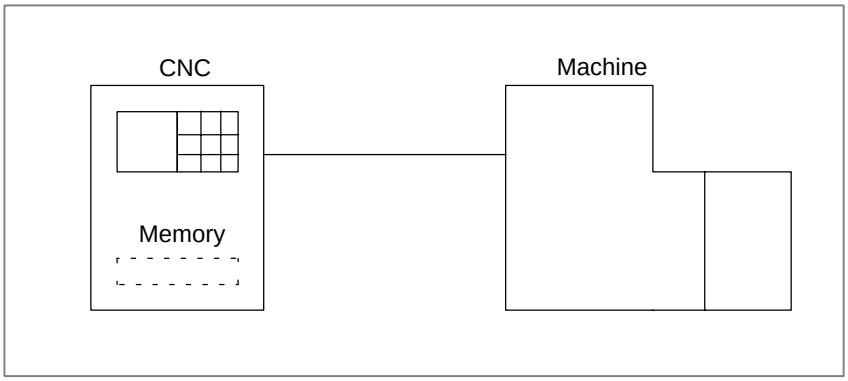

Fig.1.2 (b) Memory operation

- **MDI operation**

After the program is entered, as an command group, from the MDI keyboard, the machine can be run according to the program. This operation is called MDI operation.

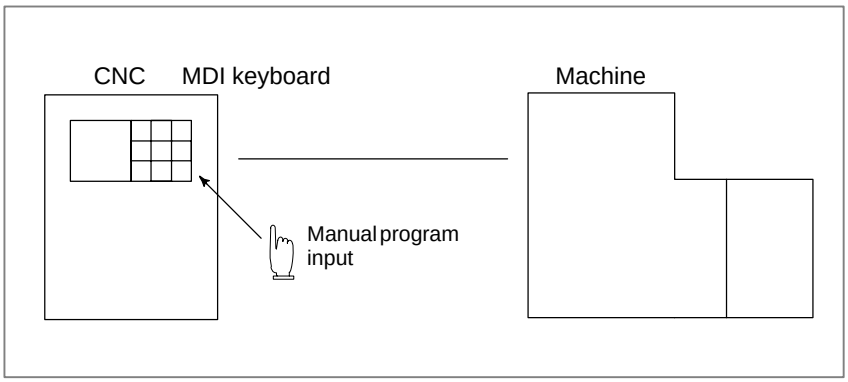

Fig.1.2 (c) MDI operation

- **DNC operation**

In this mode of operation, the program is not registered in the CNC memory. It is read from the external input/output devices instead. This is called DNC operation. This mode is useful when the program is too large to fit the CNC memory.

1.3 AUTOMATIC OPERATION

Explanations

- **Program selection**

Select the program used for the workpiece. Ordinarily, one program is prepared for one workpiece. If two or more programs are in memory, select the program to be used, by searching the program number (Section III–9.3).

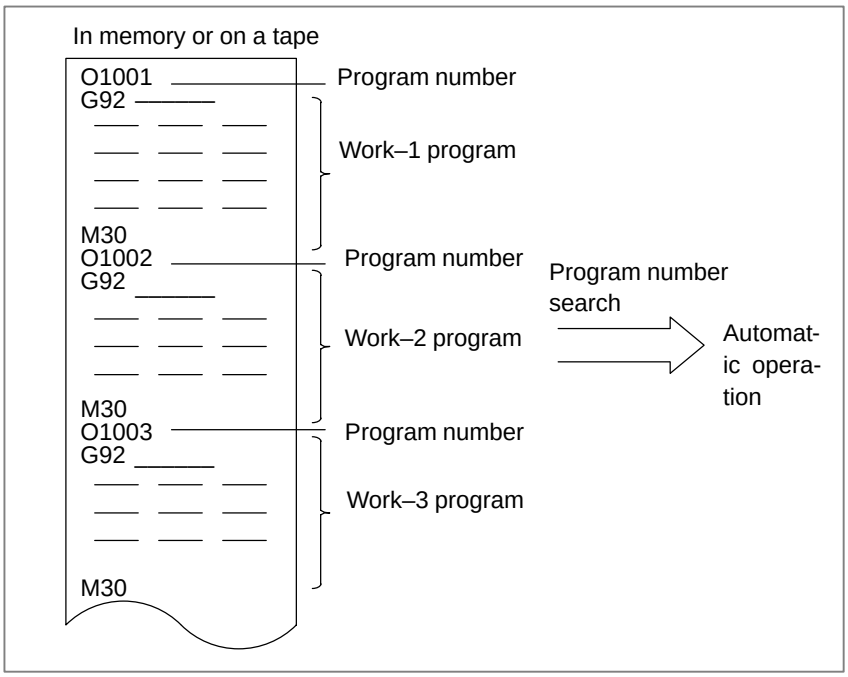

Fig. 1.3 (a) Program selection for automatic operation

- **Start and stop (See Section III–4)**

Pressing the cycle start pushbutton causes automatic operation to start. By pressing the feed hold or reset pushbutton, automatic operation pauses or stops. By specifying the program stop or program termination command in the program, the running will stop during automatic operation. When one process machining is completed, automatic operation stops.

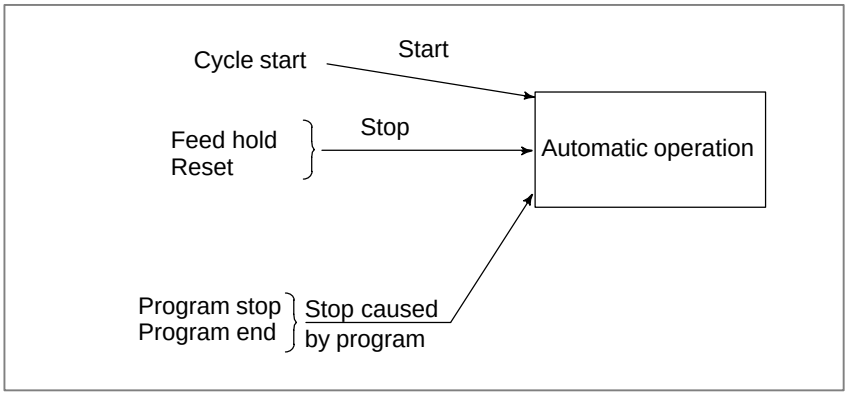

Fig. 1.3 (b) Start and stop for automatic operation

- **Handle interruption (See Section III–4.7)**

While automatic operation is being executed, tool movement can overlap automatic operation by rotating the manual handle.

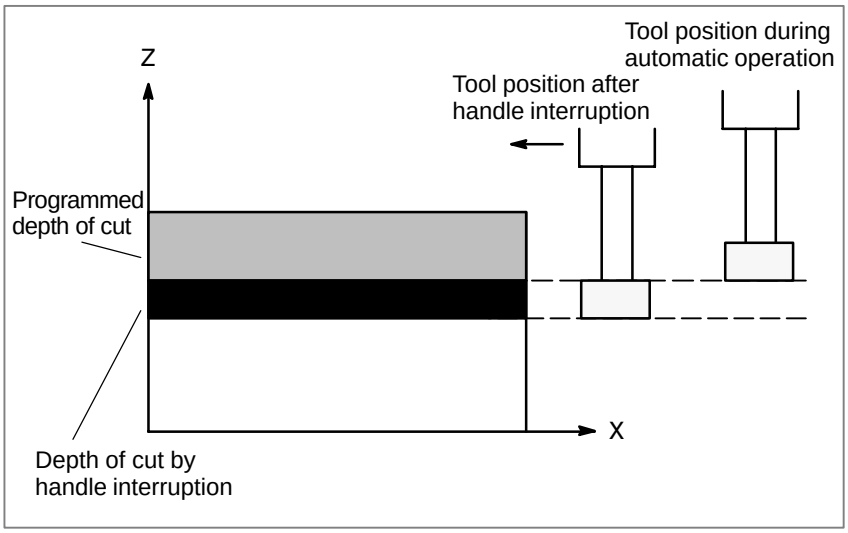

Fig. 1.3 (c) Handle Interruption for automatic operation

1.4 TESTING A PROGRAM

Before machining is started, the automatic running check can be executed. It checks whether the created program can operate the machine as desired. This check can be accomplished by running the machine actually or viewing the position display change (without running the machine) (See Section III–5).

1.4.1 Check by Running the Machine

Explanations

- **Dry run (See Section III–5.4)**

Remove the workpiece, check only movement of the tool. Select the tool movement rate using the dial on the operator's panel.

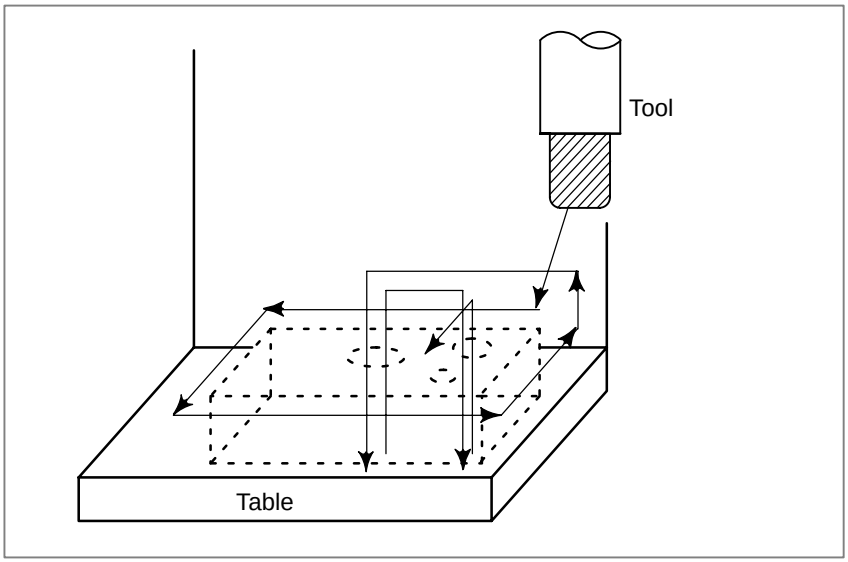

Fig. 1.4.1 (a) Dry run

- **Feedrate override (See Section III–5.2)**

Check the program by changing the feedrate specified in the program.

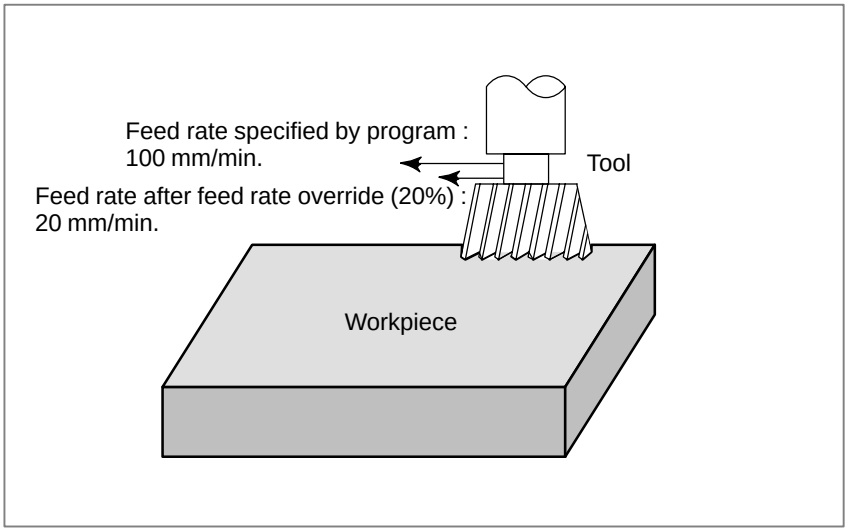

Fig. 1.4.1 (b) Feedrate override

- **Single block (See Section III–5.5)**

When the cycle start pushbutton is pressed, the tool executes one operation then stops. By pressing the cycle start again, the tool executes the next operation then stops. The program is checked in this manner.

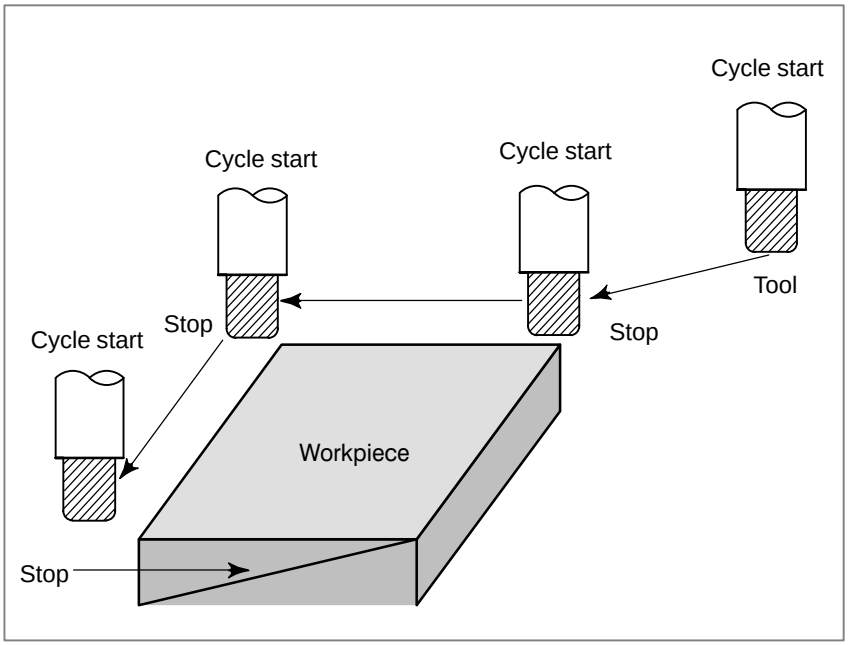

Fig. 1.4.1 (c) Single block

1.4.2 How to View the Position Display Change without Running the Machine

Explanations

- **Machine lock (See Sections III–5.1)**

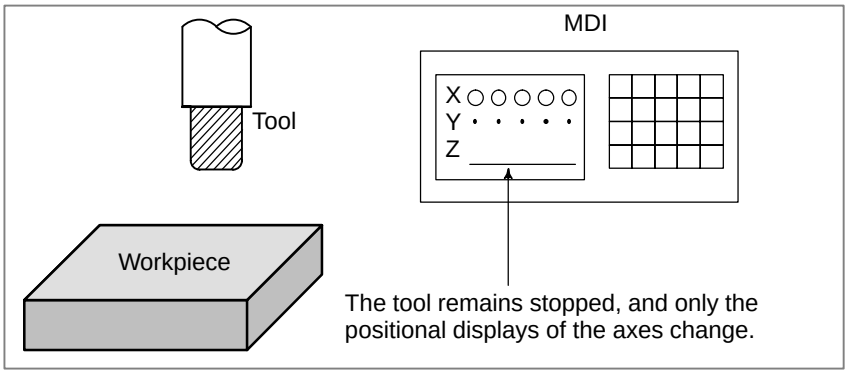

Fig1.4.2 Machine lock

- **Auxiliary function lock (See Section III–5.1)**

When automatic running is placed into the auxiliary function lock mode during the machine lock mode, all auxiliary functions (spindle rotation, tool replacement, coolant on/off, etc.) are disabled.

1.5 EDITING A PART PROGRAM

After a created program is once registered in memory, it can be corrected or modified from the MDI panel (See Section III–9).
This operation can be executed using the part program storage/edit function.

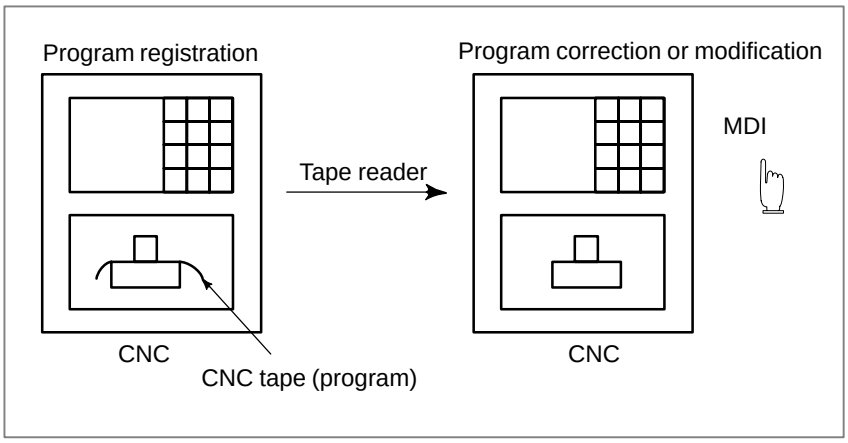

Fig. 1.5 (a) Part program editing

1.6 DISPLAYING AND SETTING DATA

The operator can display or change a value stored in CNC internal memory by key operation on the MDI screen (See III–11).

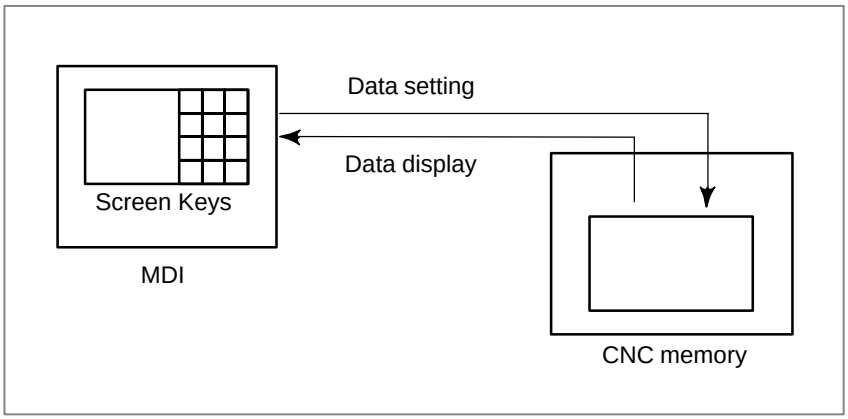

Fig. 1.6 (a) Displaying and setting data

Explanations

- **Offset value**

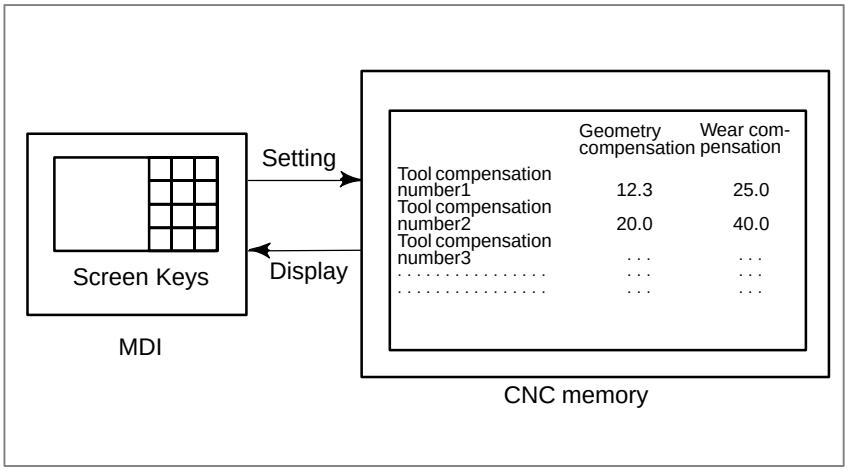

Fig.1.6 (b) Displaying and setting offset values

The tool has the tool dimension (length, diameter). When a workpiece is machined, the tool movement value depends on the tool dimensions.
By setting tool dimension data in CNC memory beforehand, automatically generates tool routes that permit any tool to cut the workpiece specified by the program. Tool dimension data is called the offset value (See Section III–11.4.1).

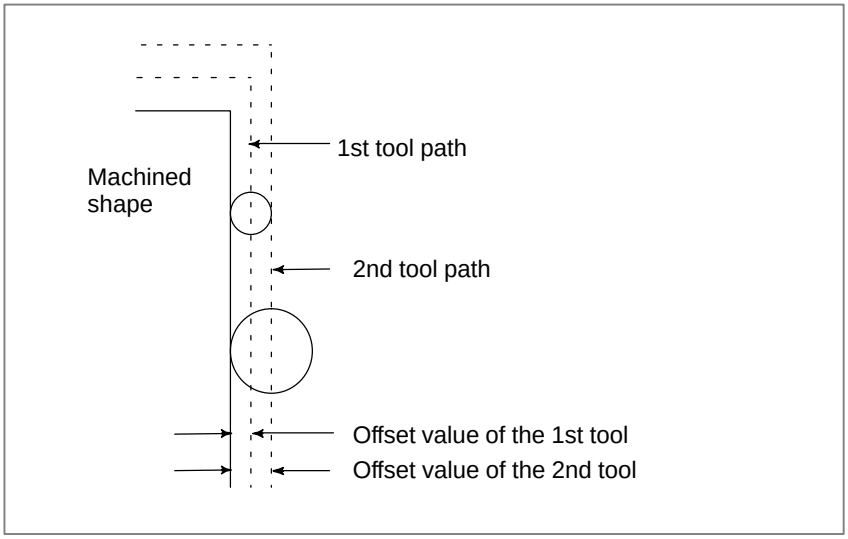

Fig. 1.6 (c) Offset value

- **Displaying and setting operator's setting data**

Apart from parameters, there is data that is set by the operator in operation. This data causes machine characteristics to change.
For example, the following data can be set:

- Inch/Metric switching
- Selection of I/O devices
- Mirror image cutting on/off

The above data is called setting data (See Section III–11.4.3).

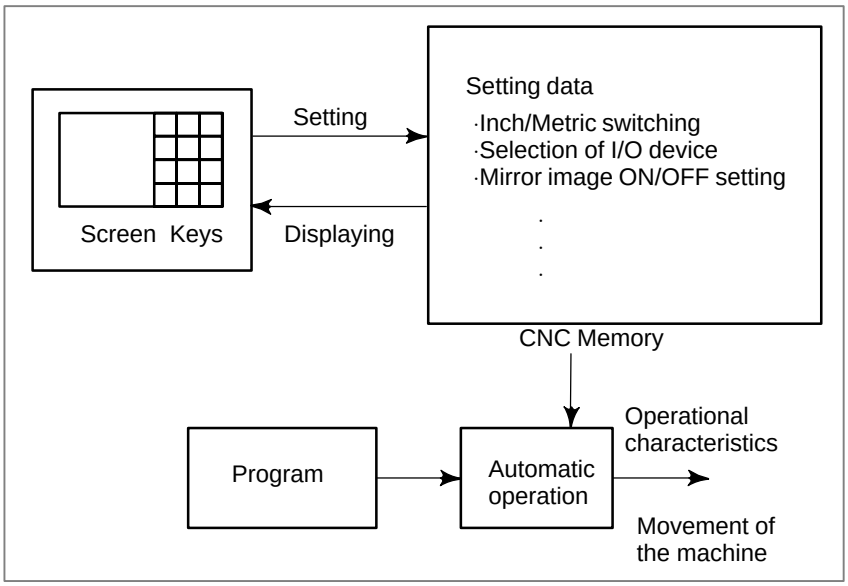

Fig. 1.6 (d) Displaying and setting operator's setting data

- **Displaying and setting parameters**

The CNC functions have versatility in order to take action in characteristics of various machines.
For example, CNC can specify the following:
- Rapid traverse rate of each axis
- Whether increment system is based on metric system or inch system.
- How to set command multiply/detect multiply (CMR/DMR)

Data to make the above specification is called parameters (See Section III–11.5.1).
Parameters differ depending on machine tool.

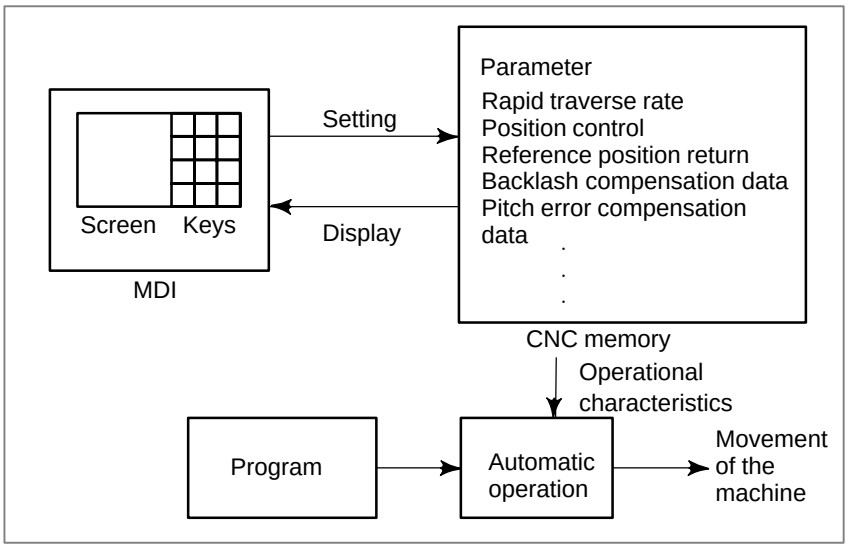

Fig. 1.6 (e) Displaying and setting parameters

- **Data protection key**

A key called the data protection key can be defined. It is used to prevent part programs, offset values, parameters, and setting data from being registered, modified, or deleted erroneously (See Section III–11).

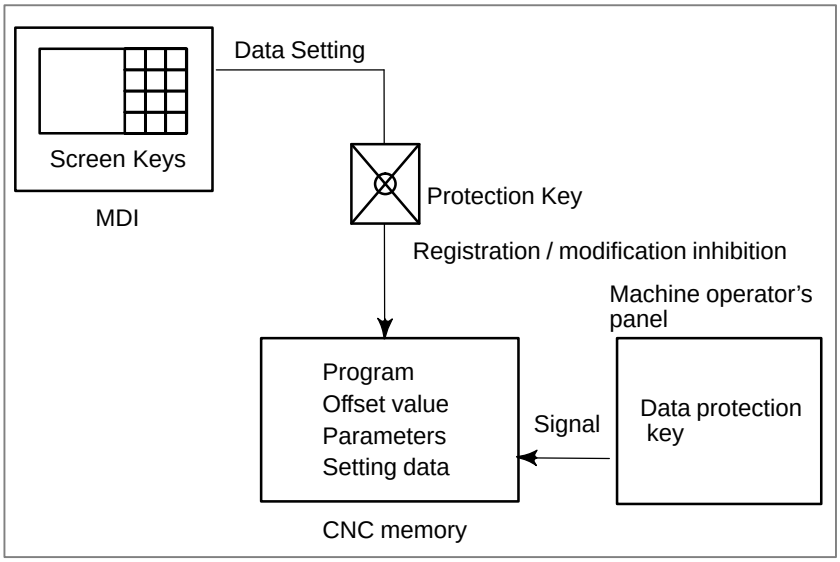

Fig. 1.6 (f) Data protection key

1.7 DISPLAY

1.7.1 Program Display

The contents of the currently active program are displayed. In addition, the programs scheduled next and the program list are displayed. (See Section III–11.2.1)

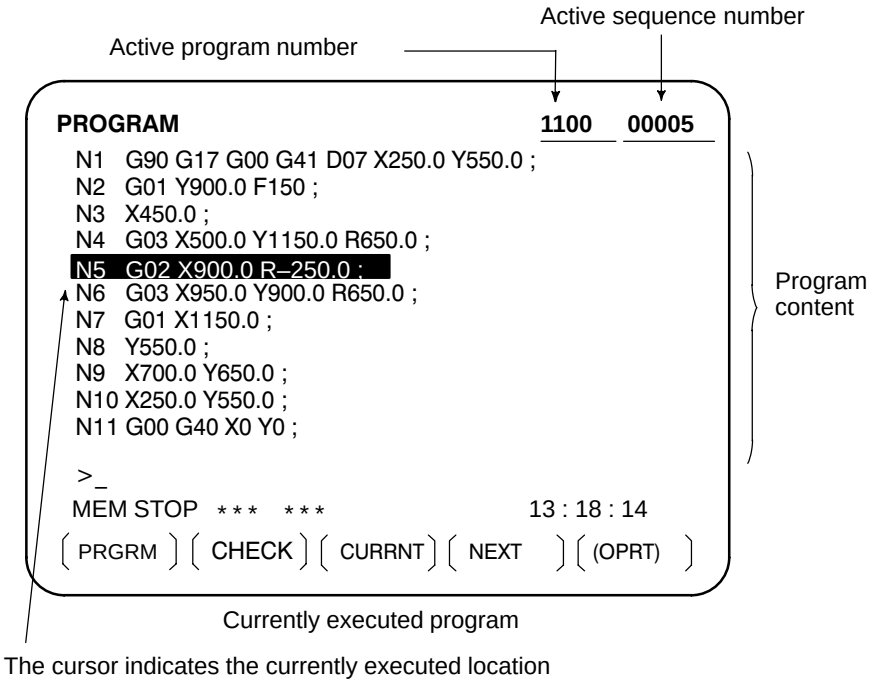

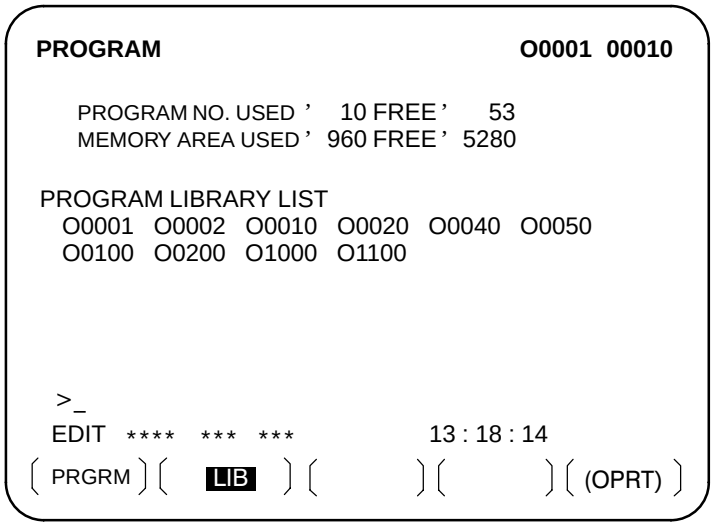

1.7.2 Current Position Display

The current position of the tool is displayed with the coordinate values. The distance from the current position to the target position can also be displayed. (See Section III–11.1.1 to 11.1.3)

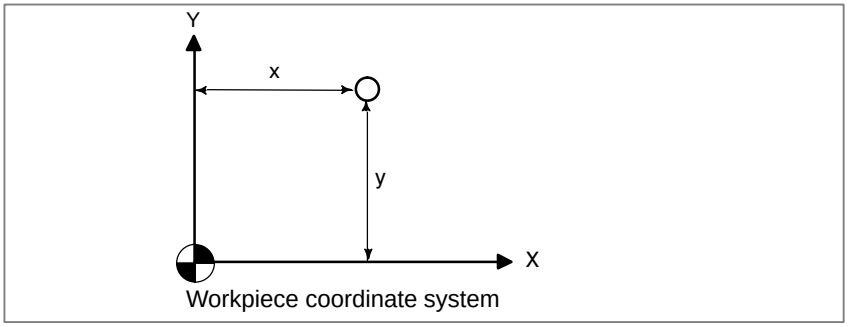

Workpiece coordinate system

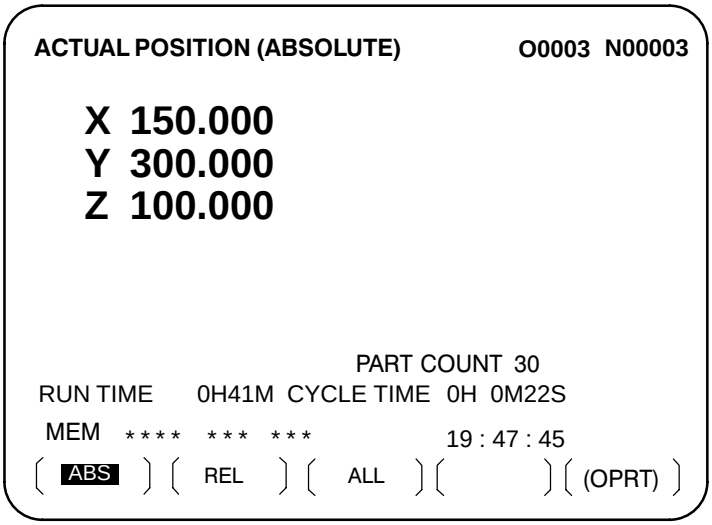

1.7.3 Alarm Display

When a trouble occurs during operation, alarm number and alarm message are displayed on the screen. (See Section III–7.1)
See APPENDIX G for the list of alarms and their meanings.

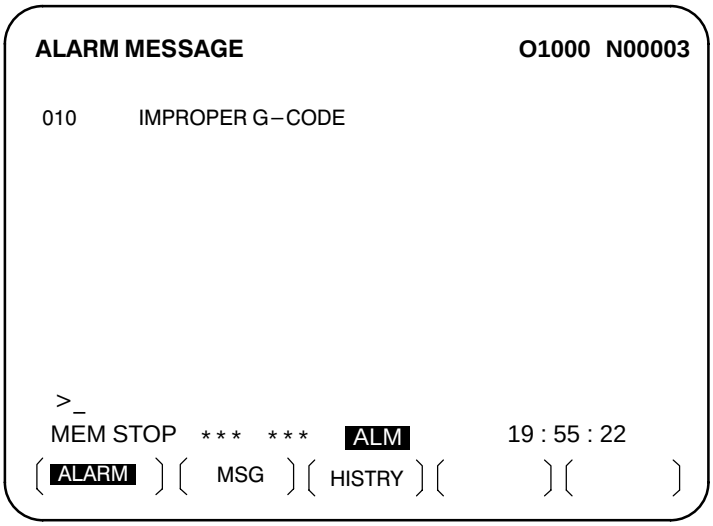

1.7.4 Parts Count Display, Run Time Display

When this option is selected, two types of run time and number of parts are displayed on the screen. (See Section lll–11.4.5)

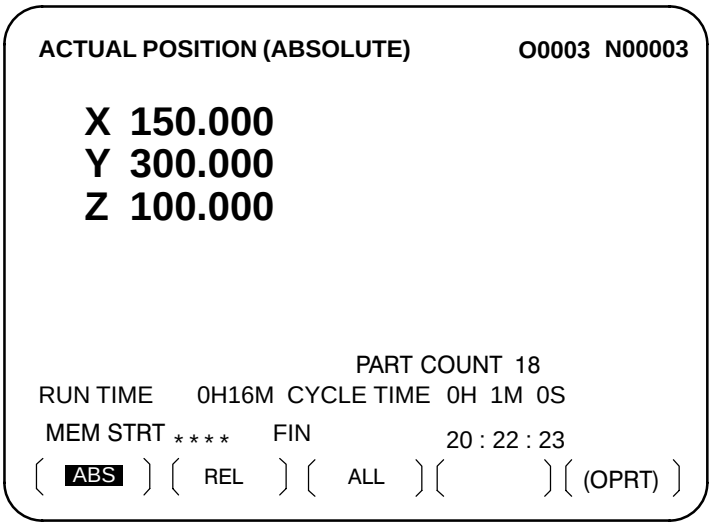

1.7.5 Graphic Display

Programmed tool movement can be displayed on the following planes: (See Section III–12)

1) XY plane
2) YZ plane
3) XZ plane
4) Three dimensional display

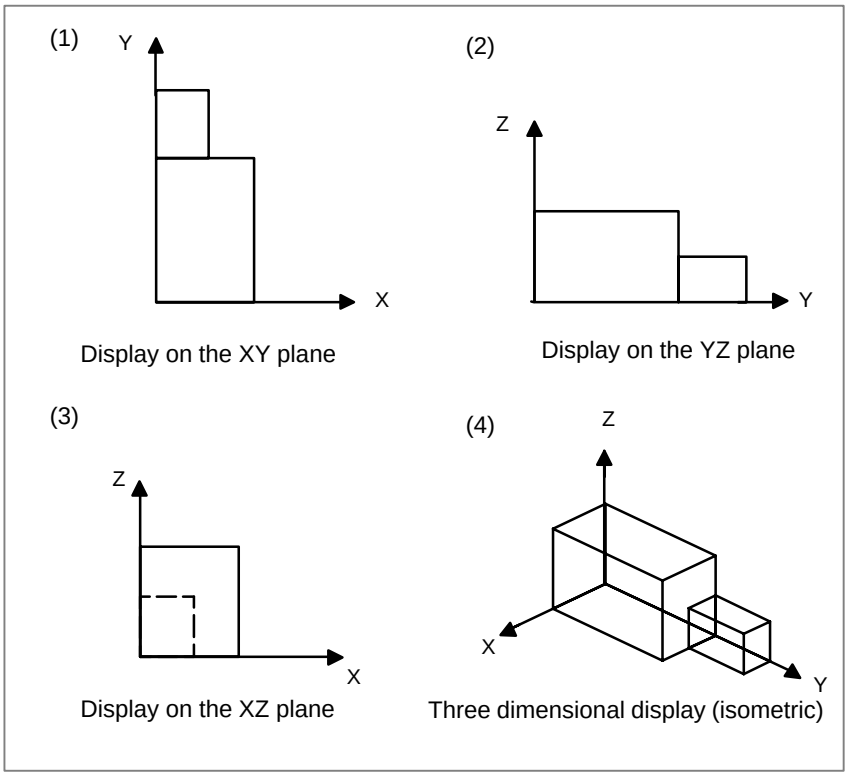

Fig. 1.7.5 Graphic display

1.8 DATA INPUT / OUTPUT

Programs, offset values, parameters, etc. input in CNC memory can be output to paper tape, cassette, or a floppy disk for saving. After once output to a medium, the data can be input into CNC memory.

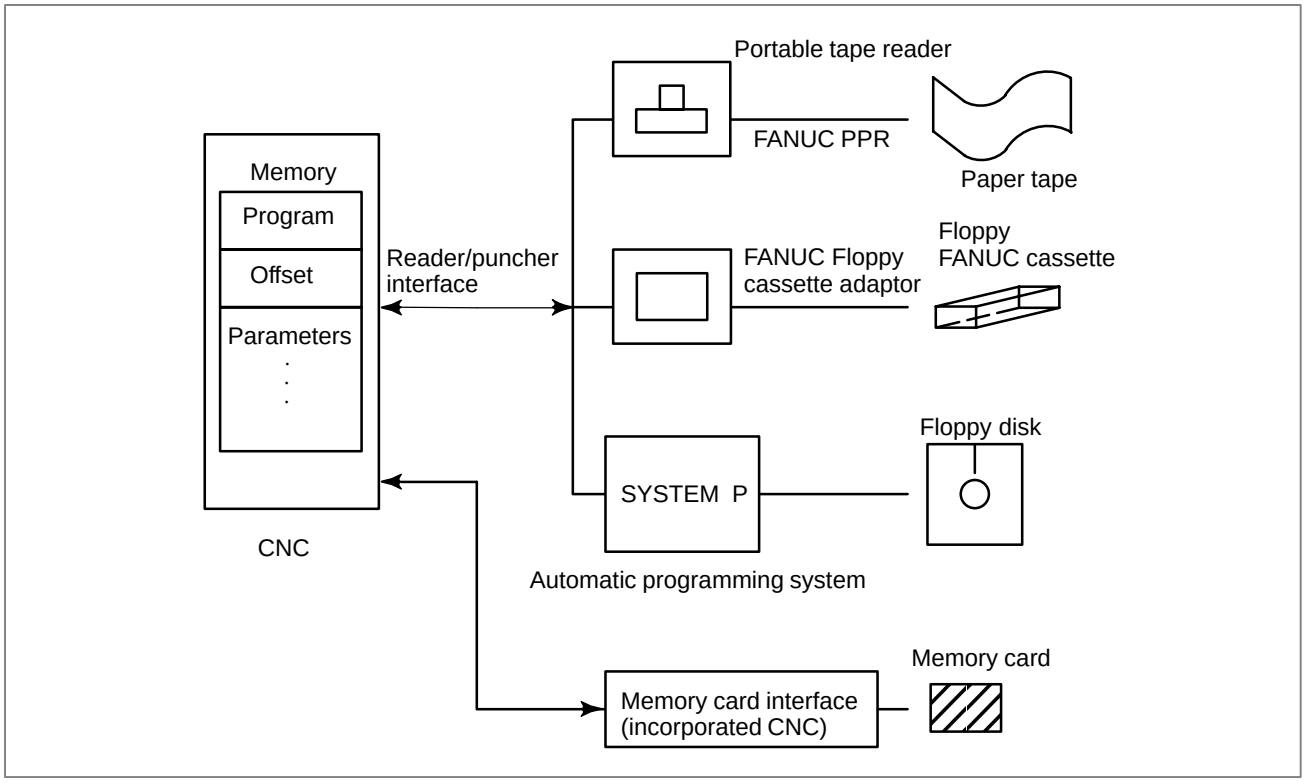

Fig. 1.8 Data output

2 OPERATIONAL DEVICES

The available operational devices include the setting and display unit attached to the CNC, the machine operator’s panel, and external input/output devices such as a Handy File.

2.1 SETTING AND DISPLAY UNITS

The setting and display units are shown in Subsections 2.1.1 to 2.1.6 of Part III.

7.2”/8.4” LCD–Mounted Type CNC control unit III–2.1.1
9.5”/10.4” LCD–Mounted Type CNC control unit III–2.1.2
Stand–Alone type small MDI unit III–2.1.3
Stand–Alone type standard MDI unit III–2.1.4
Stand–Alone type 61 full–key MDI unit III–2.1.5

2.1.1
7.2″/8.4″ LCD–Mounted Type CNC Control Unit

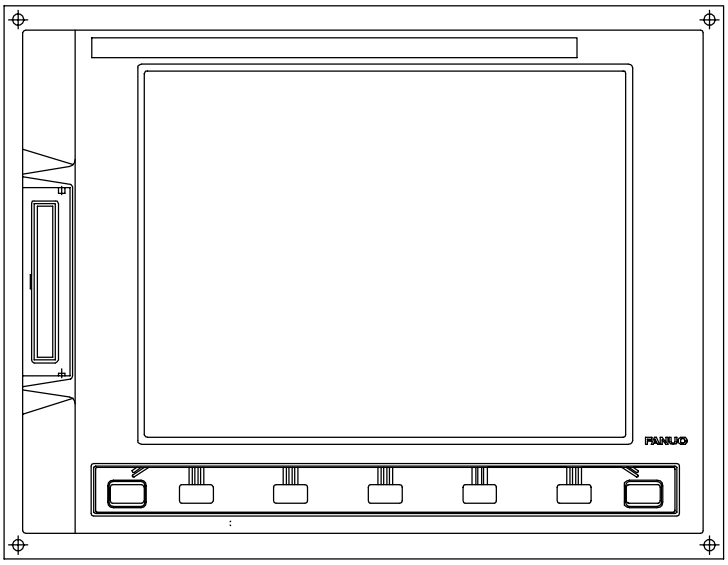

2.1.2
9.5″/10.4″ LCD–Mounted Type CNC Control Unit

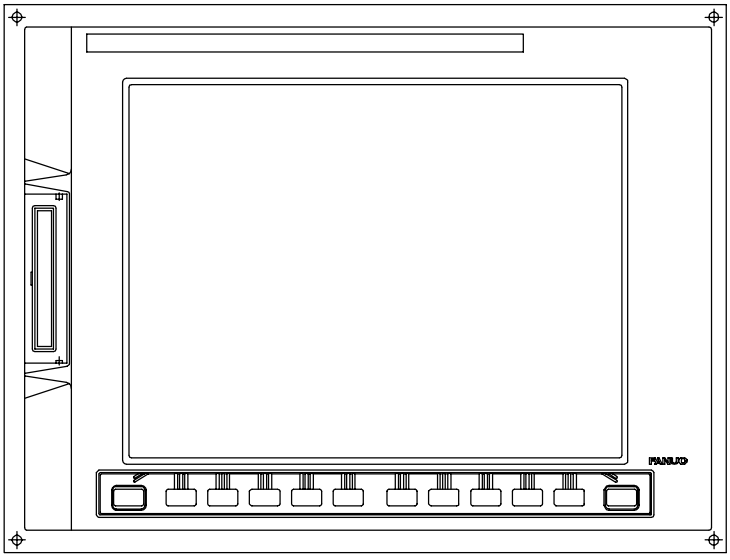

2.1.3 Stand–Alone Type Small MDI Unit

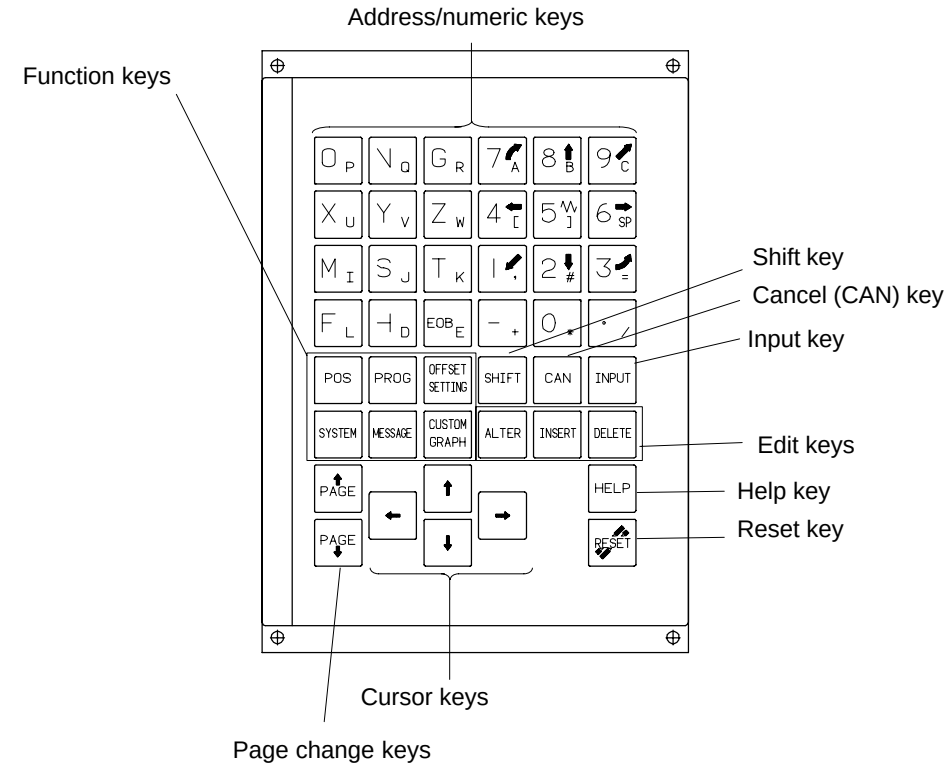

2.1.4
Stand–Alone Type
Standard MDI Unit

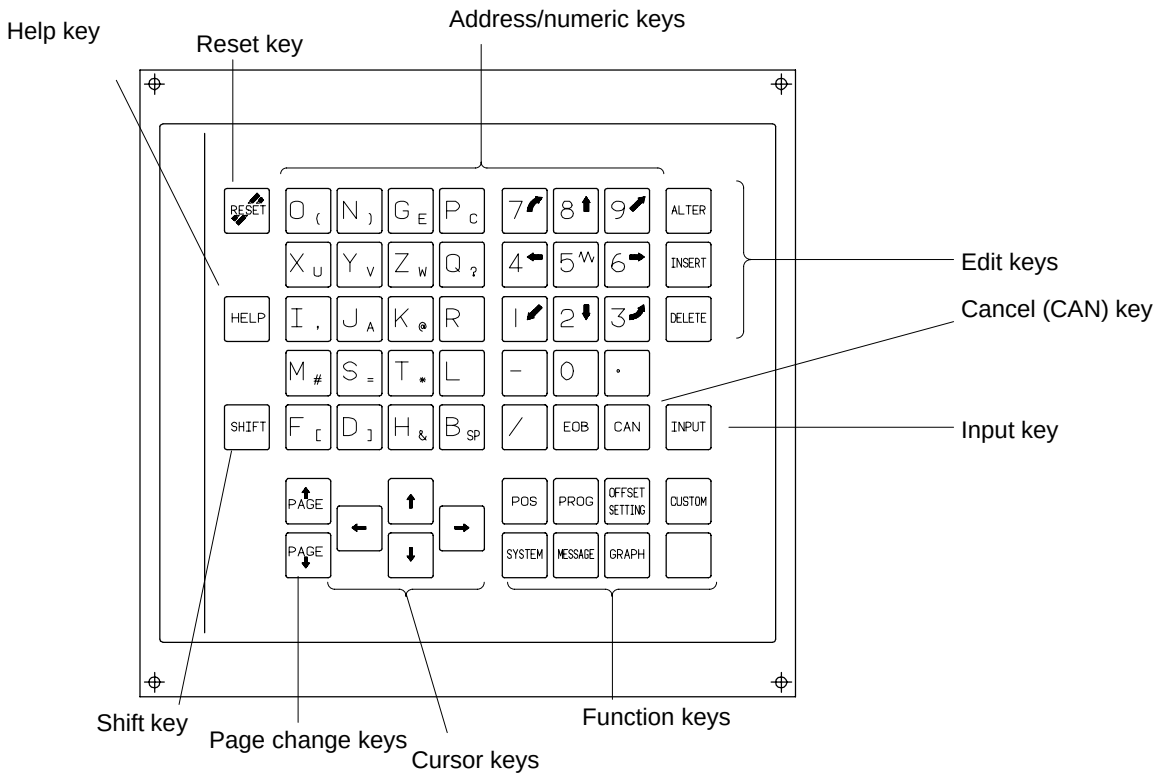

2.1.5
Stand–Alone Type 61
Full–Key MDI Unit

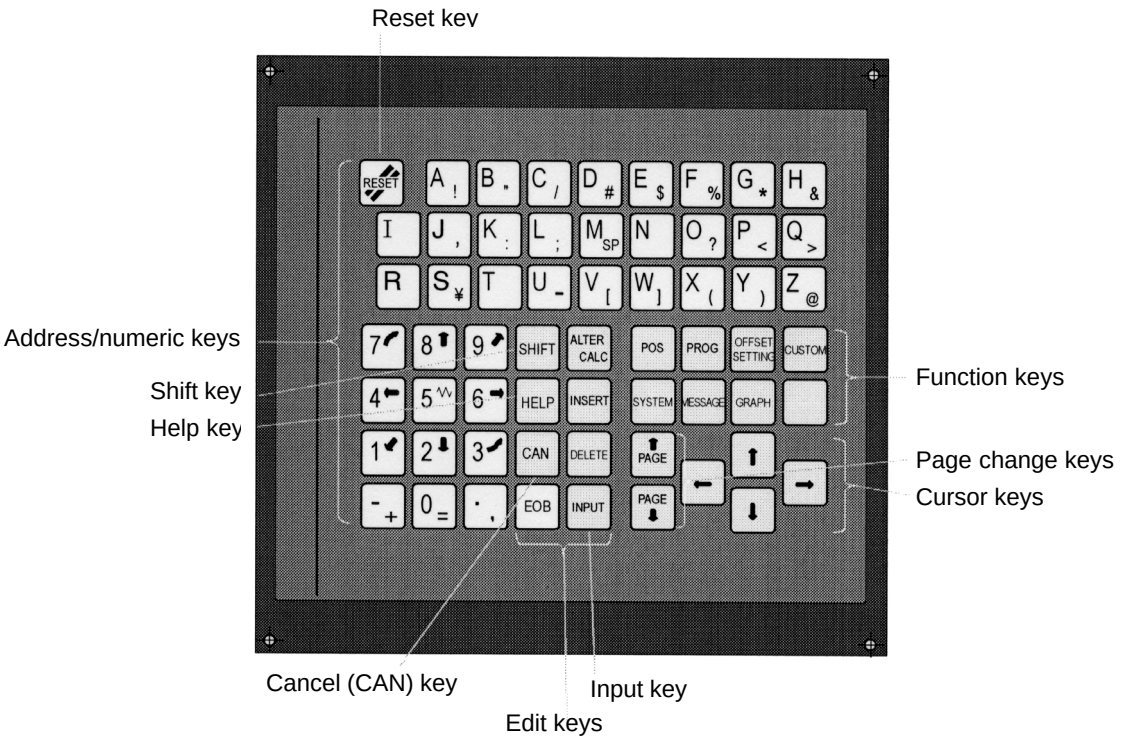

2.2 EXPLANATION OF THE KEYBOARD

Table 2.2 Explanation of the MDI keyboard

Number	Name	Explanation
1	RESET key	Press this key to reset the CNC, to cancel an alarm, etc.
2	HELP key	Press this button to use the help function when uncertain about the operation of an MDI key (help function). In case of 210*i*, this key is assigned to “ESC” key of the personal computer.
3	Soft keys	The soft keys have various functions, according to the Applications. The soft key functions are displayed at the bottom of the screen.
4	Address and numeric keys  …	Press these keys to input alphabetic, numeric, and other characters.
5	SHIFT key	Some keys have two characters on their keytop. Pressing the <SHIFT> key switches the characters. Special character Ê is displayed on the screen when a character indicated at the bottom right corner on the keytop can be entered.
6	INPUT key	When an address or a numerical key is pressed, the data is input to the buffer, and it is displayed on the screen. To copy the data in the key input buffer to the offset register, etc., press the INPUT key. This key is equivalent to the [INPUT] key of the soft keys, and either can be pressed to produce the same result.
7	Cancel key	Press this key to delete the last character or symbol input to the key input buffer. When the key input buffer displays >N001X100Z_ and the cancel CAN key is pressed, Z is canceled and >N001X100_ is displayed.
8	Program edit keys 	Press these keys when editing the program. ALTER : Alteration (In case of 210*i*, this key is assigned to “Tab” key of the personal computer.) INSERT : Insertion DELETE : Deletion
9	Function keys  …	Press theses keys to switch display screens for each function. See lll – 2.3 for detailas of the function keys.

Table 2.2 Explanation of the MDI keyboard

Number	Name	Explanation
10	Cursor move keys 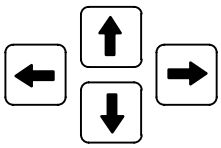	There are four different cursor move keys. : This key is used to move the cursor to the right or in the forward direction. The cursor is moved in short units in the forward direction. : This key is used to move the cursor to the left or in the reverse direction. The cursor is moved in short units in the reverse direction. : This key is used to move the cursor in a downward or forward direction. The cursor is moved in large units in the forward direction. : This key is used to move the cursor in an upward or reverse direction. The cursor is moved in large units in the reverse direction.
11	Page change keys	Two kinds of page change keys are described below. : This key is used to changeover the page on the screen in the forward direction. : This key is used to changeover the page on the screen in the reverse direction.

2.3 FUNCTION KEYS AND SOFT KEYS

The function keys are used to select the type of screen (function) to be displayed. When a soft key (section select soft key) is pressed immediately after a function key, the screen (section) corresponding to the selected function can be selected.

2.3.1 General Screen Operations

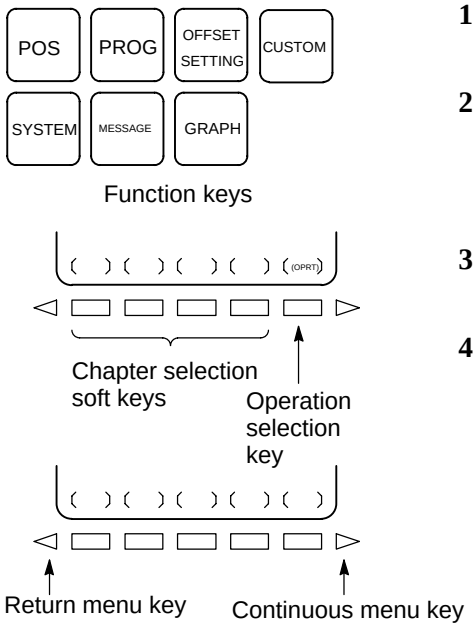

1 Press a function key on the MDI panel. The chapter selection soft keys that belong to the selected function appear.

2 Press one of the chapter selection soft keys. The screen for the selected chapter appears. If the soft key for a target chapter is not displayed, press the continuous menu key (next–menu key).
In some cases, additional chapters can be selected within a chapter.

3 When the target chapter screen is displayed, press the operation selection key to display data to be manipulated.

4 To redisplay the chapter selection soft keys, press the return menu key.

The general screen display procedure is explained above. However, the actual display procedure varies from one screen to another. For details, see the description of individual operations.

2.3.2 Function Keys

Function keys are provided to select the type of screen to be displayed. The following function keys are provided on the MDI panel:

Press this key to display the **position screen**.

Press this key to display the **program screen**.

Press this key to display the **offset/setting screen**.

Press this key to display the **system screen**.

Press this key to display the **message screen.**



Press this key to display the **graphics screen**.

Press this key to display the **custom screen (conversational macro screen)**.
In case of 210*i*, this key is assigned to “Ctrl” key of the personal computer.



In case of 210*i*, this key is assigned to “Alt” key of the personal computer.

2.3.3 Soft Keys

To display a more detailed screen, press a function key followed by a soft key. Soft keys are also used for actual operations.
The following illustrates how soft key displays are changed by pressing each function key.

The symbols in the following figures mean as shown below :

: Indicates screens

: Indicates a screen that can be displayed by pressing a function key(*1)

[ ] : Indicates a soft key(*2)

( ) : Indicates input from the MDI panel.

[__] : Indicates a soft key displayed in green.

: Indicates the continuous menu key (rightmost soft key)(*3).

*1 Press function keys to switch between screens that are used frequently.

*2 Some soft keys are not displayed depending on the option configuration.

*3 In some cases, the continuous menu key is omitted when the 12 soft keys display unit is used.

POSITION SCREEN

Soft key transition triggered by the function key POS

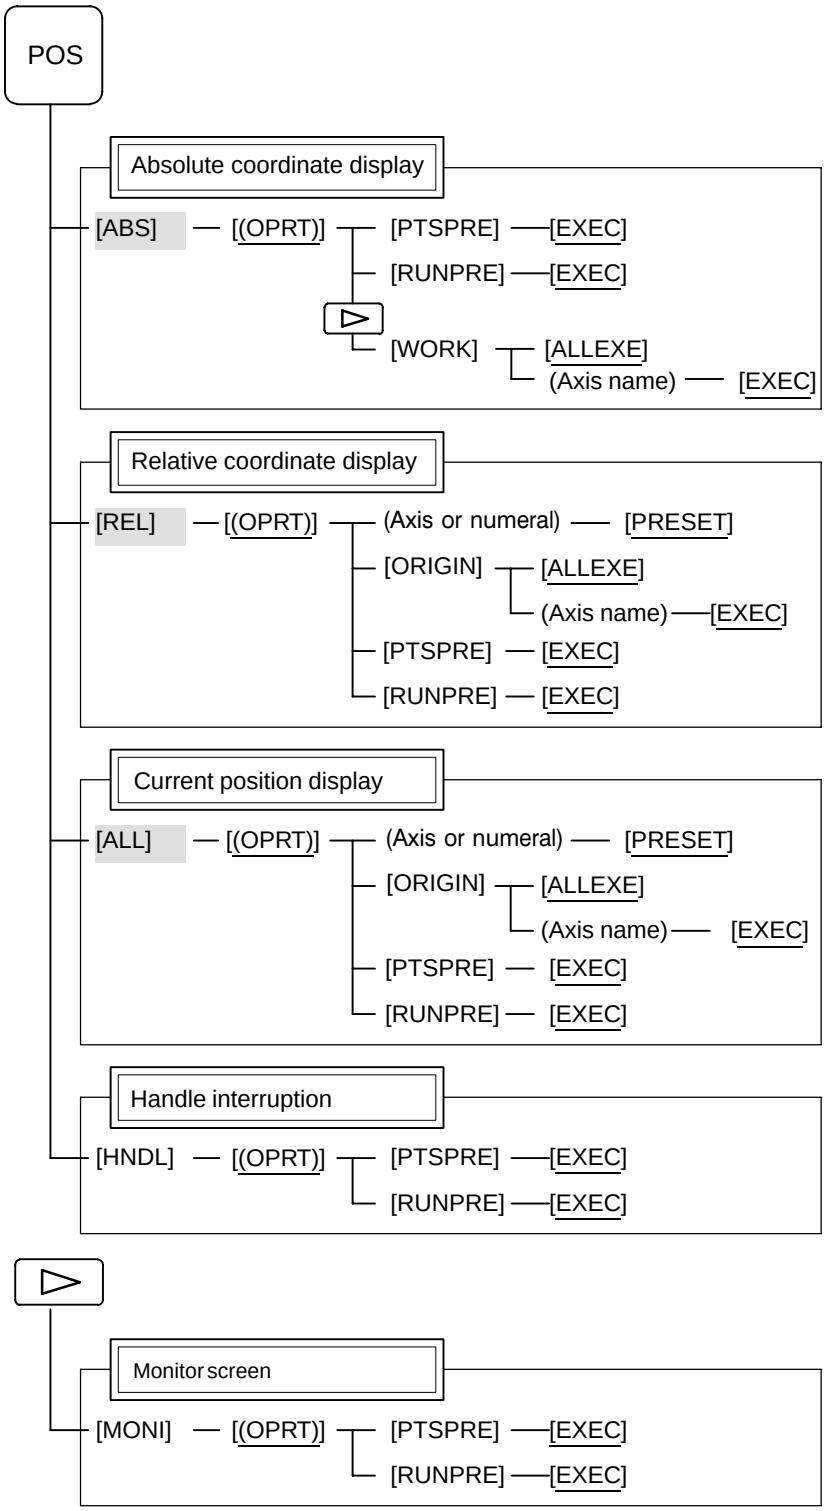

PROGRAM SCREEN

Soft key transition triggered by the function key in the MEM mode

PROG

1/2

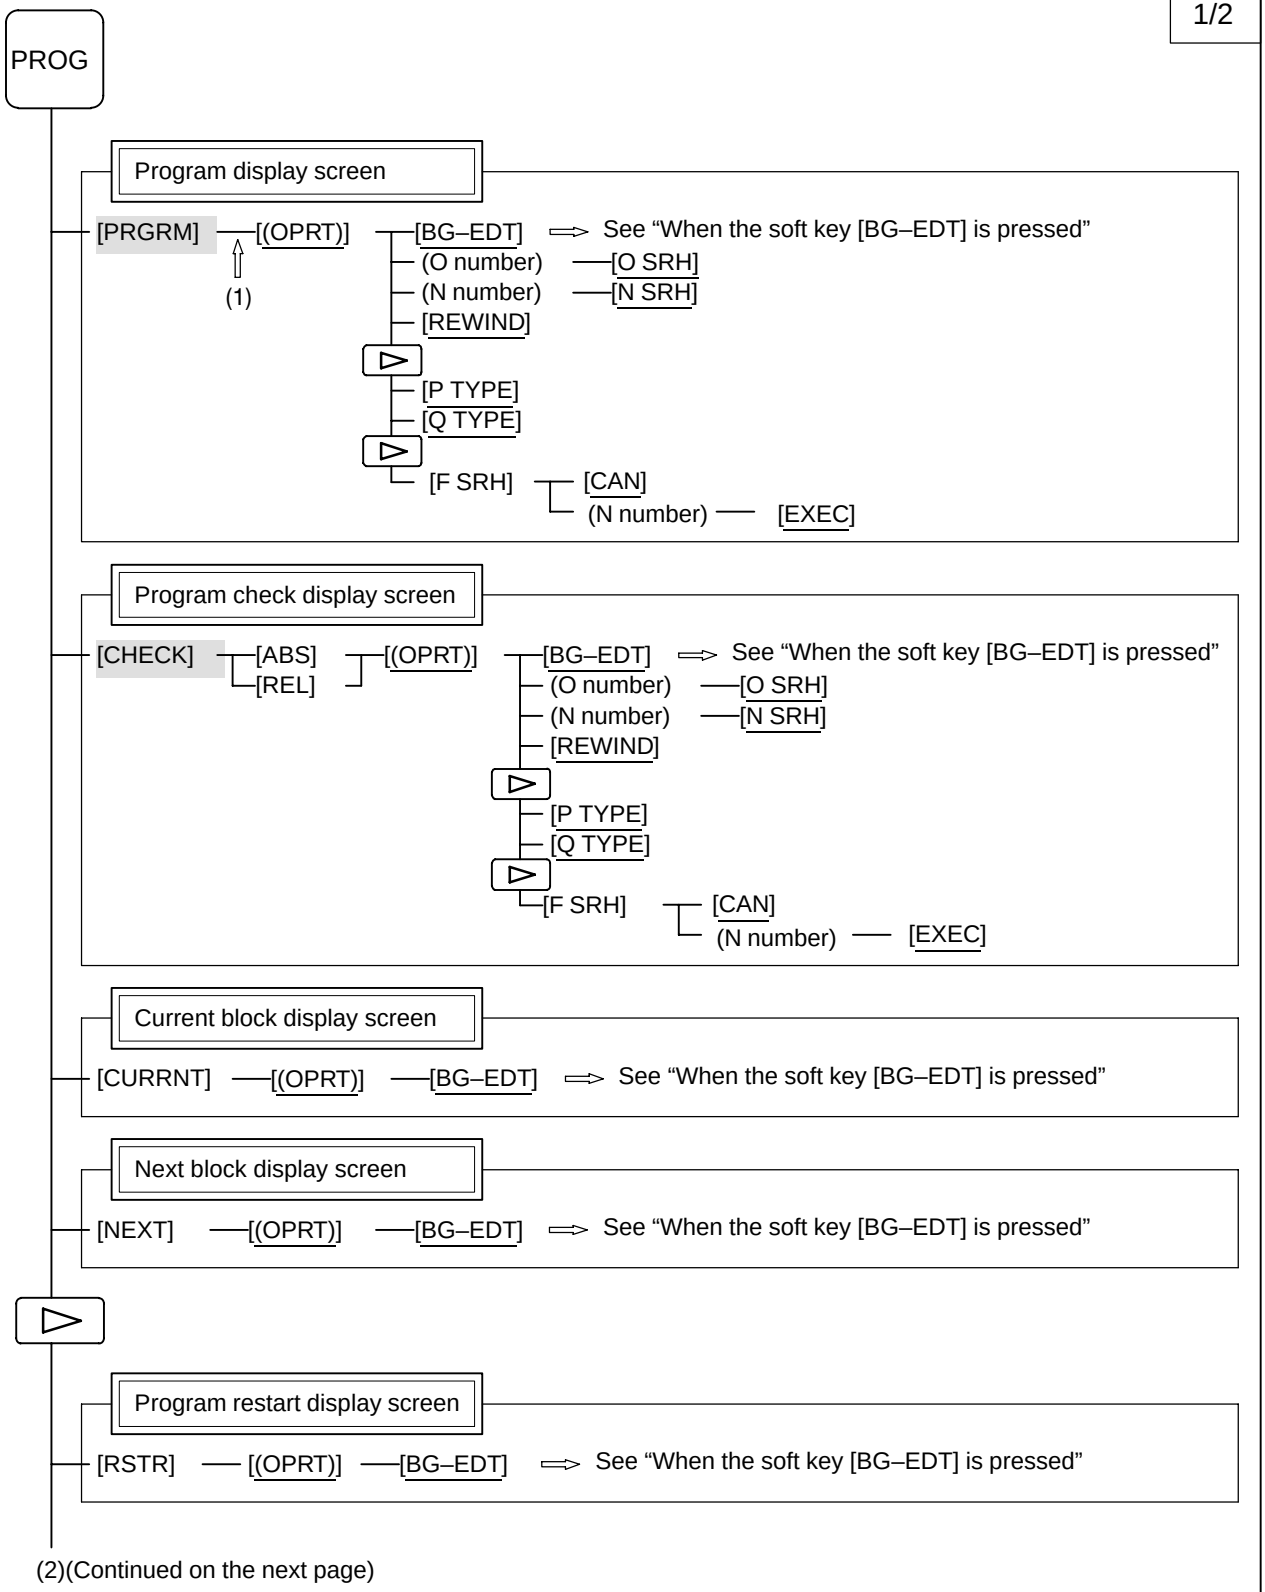

(2)(Continued on the next page)

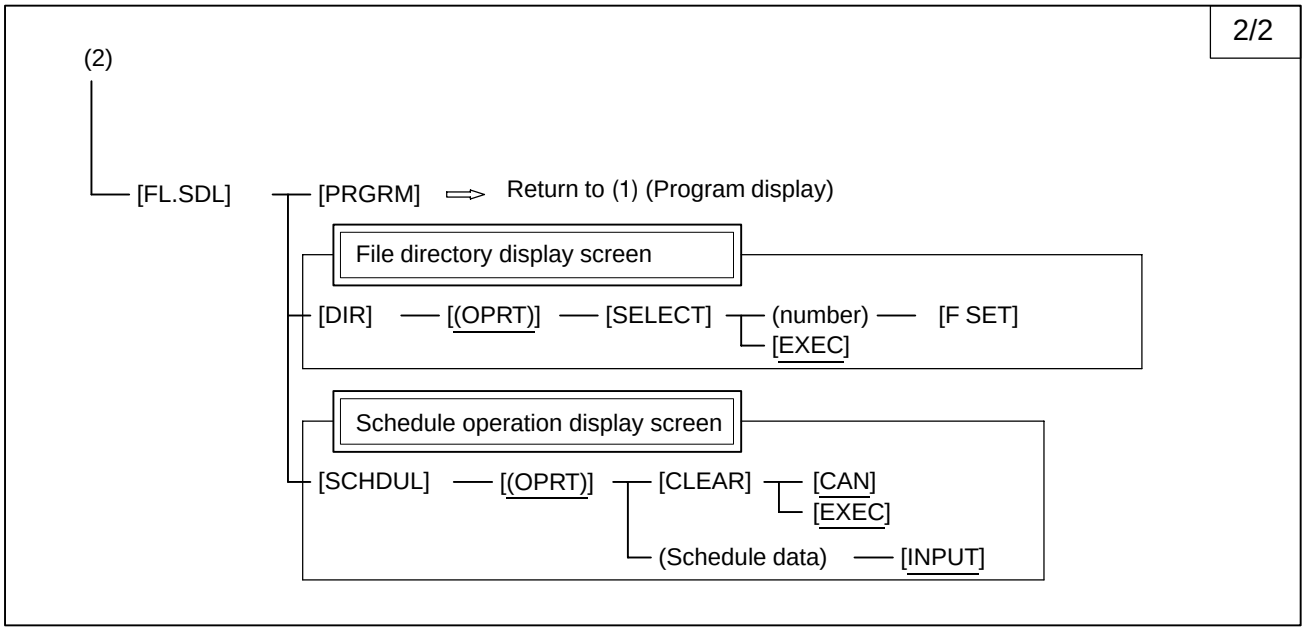
2/2
(2)
[FL.SDL]
[PRGRM]
Return to (1) (Program display)
File directory display screen
[DIR]
[(OPRT)]
[SELECT]
(number)
[F SET]
[EXEC]
Schedule operation display screen
[SCHDUL]
[(OPRT)]
[CLEAR]
[CAN]
[EXEC]
(Schedule data)
[INPUT]

PROGRAM SCREEN

Soft key transition triggered by the function key PROG in the EDIT mode

1/2

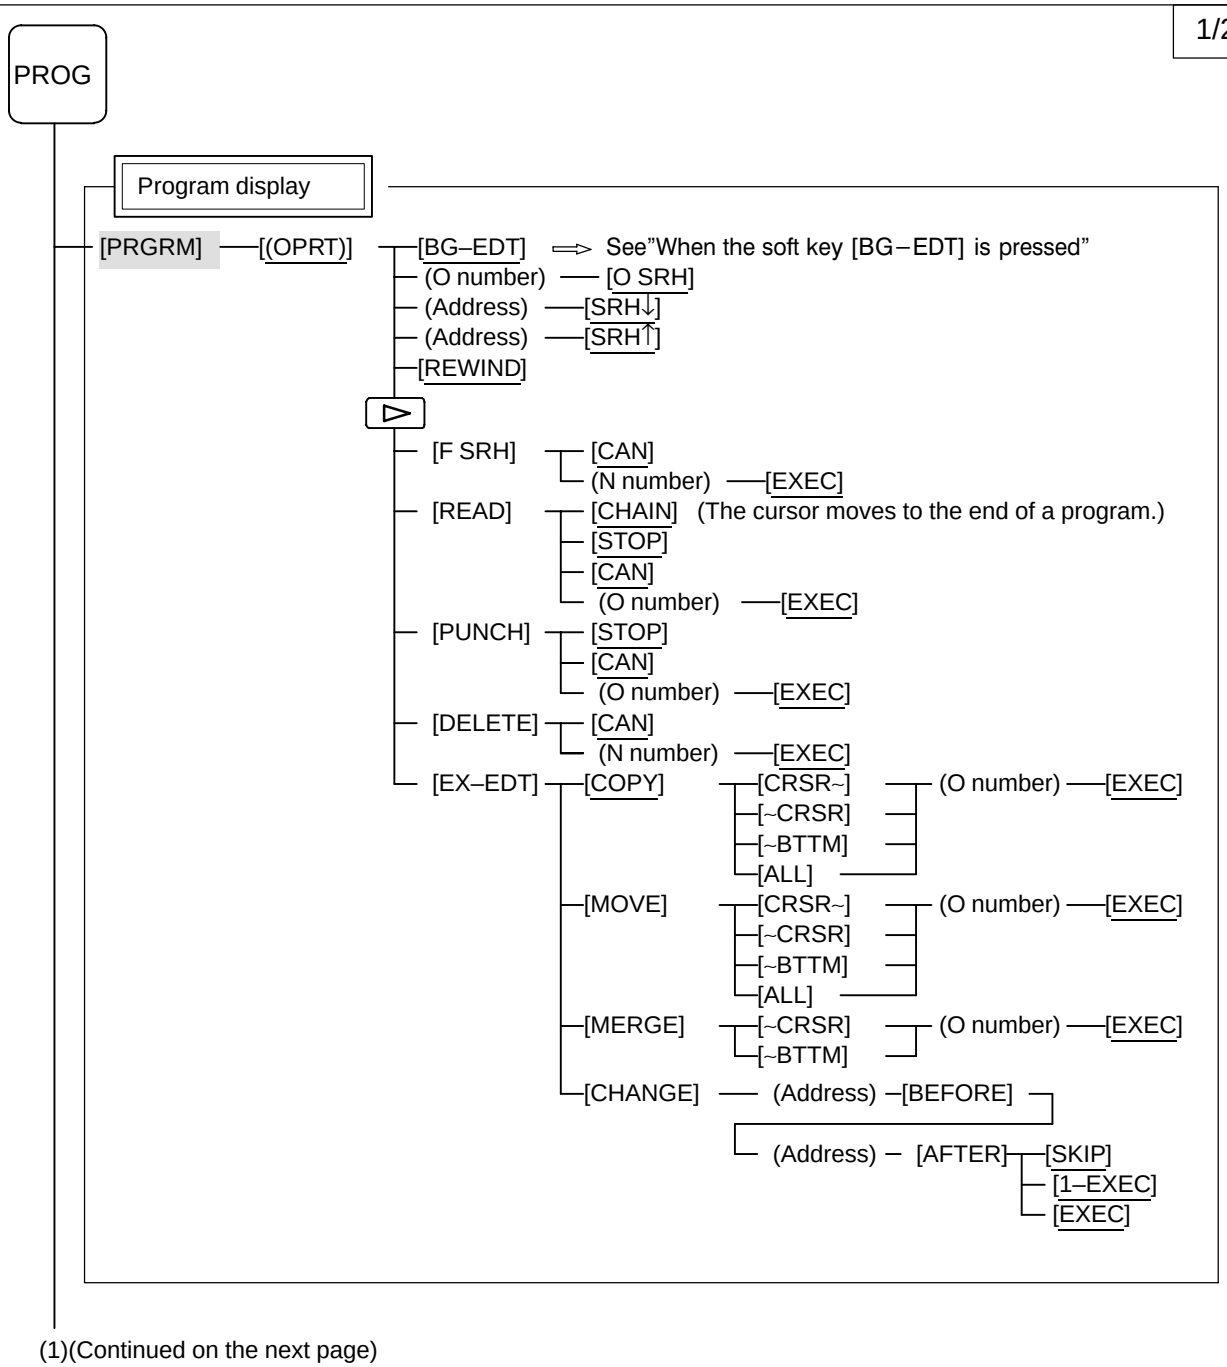

(1)(Continued on the next page)

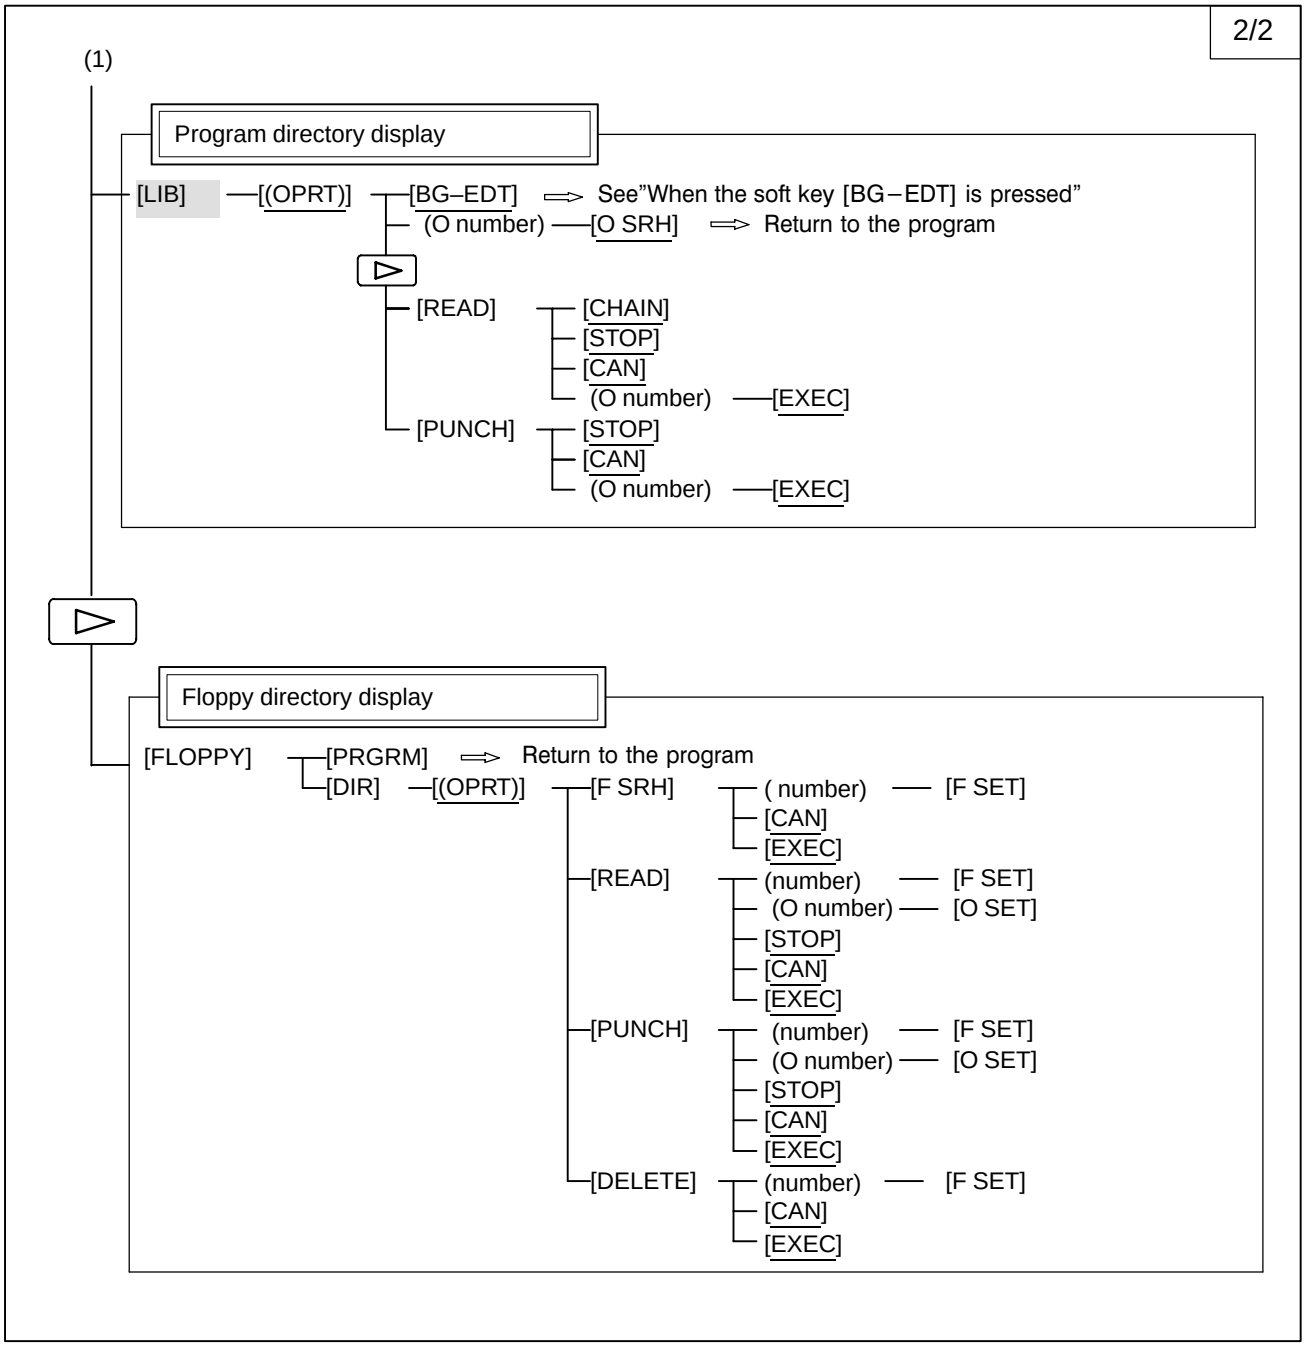
2/2
(1)
Program directory display
[LIB]
[(OPRT)]
[BG–EDT]
See"When the soft key [BG–EDT] is pressed"
(O number)
[O SRH]
Return to the program
[READ]
[CHAIN]
[STOP]
[CAN]
(O number)
[EXEC]
[PUNCH]
[STOP]
[CAN]
(O number)
[EXEC]
Floppy directory display
[FLOPPY]
[PRGRM]
Return to the program
[DIR]
[(OPRT)]
[F SRH]
(number)
[F SET]
[CAN]
[EXEC]
[READ]
(number)
[F SET]
(O number)
[O SET]
[STOP]
[CAN]
[EXEC]
[PUNCH]
(number)
[F SET]
(O number)
[O SET]
[STOP]
[CAN]
[EXEC]
[DELETE]
(number)
[F SET]
[CAN]
[EXEC]

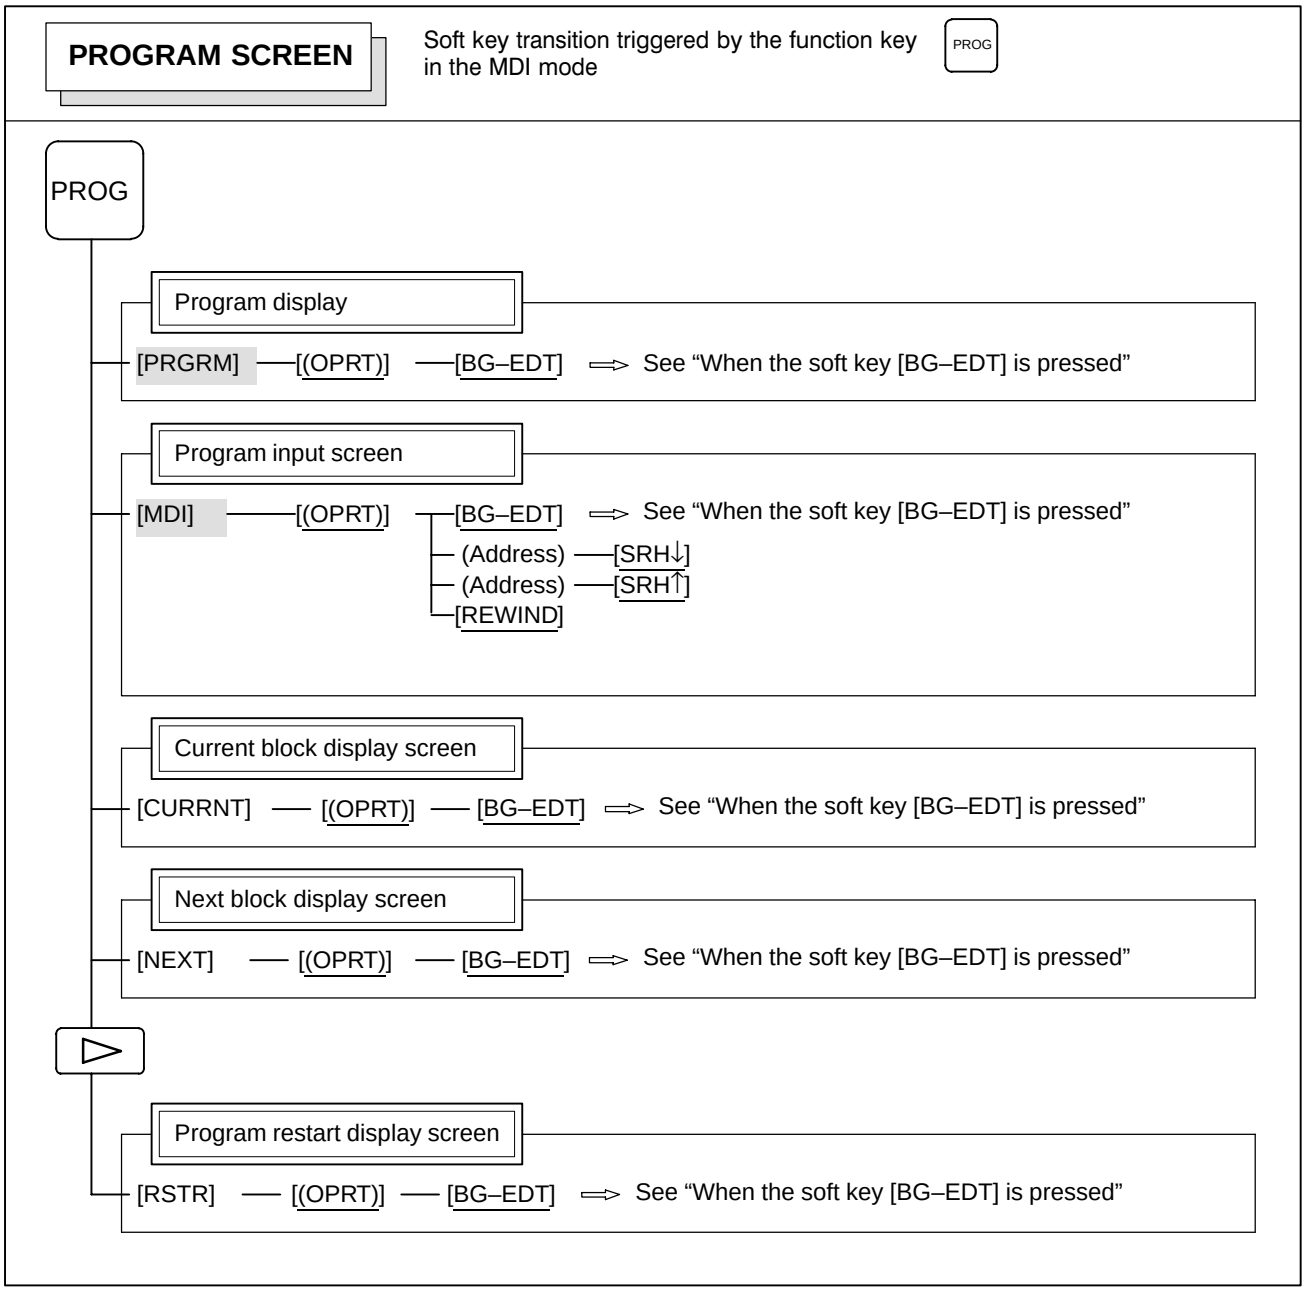
PROGRAM SCREEN
Soft key transition triggered by the function key in the MDI mode
PROG
PROG
Program display
[PRGRM] [(OPRT)] [BG–EDT] See “When the soft key [BG–EDT] is pressed”
Program input screen
[MDI] [(OPRT)] [BG–EDT] See “When the soft key [BG–EDT] is pressed”
(Address) [SRH↓]
(Address) [SRH↑]
[REWIND]
Current block display screen
[CURRNT] [(OPRT)] [BG–EDT] See “When the soft key [BG–EDT] is pressed”
Next block display screen
[NEXT] [(OPRT)] [BG–EDT] See “When the soft key [BG–EDT] is pressed”
Program restart display screen
[RSTR] [(OPRT)] [BG–EDT] See “When the soft key [BG–EDT] is pressed”

PROGRAM SCREEN

Soft key transition triggered by the function key in the HNDL, JOG, or REF mode

PROG

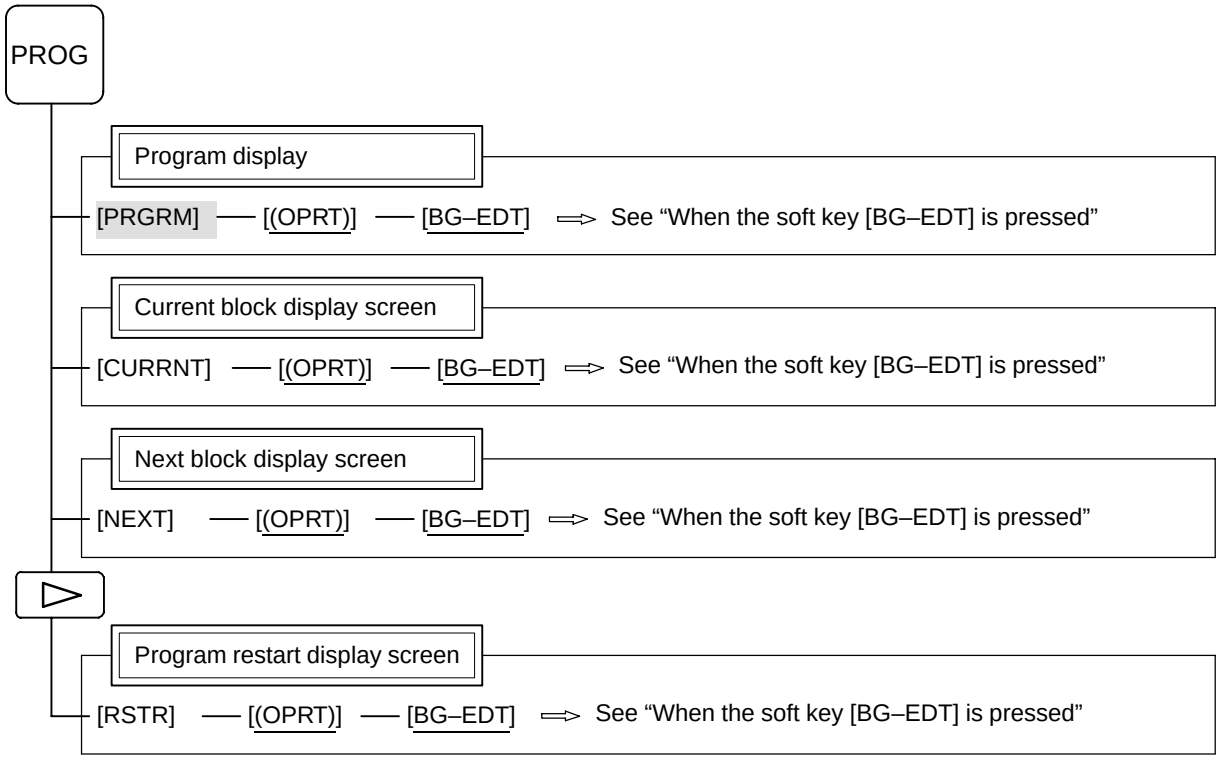

PROGRAM SCREEN

Soft key transition triggered by the function key in the TJOG or THDL mode

PROG

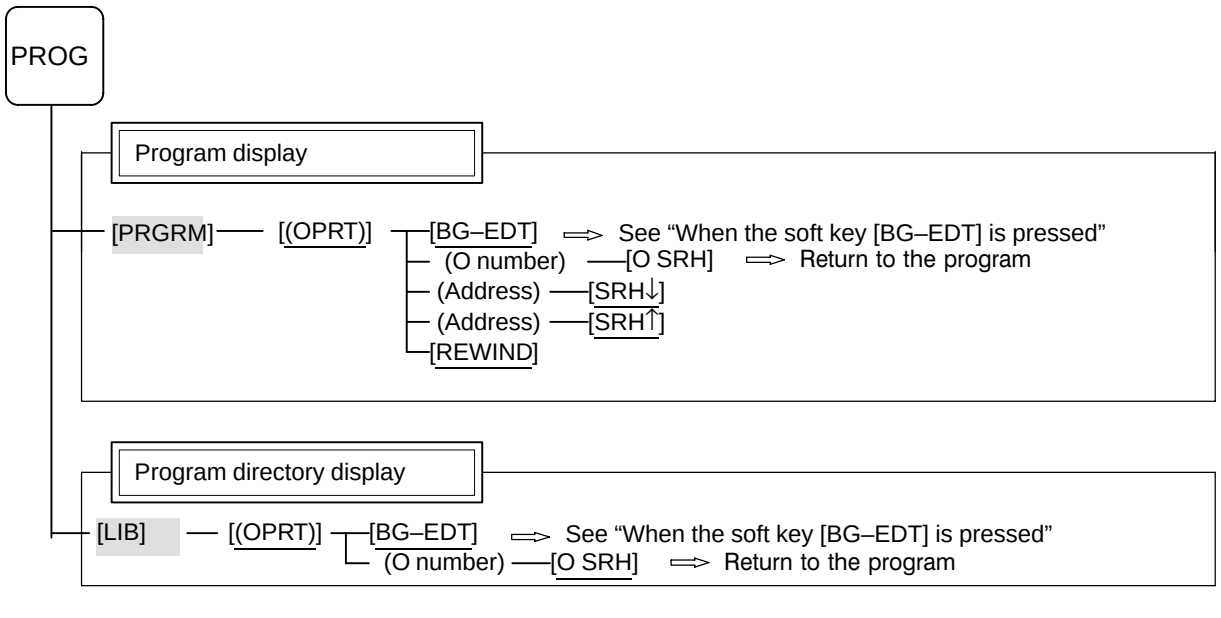

PROGRAM SCREEN

Soft key transition triggered by the function key PROG
(When the soft key [BG−EDT] is pressed in all modes)

1/2

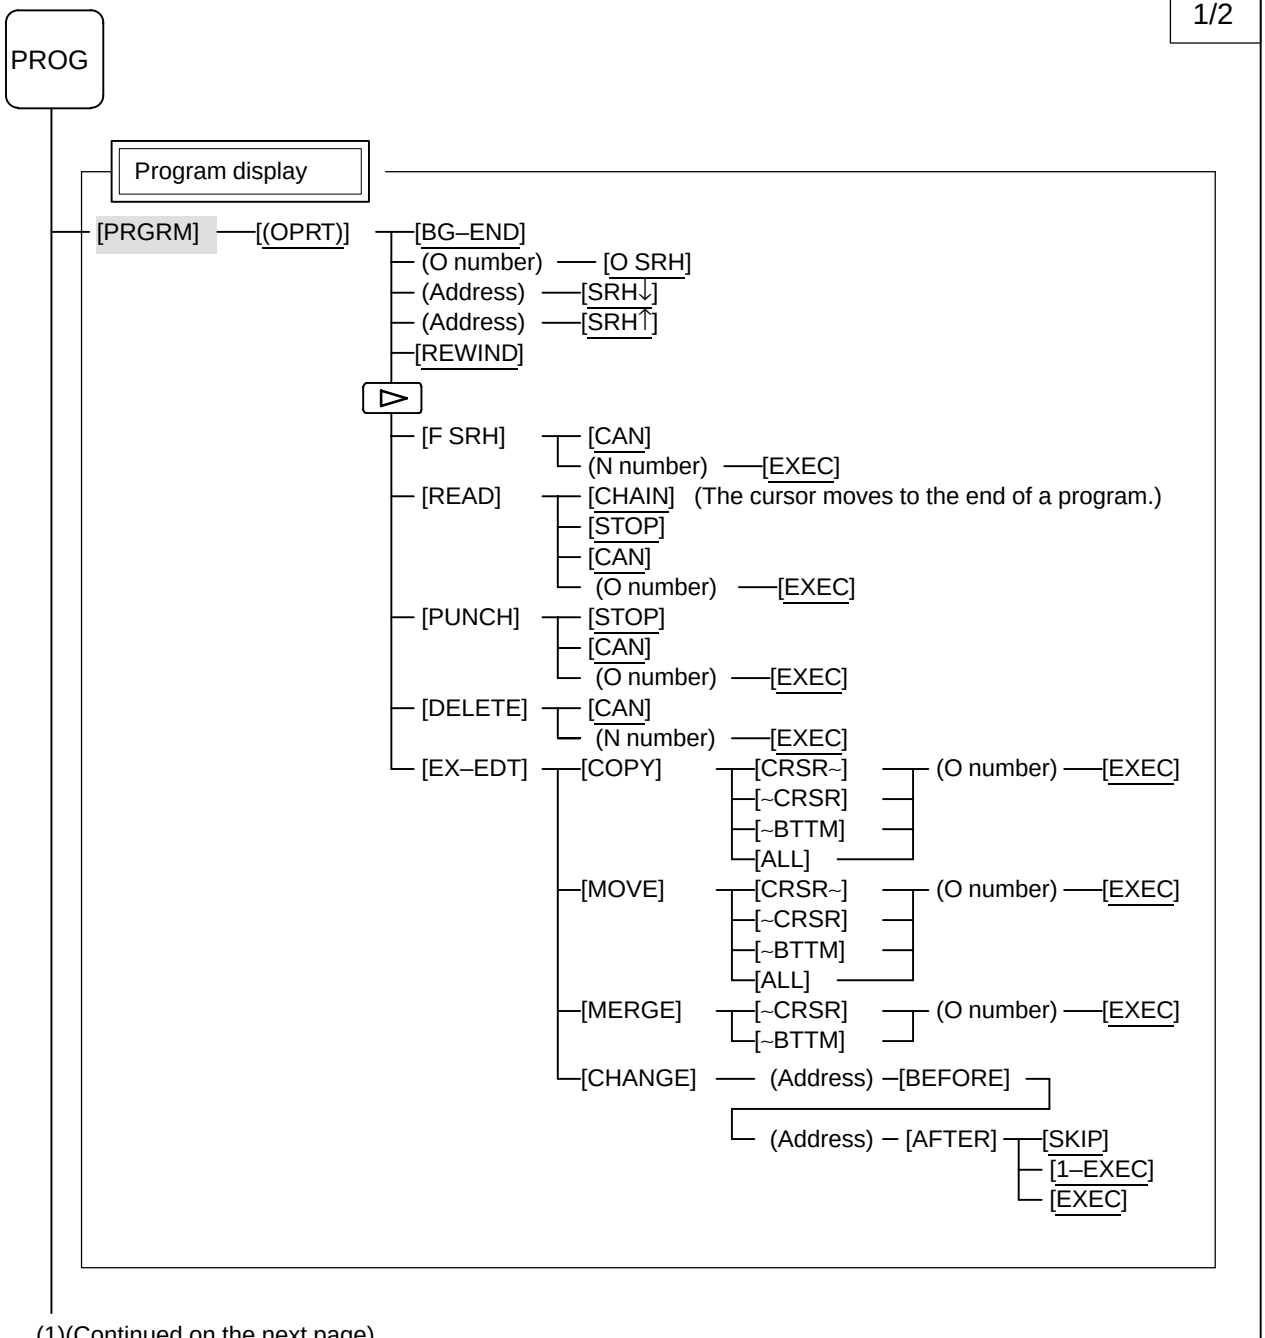

(1)(Continued on the next page)

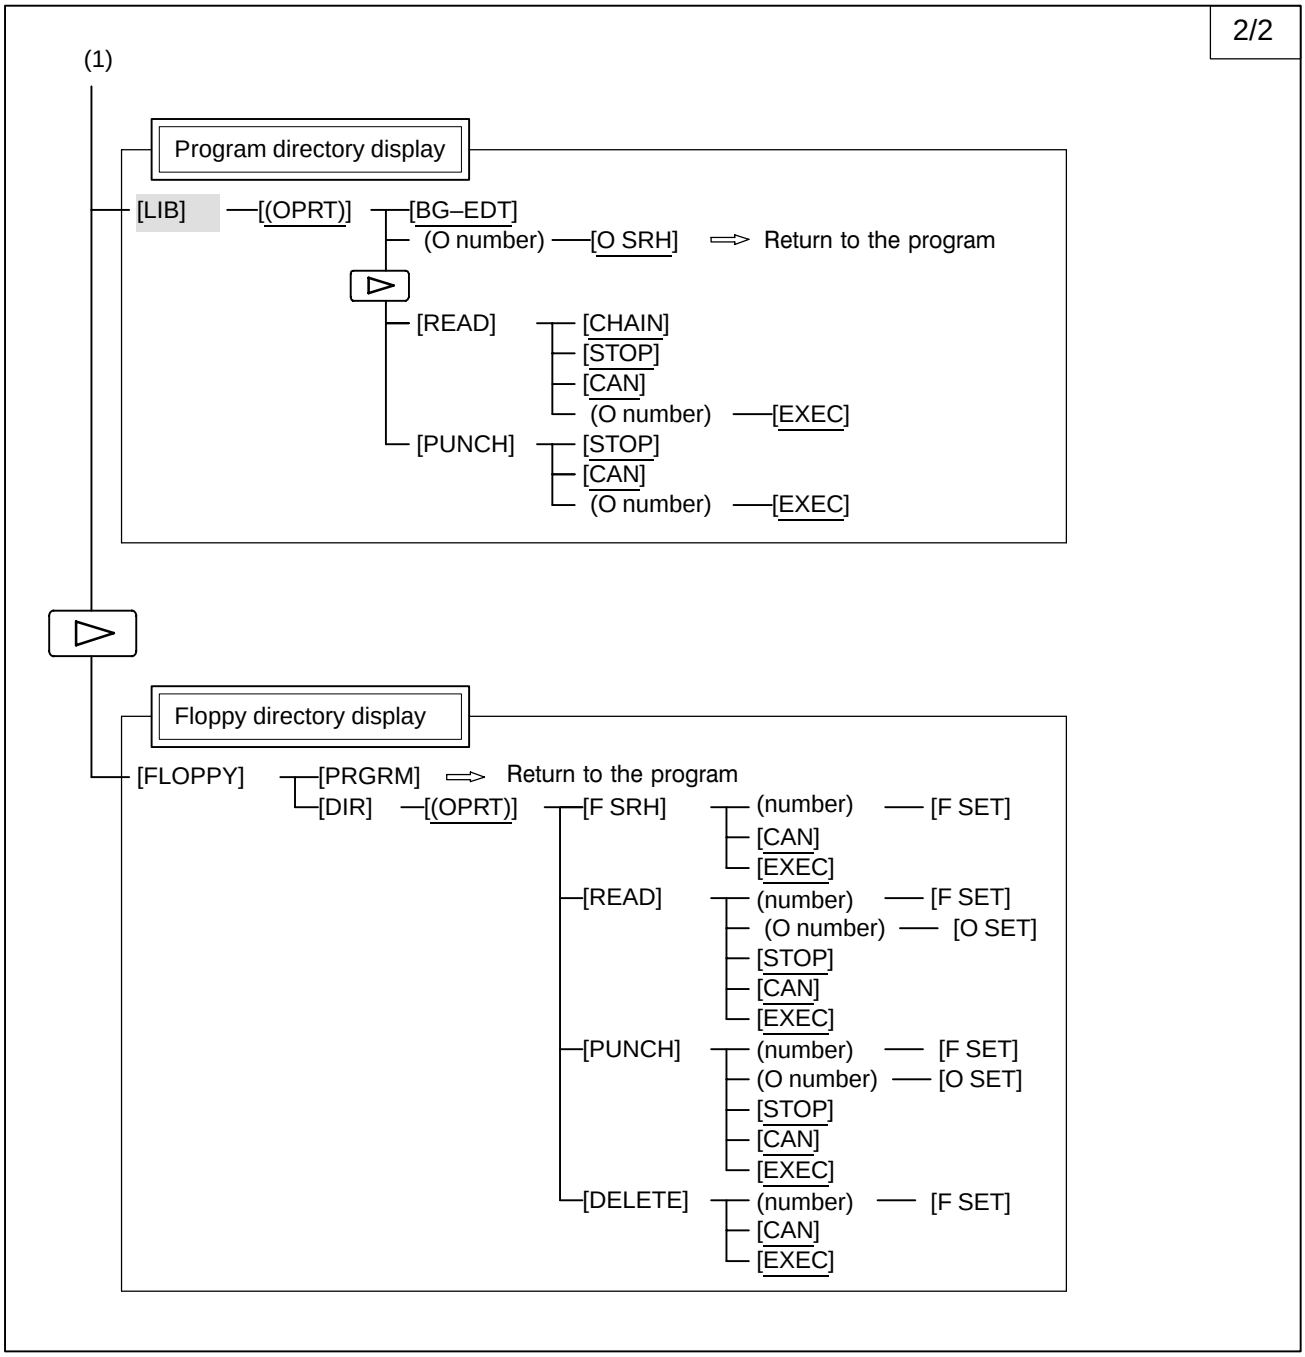
2/2
(1)
Program directory display
[LIB]
[(OPRT)]
[BG–EDT]
(O number)
[O SRH]
Return to the program
[READ]
[CHAIN]
[STOP]
[CAN]
(O number)
[EXEC]
[PUNCH]
[STOP]
[CAN]
(O number)
[EXEC]
Floppy directory display
[FLOPPY]
[PRGRM]
Return to the program
[DIR]
[(OPRT)]
[F SRH]
(number)
[F SET]
[CAN]
[EXEC]
[READ]
(number)
[F SET]
(O number)
[O SET]
[STOP]
[CAN]
[EXEC]
[PUNCH]
(number)
[F SET]
(O number)
[O SET]
[STOP]
[CAN]
[EXEC]
[DELETE]
(number)
[F SET]
[CAN]
[EXEC]

OFFSET/SETTING SCREEN

Soft key transition triggered by the function key OFFSET SETTING

1/2

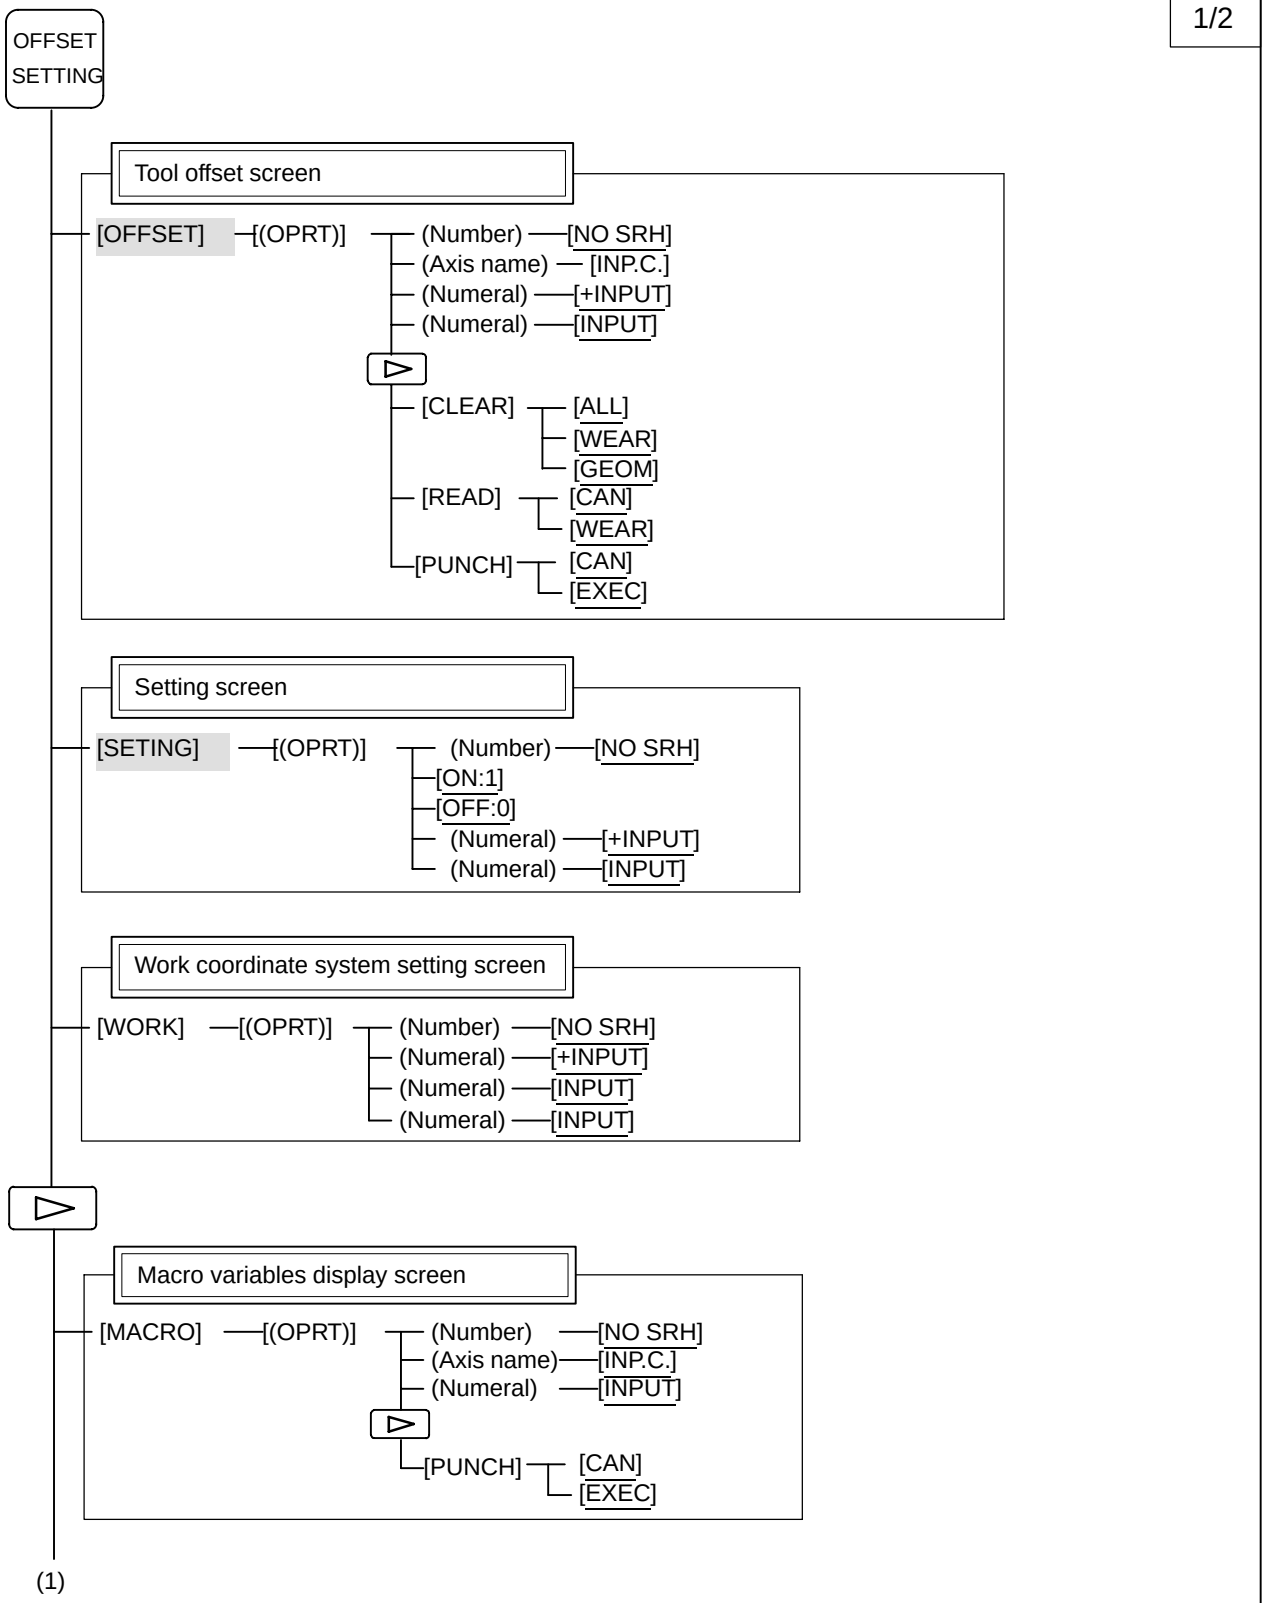

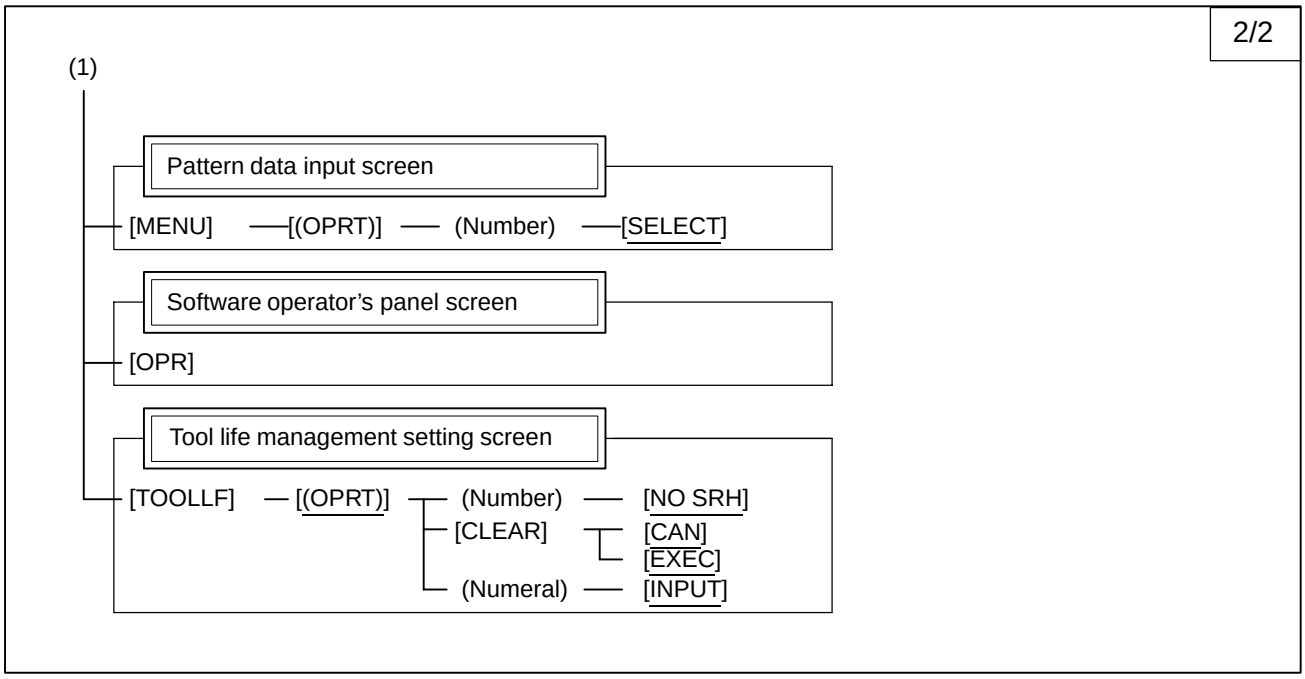
2/2
(1)
Pattern data input screen
[MENU] —[(OPRT)] — (Number) —[SELECT]
Software operator’s panel screen
[OPR]
Tool life management setting screen
[TOOLLF] — [(OPRT)] — (Number) — [NO SRH]
[CLEAR] — [CAN]
[EXEC]
(Numeral) — [INPUT]

SYSTEM SCREEN

Soft key transition triggered by the function key SYSTEM

1/2

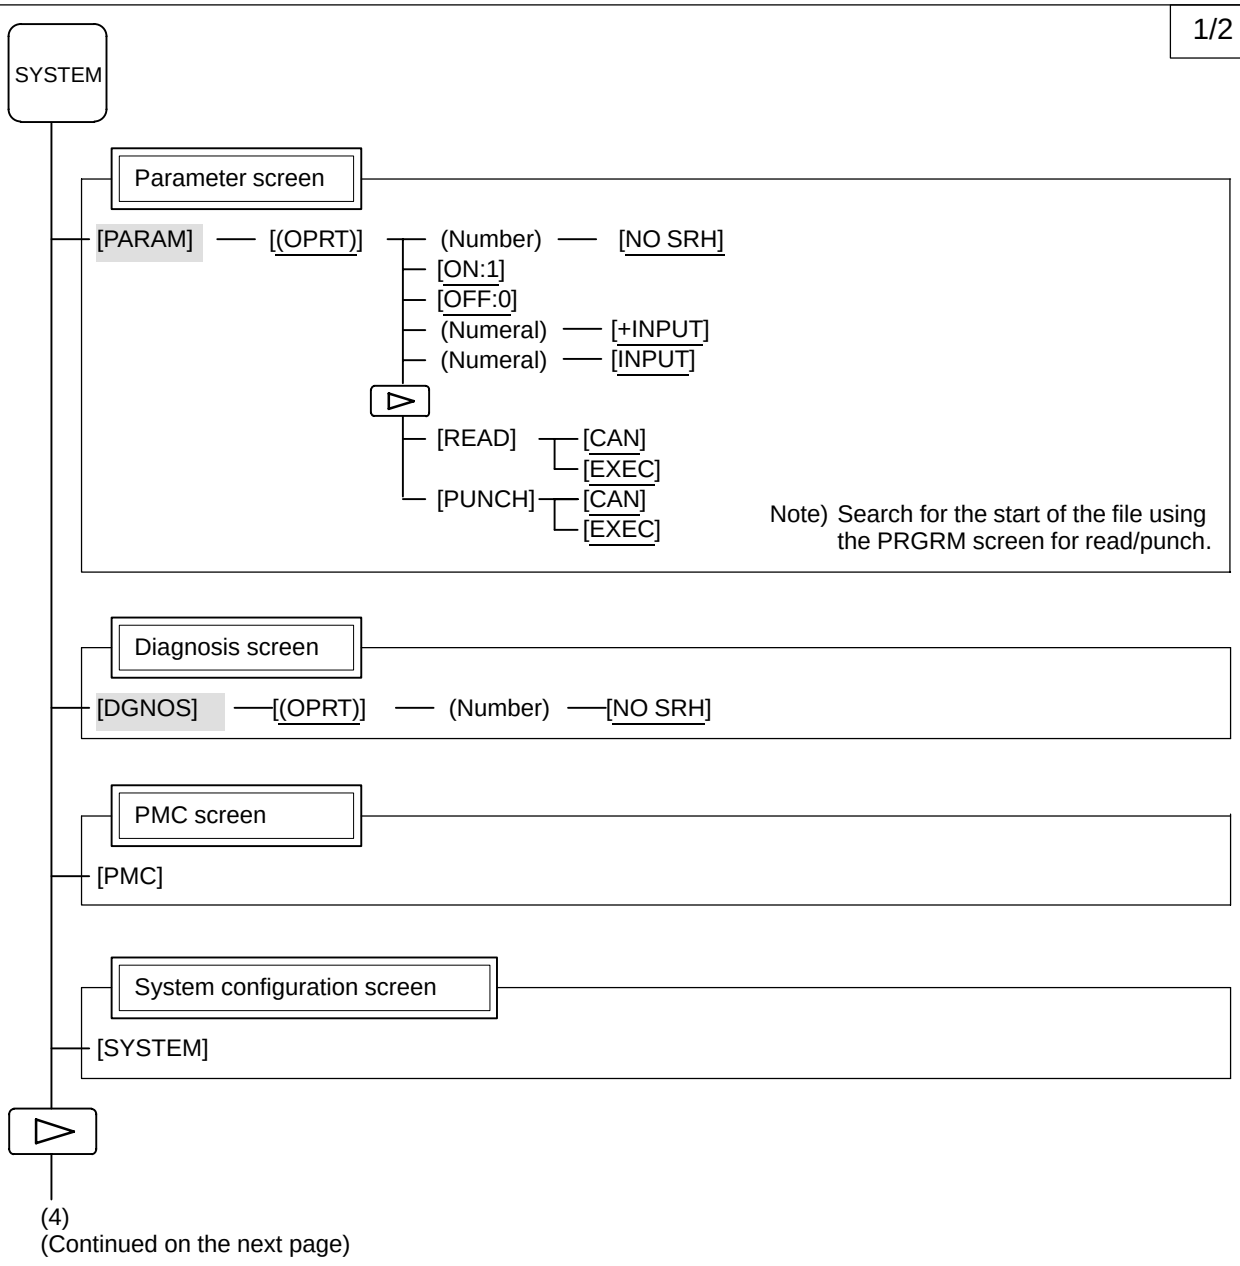

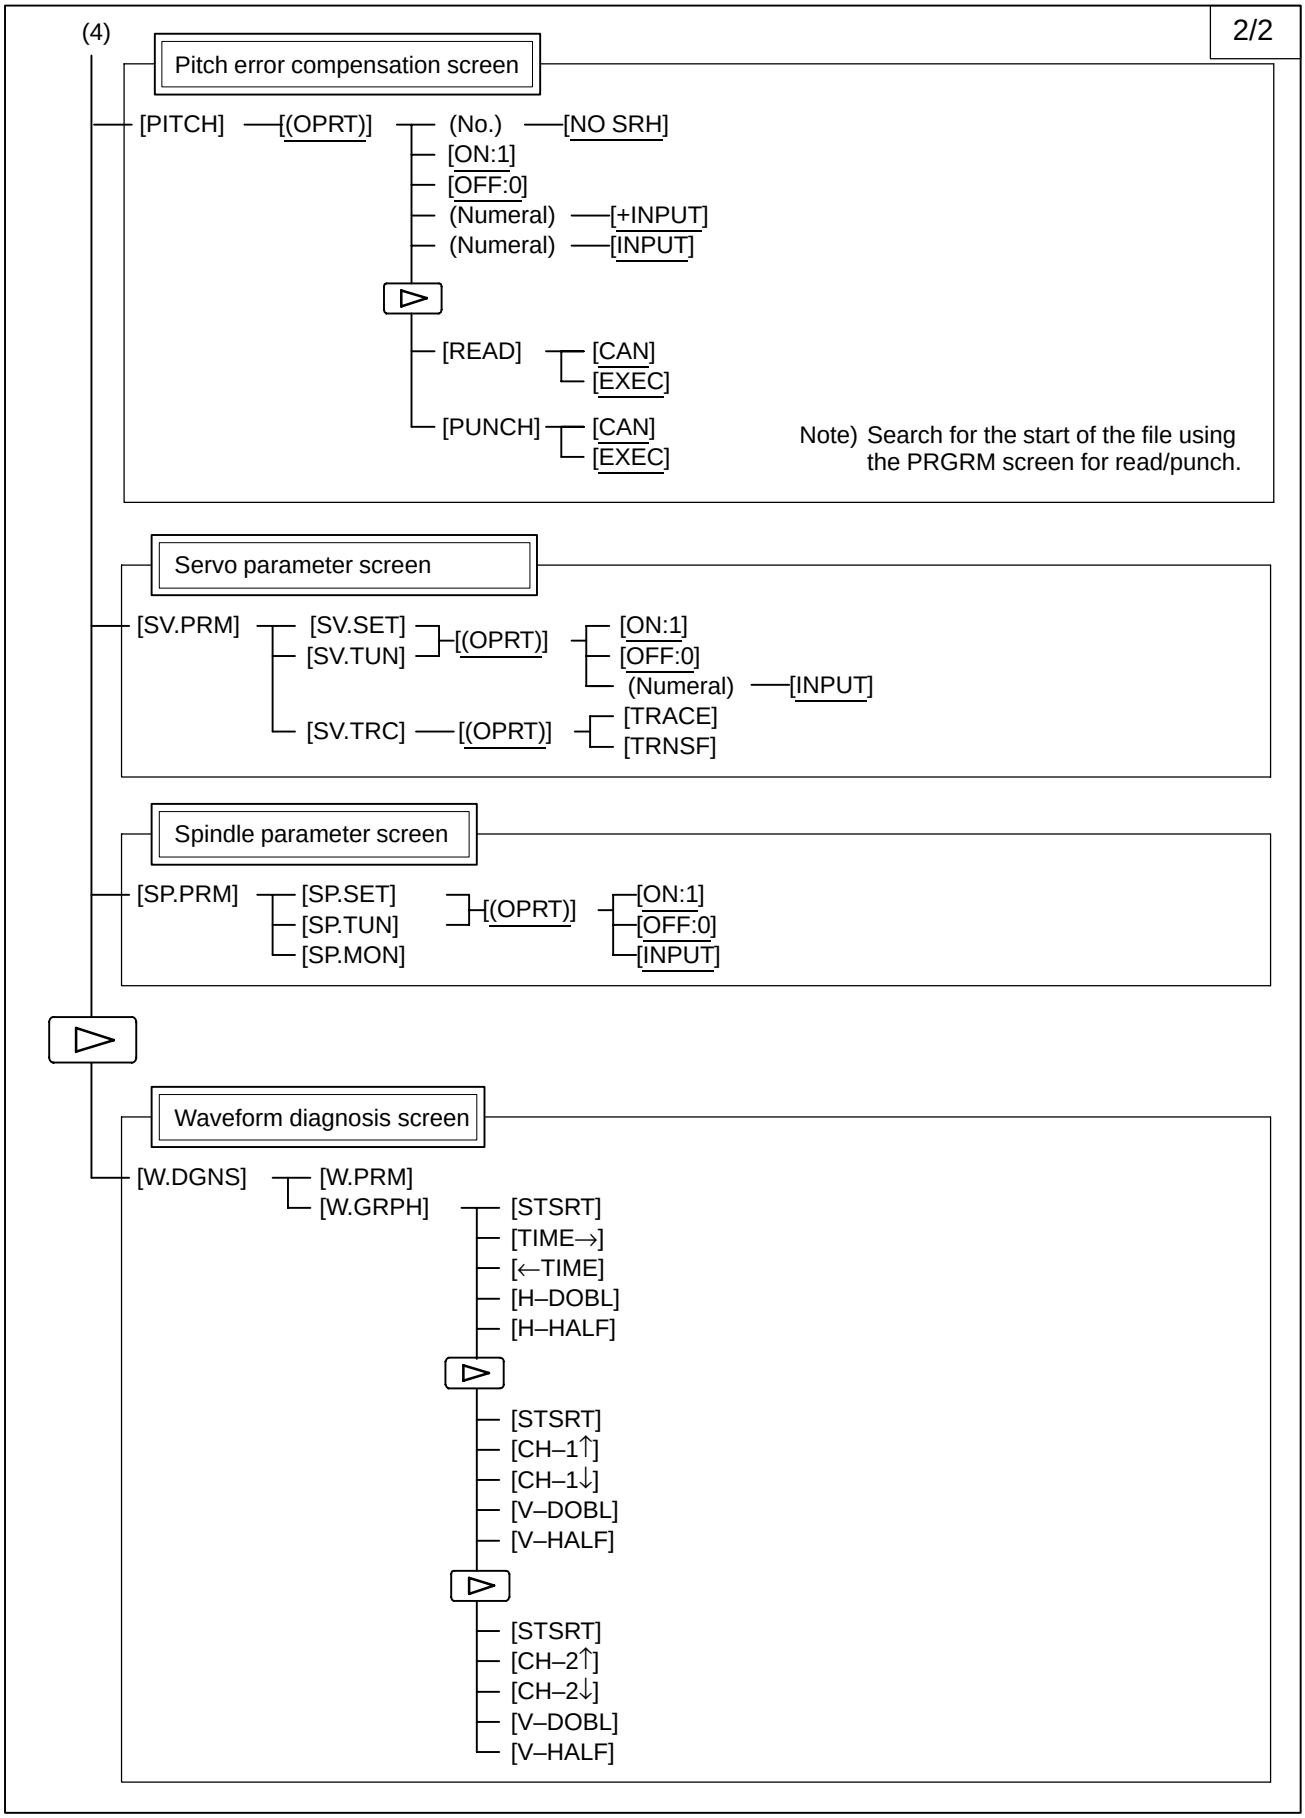
(4)
2/2
Pitch error compensation screen
[PITCH]
[(OPRT)]
(No.)
[NO SRH]
[ON:1]
[OFF:0]
(Numeral)
[+INPUT]
(Numeral)
[INPUT]
[READ]
[CAN]
[EXEC]
[PUNCH]
[CAN]
[EXEC]
Note) Search for the start of the file using the PRGRM screen for read/punch.
Servo parameter screen
[SV.PRM]
[SV.SET]
[SV.TUN]
[(OPRT)]
[ON:1]
[OFF:0]
(Numeral)
[INPUT]
[SV.TRC]
[(OPRT)]
[TRACE]
[TRNSF]
Spindle parameter screen
[SP.PRM]
[SP.SET]
[SP.TUN]
[SP.MON]
[(OPRT)]
[ON:1]
[OFF:0]
[INPUT]
Waveform diagnosis screen
[W.DGNS]
[W.PRM]
[W.GRPH]
[STSRT]
[TIME→]
[←TIME]
[H–DOBL]
[H–HALF]
[STSRT]
[CH–1↑]
[CH–1↓]
[V–DOBL]
[V–HALF]
[STSRT]
[CH–2↑]
[CH–2↓]
[V–DOBL]
[V–HALF]

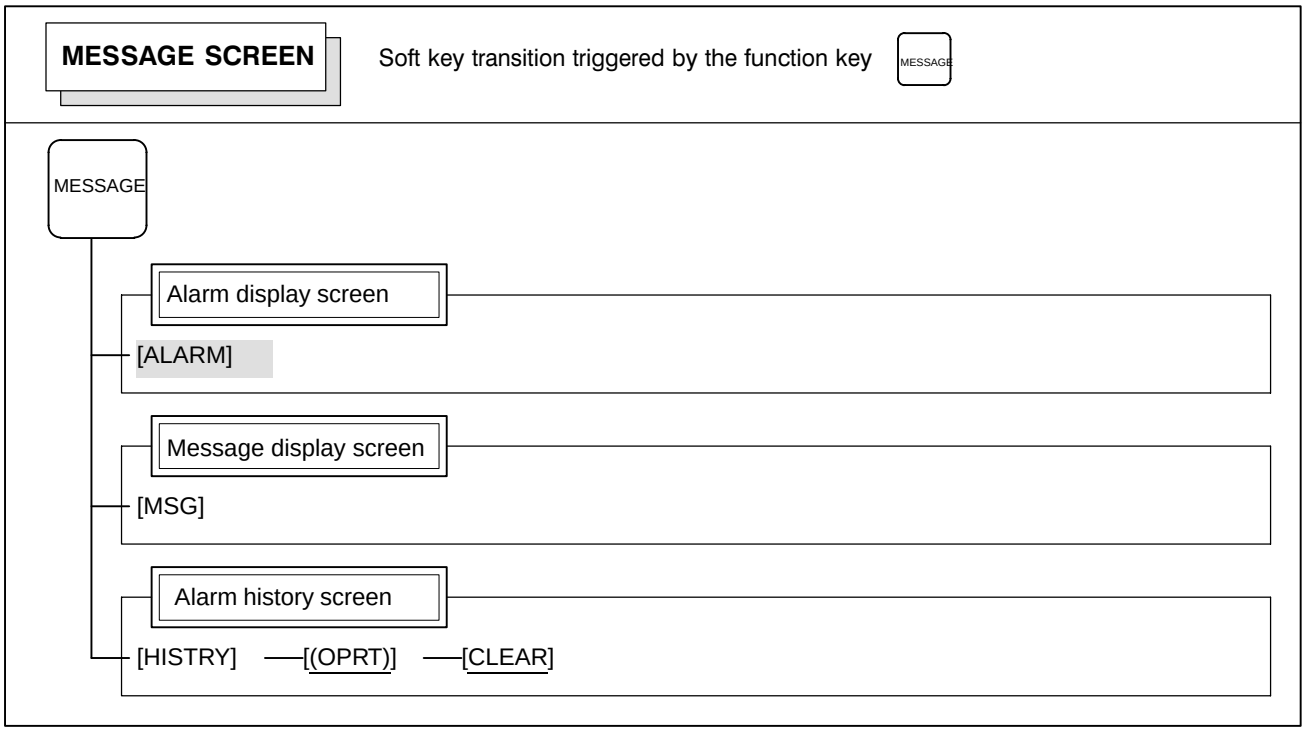
MESSAGE SCREEN
Soft key transition triggered by the function key
MESSAGE
MESSAGE
Alarm display screen
[ALARM]
Message display screen
[MSG]
Alarm history screen
[HISTRY] —[(OPRT)] —[CLEAR]

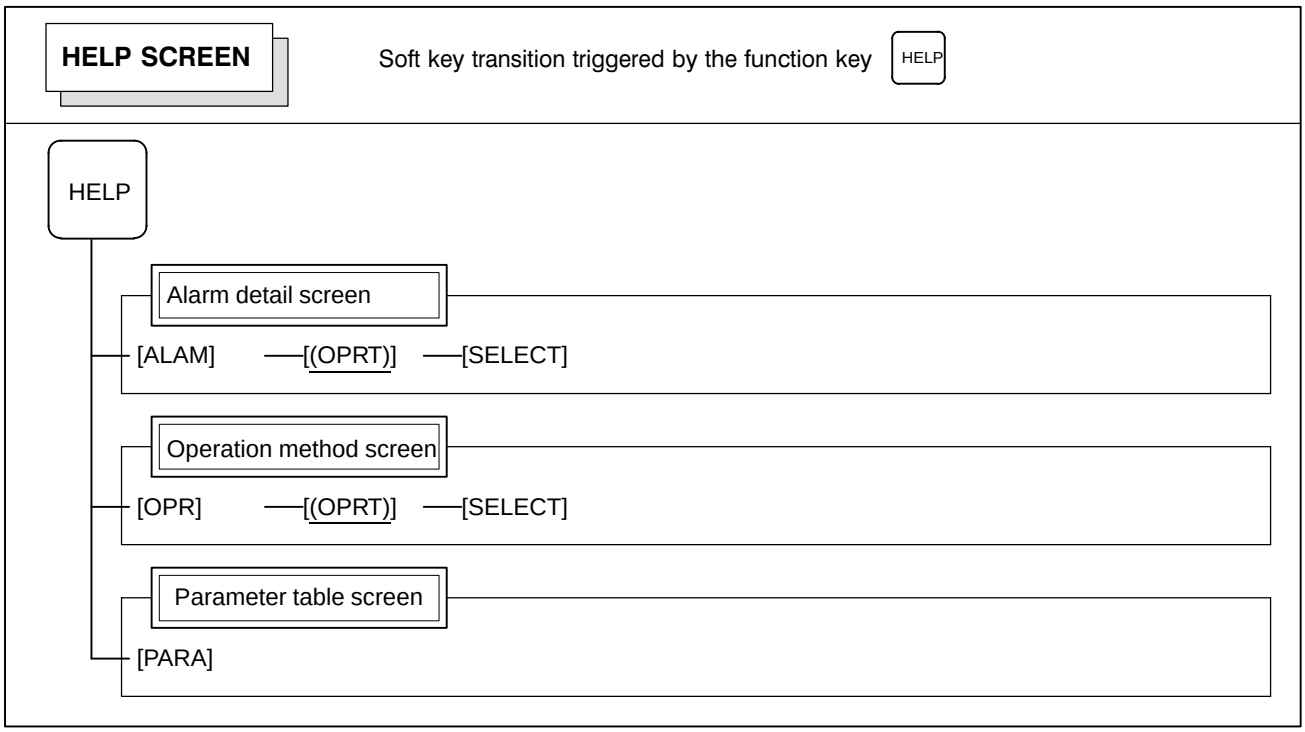
HELP SCREEN
Soft key transition triggered by the function key
HELP
HELP
Alarm detail screen
[ALAM] —[(OPRT)] —[SELECT]
Operation method screen
[OPR] —[(OPRT)] —[SELECT]
Parameter table screen
[PARA]

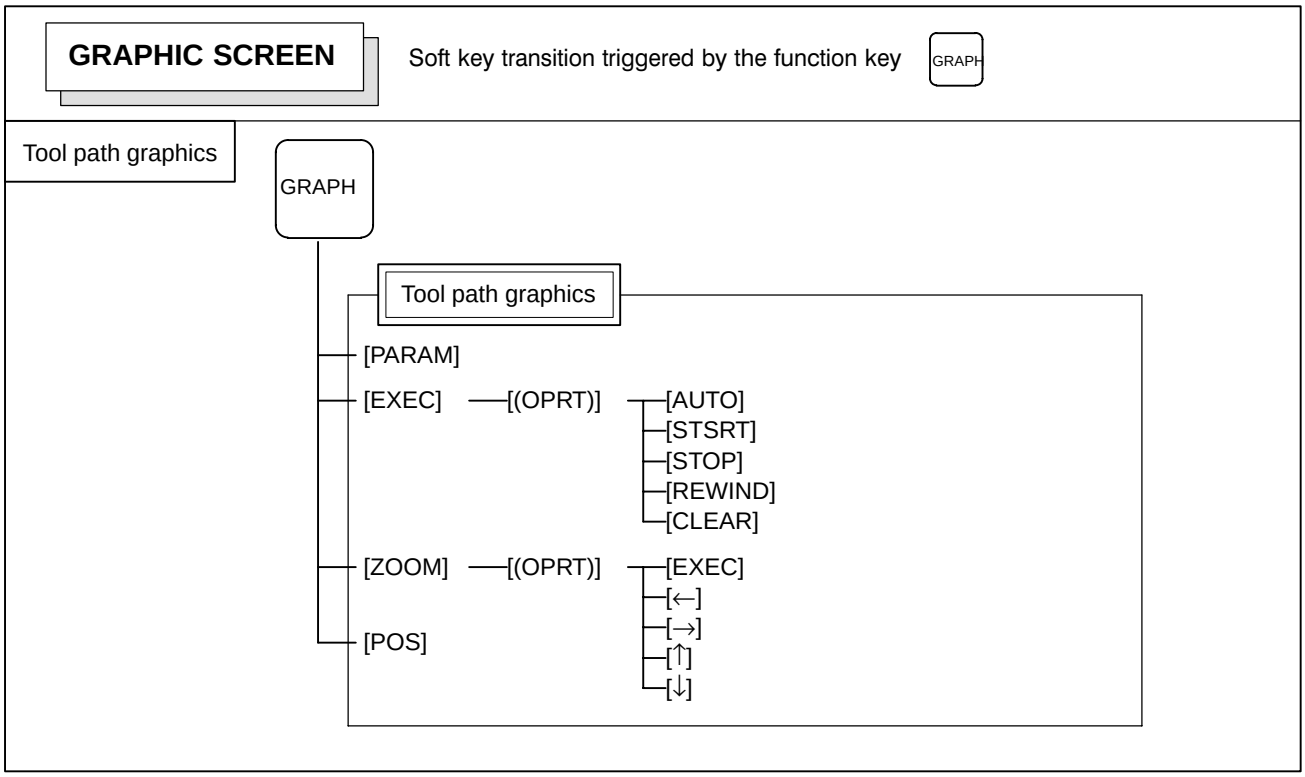
GRAPHIC SCREEN
Soft key transition triggered by the function key
GRAPH
Tool path graphics
GRAPH
Tool path graphics
[PARAM]
[EXEC]
[(OPRT)]
[AUTO]
[STSRT]
[STOP]
[REWIND]
[CLEAR]
[ZOOM]
[(OPRT)]
[EXEC]
[←]
[→]
[↑]
[↓]
[POS]

2.3.4 Key Input and Input Buffer

When an address and a numerical key are pressed, the character corresponding to that key is input once into the key input buffer. The contents of the key input buffer is displayed at the bottom of the screen. In order to indicate that it is key input data, a ">" symbol is displayed immediately in front of it. A "_" is displayed at the end of the key input data indicating the input position of the next character.

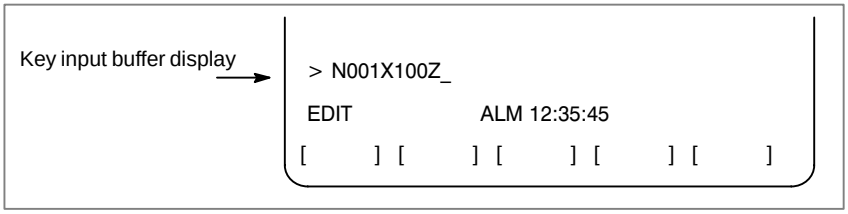

Fig. 2.3.4 Key input buffer display

To input the lower character of the keys that have two characters inscribed on them, first press the SHIFT key and then the key in question.

When the SHIFT key is pressed, "_" indicating the next character input position changes to "~". Now lowercase characters can be entered (shift state).

When a character is input in shift status the shift status is canceled. Furthermore, if the SHIFT key is pressed in shift status, the shift status is canceled.

It is possible to input up to 32 characters at a time in the key input buffer. Press the CAN key to cancel a character or symbol input in the key input buffer.

(Example)

When the key input buffer displays
>N001X100Z_
and the cancel CAN key is pressed, Z is canceled and
>N001X100_
is displayed.

2.3.5 Warning Messages

After a character or number has been input from the MDI panel, a data check is executed when INPUT key or a soft key is pressed. In the case of incorrect input data or the wrong operation a flashing warning message will be displayed on the status display line.

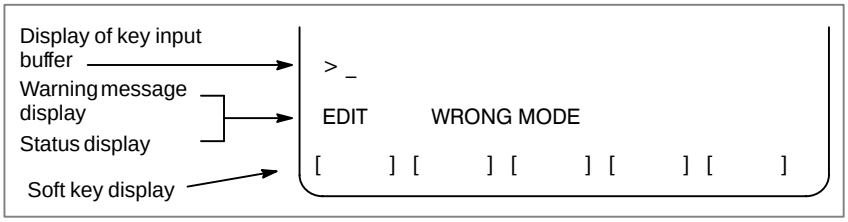

Fig. 2.3.5 Warning message display

Table 2.3.5 Warning Messages

Warning message	Content
FORMAT ERROR	The format is incorrect.
WRITE PROTECT	Key input is invalid because of data protect key or the parameter is not write enabled.
DATA IS OUT OF RANGE	The input value exceeds the permitted range.
TOO MANY DIGITS	The input value exceeds the permitted number of digits.
WRONG MODE	Parameter input is not possible in any mode other than MDI mode.
EDIT REJECTED	It is not possible to edit in the current CNC status.

2.3.6 Soft Key Configuration

There are 12 soft keys in the 10.4″LCD/MDI or 9.5″LCD/MDI. As illustrated below, the 5 soft keys on the right and those on the right and left edges operate in the same way as the 7.2″LCD or 8.4″ LCD, whereas the 5 keys on the left hand side are expansion keys dedicated to the 10.4″LCD or 9.5″LCD.

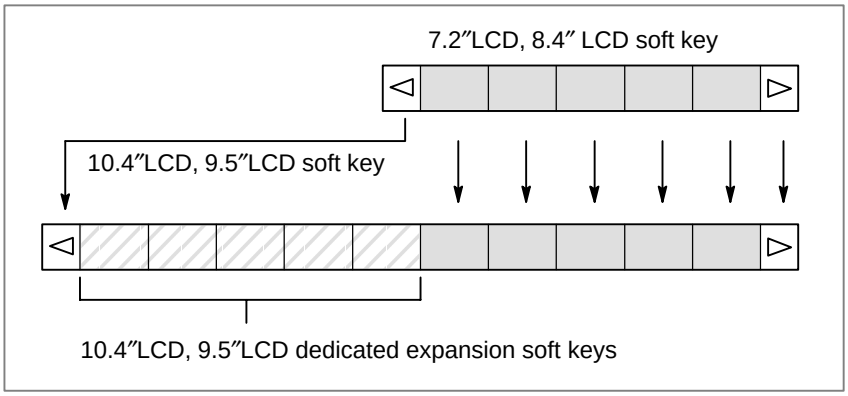

Fig. 2.3.6 LCD soft key configuration

Whenever a position display appears in the left half of the screen after a function key other than [POS] is pressed, the soft keys on the left half of the soft key display area are displayed as follows:

The soft key corresponding to the position display is indicated in reverse video.
This manual may refer to 10.4″and 9.5″LCD display units as 12 soft key types, and 7.2″ and 8.4″ LCD display units as 7 soft key types.

2.4 EXTERNAL I/O DEVICES

Five types of external input/output devices are available. This section outlines each device. For details on these devices, refer to the corresponding manuals listed below.

Table 2.4 External I/O device

Device name	Usage	Max. storage capacity	Reference manual
FANUC Handy File	Easy–to–use, multi function input/output device. It is designed for FA equipment and uses floppy disks.	3600m	B–61834E
FANUC Floppy Cassette	Input/output device. Uses floppy disks.	2500m	B–66040E
FANUC FA Card	Compact input/output device. Uses FA cards.	160m	B–61274E
FANUC PPR	Input/output device consisting of a paper tape reader, tape punch, and printer.	275m	B–58584E
Portable Tape Reader	Input device for reading paper tape.	_____	

The following data can be input/output to or from external input/output devices:

1. **Programs**
2. **Offset data**
3. **Parameters**
4. **Custom macro common variables**

For how data is input and output, see III–8.

Parameter

Before an external input/output device can be used, parameters must be set as follows.

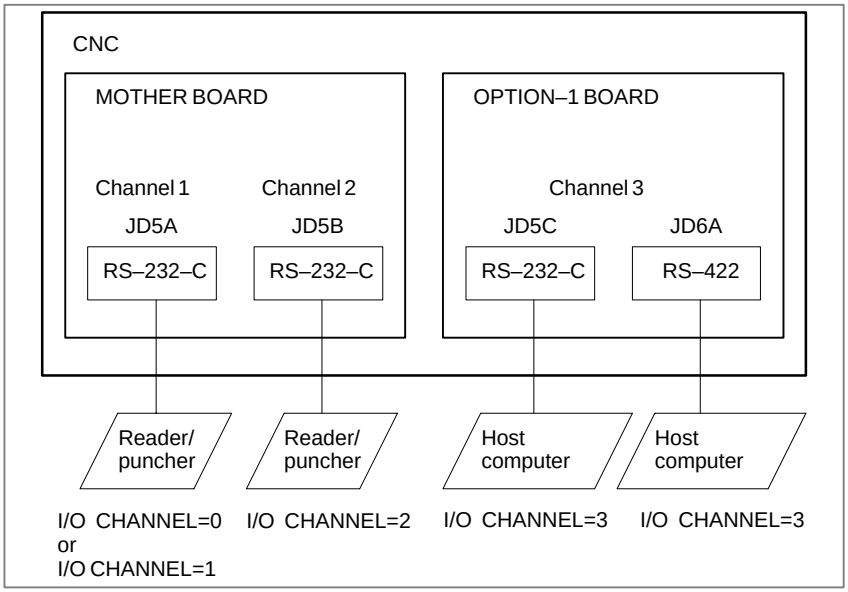

CNC has three channels of reader/punch interfaces. This CNC has three channels of interfaces (reader/punch and remote buffer interfaces). It also has a memory card interface. The input/output device to be used is specified by setting the channel (interface) connected to that device in setting parameter I/O CHANNEL.

The specified data, such as a baud rate and the number of stop bits, of an input/output device connected to a specific channel must be set in parameters for that channel in advance. (This is not necessary for the memory card interface.)

For channel 1, two combinations of parameters to specify the input/output device data are provided.

The following shows the interrelation between the reader/punch interface parameters for the channels.

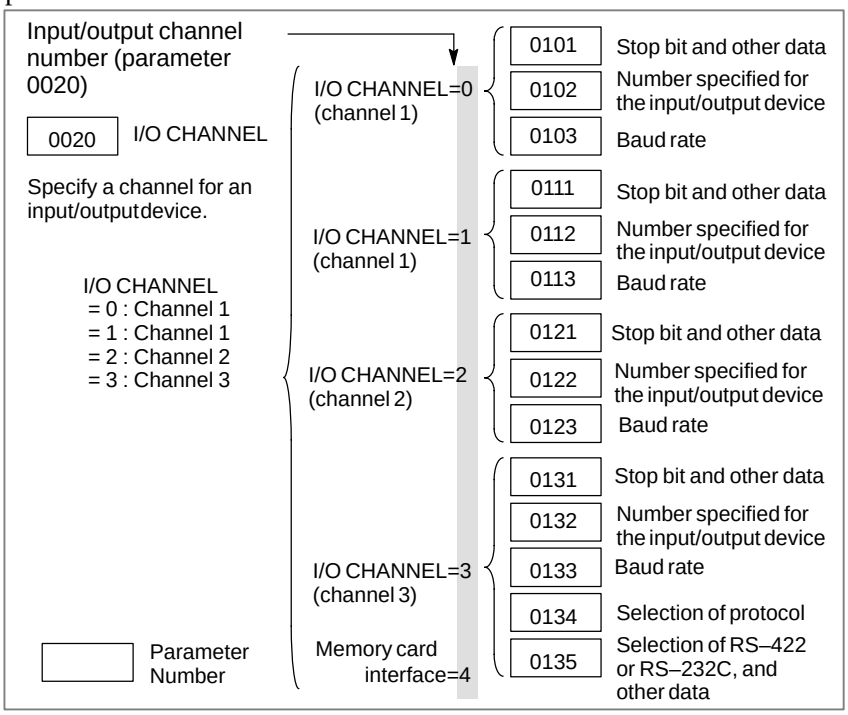

2.4.1 FANUC Handy File

The Handy File is an easy–to–use, multi function floppy disk input/output device designed for FA equipment. By operating the Handy File directly or remotely from a unit connected to the Handy File, programs can be transferred and edited.
The Handy File uses 3.5–inch floppy disks, which do not have the problems of paper tape (i.e., noisy during input/output, easily broken, and bulky).
One or more programs (up to 1.44M bytes, which is equivalent to the memory capacity of 3600–m paper tape) can be stored on one floppy disk.

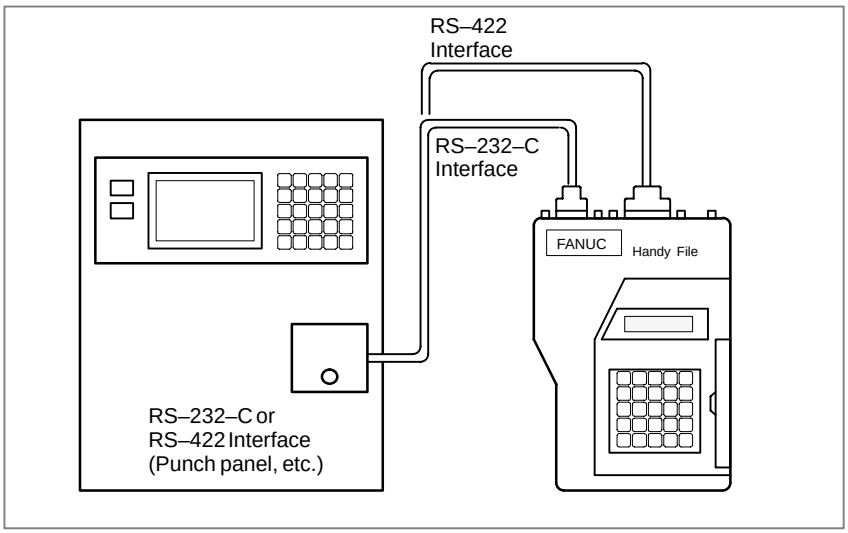

2.4.2 FANUC Floppy Cassette

When the Floppy Cassette is connected to the CNC, machining programs stored in the CNC can be saved on a Floppy Cassette, and machining programs saved in the Floppy Cassette can be transferred to the CNC.

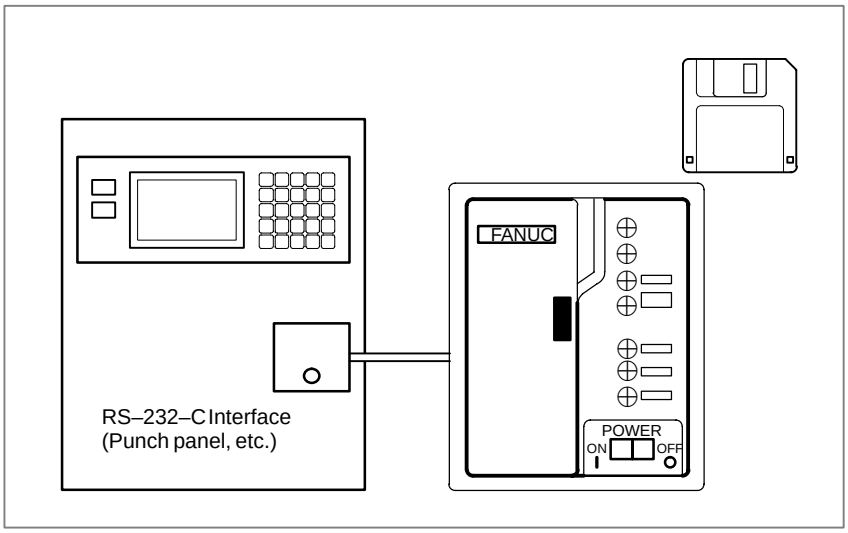

2.4.3 FANUC FA Card

An FA Card is a memory card used as an input medium in the FA field. It is a card–shaped input/output medium featuring a high reliability, small size, high capacity, and maintenance–free operation.
When an FA Card is connected to the CNC via the card adapter, machining programs stored in the CNC can be transferred to and saved in an FA Card. Machining programs stored on an FA Card can also be transferred to the CNC.

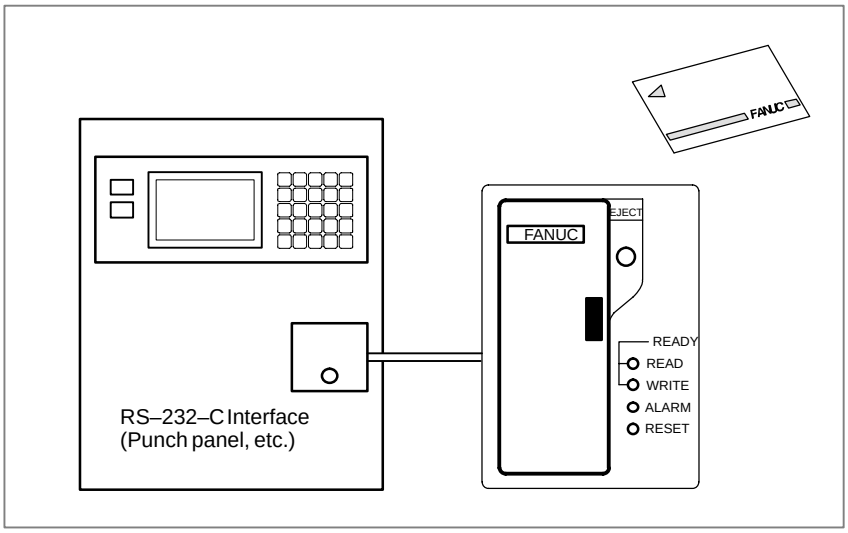

2.4.4 FANUC PPR

The FANUC PPR consists of three units: A printer, paper tape punch, and paper tape reader.
When the PPR is used alone, data can be read from the tape reader and printed or punched out. It is also possible to perform TH and TV checks on data that was read.

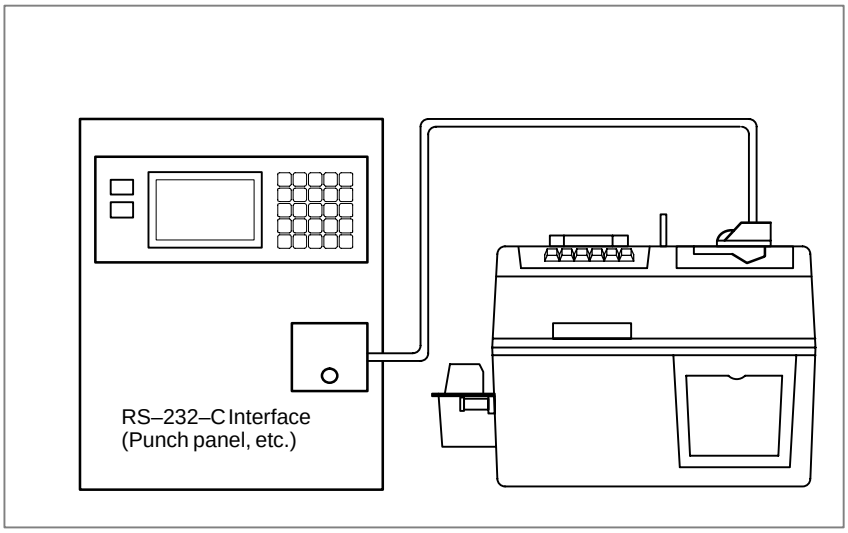

2.4.5 Portable Tape Reader

The portable tape reader is used to input data from paper tape.

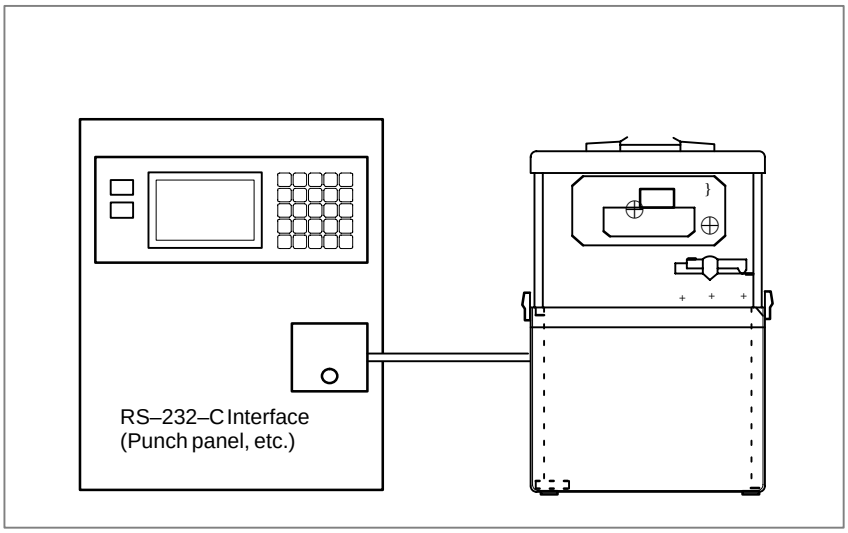

2.5 POWER ON/OFF

2.5.1 Turning on the Power

Procedure of turning on the power

Procedure

1 Check that the appearance of the CNC machine tool is normal. (For example, check that front door and rear door are closed.)

2 Turn on the power according to the manual issued by the machine tool builder.

3 After the power is turned on, check that the position screen is displayed. An alarm screen is displayed if an alarm occurs upon power–on. If the screen shown in Section III–2.5.2 is displayed, a system failure may have occurred.

Position display screen (Seven soft key type)

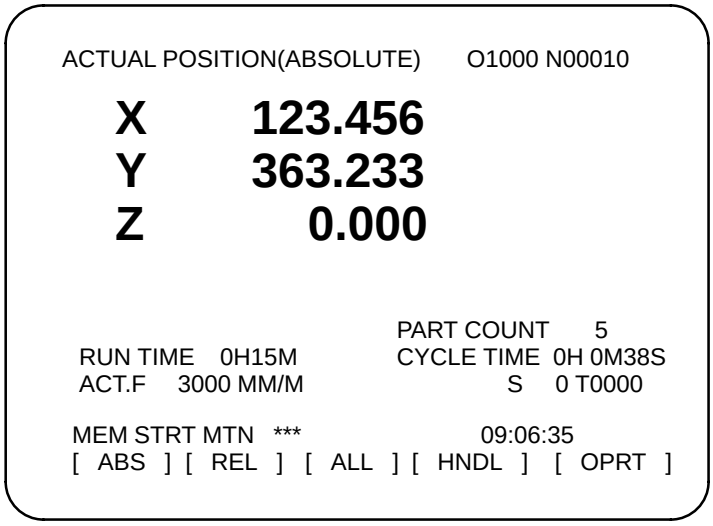

4 Check that the fan motor is rotating.

WARNING

Until the positional or alarm screen is displayed at the power on, do not touch them. Some keys are used for the maintenance or special operation purpose. When they are pressed, unexpected operation may be caused.

2.5.2 Screen Displayed at Power–on

If a hardware failure or installation error occurs, the system displays one of the following three types of screens then stops.
Information such as the type of printed circuit board installed in each slot is indicated. This information and the LED states are useful for failure recovery.

Slot status display

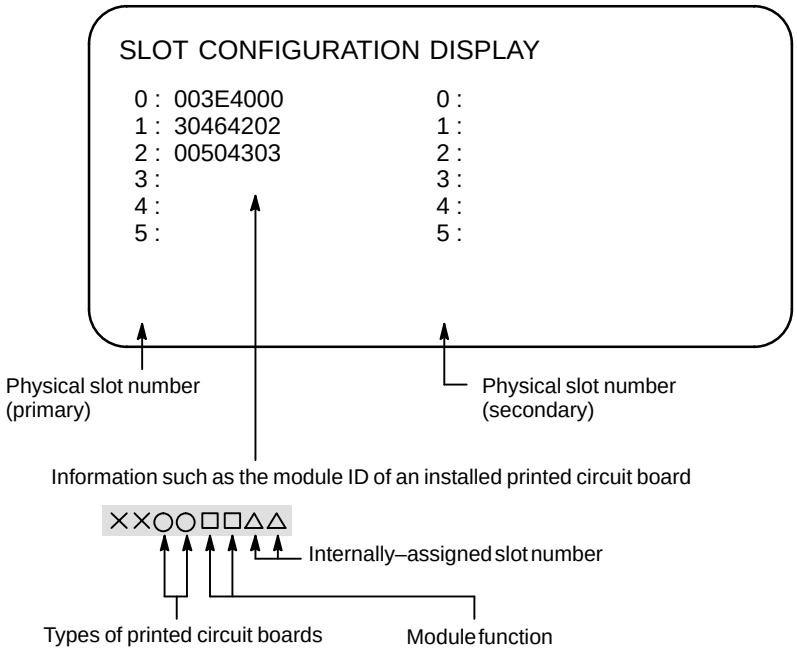

For more information about the types of printed circuit boards and module functions, refer to the MAINTENANCE MANUAL (B–63525EN).

Screen indicating module setting status

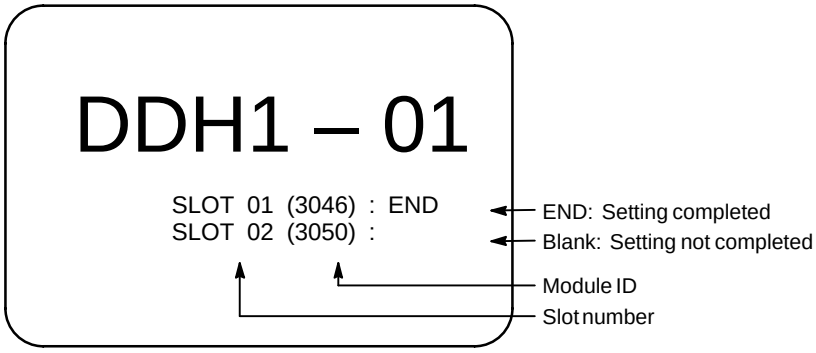

Display of software configuration

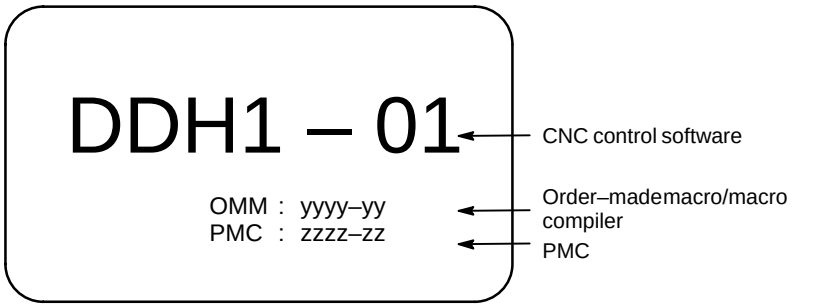

The software configuration can be displayed on the system configuration screen also.
Refer to the MAINTENANCE MANUAL (B–63525EN) for the system configuration screen.

2.5.3 Power Disconnection

Power Disconnection

Procedure

1 Check that the LED indicating the cycle start is off on the operator's panel.

2 Check that all movable parts of the CNC machine tool is stopping.

3 If an external input/output device such as the Handy File is connected to the CNC, turn off the external input/output device.

4 Continue to press the POWER OFF pushbutton for about 5 seconds.

5 Refer to the machine tool builder's manual for turning off the power to the machine.

3 MANUAL OPERATION

MANUAL OPERATION are six kinds as follows :

3.1 Manual reference position return
3.2 Jog feed
3.3 Incremental feed
3.4 Manual handle feed
3.5 Manual absolute on and off

3.1 MANUAL REFERENCE POSITION RETURN

The tool is returned to the reference position as follows :
The tool is moved in the direction specified in parameter ZMI (bit 5 of No. 1006) for each axis with the reference position return switch on the machine operator's panel. The tool moves to the deceleration point at the rapid traverse rate, then moves to the reference position at the FL speed. The rapid traverse rate and FL speed are specified in parameters (No. 1420,1421, and 1425).
Fourstep rapid traverse override is effective during rapid traverse.
When the tool has returned to the reference position, the reference position return completion LED goes on. The tool generally moves along only a single axis, but can move along three axes simultane ously when specified so in parameter JAX(bit 0 of No.1002).

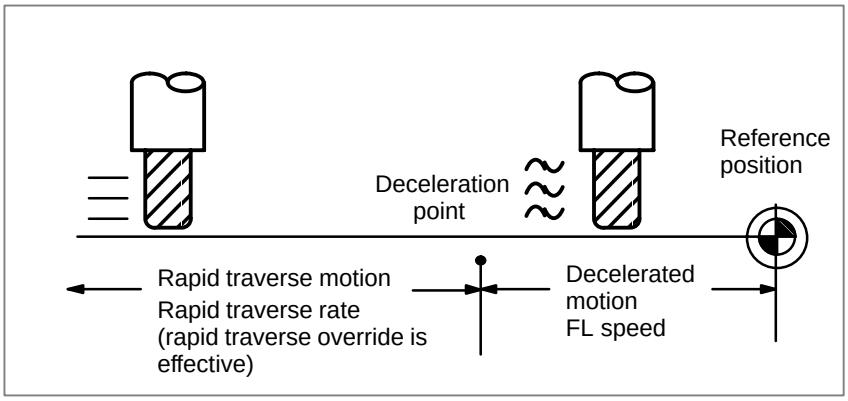

Procedure for Manual Reference Position Return

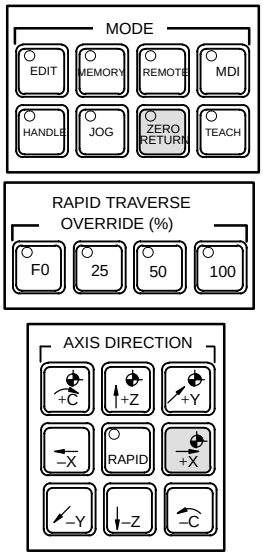

Procedure

1 Press the reference position return switch, one of the mode selection swithces.

2 To decerease the feedrate, press a rapid traverse override switch. When the tool has returned to the reference position, the reference position return completion LED goes on.

3 Press the feed axis and direction selection switch corresponding to the axis and direction for reference position return. Continue pressing the switch until the tool returns to the reference position. The tool can be moved along three axes simultaneously when specified so in an appropriate parameter setting. The tool moves to the deceleration point at the rapid traverse rate, then moves to the reference position at the FL speed set in a parameter.

4 Perform the same operations for other axes, if necessary.
The above is an example. Refer to the appropriate manual provided by the machine tool builder for the actual operations.

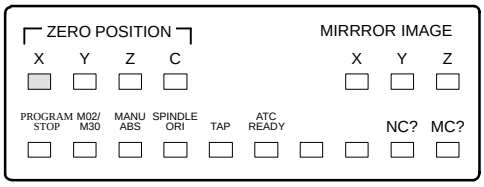

Explanations

- **Automatically setting the coordinate system**

Bit 0 (ZPR) of parameter No. 1201 is used for automatically setting the coordinate system. When ZPR is set, the coordinate system is automatically determined when manual reference position return is performed.
When α, β and γ are set in parameter 1250, the workpiece coordinate system is determined so that reference point on the tool holder or the position of the tip of the reference tool is X= α, Y = β, Z = γ when reference position return is performed. This has the same effect as specifying the following command for reference position return:
G92XαYβZγ;
However, when options of the workpiece coordinate system is selected, it is not able to use.

Restrictions

- **Moving the tool again**

Once the REFERENCE POSITION RETURN COMPLETION LED lights at the completion of reference position return, the tool does not move unless the REFERENCE POSITION RETURN switch is turned off.

- **Reference position return completion LED**

The REFERENCE POSITION RETURN COMPLETION LED is extinguished by either of the following operations:
– Moving from the reference position.
– Entering an emergency stop state.

- **The distance to return to reference position**

For the distance (Not in the deceleration condition) to return the tool to the reference position, refer to the manual issued by the machine tool builder.

3.2 JOG FEED

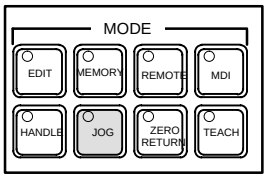

In the jog mode, pressing a feed axis and direction selection switch on the machine operator's panel continuously moves the tool along the selected axis in the selected direction.
The jog feedrate is specified in a parameter (No.1423)
The jog feedrate can be adjusted with the jog feedrate override dial.
Pressing the rapid traverse switch moves the tool at the rapid traverse feedrate (No. 1424) regardless of the postiotion of the jog feedrate override dial. This function is called the manual rapid traverse.
Manual operation is allowed for one axis at a time. 3 axes can be selected at a time by parameter JAX (No.1002#0).

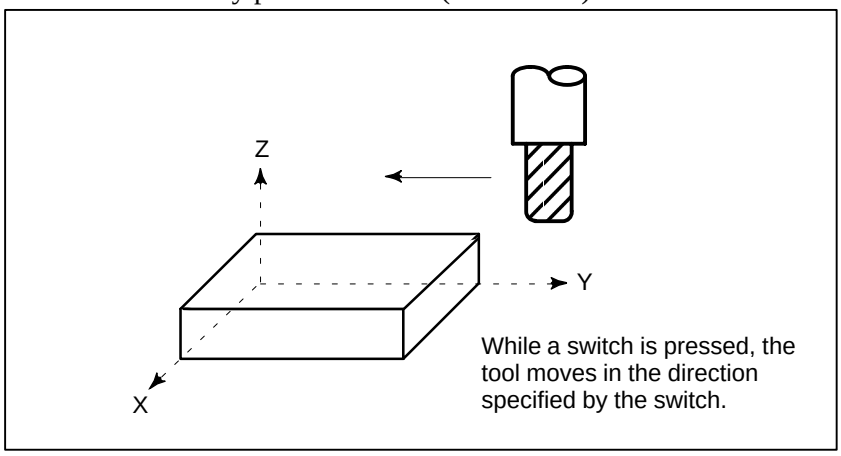

Procedure for JOG feed

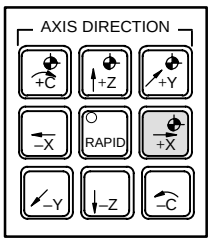

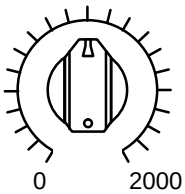

JOG FEED RATE OVERRIDE

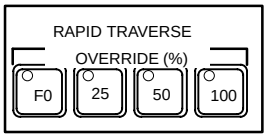

Procedure

1 Press the jog switch, one of the mode selection switches.

2 Press the feed axis and direction selection switch corresponding to the axis and direction the tool is to be moved. While the switch is pressed, the tool moves at the feedrate specified in a parameter (No. 1423). The tool stops when the switch is released.

3 The jog feedrate can be adjusted with the jog feedrate override dial.

4 Pressing the rapid traverse switch while pressing a feed axis and direction selection switch moves the tool at the rapid traverse rate while the rapid traverse switch is pressed. Rapid traverse override by the rapid traverse override switches is effective during rapid traverse.

The above is an example. Refer to the appropriate manual provided by the machine tool builder for the actual operations.

Limitations

- **Acceleration/deceleration for rapid traverse**

  Feedrate, time constant and method of automatic acceleration/deceleration for manual rapid traverse are the same as G00 in programmed command.

- **Change of modes**

  Changing the mode to the jog mode while pressing a feed axis and direction selection switch does not enable jog feed. To enable jog feed, enter the jog mode first, then press a feed axis and direction selection switch.

- **Rapid traverse prior to reference position return**

  If reference position return is not performed after power–on, pushing RAPID TRAVERSE button does not actuate the rapid traverse but the remains at the JOG feedrate. This function can be disabled by setting parameter RPD (No.1401#01).

3.3 INCREMENTAL FEED

In the incremental (INC) mode, pressing a feed axis and direction selection switch on the machine operator's panel moves the tool one step along the selected axis in the selected direction. The minimum distance the tool is moved is the least input increment. Each step can be 10, 100, or 1000 times the least input increment.
This mode is effective when a manual pulse generator is not connected.

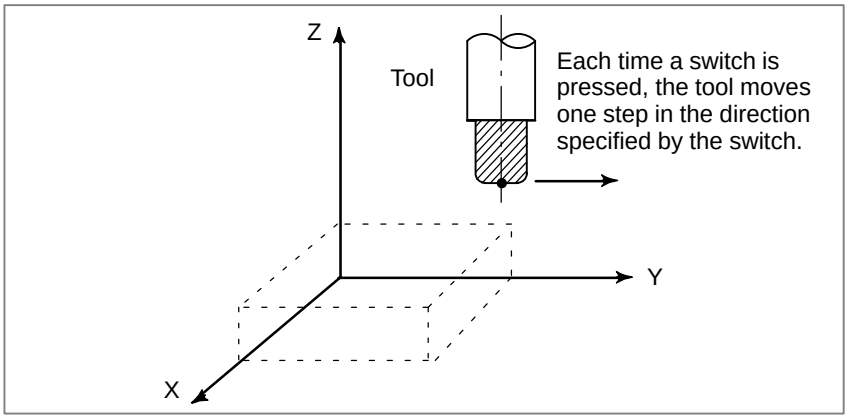

Procedure for Incremental Feed

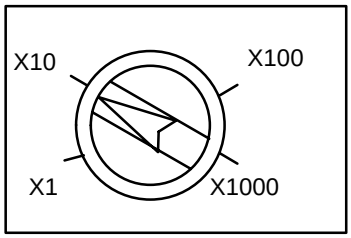

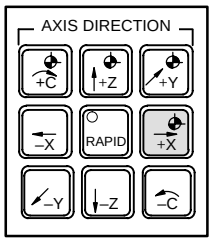

1 Press the INC switch, one of the mode selection switches.

2 Select the distance to be moved for each step with the magnification dial.

3 Press the feed axis and direction selection switch corresponding to the axis and direction the tool is to be moved. Each time a switch is pressed, the tool moves one step. The feedrate is the same as the jog feedrate.

4 Pressing the rapid traverse switch while pressing a feed axis and direction selection switch moves the tool at the rapid traverse rate. Rapid traverse override by the rapid traverse override switch is effective during rapid traverse.

The above is an example. Refer to the appropriate manual provided by the machine tool builder for the actual operations.

3.4 MANUAL HANDLE FEED

In the handle mode, the tool can be minutely moved by rotating the manual pulse generator on the machine operator's panel. Select the axis along which the tool is to be moved with the handle feed axis selection switches.
The minimum distance the tool is moved when the manual pulse generator is rotated by one graduation is equal to the least input increment. Or the distance the tool is moved when the manual pulse generator is rotated by one graduation can be magnified by 1 times, 10 times, or by one of the two magnifications (total four magnifications) specified by parameters (No. 7113 and 7114).

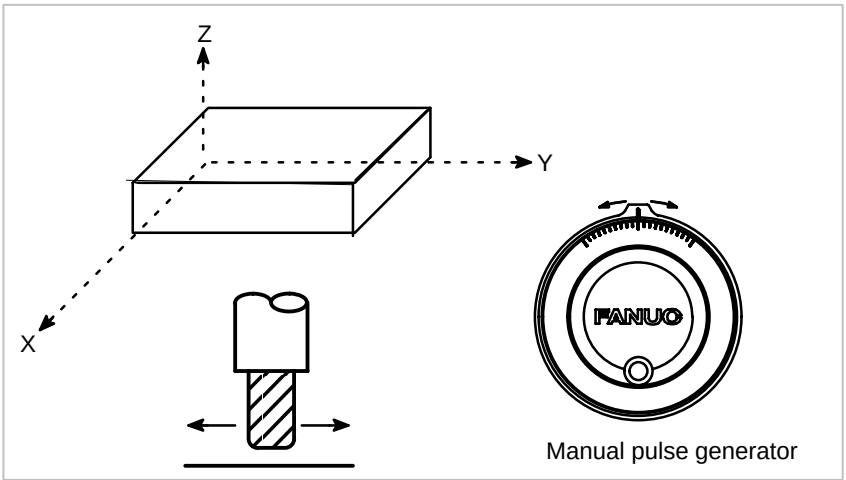

Procedure for Manual Handle Feed

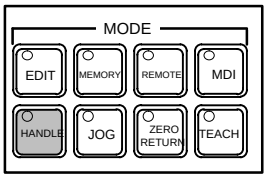

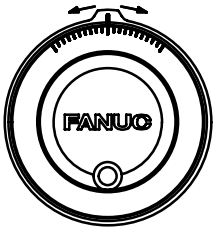

Manual pulse generator

1 Press the HANDLE switch, one of the mode selection switches.

2 Select the axis along which the tool is to be moved by pressing a handle feed axis selection switch.

3 Select the magnification for the distance the tool is to be moved by pressing a handle feed magnification switch. The distance the tool is moved when the manual pulse generator is rotated by one graduation is: Least input increment multiplied by magnification.

4 Move the tool along the selected axis by rotating the handle. Rotating the handle 360 degrees moves the tool the distance equivalent to 100 graduations.
The above is an example. Refer to the appropriate manual provided by the machine tool builder for the actual operations.

Explanations

- **Availability of manual pulse generator in Jog mode (JHD)**

Parameter JHD (bit 0 of No. 7100) enables or disables the manual handle feed in the JOG mode.
When the parameter JHD(bit 0 of No. 7100) is set 1,both manual handle feed and incremental feed are enabled.

- **Availability of manual pulse generator in TEACH IN JOG mode (THD)**

Parameter THD (bit 1 of No. 7100) enables or disables the manual handle feed in the TEACH IN JOG mode.

- **A command to the MPG exceeding rapid traverse rate (HPF)**

Parameter HPF (bit 4 of No. 7100) or (No. 7117) specifies as follows:

- Parameter HPF (bit 4 of No. 7100)

Set value 0 : The feedrate is clamped at the rapid traverse rate and generated pulses exceeding the rapid traverse rate are ignored. (The distance the tool is moved may not match the graduations on the manual pulse generator.)

Set value 1 : The feedrate is clamped at the rapid traverse rate and generated pulses exceeding the rapid traverse rate are not ignored but accumulated in the CNC.
(No longer rotating the handle does not immediately stop the tool. The tool is moved by the pulses accumulated in the CNC before it stops.)

- Parameter HPF (No. 7177) (It is available when parameter HPF is 0.)

Set value 0 : The feedrate is clamped at the rapid traverse rate and generated pulses exceeding the rapid traverse rate are ignored. (The distance the tool is moved may not match the graduations on the manual pulse generator.)

Other than 0 : The feedrate is clamped at the rapid traverse rate and generated pulses exceeding the rapid traverse rate are not ignored but accumulated in the CNC until the limit specified in parameter No. 7117 is reached.
(No longer rotating the handle does not immediately stop the tool. The tool is moved by the pulses accumulated in the CNC before it stops.)

- **Movement direction of an axis to the rotation of MPG (HNG_X)**

Parameter HNGx (No. 7102 #0) switches the direction of MPG in which the tool moves along an axis, corresponding to the direction in which the handle of the manual pulse generator is rotated.

Restrictions

- **Number of MPGs**

Up to three manual pulse generators can be connected, one for each axis. The three manual pulse generators can be simultaneously operated.

WARNING

Rotating the handle quickly with a large magnification such as x100 moves the tool too fast. The feedrate is clamped at the rapid traverse feedrate.

NOTE

Rotate the manual pulse generator at a rate of five rotations per second or lower. If the manual pulse generator is rotated at a rate higher than five rotations per second, the tool may not stop immediately after the handle is no longer rotated or the distance the tool moves may not match the graduations on the manual pulse generator.

3.5 MANUAL ABSOLUTE ON AND OFF

Whether the distance the tool is moved by manual operation is added to the coordinates can be selected by turning the manual absolute switch on or off on the machine operator's panel. When the switch is turned on, the distance the tool is moved by manual operation is added to the coordinates. When the switch is turned off, the distance the tool is moved by manual operation is not added to the coordinates.

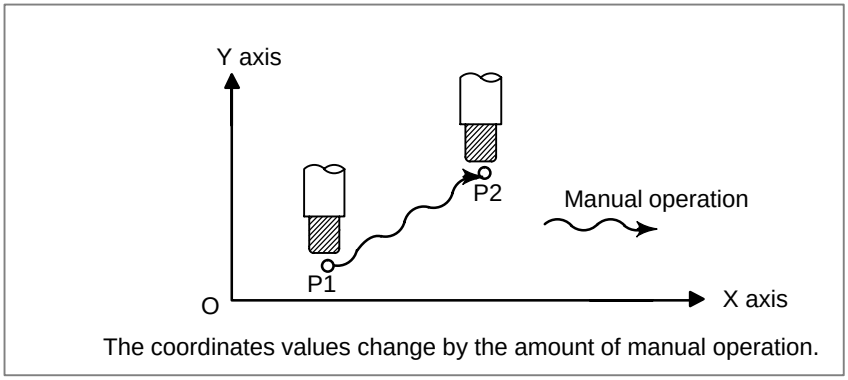

Fig. 3.5(a) Coordinates with the switch ON

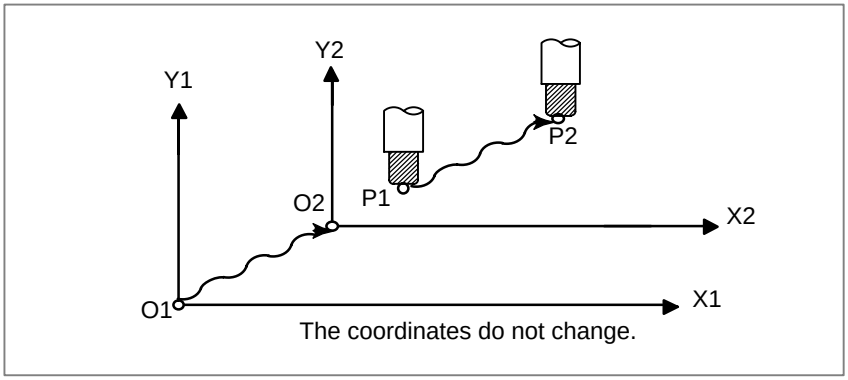

Fig. 3.5(b) Coordinates with the switch OFF

Explanation

The following describes the relation between manual operation and coordinates when the manual absolute switch is turned on or off, using a program example.

```
G01G90   X100.0Y100.0F010  ; [1]
         X200.0Y150.0      ; [2]
         X300.0Y200.0      ; [3]
```

The subsequent figures use the following notation:

Movement of the tool when the switch is on
Movement of the tool when the switch is off

The coordinates after manual operation include the distance the tool is moved by the manual operation. When the switch is off, therefore, subtract the distance the tool is moved by the manual operation.

- **Manual operation after the end of block**

Coordinates when block [2] has been executed after manual operation (X–axis +20.0, Y–axis +100.0) at the end of movement of block.

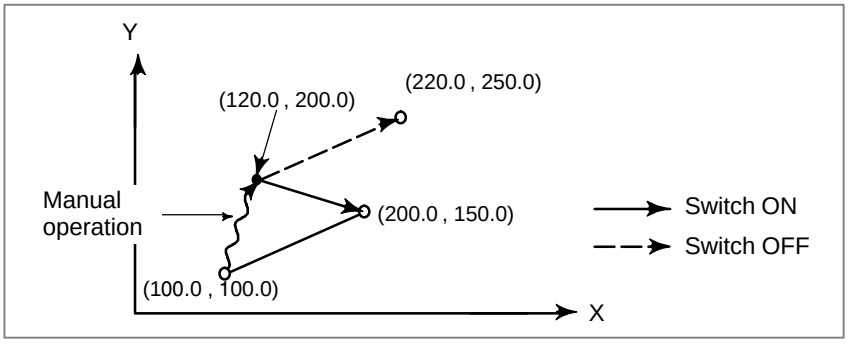

- **Manual operation after a feed hold**

Coordinates when the feed hold button is pressed while block [2] is being executed, manual operation (Y–axis + 75.0) is performed, and the cycle start button is pressed and released.

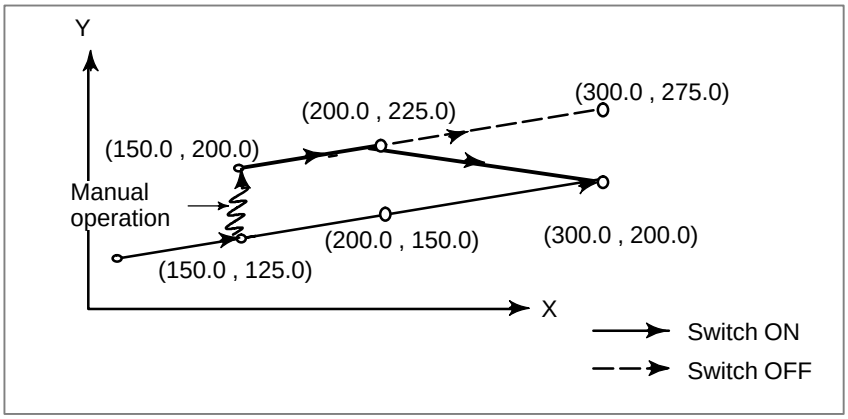

- **When reset after a manual operation following a feed hold**

Coordinates when the feed hold button is pressed while block [2] is being executed, manual operation (Y–axis +75.0) is performed, the control unit is reset with the RESET button, and block [2] is read again

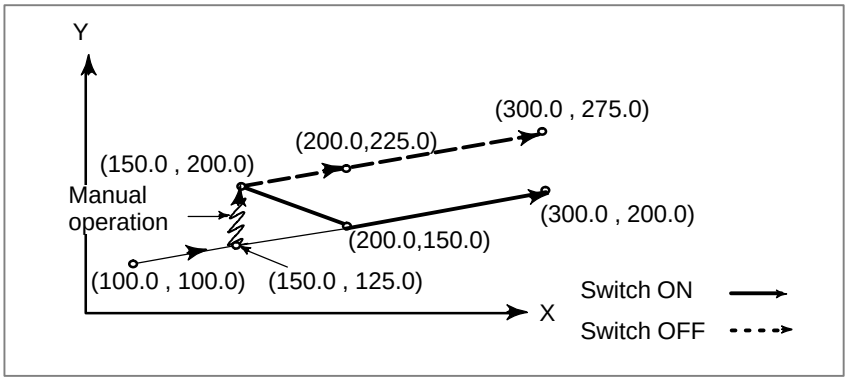

- **When a movement command in the next block is only one axis**

When there is only one axis in the following command, only the commanded axis returns.

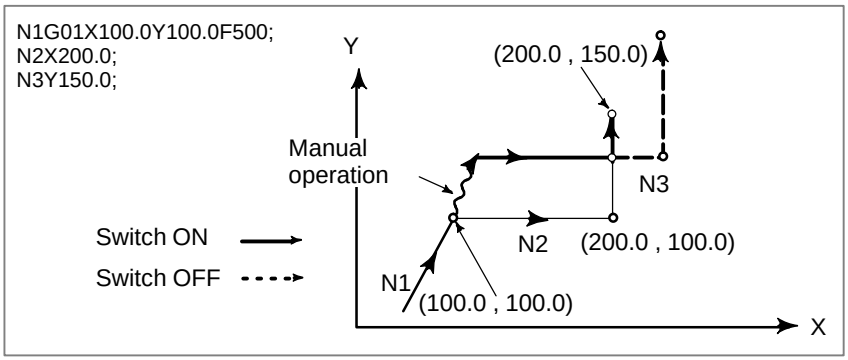

- **When the next move block is an incremental**

When the following commands are incremental commands, operation is the same as when the switch is OFF.

- **Manual operation during cutter compensation**

When the switch is OFF

After manual operation is performed with the switch OFF during cutter compensation, automatic operation is restarted then the tool moves parallel to the movement that would have been performed if manual movement had not been performed. The amount of separation equals to the amount that was performed manually.

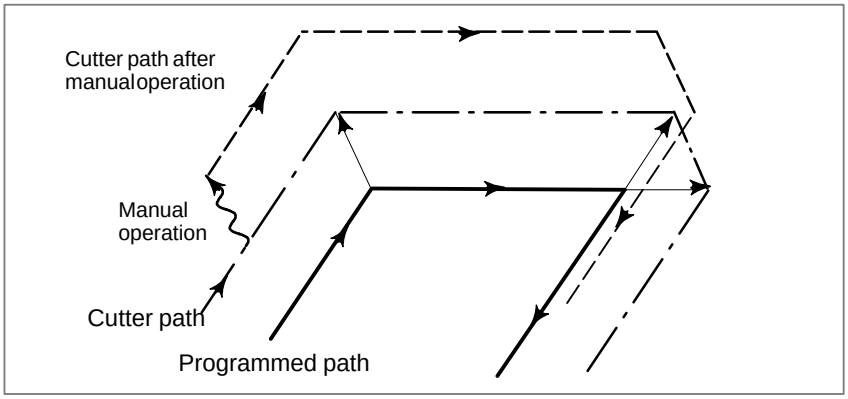

When the switch is ON during cutter compensation

Operation of the machine upon return to automatic operation after manual intervention with the switch is ON during execution with an absolute command program in the cutter compensation mode will be described. The vector created from the remaining part of the current block and the beginning of the next block is shifted in parallel. A new vector is created based on the next block, the block following the next block and the amount of manual movement. This also applies when manual operation is performed during cornering.

Manual operation performed in other than cornering

Assume that the feed hold was applied at point P_H while moving from P_A to P_B of programmed path P_A, P_B, and P_C and that the tool was manually moved to $P_{H'}$. The block end point P_B moves to the point $P_{B'}$ by the amount of manual movement, and vectors V_{B1} and V_{B2} at P_B also move to $V_{B1'}$ and $V_{B2'}$. Vectors V_{C1} and V_{C2} between the next two blocks P_B – P_C and P_C – P_D are discarded and new vectors $V_{C1'}$ and $V_{C2'}$ ($V_{C2'}$ = V_{C2} in this example) are produced from the relation between $P_{B'}$ – P_C and P_C – P_D. However, since $V_{B2'}$ is not a newly calculated vector, correct offset is not performed at block $P_{B'}$ – P_C. Offset is correctly performed after P_C.

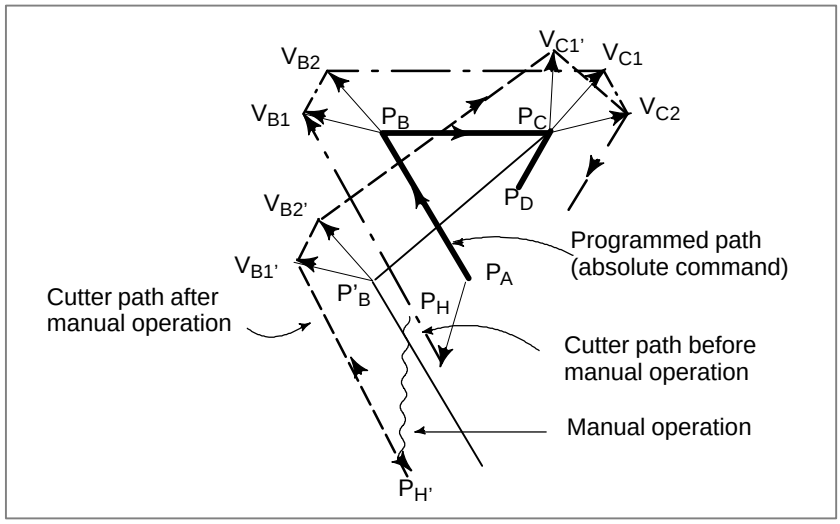

Manual operation during cornering

This is an example when manual operation is performed during cornering. $V_{A2'}$, $V_{B1'}$, and $V_{B2'}$ are vectors moved in parallel with V_{A2}, V_{B1} and V_{B2} by the amount of manual movement. The new vectors are calculated from V_{C1} and V_{C2}. Then correct cutter compensation is performed for the blocks following Pc.

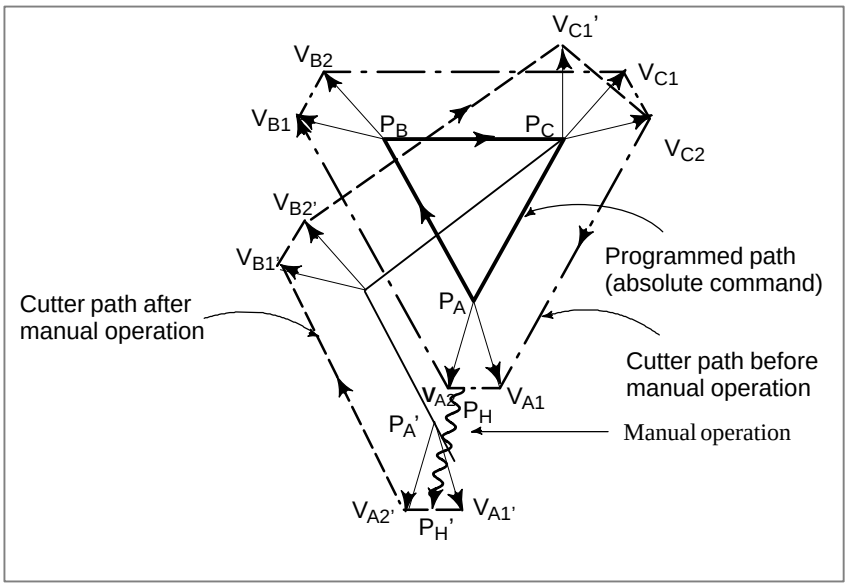

Manual operation after single block stop

Manual operation was performed when execution of a block was terminated by single block stop.

Vectors V_{B1} and V_{B2} are shifted by the amount of manual operation. Sub–sequent processing is the same as case a described above. An MDI operation can also be interveneted as well as manual operation. The movement is the same as that by manual operation.

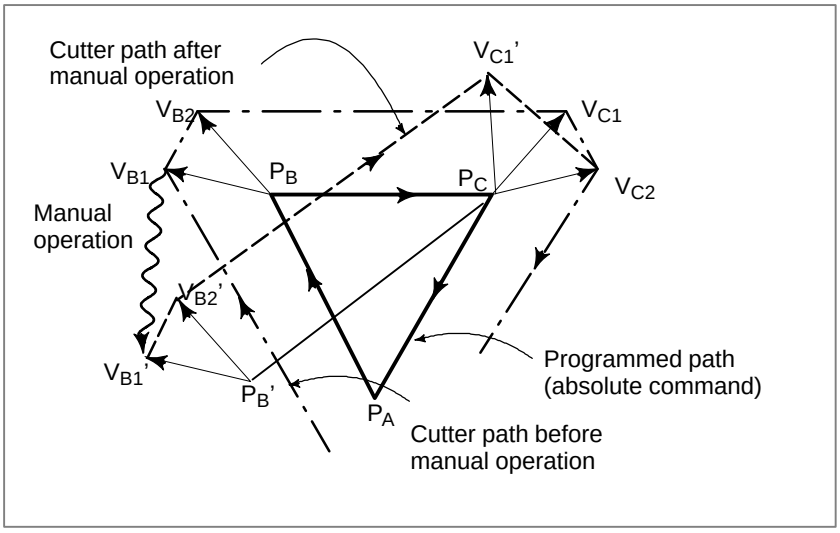

3.6 MANUAL LINEAR/CIRCULAR INTERPOLATION

In manual handle feed or jog feed, the following types of feed operations are enabled in addition to the conventional feed operation along a specified single axis (X–axis, Y–axis, Z–axis, and so forth) based on simultaneous 1–axis control:

- Feed along a tilted straight line in the XY plane (linear feed) based on simultaneous 2–axis control
- Feed along a circle in the XY plane (circular feed) based on simultaneous 2–axis control

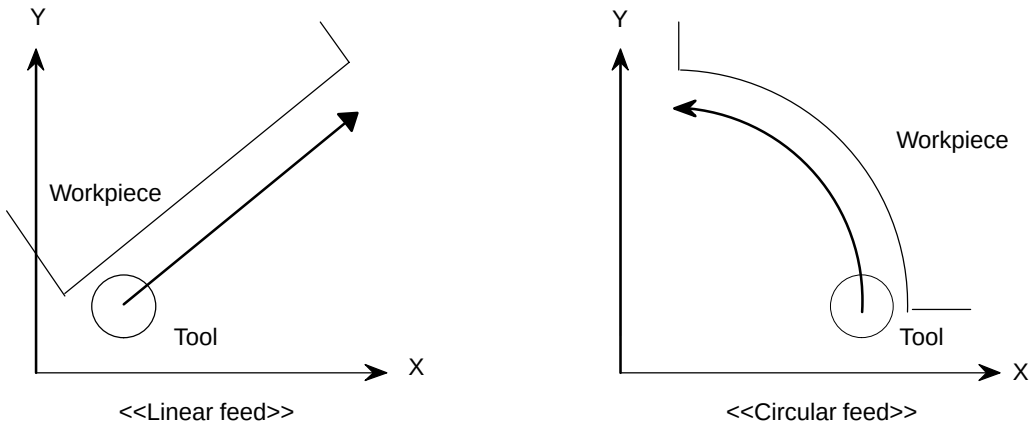

NOTE
The X–axis and Y–axis must be the first controlled axis and second controlled axis, respectively.

Procedure for Manual Linear/Circular Interpolation

Procedure

1 To perform manual handle feed, select manual handle feed mode. To perform jog feed, select jog feed mode.

2 To perform manual handle feed, select a feed axis (for simultaneous 1–axis feed along the X–axis, Y–axis, or Z–axis, or for simultaneous linear or circular 2–axis feed along a specified straight line or circle in the XY plane) subject to manual handle feed operation. Use the handle feed axis select switch for this selection.
To perform jog feed, select a feed axis and direction with the feed axis direction select switch. While a feed axis and its direction are specified, the tool moves in the specified axis direction or along a straight line or circle at the jog feedrate specified in parameter No. 1423.

3 For manual handle feed

The tool is moved along a specified axis by turning the respective manual handle. The feedrate depends on the speed at which the manual handle is turned. A distance to be traveled by the tool when the manual handle is turned by one pulse can be selected using the manual handle feed travel distance magnification switch.

For jog feed

The feedrate can be overridden using the manual feedrate override dial.

The procedure above is just an example. For actual operations, refer to the relevant manual provided by the machine tool builder.

Explanations

- **Definition of a straight line/circle**

For feed along an axis, no straight line/circle definition is required. For linear feed or circular feed, a straight line or circle must be defined beforehand. (For circular feed, for example, data such as a radius and the center of a circle must be set.) For details, refer to the relevant manual provided by the machine tool builder.

- **Manual handle feed**

In manual handle feed, the tool can be moved along a specified axis (X–axis, Y–axis, Z–axis, or the 4th axis), or can be moved along a tilted straight line (linear feed) or a circle (circular feed).

(1) Feed along a specified axis (simultaneous 1–axis control)

By turning a manual handle, the tool can be moved along the desired axis (such as X–axis, Y–axis, and Z–axis) on a simultaneous 1–axis control basis. (This mode of feed is the conventional type of manual handle feed.)

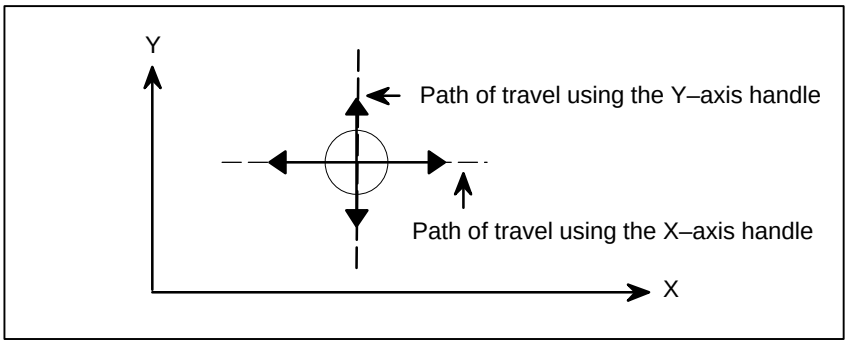

Feed along a specified axis

(2) Linear feed (simultaneous 2–axis control)

By turning a manual handle, the tool can be moved along the straight line parallel to a specified straight line on a simultaneous 2–axis control basis. This manual handle is referred to as the guidance handle. Moreover, by turning another manual handle, the tool can be moved at right angles to a specified straight line on a simultaneous 2–axis control basis. This manual handle is referred to as the approach handle. When the guidance handle or approach handle is turned clockwise or counterclockwise, the tool travels forward or backward along the respective path.

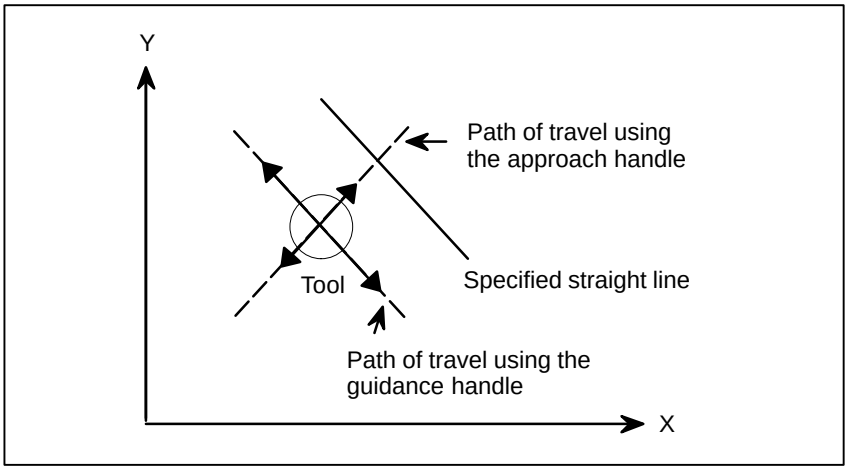

Linear feed

(3) Circular feed (simultaneous 2–axis control)

By turning a manual handle, the tool can be moved from the current position along the concentric circle that has the same center as a specified circle on a simultaneous 2–axis control basis. This manual handle is referred to as the guidance handle. Moreover, by turning another manual handle, the tool can be moved along the normal to a specified circle on a simultaneous 2–axis control basis. This manual handle is referred to as the approach handle. When the guidance handle or approach handle is turned clockwise or counterclockwise, the tool travels forward or backward along the respective path.

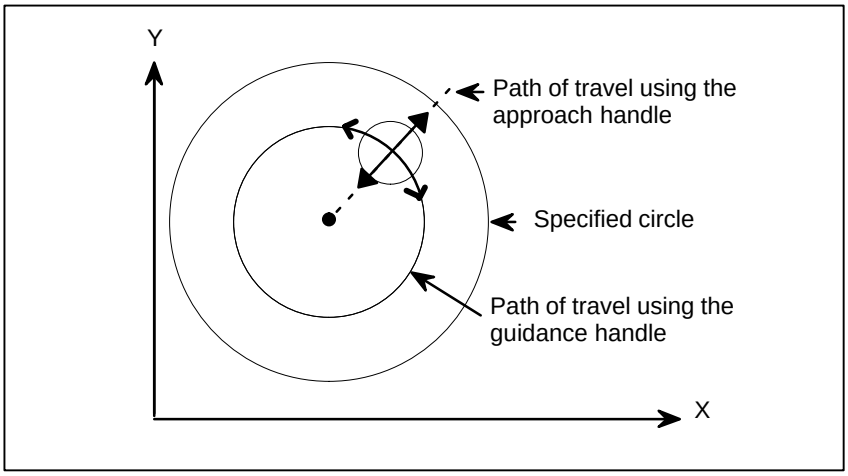

Circular feed

- **Feedrate for manual handle feed**

Feedrate

The feedrate depends on the speed at which a manual handle is turned. A distance to be traveled by the tool (along a tangent in the case of linear or circular feed) when a manual handle is turned by one pulse can be selected using the manual handle feed travel distance magnification switch.

- **Manual handle selection**

The Series 16/18 has three manual pulse generator interfaces to allow up to three manual handles to be connected. For information about how to use the manual handles connected to the interfaces (whether to use each manual handle as a handle for feed along an axis, as a guidance handle, or as an approach handle), refer to the relevant manual provided by the machine tool builder.

- **Direction of movement using manual handles**

The user can specify the direction of the tool moved along a straight line or circle (for example, whether to make a clockwise or counterclockwise movement along a circle) when the guidance handle or approach handle is turned clockwise or counterclockwise. For details, refer to the relevant manual provided by the machine tool builder.

- **Jog feed (JOG)**

In jog feed, the tool can be moved along a specified axis (X–axis, Y–axis, Z–axis, or the 4th axis), or can be moved along a tilted straight line (linear feed) or a circle (circular feed).

(1) Feed along a specified axis (simultaneous 1–axis control)

While a feed axis and its direction are specified with the feed axis direction select switch, the tool moves in the specified axis direction at the feedrate specified in parameter No. 1423. The feedrate can be overridden using the manual feedrate override dial.

(2) Linear feed (simultaneous 2–axis control)

By defining a straight line beforehand, the tool can be moved as follows:

- While a feed axis and its direction are selected using the feed axis direction select switch, the tool moves along a straight line parallel to the specified straight line on a simultaneous 2–axis control basis.
- While a feed axis and its direction are selected using the feed axis direction select switch, the tool moves at right angles to the specified straight line on a simultaneous 2–axis control basis.

The feedrate in the tangential direction is specified in parameter No. 1410. The feedrate can be overridden using the manual feedrate override dial.

(3) Circular feed (simultaneous 2–axis control)

By defining a circle beforehand, the tool can be moved as follows:

- While a feed axis and its direction are selected using the feed axis γ direction select switch, the tool moves from the current position along the concentric circle that has the same center as the specified circle.
- While a feed axis and its direction are selected using the feed axis γ direction select switch, the tool moves along the normal to the specified circle.

The feedrate in the tangential direction is specified in parameter No. 1410. The feedrate can be overridden using the manual feedrate override dial.

- **Manual handle feed in JOG mode**

Even in JOG mode, manual handle feed can be enabled using bit 0 (JHD) of parameter No. 7100. In this case, however, manual handle feed is enabled only when the tool is not moved along any axis by jog feed.

Limitations

- **Mirror image**

Never use the mirror image function when performing manual operation. (Perform manual operation when the mirror image switch is off, and mirror image setting is off.)

4 AUTOMATIC OPERATION

Programmed operation of a CNC machine tool is referred to as automatic operation.
This chapter explains the following types of automatic operation:

- **MEMORY OPERATION**
  Operation by executing a program registered in CNC memory
- **MDI OPERATION**
  Operation by executing a program entered from the MDI panel
- **DNC operation**
  Operation while reading a program from an input/output device
- **PROGRAM RESTART**
  Restarting a program for automatic operation from an intermediate point
- **SCHEDULING FUNCTION**
  Scheduled operation by executing programs (files) registered in an external input/output device (Handy File, Floppy Cassette, or FA Card)
- **SUBPROGRAM CALL FUNCTION**
  Function for calling and executing subprograms (files) registered in an external input/output device (Handy File, Floppy Cassette, or FA Card) during memory operation
- **MANUAL HANDLE INTERRUPTION**
  Function for performing manual feed during movement executed by automatic operation
- **MIRROR IMAGE**
  Function for enabling mirror–image movement along an axis during automatic operation
- **MANUAL INTERVENTION AND RETURN**
  Function restarting automatic operation by returning the tool to the position where manual intervention was started during automatic operation
- **MEMORY CARD–BASED DNC OPERATION**
  Automatic operation by a program written to a memory card

4.1 MEMORY OPERATION

Programs are registered in memory in advance. When one of these programs is selected and the cycle start switch on the machine operator's panel is pressed, automatic operation starts, and the cycle start LED goes on.
When the feed hold switch on the machine operator's panel is pressed during automatic operation, automatic operation is stopped temporarily. When the cycle start switch is pressed again, automatic operation is restarted.

When the RESET key on the MDI panel is pressed, automatic operation terminates and the reset state is entered.
For the two–path control, the programs for the two tool posts can be executed simultaneously so the two tool posts can operate independently at the same time.
The following procedure is given as an example. For actual operation, refer to the manual supplied by the machine tool builder.

Procedure for Memory Operation

Procedure

1 Press the **MEMORY** mode selection switch.

2 Select a program from the registered programs. To do this, follow the steps below.

2–1 Press PROG to display the program screen.

2–2 Press address O .

2–3 Enter a program number using the numeric keys.

2–4 Press the **[O SRH]** soft key.

3 For the two–path control, select the tool post to be operated with the tool post selection switch on the machine operator's panel.

4 Press the cycle start switch on the machine operator's panel. Automatic operation starts, and the cycle start LED goes on. When automatic operation terminates, the cycle start LED goes off.

5 To stop or cancel memory operation midway through, follow the steps below.

a. Stopping memory operation
Press the feed hold switch on the machine operator's panel. The feed hold LED goes on and the cycle start LED goes off. The machine responds as follows:

(i) When the machine was moving, feed operation decelerates and stops.

(ii) When dwell was being performed, dwell is stopped.

(iii) When M, S, or T was being executed, the operation is stopped after M, S, or T is finished.

When the cycle start switch on the machine operator's panel is pressed while the feed hold LED is on, machine operation restarts.

b. Terminating memory operation

Press the RESET key on the MDI panel.

Automatic operation is terminated and the reset state is entered. When a reset is applied during movement, movement decelerates then stops.

Explanation

Memory operation

After memory operation is started, the following are executed:

(1) A one–block command is read from the specified program.
(2) The block command is decoded.
(3) The command execution is started.
(4) The command in the next block is read.
(5) Buffering is executed. That is, the command is decoded to allow immediate execution.
(6) Immediately after the preceding block is executed, execution of the next block can be started. This is because buffering has been executed.
(7) Hereafter, memory operation can be executed by repeating the steps (4) to.(6)

Stopping and terminating memory operation

Memory operation can be stopped using one of two methods: Specify a stop command, or press a key on the machine operator's panel.

– The stop commands include M00 (program stop), M01 (optional stop), and M02 and M30 (program end).
– There are two keys to stop memory operation: The feed hold key and reset key.

- **Program stop (M00)**

Memory operation is stopped after a block containing M00 is executed. When the program is stopped, all existing modal information remains unchanged as in single block operation. The memory operation can be restarted by pressing the cycle start button. Operation may vary depending on the machine tool builder. Refer to the manual supplied by the machine tool builder.

- **Optional stop (M01)**

Similarly to M00, memory operation is stopped after a block containing M01 is executed. This code is only effective when the Optional Stop switch on the machine operator's panel is set to ON. Operation may vary depending on the machine tool builder. Refer to the manual supplied by the machine tool builder.

- **Program end (M02, M30)**

When M02 or M30 (specified at the end of the main program) is read, memory operation is terminated and the reset state is entered.
In some machines, M30 returns control to the top of the program. For details, refer to the manual supplied by the machine tool builder.

- **Feed hold**

When Feed Hold button on the operator's panel is pressed during memory operation, the tool decelerates to a stop at a time.

- **Reset**

Automatic operation can be stopped and the system can be made to the reset state by using RESET key on the MDI panel or external reset signal.

When reset operation is applied to the system during a tool moving status, the motion is slowed down then stops.

- **Optional block skip**

When the optional block skip switch on the machine operator's panel is turned on, blocks containing a slash (/) are ignored.

Calling a subprogram stored in an external input/output device

A file (subprogram) in an external input/output device such as a Floppy Cassette can be called and executed during memory operation. For details, see Section 4.6.

4.2 MDI OPERATION

In the **MDI** mode, a program consisting of up to 10 lines can be created in the same format as normal programs and executed from the MDI panel. MDI operation is used for simple test operations.
The following procedure is given as an example. For actual operation, refer to the manual supplied by the machine tool builder.

Procedure for MDI Operation

Procedure

1 Press the **MDI** mode selection switch.
For the two–path control, select the tool post for which a program is to be created with the tool post selection switch. Create a separate program for each tool post.

2 Press the [PROG] function key on the MDI panel to select the program screen. The following screen appears:

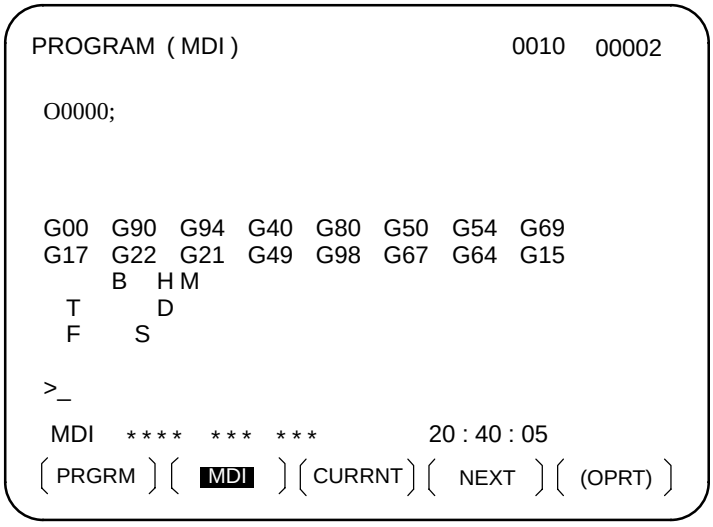

Program number O0000 is entered automatically.

3 Prepare a program to be executed by an operation similar to normal program editing. M99 specified in the last block can return control to the beginning of the program after operation ends. Word insertion, modification, deletion, word search, address search, and program search are available for programs created in the MDI mode. For program editing, see III–9.

4 To entirely erase a program created in MDI mode,use one of the following methods:

a. Enter address [O], then press the [DELETE] key on the MDI panel.

b. Alternatively, press the [RESET] key. In this case, set bit 7 of parameter MCL No. 3203 to 1 in advance.

5 To execute a program, set the cursor on the head of the program. (Start from an intermediate point is possible.) Push Cycle Start button on the operator's panel. By this action, the prepared program will start. (For the two–path control, select the tool post to be operated with the tool post selection switch on the machine operator's panel beforehand.) When the program end (M02, M30) or ER(%) is executed, the prepared program will be automatically erased and the operation will end.
By command of M99, control returns to the head of the prepared program.

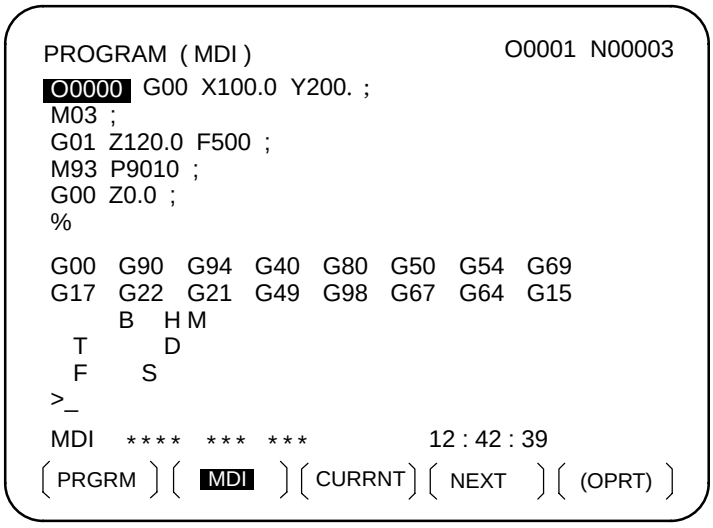

6 To stop or terminate MDI operation in midway through, follow the steps below.

a. Stopping MDI operation
Press the feed hold switch on the machine operator's panel. The feed hold LED goes on and the cycle start LED goes off. The machine responds as follows:

(i) When the machine was moving, feed operation decelerates and stops.

(ii) When dwell was being performed, dwell is stopped.

(iii) When M, S, or T was being executed, the operation is stopped after M, S, or T is finished.

When the cycle start switch on the machine operator's panel is pressed, machine operation restarts.

b. Terminating MDI operation

Press the RESET key on the MDI panel.

Automatic operation is terminated and the reset state is entered. When a reset is applied during movement, movement decelerates then stops.

Explanation

The previous explanation of how to execute and stop memory operation also applies to MDI operation, except that in MDI operation, M30 does not return control to the beginning of the program (M99 performs this function).

- **Erasing the program**

Programs prepared in the **MDI** mode will be erased in the following cases:

- In MDI operation, if M02, M30 or ER(%) is executed.
  (If bit 6 (MER) of parameter No. 3203 is set to 1, however, the program is erased when execution of the last block of the program is completed by single–block operation.)
- In **MEMORY** mode, if memory operation is performed.
- In **EDIT** mode, if any editing is performed.
- Background editing is performed.
- When the O and DELETE keys were pressed.
- Upon reset when bit 7 (MCL) of parameter No. 3203 is set to 1

- **Restart**

After the editing operation during the stop of MDI operation was done, operation starts from the current cursor position.

- **Editing a program during MDI operation**

A program can be edited during MDI operation. The editing of a program, however, is disabled until the CNC is reset, when bit 5 (MIE) of parameter No. 3203 is set accordingly.

Limitations

- **Program registration**

Programs created in MDI mode cannot be registered.

- **Number of lines in a program**

A program can have as many lines as can fit on one page of the screen. A program consisting of up to six lines can be created. When parameter MDL (No. 3107 #7) is set to 0 to specify a mode that suppresses the display of continuous–state information, a program of up to 10 lines can be created.
If the created program exceeds the specified number of lines, % (ER) is deleted (prevents insertion and modification).

- **Subprogram nesting**

Calls to subprograms (M98) can be specified in a program created in the MDI mode. This means that a program registered in memory can be called and executed during MDI operation. In addition to the main program executed by automatic operation, up to two levels of subprogram nesting are allowed (when the custom macro option is provided, up to four levels are allowed).

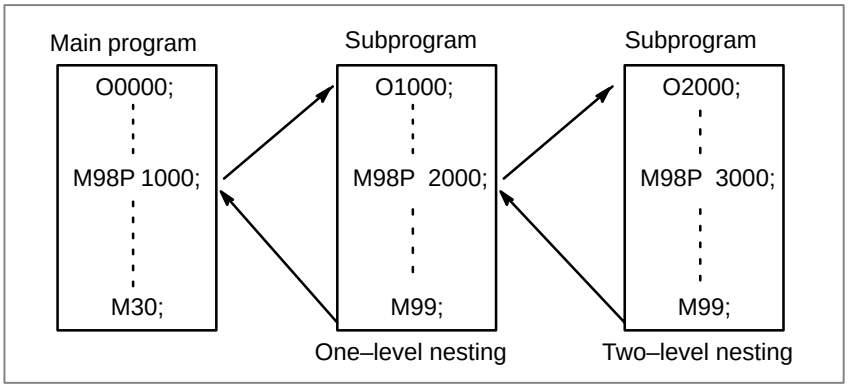

Fig. 4.2 Nesting level of subprograms called from the MDI program

- **Macro call**

When the custom macro option is provided, macro programs can also be created, called, and executed in the **MDI** mode. However, macro call commands cannot be executed when the mode is changed to **MDI** mode after memory operation is stopped during execution of a subprogram.

- **Memory area**

When a program is created in the **MDI** mode, an empty area in program memory is used. If program memory is full, no programs can be created in the **MDI** mode.

4.3 DNC OPERATION

By activating automatic operation during the DNC operation mode (RMT), it is possible to perform machining (DNC operation) while a program is being read in via reader/puncher interface, or remote buffer.
If the floppy cassette directory display option is available, it is possible to select files (programs) saved in an external input/output unit of a floppy format (Handy File, Floppy Cassettes, or FA card) and specify (schedule) the sequence and frequency of execution for automatic operation.
(see III–4.4)
To use the DNC operation function, it is necessary to set the parameters related to the reader/punch interface, and remote buffer in advance.

DNC OPERATION

Procedure

1 Search for the program (file) to be executed.

2 Press the REMOTE switch on the machine operator's panel to set RMT mode, then press the cycle start switch. The selected file is executed. For details of the use of the REMOTE switch, refer to the relevant manual supplied by the machine tool builder.

- **Program check screen Seven soft key type**

```
PROGRAM CHECK                                O0001 N00020

O0010 ;
G92 G90 X100 Y200 Z50 ;
G00 X0 Y0 Z0 ;
G01 Z250 F1000
 (RELATIVE)  (DIST TO GO)   G00   G94   G80
 X   100.000  X      0.000   G17   G21   G98
 Y   100.000  Y      0.000   G90   G49   G80
 Z     0.000  Z      0.000   G22   G49   G67
 A     0.000  A      0.000         B
 C     0.000  C      0.000   H     M
HD.T          NX.T           D     M
   F                    S          M
 ACT.F          SACT          REPEAT
 RMT STRT  MTN ***  ***      21:20:05
[ ABS ]  [ REL ]  [      ]  [      ]  [ (OPRT) ]
```

- **Program screen**
  Seven soft key type

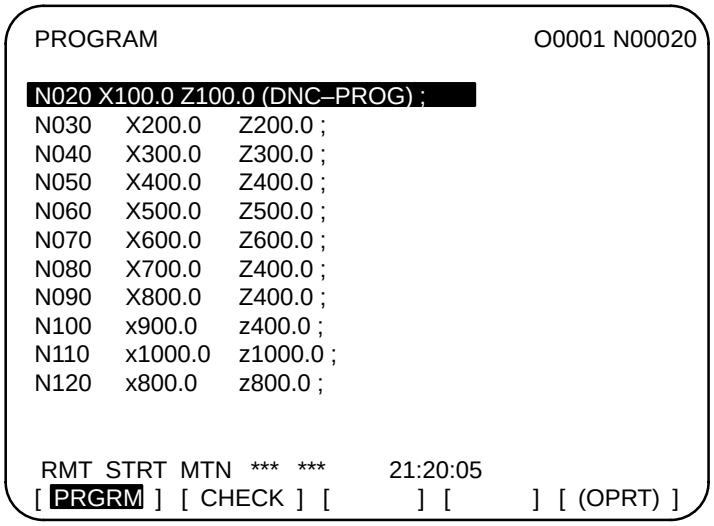

- **Program screen**
  Twelve soft key type

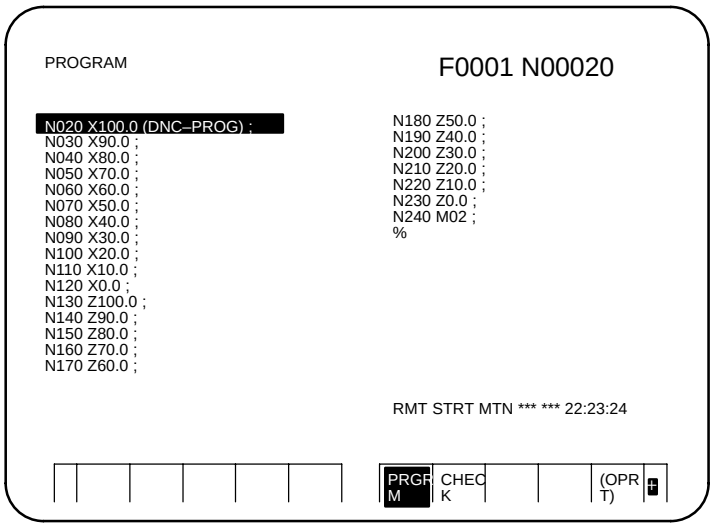

During DNC operation, the program currently being executed is displayed on the program check screen and program screen.
The number of displayed program blocks depends on the program being executed.
Any comment enclosed between a control–out mark “(” and control–in mark “)” within a block is also displayed.

Explanations

- During DNC operation, programs stored in memory can be called.
- During DNC operation, macro programs stored in memory can be called.

Limitations

- **Limit on number of characters**

In program display, no more than 256 characters can be displayed. Accordingly, character display may be truncated in the middle of a block.

- **M198 (command for calling a program from within an external input/output unit)**

In DNC operation, M198 cannot be executed. If M198 is executed, P/S alarm No. 210 is issued.

- **Custom macro**

In DNC operation, custom macros can be specified, but no repeat instruction and branch instruction can be programmed. If a repeat instruction or branch instruction is executed, P/S alarm No. 123 is issued. When reserved words (such as IF, WHILE, COS, and NE) used with custom macros in DNC operation are displayed during program display, a blank is inserted between adjacent characters.

Example

		[During DNC operation]
#102=SIN[#100] ;	→	#102 = S I N[#100] ;
IF[#100NE0]GOTO5 ;	→	I F[#100NE0] G O T O 5 ;

- **M99**

When control is returned from a subprogram or macro program to the calling program during DNC operation, it becomes impossible to use a return command (M99P****) for which a sequence number is specified.

Alarm

Number	Message	Contents
086	DR SIGNAL OFF	When entering data in the memory by using Reader / Puncher interface, the ready signal (DR) of reader / puncher was turned off. Power supply of I/O unit is off or cable is not connected or a P.C.B. is defective.
123	CAN NOT USE MACRO COMMAND IN DNC	Macro control command is used during DNC operation. Modify the program.
210	CAN NOT COMAND M198/M199	Or M198 is executed in the DNC operation. Modify the program.

4.4 PROGRAM RESTART

This function specifies Sequence No. of a block to be restarted when a tool is broken down or when it is desired to restart machining operation after a day off, and restarts the machining operation from that block. It can also be used as a high–speed program check function.
There are two restart methods: the P–type method and Q–type method.

P TYPE	Operation can be restarted anywhere. This restart method is used when operation is stopped because of a broken tool.

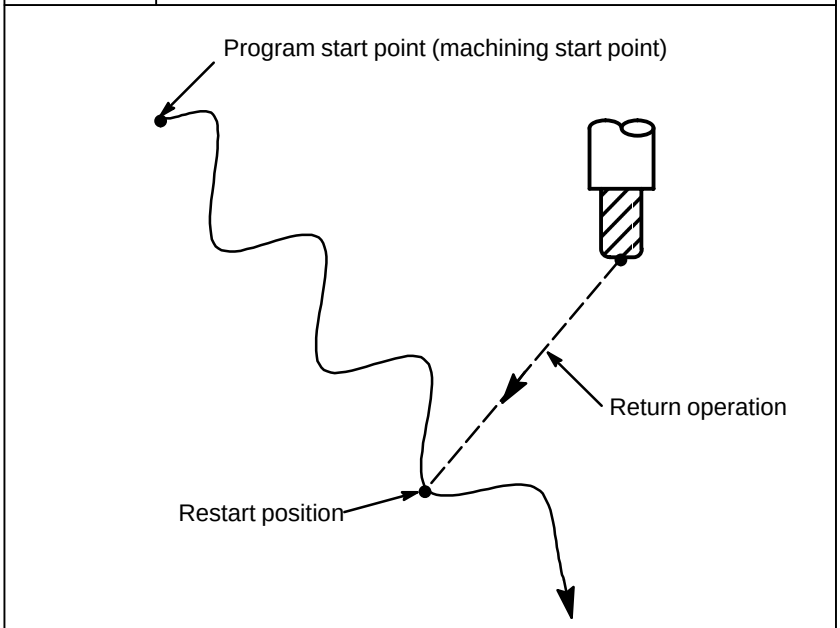

Q TYPE	Before operation can be restarted, the machine must be moved to the programmed start point (machining start point)

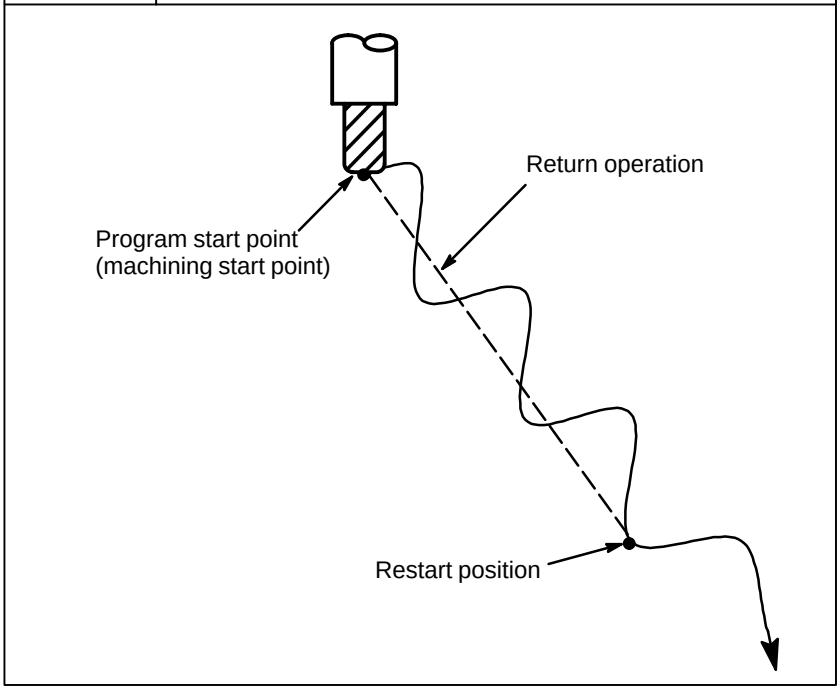

Procedure for Program Restart by Specifying a Sequence Number

Procedure 1

[P TYPE]

1 Retract the tool and replace it with a new one. When necessary, change the offset. (Go to step 2.)

[Q TYPE]

1 When power is turned ON or emergency stop is released, perform all necessary operations at that time, including the reference position return.

2 Move the machine manually to the program starting point (machining start point), and keep the modal data and coordinate system in the same conditions as at the machining start.

3 If necessary, modify the offset amount.

Procedure 2

[COMMON TO P TYPE / Q TYPE]

1 Turn the program restart switch on the machine operator's panel ON.

2 Press PROG key to display the desired program.

3 Find the program head.

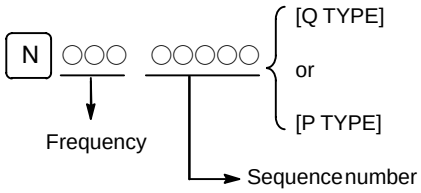

4 Enter the sequence number of the block to be restarted, then press th **[P TYPE]** or **[Q TYPE]** soft key.

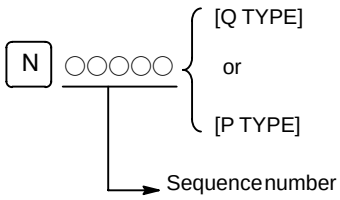

If the same sequence number appears more than once, the location of the target block must be specified. Specify a frequency and a sequence number.

5 The sequence number is searched for, and the program restart screen appears on the CRT display.

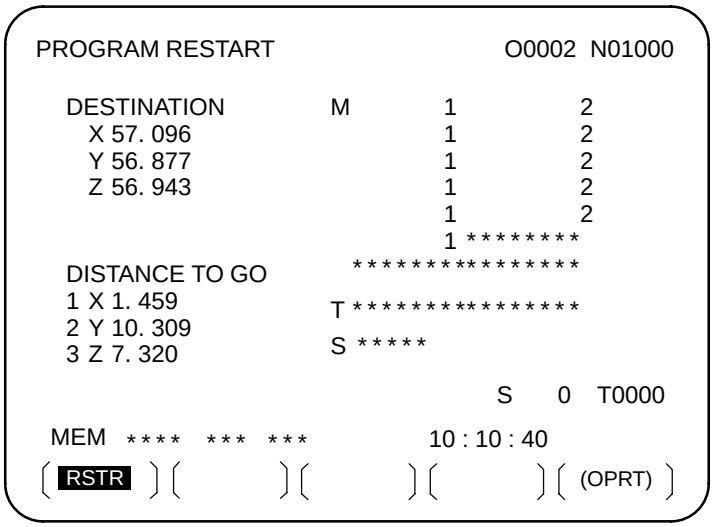

DESTINATION shows the position at which machining is to restart. DISTANCE TO GO shows the distance from the current tool position to the position where machining is to restart. A number to the left of each axis name indicates the order of axes (determined by parameter setting) along which the tool moves to the restart position.
The coordinates and amount of travel for restarting the program can be displayed for up to five axes. If your system supports six or more axes, pressing the **[RSTR]** soft key again displays the data for the sixth and subsequent axes. (The program restart screen displays only the data for CNC–controlled axes.)
M: Fourteen most recently specified M codes
T: Two most recently specified T codes
S: Most recently specified S code
B: Most recently specified B code
Codes are displayed in the order in which they are specified. All codes are cleared by a program restart command or cycle start in the reset state.

6 Turn the program re–start switch OFF. At this time, the figure at the left side of axis name DISTANCE TO GO blinks.

7 Check the screen for the M, S, T, and B codes to be executed. If they are found, enter the **MDI** mode, then execute the M, S, T, and B functions. After execution, restore the previous mode.
These codes are not displayed on the program restart screen.

8 Check that the distance indicated under DISTANCE TO GO is correct. Also check whether there is the possibility that the tool might hit a workpiece or other objects when it moves to the machining restart position. If such a possibility exists, move the tool manually to a position from which the tool can move to the machining restart position without encountering any obstacles.

9 Press the cycle start button. The tool moves to the machining restart position at the dry run feedrate sequentially along axes in the order specified by parameter settings (No. 7310). Machining is then restarted.

Procedure for Program Restart by Specifying a Block Number

Procedure 1

[P TYPE]

1 Retract the tool and replace it with a new one. When necessary, change the offset. (Go to step 2.)

[Q TYPE]

1 When power is turned ON or emergency stop is released, perform all necessary operations at that time, including the reference position return.

2 Move the machine manually to the program starting point (machining start point), and keep the modal data and coordinate system in the same conditions as at the machining start.

3 If necessary, modify the offset amount.

Procedure 2

[COMMON TO P TYPE / Q TYPE]

1 Turn the program restart switch on the machine operator's panel ON.

2 Press PROG key to display the desired program.

3 Find the program head. Press function RESET key.

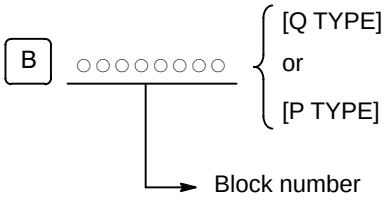

4 Enter the number of the block to be restarted then press the **[P TYPE]** or **[Q TYPE]** soft key. The block number cannot exceed eight digits.

5 The block number is searched for, and the program restart screen appears on the display.

```
PROGRAM RESTART                          O0002  N01000

  DESTINATION          M          1            2
    X 57. 096                     1            2
    Y 56. 877                     1            2
    Z 56. 943                     1            2
                                  1            2
                                  1 ********
  DISTANCE TO GO        ****************
    X 1. 459
    Y 10. 309           T ****************
    Z 7. 320            S *****

                                        S     0   T0000

 MEM  ****  ***  ***              10 : 10 : 40
[ RSTR ][      ][ FL.SDL ][      ][ (OPRT) ]
```

DESTINATION shows the position at which machining is to restart. DISTANCE TO GO shows the distance from the current tool position to the position where machining is to restart. A number to the left of each axis name indicates the order of axes (determined by parameter setting) along which the tool moves to the restart position.

The coordinates and amount of travel for restarting the program can be displayed for up to five axes. If your system supports six or more axes, pressing the **[RSTR]** soft key again displays the data for the sixth and subsequent axes. (The program restart screen displays only the data for CNC–controlled axes.)
M: Fourteen most recently specified M codes
T: Two most recently specified T codes
S: Most recently specified S code
B: Most recently specified B code
Codes are displayed in the order in which they are specified. All codes are cleared by a program restart command or cycle start in the reset state.

6 Turn the program re–start switch OFF. At this time, the figure at the left side of axis name DISTANCE TO GO blinks.

7 Check the screen for the M, S, T, and B codes to be executed. If they are found, enter the **MDI** mode, then execute the M, S, T, and B functions. After execution, restore the previous mode.
These codes are not displayed on the program restart screen.

8 Check that the distance indicated under DISTANCE TO GO is correct. Also check whether there is the possibility that the tool might hit a workpiece or other objects when it moves to the machining restart position. If such a possibility exists, move the tool manually to a position from which the tool can move to the machining restart position without encountering any obstacles.

9 Press the cycle start button. The tool moves to the machining restart position at the dry run feedrate sequentially along axes in the order specified by parameter settings (No. 7310). Machining is then restarted.

Explanations

- **Block number**

When the CNC is stopped, the number of executed blocks is displayed on the program screen or program restart screen. The operator can specify the number of the block from which the program is to be restarted, by referencing the number displayed on the CRT. The displayed number indicates the number of the block that was executed most recently. For example, to restart the program from the block at which execution stopped, specify the displayed number, plus one.

The number of blocks is counted from the start of machining, assuming one NC line of a CNC program to be one block.

< Example 1 >

CNC Program	Number of blocks
O 0001 ; G90 G92 X0 Y0 Z0 ; G01 X100. F100 ; G03 X01 –50. F50 ; M30 ;	1 2 3 4 5

< Example 2 >

CNC Program	Number of blocks
O 0001 ;	1
G90 G92 X0 Y0 Z0 ;	2
G90 G00 Z100. ;	3
G81 X100. Y0. Z–120. R–80. F50. ;	4
#1 = #1 + 1 ;	4
#2 = #2 + 1 ;	4
#3 = #3 + 1 ;	4
G00 X0 Z0 ;	5
M30 ;	6

Macro statements are not counted as blocks.

- **Storing / clearing the block number**

The block number is held in memory while no power is supplied. The number can be cleared by cycle start in the reset state.

- **Block number when a program is halted or stopped**

The program screen usually displays the number of the block currently being executed. When the execution of a block is completed, the CNC is reset, or the program is executed in single–block stop mode, the program screen displays the number of the program that was executed most recently.
When a CNC program is halted or stopped by feed hold, reset, or single–block stop, the following block numbers are displayed:
Feed hold : Block being executed
Reset : Block executed most recently
Single–block stop : Block executed most recently
For example, when the CNC is reset during the execution of block 10, the displayed block number changes from 10 to 9.

- **MDI intervention**

When MDI intervention is performed while the program is stopped by single–block stop, the CNC commands used for intervention are not counted as a block.

- **Block number exceeding eight digits**

When the block number displayed on the program screen exceeds eight digits, the block number is reset to 0 and counting continues.

Limitations

- **P–type restart**

Under any of the following conditions, P–type restart cannot be performed:

- When automatic operation has not been performed since the power was turned on
- When automatic operation has not been performed since an emergency stop was released
- When automatic operation has not been performed since the coordinate system was changed or shifted (change in an external offset from the workpiece reference point)

- **Restart block**

The block to be restarted need not be the block which was interrupted; operation can restart with any block. When P–type restart is performed, the restart block must use the same coordinate system as when operation was interrupted.

- **Single block**

When single block operation is ON during movement to the restart position, operation stops every time the tool completes movement along an axis. When operation is stopped in the single block mode, MDI intervention cannot be performed.

- **Manual intervention**

During movement to the restart position, manual intervention can be used to perform a return operation for an axis if it has not yet been performed for the axis. A return operation cannot be done further on axes for which a return has already been completed.

- **Reset**

Never reset during the time from the start of a search at restart until machining is restarted. Otherwise, restart must be performed again from the first step.

- **Manual absolute**

Regardless of whether machining has started or not, manual operation must be performed when the manual absolute mode is on.

- **Reference position return**

If no absolute–position detector (absolute pulse coder) is provided, be sure to perform reference position return after turning on the power and before performing restart.

Alarm

Alarm No.	Contents
071	The specified block number for restarting the program is not found.
094	After interruption, a coordinate system was set, then P–type restart was specified.
095	After interruption, the coordinate system shift was changed, then P–type restart was specified.
096	After interruption, the coordinate system was changed, then P–type restart was specified.
097	When automatic operation has not been performed since the power was turned on, emergency stop was released, or P/S alarm 094 to 097 was reset, P–type restart was specified.
098	After the power was turned on, restart operation was performed without reference position return, but a G28 command was found in the program.
099	A move command was specified from the MDI panel during a restart operation.
5020	An erroneous parameter was specififed for restarting a program.

WARNING

As a rule, the tool cannot be returned to a correct position under the following conditions. Special care must be taken in the following cases since none of them cause an alarm:

- Manual operation is performed when the manual absolute mode is OFF.
- Manual operation is performed when the machine is locked.
- When the mirror image is used.
- When manual operation is performed in the course of axis movement for returning operation.
- When the program restart is commanded for a block between the block for skip cutting and subsequent absolute command block.

4.5 SCHEDULING FUNCTION

The schedule function allows the operator to select files (programs) registered on a floppy–disk in an external input/output device (Handy File, Floppy Cassette, or FA Card) and specify the execution order and number of repetitions (scheduling) for performing automatic operation. It is also possible to select only one file from the files in the external input/output device and execute it during automatic operation.
This function is effective, when the floppy cassette directory display option is avairable and the floppy cassette is selected as the valid I/O device.

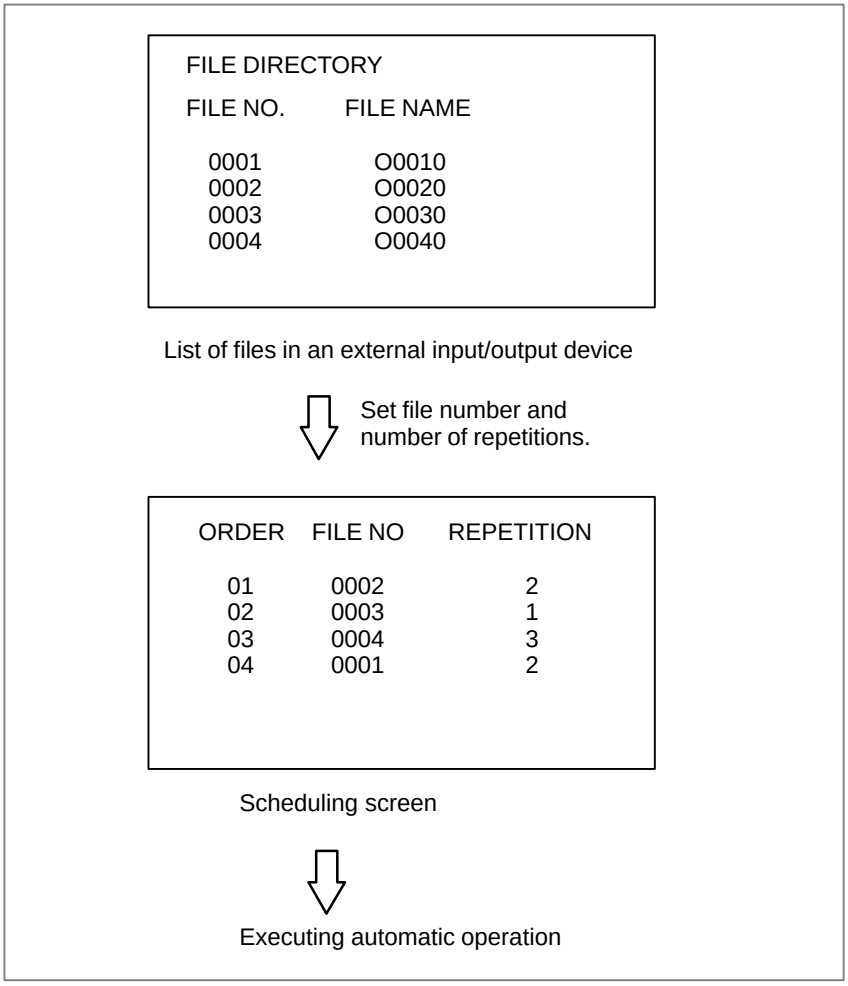

Procedure for Scheduling Function

Procedure

- **Procedure for executing one file**

1 Press the **MEMORY** switch on the machine operator's panel, then press the PROG function key on the MDI panel.

2 Press the rightmost soft key (continuous menu key), then press the **[FL. SDL]** soft key. A list of files registered in the Floppy Cassette is displayed on screen No. 1. To display more files that are not displayed on this screen, press the page key on the MDI panel. Files registered in the Floppy Cassette can also be displayed successively.

```
FILE DIRECTORY                          O0001  N00000
 CURRENT SELECTED : SCHEDULE
  NO.    FILE NAME            (METER)  VOL
  0000   SCHEDULE
  0001   PARAMETER             58.5
  0002   ALL PROGRAM           11.0
  0003   O0001                  1.9
  0004   O0002                  1.9
  0005   O0010                  1.9
  0006   O0020                  1.9
  0007   O0040                  1.9
  0008   O0050                  1.9

 MEM  ****  ***  ***           19 : 14 : 47
[ PRGRM ][      ][ DIR  ][ SCHDUL ][ (OPRT) ]
```

Screen No.1

3 Press the **[(OPRT)]** and **[SELECT]** soft keys to display "SELECT FILE NO." (on screen No. 2). Enter a file number, then press the **[F SET]** and **[EXEC]** soft keys. The file for the entered file number is selected, and the file name is indicated after "CURRENT SELECTED:".

```
FILE DIRECTORY                          O0001  N00000
 CURRENT SELECTED:O0040
  NO.    FILE NAME            (METER)  VOL
  0000   SCHEDULE
  0001   PARAMETER             58.5
  0002   ALL PROGRAM           11.0
  0003   O0001                  1.9
  0004   O0002                  1.9
  0005   O0010                  1.9
  0006   O0020                  1.9
  0007   O0040                  1.9
  0008   O0050                  1.9
  SELECT FILE NO.=7
 >_
 MEM  ****  ***  ***           19 : 17 : 10
[ F SET ][      ][      ][      ][ EXEC ]
```

Screen No.2

4 Press the **REMOTE** switch on the machine operator's panel to enter the **RMT** mode, then press the cycle start switch. The selected file is executed. For details on the **REMOTE** switch, refer to the manual supplied by the machine tool builder. The selected file number is indicated at the upper right corner of the screen as an F number (instead of an O number).

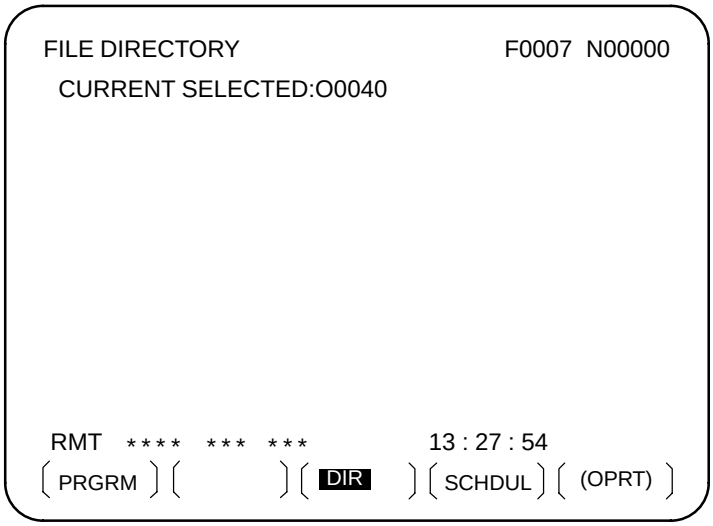

Screen No.3

- **Procedure for executing the scheduling function**

1 Display the list of files registered in the Floppy Cassette. The display procedure is the same as in steps 1 and 2 for executing one file.

2 On screen No. 2, press the **[(OPRT)]** and **[SELECT]** soft keys to display "SELECT FILE NO."

3 Enter file number 0, and press the **[F SET]**, and **[EXEC]** soft keys. "SCHEDULE" is indicated after "CURRENT SELECTED:".

4 Press the leftmost soft key (return menu key) and the **[SCHDUL]** soft key. Screen No. 4 appears.

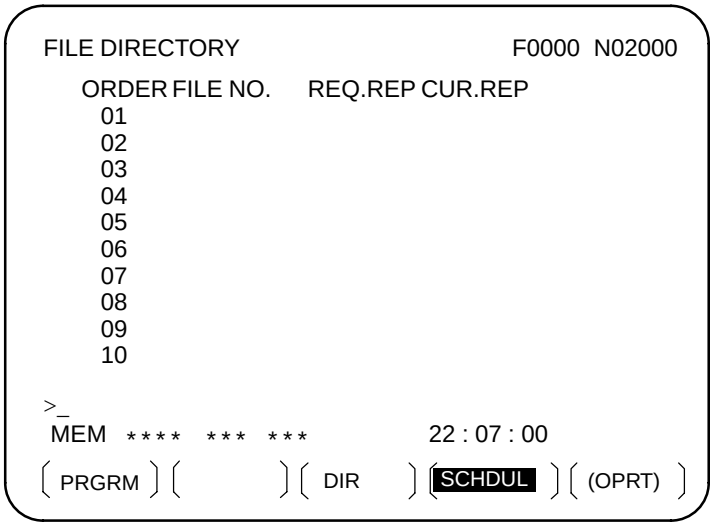

Screen No.4

Move the cursor and enter the file numbers and number of repetitions in the order in which to execute the files. At this time, the current number of repetitions “CUR.REP” is 0.

5 Press the **REMOTE** switch on the machine operator’s panel to enter the **RMT** mode, then press the start switch. The files are executed in the specified order. When a file is being executed, the cursor is positioned at the number of that file.
The current number of repetitions CUR.REP is increased when M02 or M30 is executed in the program being run.

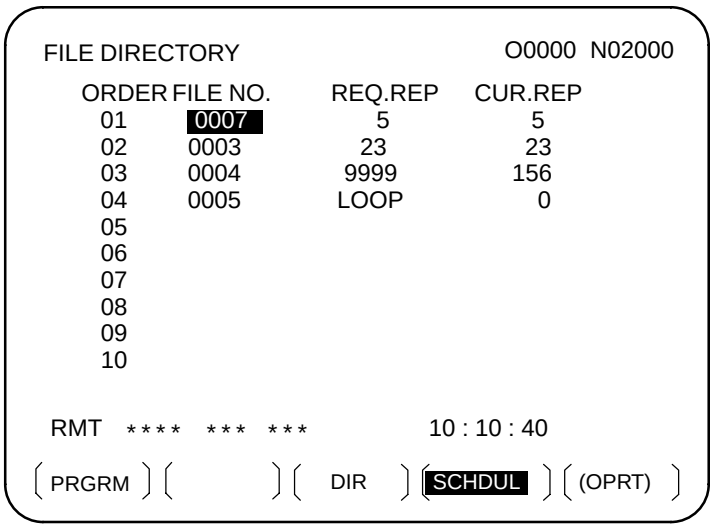

Screen No.5

Explanations

- **Specifying no file number**

If no file number is specified on screen No. 4 (the file number field is left blank), program execution is stopped at that point. To leave the file number field blank, press numeric key [0] then [INPUT].

- **Endless repetition**

If a negative value is set as the number of repetitions, <**LOOP**> is displayed, and the file is repeated indefinitely.

- **Clear**

When the **[(OPRT)]**, **[CLEAR]**, and **[EXEC]** soft keys are pressed on screen No. 4, all data is cleared. However, these keys do not function while a file is being executed.

- **Return to the program screen**

When the soft key **[PRGRM]** is pressed on screen No. 1, 2, 3, 4, or 5, the program screen is displayed.

Restrictions

- **Number of repetitions**

Up to 9999 can be specified as the number of repetitions. If 0 is set for a file, the file becomes invalid and is not executed.

- **Number of files registered**

By pressing the page key on screen No. 4, up to 20 files can be registered.

- **M code**

When M codes other than M02 and M30 are executed in a program, the current number of repetitions is not increased.

- **Displaying the floppy disk directory during file execution**

During the execution of file, the floppy directory display of background editing cannot be referenced.

- **Restarting automatic operation**

To resume automatic operation after it is suspended for scheduled operation, press the reset button.

Alarm

Alarm No.	Description
086	An attempt was made to execute a file that was not registered in the floppy disk.
210	M198 and M099 were executed during scheduled operation, or M198 was executed during DNC operation.

4.6 SUBPROGRAM CALL FUNCTION (M198)

The subprogram call function is provided to call and execute subprogram files stored in an external input/output device(Handy File, FLOPPY CASSETTE, FA Card)during memory operation.
When the following block in a program in CNC memory is executed, a subprogram file in the external input/output device is called:

To use this function, the Floppy Cassette directory display option must be installed.

Format

1. FS15 tape format

M198 P○○○○ L△△△△ ;

- L△△△△ : Number of repetitions
- P○○○○ : File number for a file in the I/O device
- M198 : I/O devices call instruction

2. Other than FS15 tape format

M198 P○○○○ △△△△ ;

- △△△△ : File number for a file in the I/O device
- P○○○○ : Number of repetitions
- M198 : I/O devices call instruction

Explanation

The subprogram call function is enabled when parameter No.0102 for the input/output device is set to 3. When the custom macro option is provided, either format 1 or 2 can be used. A different M code can be used for a subprogram call depending on the setting of parameter No.6030. In this case, M198 is executed as a normal M code. The file number is specified at address P. If the SBP bit (bit 2) of parameter No.3404 is set to 1, a program number can be specified. When a file number is specified at address P, Fxxxx is indicated instead of Oxxxx.

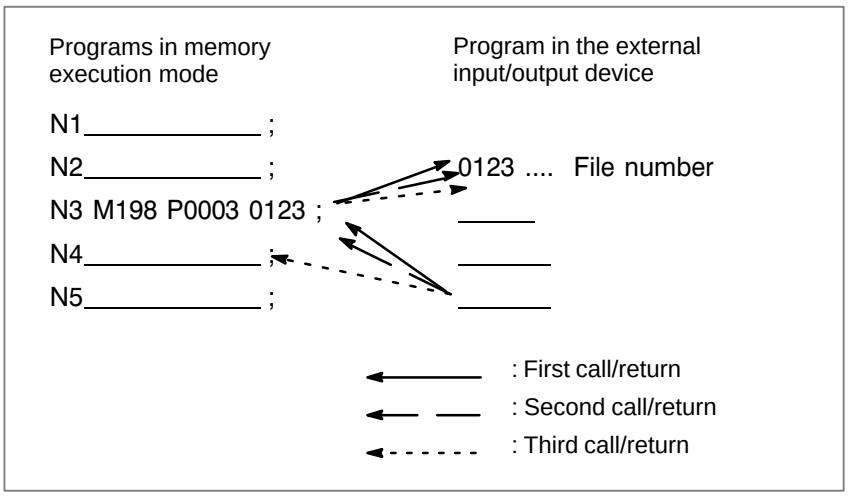

Fig.4.6 Program flow when m198 is specified

Restrictions

NOTE

1 When M198 in the program of the file saved in a floppy cassette is executed, a P/S alarm (No.210) is given. When a program in the memory of CNC is called and M198 is executed during execution of a program of the file saved in a floppy cassette, M198 is changed to an ordinary M–code.

2 When MDI is intervened and M198 is executed after M198 is commanded in the memory mode, M198 is changed to an ordinary M–code. When the reset operation is done in the MDI mode after M198 is commanded in the MEMORY mode, it does not influence on the memory operation and the operation is continued by restarting it in the MEMORY mode.

4.7 MANUAL HANDLE INTERRUPTION

The movement by manual handle operation can be done by overlapping it with the movement by automatic operation in the automatic operation mode.

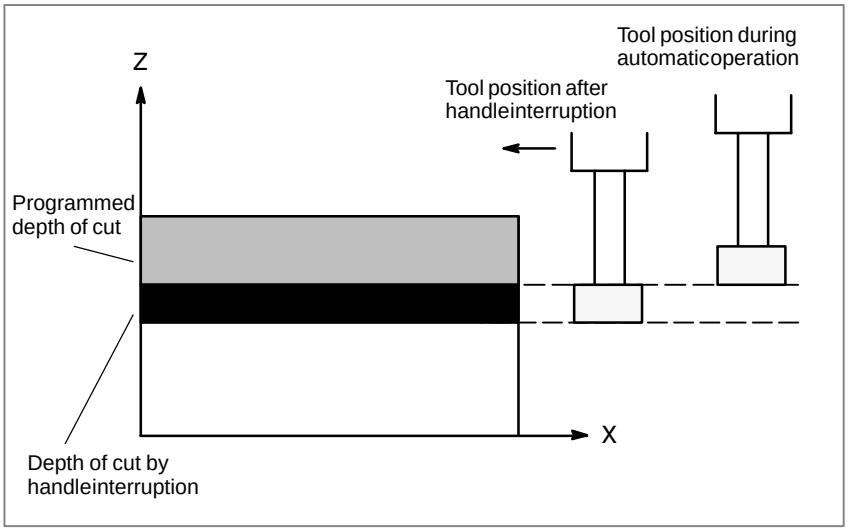

Fig 4.7 Manual handle interruption

- Handle interruption axis selection signals
  For the handle interruption axis selection signals, refer to the manual supplied by the machine tool builder.

  During automatic operation, handle interruption is enabled for an axis if the handle interruption axis selection signal for that axis is on. Handle interruption is performed by turning the handle of the manual pulse generator.

WARNING

The travel distance by handle interruption is determined according to the amount by which the manual pulse generator is turned and the handle feed magnification (x1, x10, xM, xN).
Since this movement is not accelerated or decelerated, it is very dangerous to use a large magnification value for handle interruption.
The move amount per scale at x1 magnification is 0.001 mm (metric output) or 0.0001 inch (inch output).

NOTE

Handle interruption is disabled when the machine is locked during automatic operation.

Explanations

- **Relation with other functions**

The following table indicates the relation between other functions and the movement by handle interrupt.

Display	Relation
Machine lock	Machine lock is effective. The tool does not move even when this signal turns on.
Interlock	Interlock is effective. The tool does not move even when this signal turns on.
Mirror image	Mirror image is not effective. Interrupt functions on the plus direction by plus direction command, even if this signal turns on.

- **Position display**

The following table shows the relation between various position display data and the movement by handle interrupt.

Display	Relation
Absolute coordinate value	Handle interruption does not change absolute coordinates.
Relative coordinate value	Handle interruption does not change relative coordinates.
Machine coordinate value	Machine coordinates are changed by the travel distance specified by handle interruption.

- **Travel distance display**

Press the function key POS, then press the chapter selection soft key **[HNDL]**.
The move amount by the handle interrupt is displayed. The following 4 kinds of data are displayed concurrently.

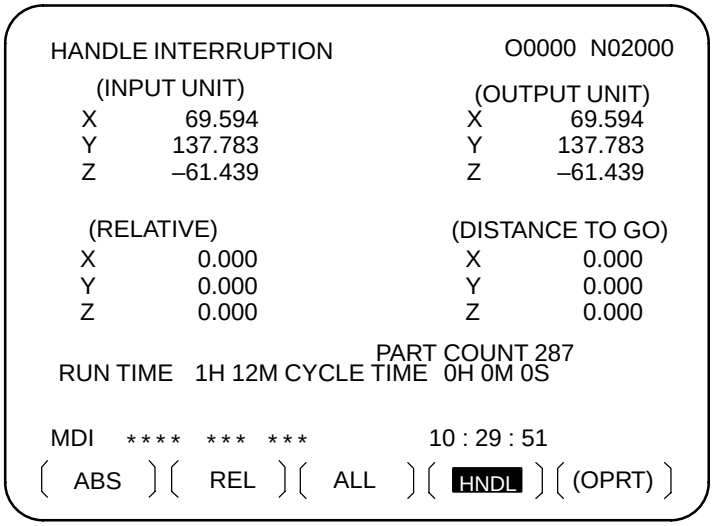

(a) INPUT UNIT : Handle interrupt move amount in input unit system
Indicates the travel distance specified by handle interruption according to the least input increment.

(b) OUTPUT UNI : Handle interrupt move amount in output unit system
Indicates the travel distance specified by handle interruption according to the least command increment.

(c) RELATIVE : Position in relative coordinate system
These values have no effect on the travel distance specified by handle interruption.

(d) DISTANCE TO GO : The remaining travel distance in the current block has no effect on the travel distance specified by handle interruption.

The handle interrupt move amount is cleared when the manual reference position return ends every axis.

4.8 MIRROR IMAGE

During automatic operation, the mirror image function can be used for movement along an axis. To use this function, set the mirror image switch to ON on the machine operator's panel, or set the mirror image setting to ON from the MDI panel.

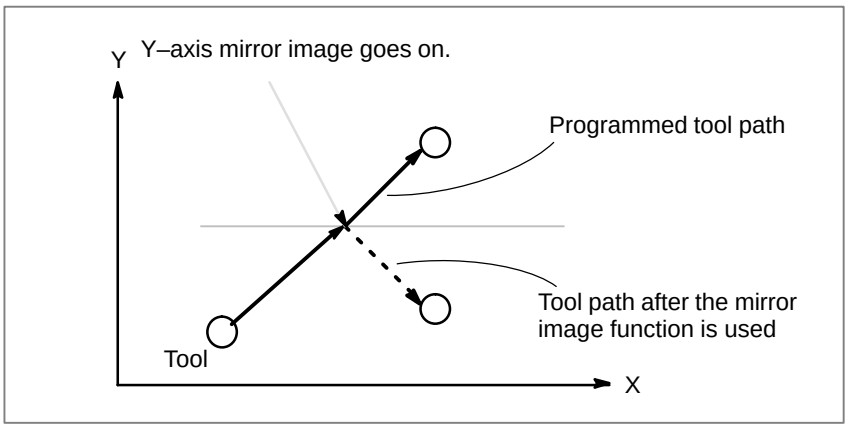

Fig 4.8 Mirror image

Procedure

The following procedure is given as an example. For actual operation, refer to the manual supplied by the machine tool builder.

1 Press the single block switch to stop automatic operation. When the mirror image function is used from the begining of operation, this step is omitted.

2 Press the mirror image switch for the target axis on the machine operator's panel.
Alternatively, turn on the mirror image setting by following the steps below:

2–1 Set the **MDI** mode.

2–2 Press the OFFSET SETTING function key.

2–3 Press the **[SETING]** soft key for chapter selection to display the setting screen.

```
SETTING (MIRROR IMAGE)                    O0020 N00001

     MIRROR IMAGE   X = 1 (0 : OFF  1 : ON)
     MIRROR IMAGE   Y = 0  (0 : OFF  1 : ON)
     MIRROR IMAGE   Z = 0  (0 : OFF  1 : ON)




>_
MEM  ****  ***  ***              14 : 47 : 57
[OFFSET ][ SETING ][ WORK ][      ][ (OPRT) ]
```

2–4 Move the cursor to the mirror image setting position, then set the target axis to 1.

3 Enter an automatic operation mode (memory mode or MDI mode), then press the cycle start button to start automatic operation.

Explanations

- The mirror image function can also be turned on and off by setting bit 0 of parameter 0012 (MIRx) to 1 or 0.
- For the mirror image switches, refer to the manual supplied by the machine tool builder.

Limitations

The direction of movement during manual operation, the direction of movement from an intemidiate point to the reference position during automatic reference position return (G28), the direction of approach during unidirectional positioning (G60), and the shift direction in a boring cycle (G76, G87) cannot be reserved.

4.9 MANUAL INTERVENTION AND RETURN

In cases such as when tool movement along an axis is stopped by feed hold during automatic operation so that manual intervention can be used to replace the tool: When automatic operation is restarted, this function returns the tool to the position where manual intervention was started. To use the conventional program restart function and tool withdrawal and return function, the switches on the operator's panel must be used in conjunction with the MDI keys. This function does not require such operations.

Before this function can be used, MIN (bit 0 of parameter No. 7001) must be set to 1.

Explanations

- **Manual absolute on/off**

  In manual absolute off mode, the tool does not return to the stop position, but instead operates according to the manual absolute on/off function.

- **Override**

  For the return operation, the dry run feedrate is used, and the jog feedrate override function is enabled.

- **Return operation**

  Return operation is performed according to positioning based on nonlinear interpolation.

- **Single block**

  If the single block stop switch is on during return operation, the tool stops at the stop position and restarts movement when the cycle start switch is pressed.

- **Cancellation**

  If a reset occurs or an alarm is issued during manual intervention or the return operation, this function is cancelled.

- **MDI mode**

  This function can be used in the MDI mode as well.

Limitations

- **Enabling and disabling manual intervention and return**

  This function is enabled only when the automatic operation hold LED is on. When there is no travel distance remaining, this function has no effect even if a feed hold stop is performed with the automatic operation hold signal *SP (bit 5 of G008).

- **Offset**

  When the tool is replaced using manual intervention for a reason such as damage, the tool movement cannot be restarted by a changed offset in the middle of the interrupted block.

- **Machine lock, mirror image, and scaling**

  When performing manual intervention, never use the machine lock, mirror image, or scaling functions.

Example

1. The N1 block cuts a workpiece

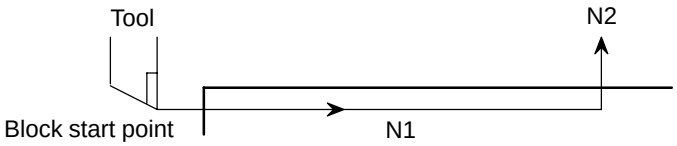

2. The tool is stopped by pressing the feed hold switch in the middle of the N1 block (point A).

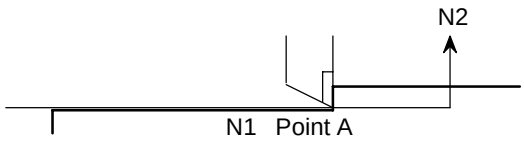

3. After retracting the tool manually to point B, tool movement is restarted.

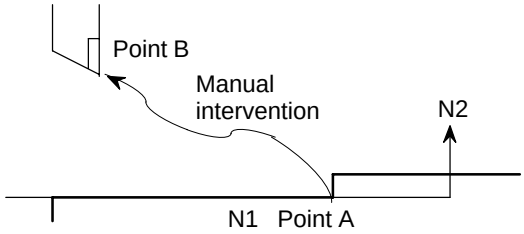

4. After automatic return to point A at the dry run feedrate, the remaining move command of the N1 block is executed.

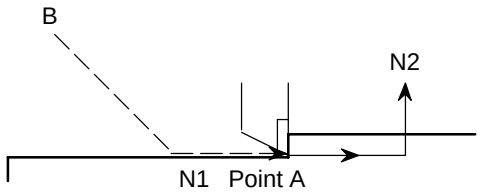

WARNING

When performing manual intervention, pay particular attention of machining and the shape of the workpiece so that the machine and tool are not damaged.

4.10 DNC OPERATION WITH MEMORY CARD

4.10.1 Specification

"DNC operation with Memory Card" is a function that it is possible to perform machining with executing the program in the memory card, which is assembled to the memory card interface, where is the left side of the screen.

There are two methods to use this function as follows.

(a) By starting automatic operation (cycle start) during the DNC operation mode (RMT), it is possible to perform machining (DNC operation) while a program is being read from a memory card, as by using the external input/output unit such as a floppy cassette and so on. (Fig. 4.10.1 (a))

(b) It is possible to read sub–programs written in the memory card and execute them by the command Subprogram call (M198). (Fig. 4.10.1 (b))

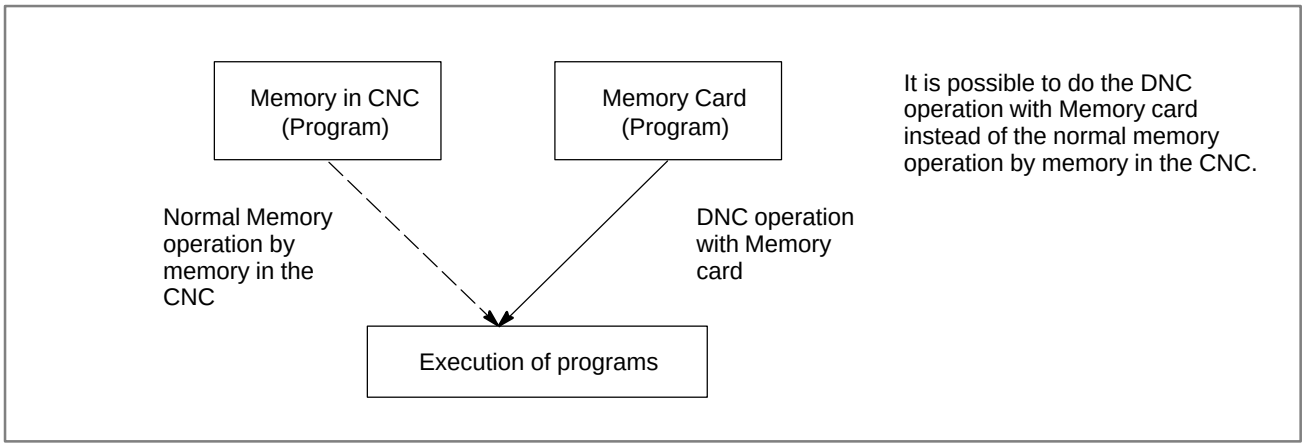

Fig. 4.10.1 (a)

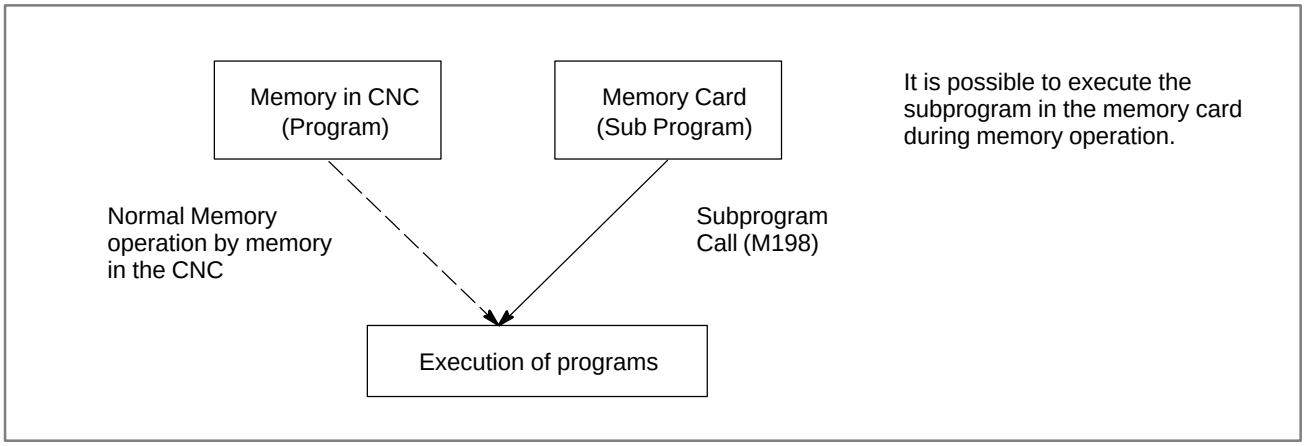

Fig. 4.10.1 (b)

NOTE
1 To use this function, it is necessary to set the I/O channel (the parameter of No.20) to 4 by setting screen.
No.20 [I/O CHANEL: Setting to select an input/output unit]
Setting value is 4.: It means using the memory card interface.
2 When CNC control unit is a stand–alone type, the memory card interface on the left side of the screen of the display unit is available. But the interface on the control unit is not available.

4.10.2 Operations

4.10.2.1 DNC operation

Handling explanation

Please set the I/O channel (the parameter of No.20) to 4 in the setting screen in advance.

(1) Change to RMT mode.
(2) Push [PROGRAM] function key.
(3) Push [>] soft key (continuance menu).
(4) When [DNC–CD] soft key is pushed, the following screen is displayed.
(5) The screen can be scrolled by page key. An arbitrary file number is input, and [F SRH] soft key is pushed. Then the arbitrary file name is displayed at the top of DNC operation (memory card) screen.
(6) When the file number that is executed is input and the [DNC–ST] soft key is pushed, the file name that is selected is set to DNC FILE.
(7) When the cycle start is done, the program that is selected is executed.

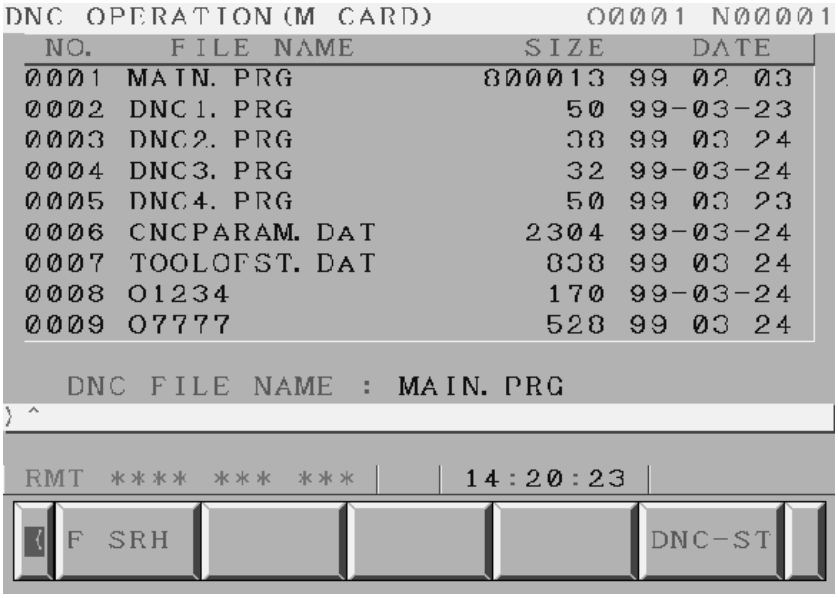

4.10.2.2 Subprogram call (M198)

When the following block in a program in CNC memory is executed, a subprogram file in memory card is called.

Format

1. Normal format

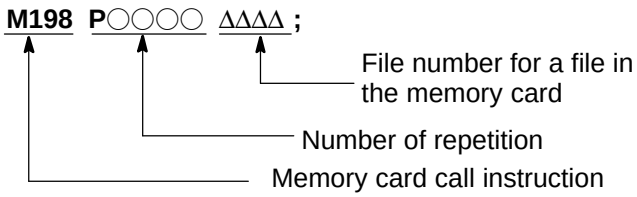

2. FS15 tape format

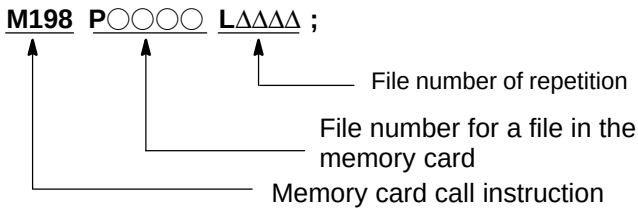

Explanation

When the custom macro option is provided, both format 1 and 2 can be used. A different M code can be used for a subprogram call depending on the setting of parameter No. 6030. In this case, M198 is executed as a normal M code. The file number is specified at address P. If the SBP (bit 2) of parameter No. 3404 is set to 1, a program number can be specified. When a file number is specified at address P, Fxxxx is indicated instead of Oxxxx.

NOTE
Please set the I/O channel (the parameter of No. 20) to 4 in the setting screen in advance.

4.10.3 LIMITATION and NOTES

(1) The memory card can not be accessed, such as display of memory card list and so on, during the DNC operation with memory card.

(2) It is possible to execute the DNC operation with memory card on multi path system. However, it is not possible to call programs from the plural paths at the same time.

(3) The selection of DNC operation file that is set at DNC OPERATION screen is cleared by the power supply turn off and on. After the power supply is turned on again, it is necessary to select the DNC operation file again.

(4) Please do not pull out and insert memory card during the DNC operation with memory card.

(5) It is not possible to call a program in the memory card from the DNC operation program.

(6) In case of using this function, the PMCIA card attachment written at section 6 must be used to prevent a poor connection of the memory card from occurring by vibration of the machine.

(7) In case of the stand–alone type *i* series that the display unit is a Display link unit, this function can not be used.

(8) The memory card interface on the stand–alone type controller is not available. Please use the memory card interface on the display unit.

4.10.4 PARAMETER

	#7	#6	#5	#4	#3	#2	#1	#0
0138	DNM							

[Data type] Bit

#7 (DNM) The DNC operation with memory card function is
0 : disable.
1 : enable.

4.10.5 Connecting PCMCIA Card Attachment

4.10.5.1 Specification number

Specification	Remarks
A02B–0236–K160	For 7.2″ LCD or 8.4″ LCD
A02B–0236–K161	For 9.5″ LCD or 10.4″ LCD

4.10.5.2 Assembling

1) How to assemble to the unit
   Assemble an attachment guide and a control unit to the cabinet by screwing together as follow figure.

   The attachment guide is 1.6mm thick. Pay attention for the length of the screws when you assemble them.

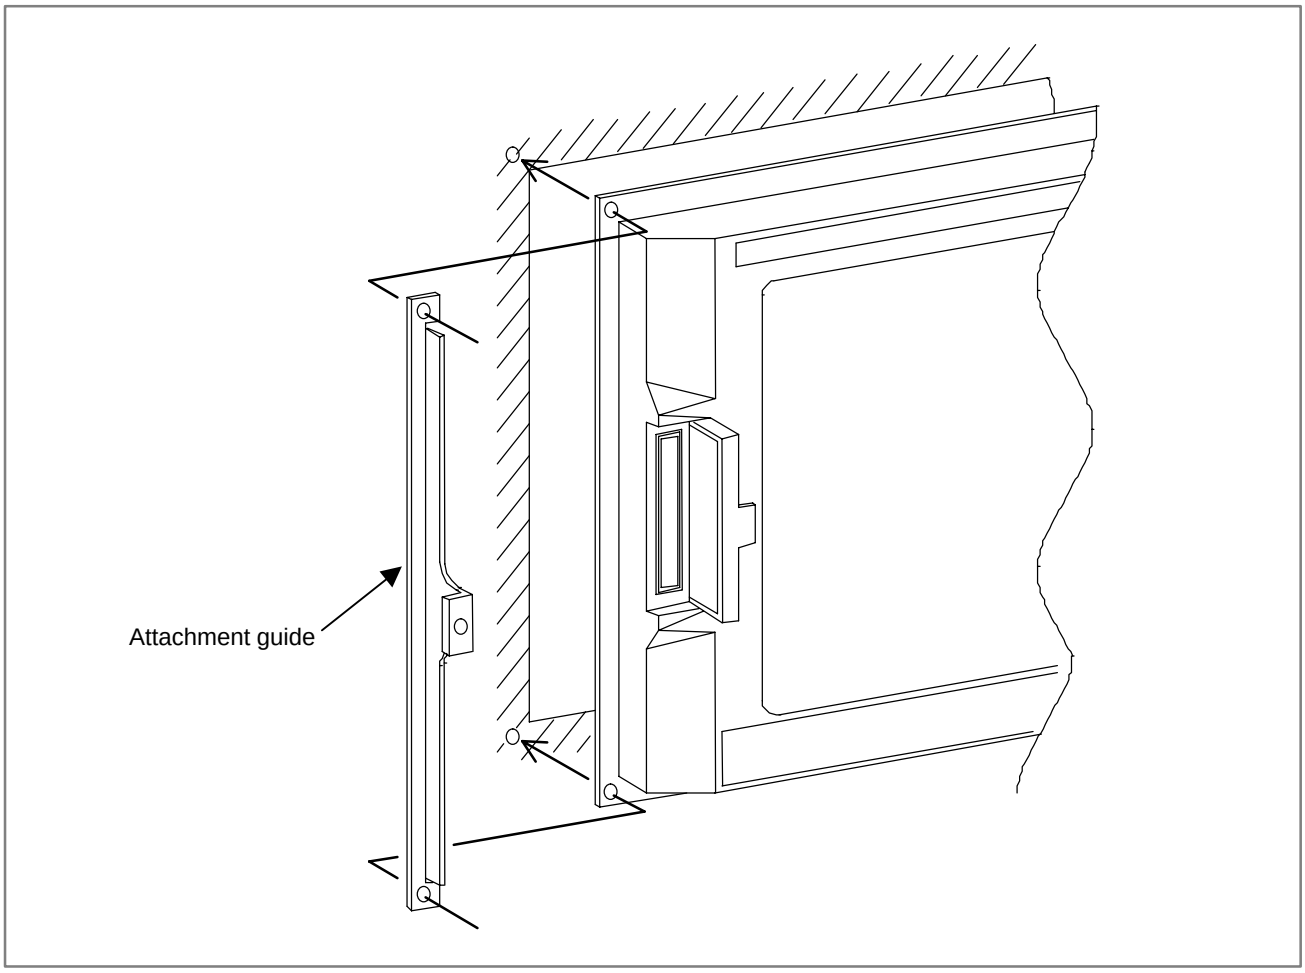

2) How to mount the card

(a) Insert the card to slit of the attachment. Please pay attention to the direction of the card. (Please mach the direction of ditch on the card.)

(b) Push up the card to the upper end of the attachment.

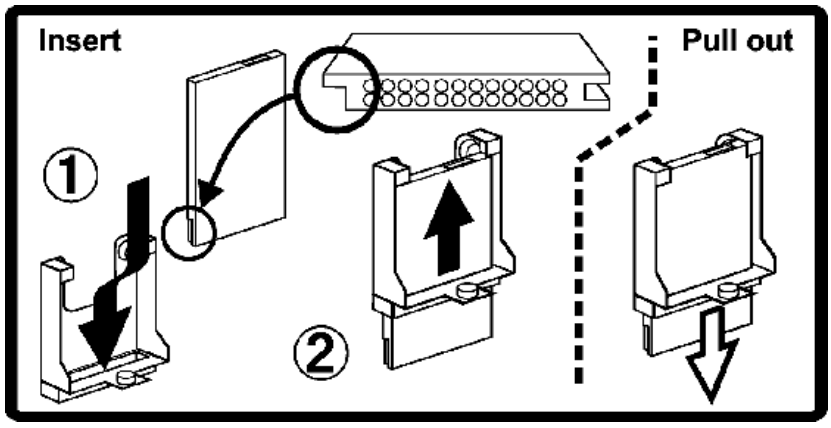

3) Assembling of the attachment

Insert the memory card with the attachment into the memory card interface as following figure. And, fix the attachment guide by screwing the screw of the attachment guide by manual.

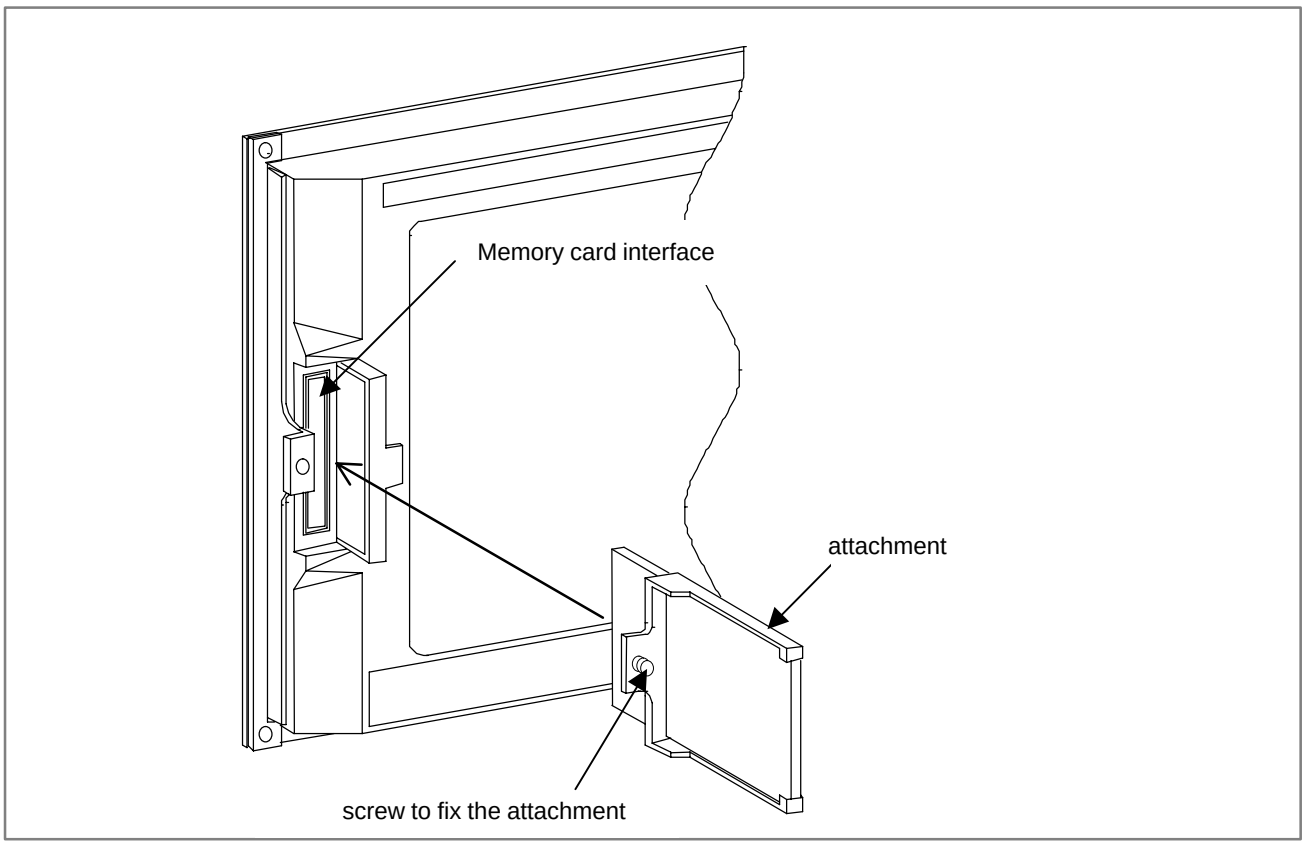

4) Appearance after connection

NOTE
1 In both case of stand–alone type *i* series and LCD mounted type *i* series, the memory card interface where is the left side of the screen of the display unit. (The memory card interface on the stand–alone type controller is not available.)
2 It is impossible to assemble the display unit and the attachment guide from inside of the cabinet.
3 The memory card must be used in the condition, as the coolant cannot be poured directly on it.

4.10.6 Recommended Memory Card

Maker	Type	Capacity
Hitachi LTD	HB289016A4	16MB
	HB289032A4	32MB
	HB289160A4	160MB
Matushita electric	BN–012AB	12MB
	BN–020AB	20MB
	BN–040AB	40MB
SanDisk	SDP3B–4	4MB
	SDP3B–20	20MB
	SDP3B–40	40MB

5 TEST OPERATION

The following functions are used to check before actual machining whether the machine operates as specified by the created program.

5.1 Machine Lock and Auxiliary Function Lock
5.2 Feedrate Override
5.3 Rapid Traverse Override
5.4 Dry Run
5.5 Single Block

5.1 MACHINE LOCK AND AUXILIARY FUNCTION LOCK

To display the change in the position without moving the tool, use machine lock.
There are two types of machine lock: all–axis machine lock, which stops the movement along all axes, and specified–axis machine lock, which stops the movement along specified axes only. In addition, auxiliary function lock, which disables M, S, and T commands, is available for checking a program together with machine lock.

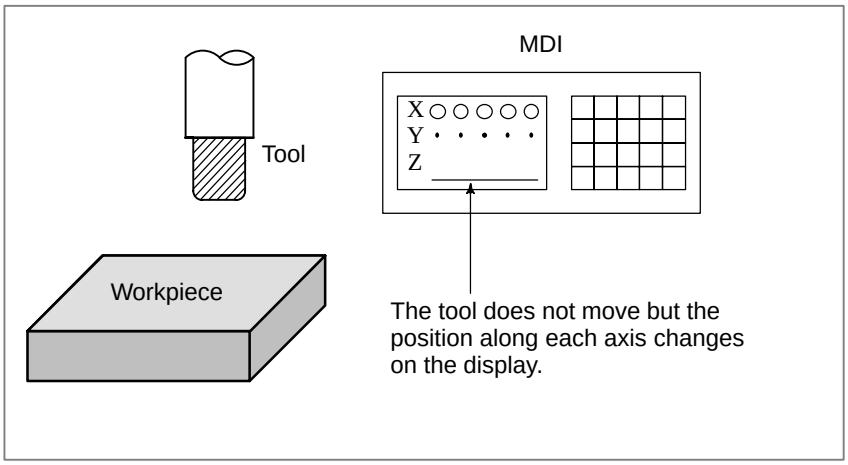

Fig. 5.1 Machine lock

Procedure for Machine Lock and Auxiliary Function Lock

- **Machine Lock**

Press the machine lock switch on the operator's panel. The tool does not move but the position along each axis changes on the display as if the tool were moving.
Some machines have a machine lock switch for each axis. On such machines, press the machine lock switches for the axes along which the tool is to be stopped. Refer to the appropriate manual provided by the machine tool builder for machine lock.

> **WARNING**
> The positional relationship between the workpiece coordinates and machine coordinates may differ before and after automatic operation using machine lock. In such a case, specify the workpiece coordinate system by using a coordinate setting command or by performing manual reference position return.

- **Auxiliary Function Lock**

Press the auxiliary function lock switch on the operator's panel. M, S, T and B codes are disabled and not executed. Refer to the appropriate manual provided by the machine tool builder for auxiliary function lock.

Restrictions

- **M, S, T, B command by only machine lock**

  M, S, T and B commands are executed in the machine lock state.

- **Reference position return under Machine Lock**

  When a G27, G28, or G30 command is issued in the machine lock state, the command is accepted but the tool does not move to the reference position and the reference position return LED does not go on.

- **M codes not locked by auxiliary function lock**

  M00, M01, M02, M30, M98, and M99 commands are executed even in the auxiliary function lock state. M codes for calling a subprogram (parameters No. 6071 to 6079) and those for calling a custom macro (parameter No. 6080 to 6089) are also executed.

5.2 FEEDRATE OVERRIDE

A programmed feedrate can be reduced or increased by a percentage (%) selected by the override dial.This feature is used to check a program. For example, when a feedrate of 100 mm/min is specified in the program, setting the override dial to 50% moves the tool at 50 mm/min.

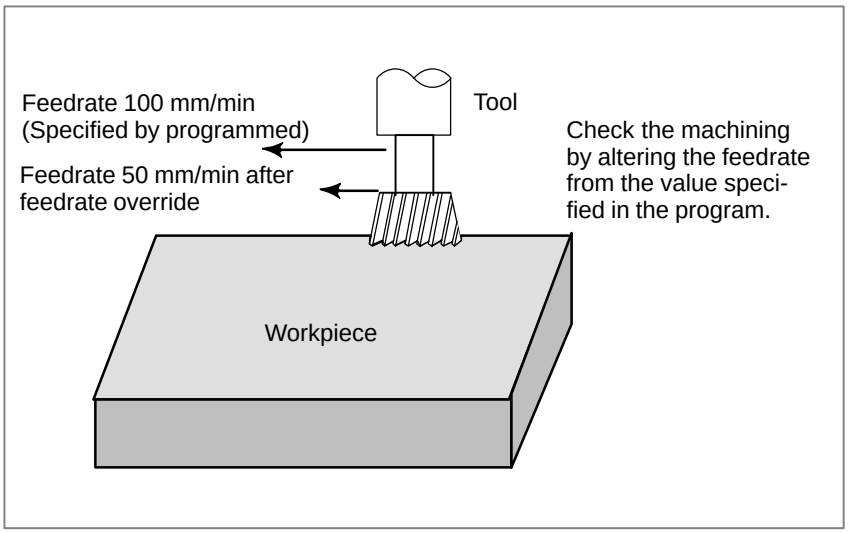

Fig. 5.2 Feedrate override

Procedure for Feedrate Override

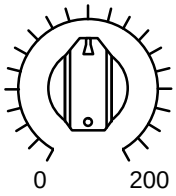

JOG FEED RATE OVERRIDE

Set the feedrate override dial to the desired percentage (%) on the machine operator's panel, before or during automatic operation.
On some machines, the same dial is used for the feedrate override dial and jog feedrate dial. Refer to the appropriate manual provided by the machine tool builder for feedrate override.

Restrictions

- **Override Range**

The override that can be specified ranges from 0 to 254%. For individual machines, the range depends on the specifications of the machine tool builder.

- **Override during thread**

During threading, the override is ignored and the feedrate remains as specified by program.

5.3 RAPID TRAVERSE OVERRIDE

An override of four steps (F0, 25%, 50%, and 100%) can be applied to the rapid traverse rate. F0 is set by a parameter (No. 1421).

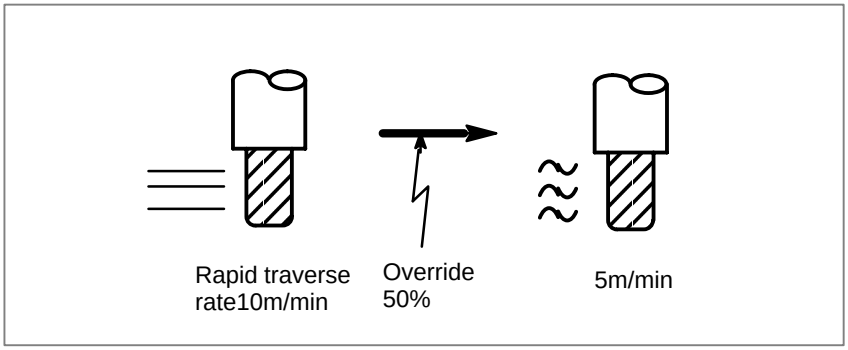

Fig. 5.3 Rapid traverse override

Rapid Traverse Override

Procedure

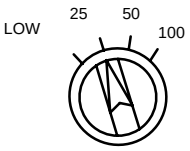

Rapid traverse override

Select one of the four feedrates with the rapid traverse override switch during rapid traverse. Refer to the appropriate manual provided by the machine tool builder for rapid traverse override.

Explanation

The following types of rapid traverse are available. Rapid traverse override can be applied for each of them.

1) Rapid traverse by G00
2) Rapid traverse during a canned cycle
3) Rapid traverse in G27, G28, G29, G30, G53
4) Manual rapid traverse
5) Rapid traverse of manual reference position return

5.4 DRY RUN

The tool is moved at the feedrate specified by a parameter regardless of the feedrate specified in the program. This function is used for checking the movement of the tool under the state taht the workpiece is removed from the table.

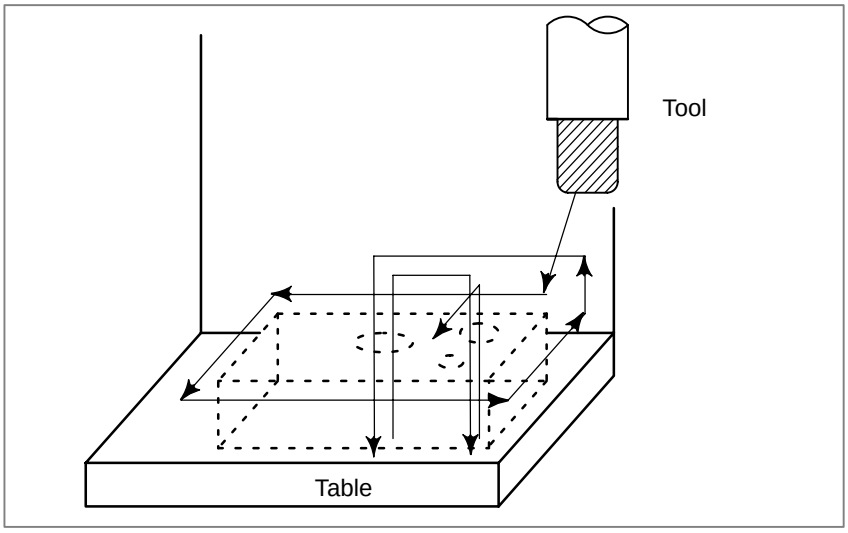

Fig. 5.4 Dry run

Procedure for Dry Run

Procedure

Press the dry run switch on the machine operator's panel during automatic operation.
The tool moves at the feedrate specified in a parameter. The rapid traverse switch can also be used for changing the feedrate.
Refer to the appropriate manual provided by the machine tool builder for dry run.

Explanation

- **Dry run feedrate**

The dry run feedrate changes as shown in the table below according to the rapid traverse switch and parameters.

Rapid traverse button	Program command	
	Rapid traverse	Feed
ON	Rapid traverse rate	Dry run feedrate × Max.JV ***2)**
OFF	Dry run speed × JV,or rapid traverse rate ***1)**	Dry run feedrate × JV ***2)**

Max. cutting feedrate . . . . . Setting by parameter No.1422

Rapid traverse rate . . . . . Setting by parameter No.1420

Dry run feedrate . . . . . Setting by parameter No.1410

JV: Jog feedrate override

*1) Dry run feedrate x JV when parameter RDR (bit 6 of No. 1401) is
1. Rapid traverse rate when parameter RDR is 0.

*2) Clamped to the maximum cutting feedrate
JVmax: Maximum value of jog feedrate override

5.5 SINGLE BLOCK

Pressing the single block switch starts the single block mode. When the cycle start button is pressed in the single block mode, the tool stops after a single block in the program is executed. Check the program in the single block mode by executing the program block by block.

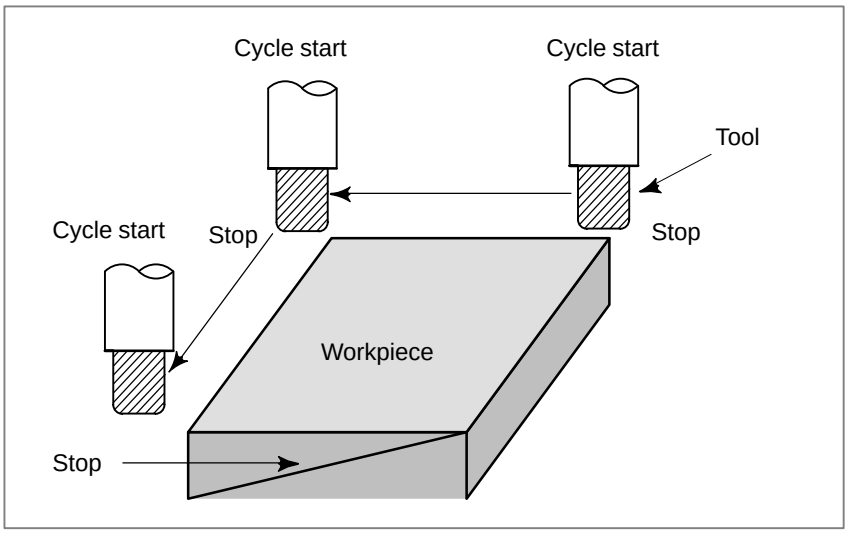

Fig. 5.5 (a) Single block

Procedure for Single block

Procedure

1 Press the single block switch on the machine operator's panel. The execution of the program is stopped after the current block is executed.

2 Press the cycle start button to execute the next block. The tool stops after the block is executed.

Refer to the appropriate manual provided by the machine tool builder for single block execution.

Explanation

- **Reference position return and single block**

If G28 to G30 are issued, the single block function is effective at the intermediate point.

- **Single block during a canned cycle**

In a canned cycle, the single block stop points are the end of 1, 2, and 6 shown below. When the single block stop is made after the point 1 or 2, the feed hold LED lights.

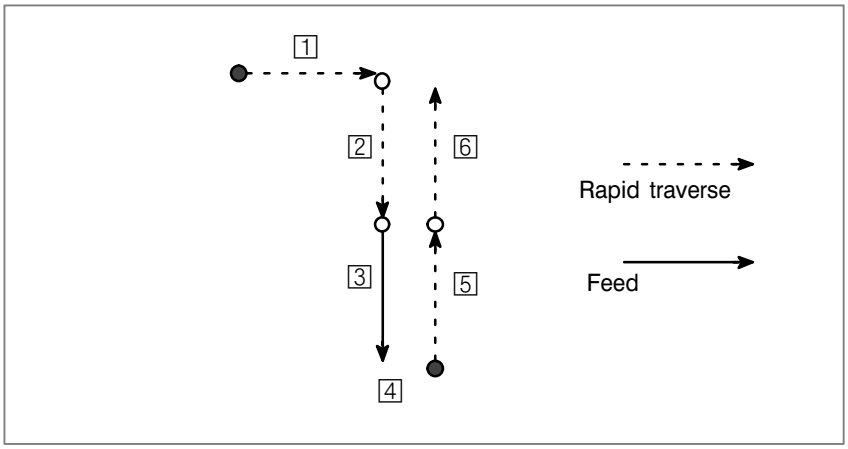

Fig. 5.5 (b) Single block during canned cycle

- **Subprogram call and single block**

Single block stop is not performed in a block containing M98P_;. M99; or G65.
However, single block stop is even performed in a block with M98P_ or M99 command, if the block contains an address other than O, N, P, L.

6 SAFETY FUNCTIONS

To immediately stop the machine for safety, press the Emergency stop button. To prevent the tool from exceeding the stroke ends, Overtravel check and Stroke check are available. This chapter describes emergency stop., overtravel check, and stroke check.

6.1 EMERGENCY STOP

If you press Emergency Stop button on the machine operator's panel, the machine movement stops in a moment.

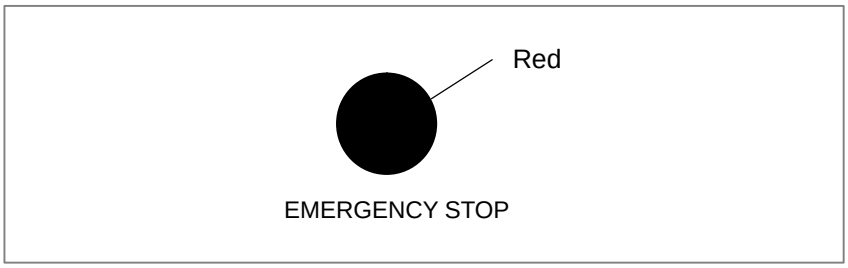

Fig. 6.1 Emergency stop

This button is locked when it is pressed. Although it varies with the machine tool builder, the button can usually be unlocked by twisting it.

Explanation

EMERGENCY STOP interrupts the current to the motor.
Causes of trouble must be removed before the button is released.

6.2 OVERTRAVEL

When the tool tries to move beyond the stroke end set by the machine tool limit switch, the tool decelerates and stops because of working the limit switch and an OVER TRAVEL is displayed.

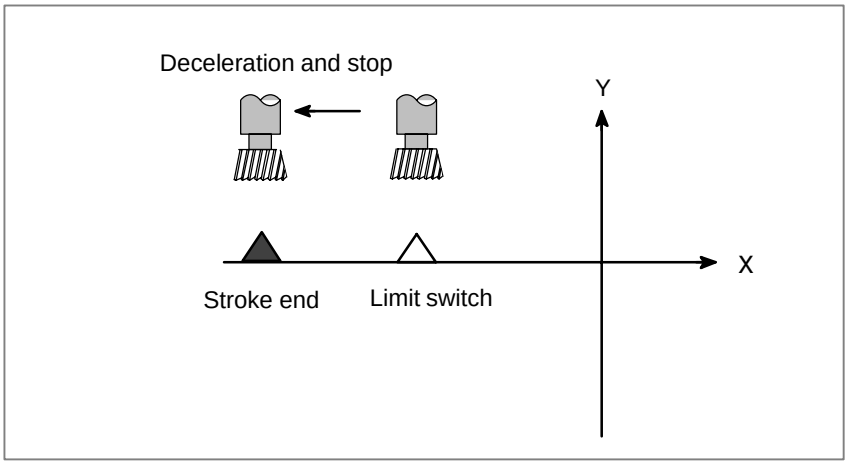

Fig. 6.2 Overtravel

Explanation

- **Overtravel during automatic operation**

When the tool touches a limit switch along an axis during automatic operation, the tool is decelerated and stopped along all axes and an overtravel alarm is displayed.

- **Overtravel during manual operation**

In manual operation, the tool is decelerated and stopped only along the axis for which the tool has touched a limit switch. The tool still moves along the other axes.

- **Releasing overtravel**

Press the reset button to reset the alarm after moving the tool to the safety direction by manual operation. For details on operation, refer to the operator's manual of the machine tool builder.

Alarm

Alarm No.	Message	Description
506	Overtravel: +n	The tool has exceeded the hardware–specified overtravel limit along the positive nth axis (n: 1 to 4).
507	Overtravel: –n	The tool has exceeded the hardware–specified overtravel limit along the negative nth axis (n: 1 to 4).

6.3 STORED STROKE CHECK

Three areas which the tool cannot enter can be specified with stored stroke check 1, stored stroke check 2, and stored stroke check 3.

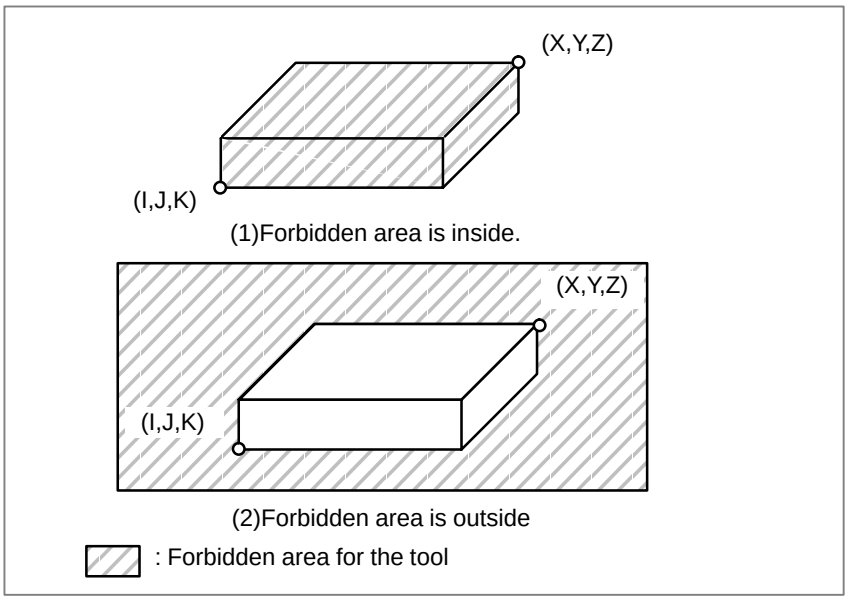

Fig. 6.3 (a) Stroke check

When the tool exceeds a stored stroke limit, an alarm is displayed and the tool is decelerated and stopped.
When the tool enters a forbidden area and an alarm is generated, the tool can be moved in the reverse direction from which the tool came.

Explanation

- **Stored stroke check 1**

Parameters (Nos. 1320, 1321 or Nos. 1326, 1327) set boundary. Outside the area of the set limits is a forbidden area. The machine tool builder usually sets this area as the maximum stroke.

- **Stored stroke check 2 (G22, G23)**

Parameters (Nos. 1322, 1323) or commands set these boundaries. Inside or outside the area of the limit can be set as the forbidden area. Parameter OUT (No. 1300#0) selects either inside or outside as the forbidden area.

In case of program command a G22 command forbids the tool to enter the forbidden area, and a G23 command permits the tool to enter the forbidden area. Each of G22; and G23; should be commanded independently of another commands in a block.
The command below creates or changes the forbidden area:

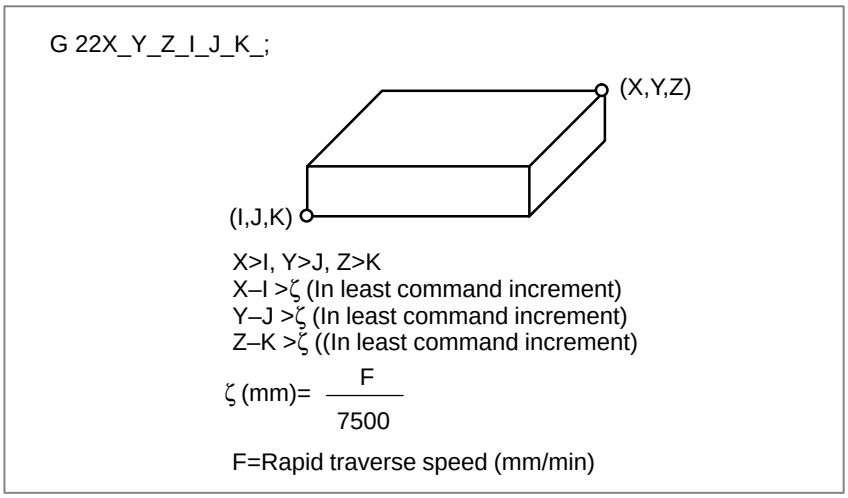

Fig. 6.3(b) Creating or changing the forbidden area using a program

When setting the area by parameters, points A and B in the figure below must be set.

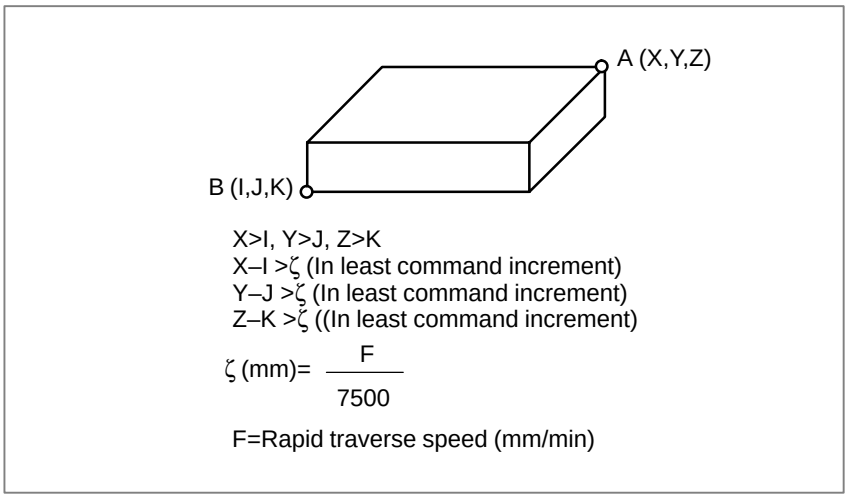

Fig. 6.3 (c) Creating or changing the forbidden area using a parameters

In stored stroke check 2, even if you mistake the order of the coordinate value of the two points, a rectangular, with the two points being the apexes, will be set as the area.
When you set the forbidden area through parameters (Nos. 1322, 1323), the data should be specified by the distance from the machine coordinate system in the least command increment. (Output increment)
If it is set by a G22 command, specify the data by the distance from the machine coordinate system in the least input increment (Input increment.) The programmed data are then converted into the numerical values in the least command increment, and the values are set as the parameters.

- **Checkpoint for the forbidden area**

Confirm the checking position (the top of the tool or the tool chuck) before programming the forbidden area.
If point A (The top of the tool) is checked in Fig. 6.3 (d) , the distance “a” should be set as the data for the stored stroke limit function. If point B (The tool chuck) is checked, the distance “b” must be set. When checking the tool tip (like point A), and if the tool length varies for each tool, setting the forbidden area for the longest tool requires no re–setting and results in safe operation.

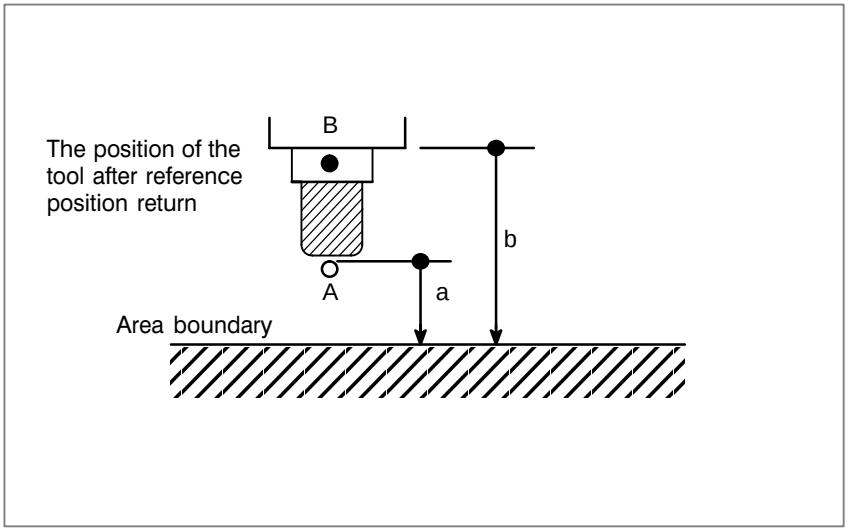

Fig. 6.3 (d) Setting the forbidden area

- **Forbidden area over lapping**

Area can be set in piles.

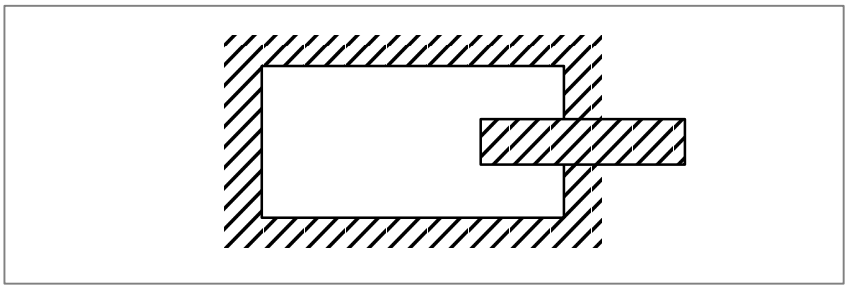

Fig. 6.3 (e) Setting the forbidden area over lapping

Unnecessary limits should be set beyond the machine stroke.

- **Overrun amount of stored stroke limit**

If the maximum rapid traverse rate is F (mm/min), the maximum overrun amount, L (mm), of the stored stroke limit is obtained from the following expression:

L (mm) = F/7500

The tool enters the specified inhibited area by up to L (mm). Bit 7 (BFA) of parameter No. 1300 can be used to stop the tool when it reaches a point L mm short of the specified area. In this case, the tool will not enter the inhibited area.

- **Effective time for a forbidden area**

Each limit becomes effective after the power is turned on and manual reference position return or automatic reference position return by G28 has been performed.
After the power is turned on, if the reference position is in the forbidden area of each limit, an alarm is generated immediately. (Only in G22 mode for stored stroke limit 2).

- **Releasing the alarms**

If the enters a forbidden area and an alarm is generated, the tool can be moved only in the backward direction. To cancel the alarm, move the tool backward until it is outside the forbidden area and reset the system. When the alarm is canceled, the tool can be moved both backward and forward.

- **Change from G23 to G22 in a forbidden area**

When G23 is switched to G22 in the forbidden area, the following results.

(1) When the forbidden area is inside, an alarm is informed in the next move.

(2) When the forbidden area is outside, an alarm is informed immediately.

- **Timing for displaying an alarm**

Parameter BFA (bit 7 of No. 1300) selects whether an alarm is displayed immediately before the tool enters the forbidden area or immediately after the tool has entered the forbidden area.

Alarms

Alarm Number	Message	Contents
500	OVER TRAVEL: +n	Exceeded the n–th axis (1–4) + side stored stroke limit I.
501	OVER TRAVEL: –n	Exceeded the n–th axis (1–4) − side stored stroke limit I.
502	OVER TRAVEL: +n	Exceeded the n–th axis (1–4) + side stored stroke limit II.
503	OVER TRAVEL: –n	Exceeded the n–th axis (1–4) − side stored stroke limit II.

7 ALARM AND SELF–DIAGNOSIS FUNCTIONS

When an alarm occurs, the corresponding alarm screen appears to indicate the cause of the alarm. The causes of alarms are classified by alarm numbers. Up to 25 previous alarms can be stored and displayed on the screen (alarm history display).
The system may sometimes seem to be at a halt, although no alarm is displayed. In this case, the system may be performing some processing. The state of the system can be checked using the self–diagnostic function.

7.1 ALARM DISPLAY

Explanations

- **Alarm screen**

When an alarm occurs, the alarm screen appears.

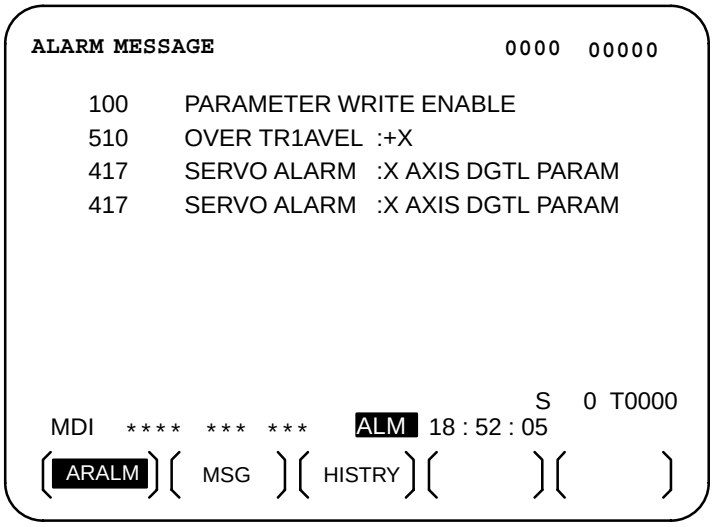

- **Another method for alarm displays**

In some cases, the alarm screen does not appear, but an ALM is displayed at the bottom of the screen.

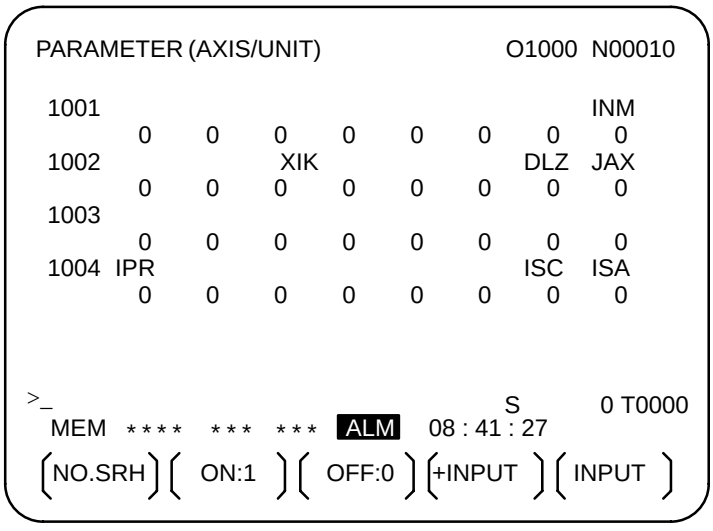

In this case, display the alarm screen as follows:

1. Press the function key MESSAGE.

2. Press the chapter selection soft key **[ALARM]**.

- **Reset of the alarm**

Alarm numbers and messages indicate the cause of an alarm. To recover from an alarm, eliminate the cause and press the reset key.

- **Alarm numbers**

The error codes are classified as follows:

No. 000 to 255 : P/S alarm (Program errors) (*)
No. 300 to 349 : Absolute pulse coder (APC) alarms
No. 350 to 399 : Serial pulse coder (SPC) alarms
No. 400 to 499 : Servo alarms (1/2)
No. 500 to 599 : Overtravel alarms
No. 600 to 699 : Servo alarms (2/2)
No. 700 to 739 : Overheat alarms
No. 740 to 748 : Rigid tapping alarms
No. 749 to 799 : Spindle alarms
No. 900 to 999 : System alarms
No. 5000 to : P/S alarm (Program errors)

* For an alarm (No. 000 to 255) that occurs in association with background operation, the indication “xxxBP/S alarm” is provided (where xxx is an alarm number). Only a BP/S alarm is provided for No. 140.
See the alarm list in the appendix G for details of the alarms.

7.2 ALARM HISTORY DISPLAY

Up to 25 of the most recent CNC alarms are stored and displayed on the screen.
Display the alarm history as follows:

Procedure for Alarm History Display

Procedure

1 Press the function key MESSAGE .

2 Press the chapter selection soft key **[HISTRY]**.
The alarm history appears.
The following information items are displayed.
(1) The date the alarm was issued
(2) Alarm No.
(3) Alarm message (some contains no message)
(4) Page No.

3 Change the page by the 1–page change key.

4 To delete the recorded information, press the softkey **[(OPRT)]** then the **[DELETE]** key.

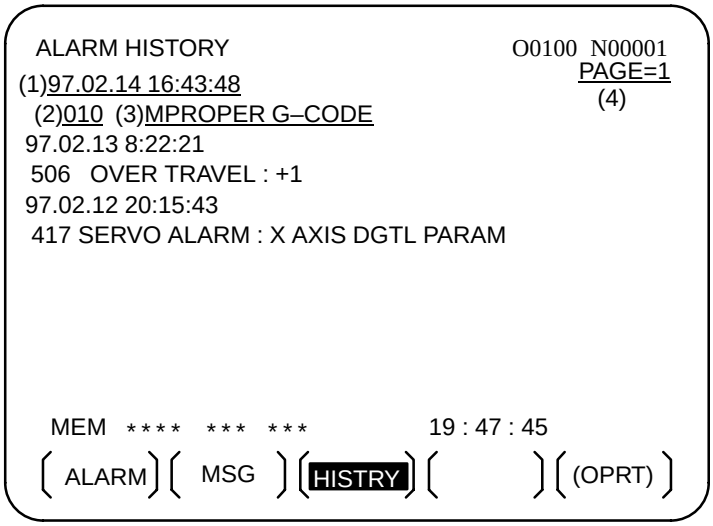

7.3 CHECKING BY SELF–DIAGNOSTIC SCREEN

The system may sometimes seem to be at a halt, although no alarm has occurred. In this case, the system may be performing some processing. The state of the system can be checked by displaying the self–diagnostic screen.

Procedure for Diagnois

Procedure

1 Press the function key SYSTEM .

2 Press the chapter select key **[DGNOS]**.

3 The diagnostic screen has more than 1 pages. Select the screen by the following operation.
(1) Change the page by the 1–page change key.
(2) Method by soft key
– Key input the number of the diagnostic data to be displayed.
– Press **[N SRCH]**.

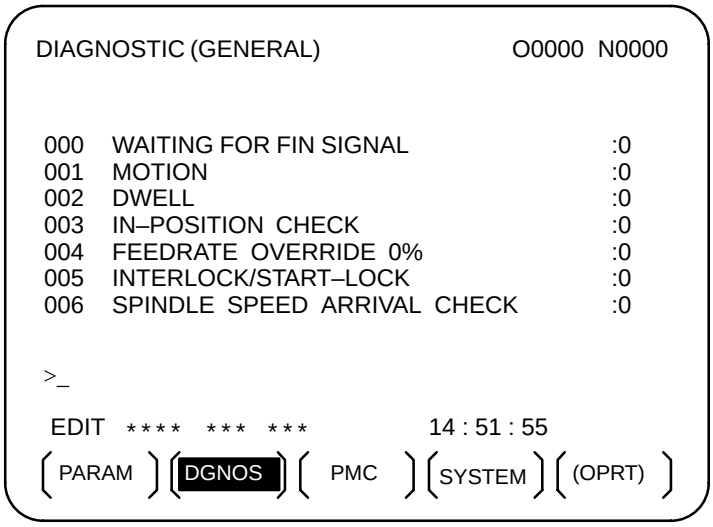

Explanations

Diagnostic numbers 000 to 015 indicate states when a command is being specified but appears as if it were not being executed. The table below lists the internal states when 1 is displayed at the right end of each line on the screen.

Table 7.3 (a) Alarm displays when a command is specified but appears as if it were not being executed

No.	Display	Internal status when 1 is displayed
000	WAITING FOR FIN SIGNAL	M, S. T function being executed
001	MOTION	Move command in automatic operation being executed
002	DWELL	Dwell being executed
003	IN–POSITION CHECK	In–position check being executed
004	FEEDRATE OVERRIDE 0%	Cutting feed override 0%
005	INTERLOCK/START–LOCK	Interlock ON
006	SPINDLE SPEED ARRIVAL CHECK	Waiting for spindle speed arrival signal to turn on
010	PUNCHING	Data being output via reader puncher interface
011	READING	Data being input via reader puncher interface
012	WAITING FOR (UN) CLAMP	Waiting for index table clamp/unclamp before B axis index table indexing start/after B axis index table indexing end to complete
013	JOG FEEDRATE OVERRIDE 0%	Jog override 0%
014	WAITING FOR RESET.ESP.RRW.OFF	Emergency stop, external reset, reset & rewind, or MDI panel reset key on
015	EXTERNAL PROGRAM NUMBER SEARCH	External program number searching

Table 7.3 (b) Alarm displays when an automatic operation is stopped or paused.

No.	Display	Internal status when 1 is displayed
020	CUT SPEED UP/DOWN	Set when emergency stop turns on or when servo alarm occurs
021	RESET BUTTON ON	Set when reset key turns on
022	RESET AND REWIND ON	Reset and rewind turned on
023	EMERGENCY STOP ON	Set when emergency stop turns on
024	RESET ON	Set when external reset, emergency stop, reset, or reset & rewind key turns on
025	STOP MOTION OR DWELL	A flag which stops pulse distribution. It is set in the following cases. (1) External reset turned on. (2) Reset & rewind turned on. (3) Emergency stop turned on. (4) Feed hold turned on. (5) The MDI panel reset key turned on. (6) Switched to the manual mode(JOG/HANDLE/INC). (7) Other alarm occurred. (There is also alarm which is not set.)

The table below shows the signals and states which are enabled when each diagnostic data item is 1. Each combination of the values of the diagnostic data indicates a unique state.

020	CUT SPEED UP/DOWN	1	0	0	0	1	0	0
021	RESET BUTTON ON	0	0	1	0	0	0	0
022	RESET AND REWIND ON	0	0	0	0	0	0	0
023	EMERGENCY STOP ON	1	0	0	0	0	0	0
024	RESET ON	1	1	1	1	0	0	0
025	STOP MOTION OR DWELL	1	1	1	1	1	1	0

Emergency stop signal input
External reset signal input
MDI reset button turned on
Reset & rewind input
Servo alarm generation
Changed to another mode or feed hold
Single block stop

Diagnostic numbers 030 and 031 indicate TH alarm states.

No.	Display	Meaning of data
030	CHARACTER NUMBER TH DATA	The position of the character which caused TH alarm is displayed by the number of characters from the beginning of the block at TH alarm
031	TH DATA	Read code of character which caused TH alarm

8 DATA INPUT/OUTPUT

NC data is transferred between the NC and external input/output devices such as the Handy File.
Information can be read into the CNC from a memory card and written from the CNC to the memory card, using the memory card interface at the left of the display unit.
The following types of data can be entered and output :

1.Program
2.Offset data
3.Parameter
4.Pitch error compensation data
5.Custom macro common variable

Before an input/output device can be used, the input/output related parameters must be set.
For how to set parameters, see III–2 "**OPERATIONAL DEVICES**".

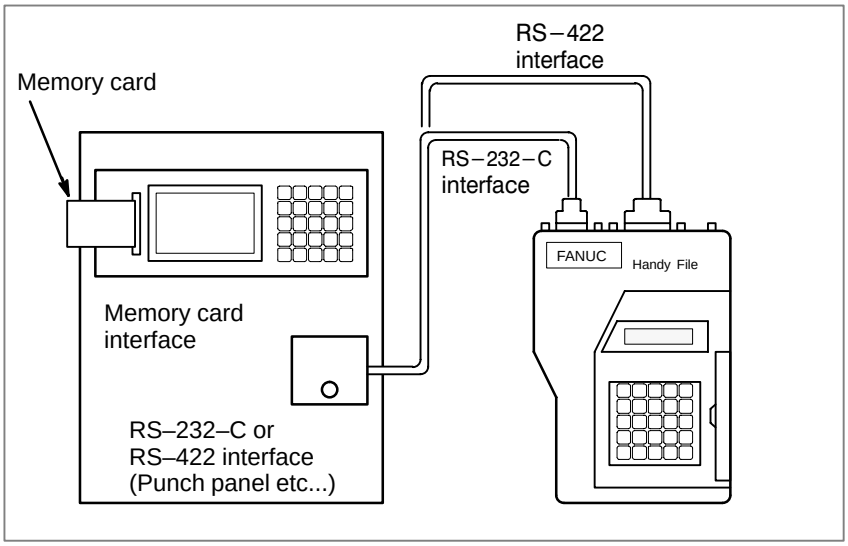

8.1 FILES

Of the external input/output devices, the FANUC Handy File use floppy disks as their input/output medium.
In this manual, these input/output medium is generally referred to as a floppy.
Unlike an NC tape, a floppy allows the user to freely choose from several types of data stored on one medium on a file–by–file basis.
Input/output is possible with data extending over more than one floppy disk.

Explanations

- **What is a File**

The unit of data, which is input/output between the floppy and the CNC by one input/output operation (pressing the VREADW or VPUNCHW key), is called a HfileI. When inputting CNC programs from, or outputting them to the floppy, for example, one or all programs within the CNC memory are handled as one file.
Files are assigned automatically file numbers 1,2,3,4 and so on, with the lead file as 1.



- **Request for floppy replacement**

When one file has been entered over two floppies, LEDs on the adaptor flash alternately on completion of data input/output between the first floppy and the CNC, prompting floppy replacement. In this case, take the first floppy out of the adaptor and insert a second floppy in its place. Then, data input/output will continue automatically.
Floppy replacement is prompted when the second floppy and later is required during file search–out, data input/output between the CNC and the floppy, or file deletion.
Floppy 1



Floppy 2



Since floppy replacement is processed by the input/output device, no special operation is required. The CNC will interrupt data input/output operation until the next floppy is inserted into the adaptor.
When reset operation is applied to the CNC during a request for floppy replacement, the CNC is not reset at once, but reset after the floppy has been replaced.

- **Protect switch**

The floppy is provided with the write protect switch. Set the switch to the write enable state. Then, start output operation.

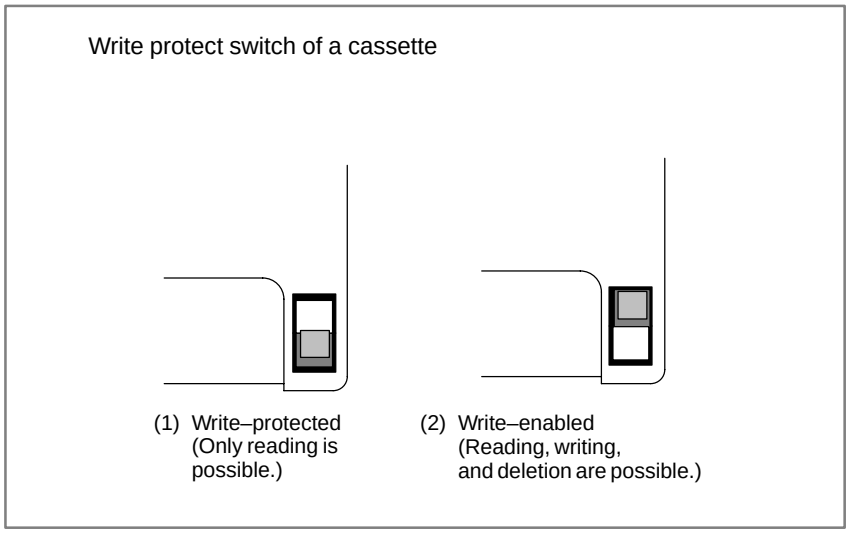

Fig. 8.1. Protect swtich

- **Writing memo**

Once written in the cassette or card, data can subsequently be read out by correspondence between the data contents and file numbers. This correspondence cannot be verified, unless the data contents and file numbers are output to the CNC and displayed. The data contents can be displayed with display function for directory of floppy disk
(See Section III–8.8).
To display the contents,write the file numbers and the contents on the memo column which is the back of floppy.

(Entry example on MEMO)
File 1 NC parameters
File 2 Offset data
File 3 NC program O0100
. .
. .
. .
File (n–1) NC program O0500
File n NC program O0600

8.2 FILE SEARCH

When the program is input from the floppy, the file to be input first must be searched.
For this purpose, proceed as follows:

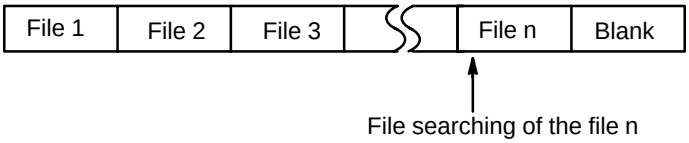

File heading

Procedure

1 Press the EDIT or MEMORY switch on the machine operator's panel.

2 Press function key [PROG], then the program contents display screen or program check screen appears.

3 Press soft key **[(OPRT)]**.

4 Press the rightmost soft key [▷] (next–menu key).

5 Enter address N.

6 Enter the number of the file to search for.
- N0
  The beginning of the cassette or card is searched.
- One of N1 to N9999
  Of the file Nos. 1 to 9999, a designated file is searched.
- N–9999
  The file next to that accessed just before is searched.
- N–9998
  When N–9998 is designated, N–9999 is automatically inserted each time a file is input or output. This condition is reset by the designation of N1,N1 to 9999, or N − 9999 or reset.

7 Press soft keys **[F SRH]** and **[EXEC]**.
The specified file is searched for.

Explanation

- **File search by N−9999**

The same result is obtained both by sequentially searching the files by specifying Nos. N1 to N9999 and by first searching one of N1 to N9999 and then using the N–9999 searching method. The searching time is shorter in the latter case.

Alarm

Alarm No.	Description
86	The ready signal (DR) of an input/output device is off. An alarm is not immediately indicated in the CNC even when an alarm occurs during head searching (when a file is not found, or the like). An alarm is given when the input/output operation is performed after that. This alarm is also raised when N1 is specified for writing data to an empty floppy. (In this case, specify No.)

8.3 FILE DELETION

Files stored on a floppy can be deleted file by file as required.

File deletion

Procedure

1 Insert the floppy into the input/output device so that it is ready for writing.

2 Press the EDIT switch on the machine operator's panel.

3 Press function key [PROG], then the program contents display screen appears.

4 Press soft key **[(OPRT)]**

5 Press the rightmost soft key [▷] (next–menu key).

6 Enter address N.

7 Enter the number (from 1 to 9999) of the file to delete.

8 Press soft key **[DELETE]** and then press soft key **[DELETE]**. The file specified in step **7** is deleted.

Explanations

- **File number after the file is deleted**

When a file is deleted, the file numbers after the deleted file are each decremented by one. Suppose that a file numbered k was deleted. In this case, files are renumbered as follows:

Before deletion	after deletion
1 to (k>1)	1 to (k>1)
k	Deleted
(k+1) to n	k to (n>1)

- **Protect switch**

Set the write protect switch to the write enable state to delete the files.

8.4 PROGRAM INPUT/OUTPUT

8.4.1 Inputting a Program

This section describes how to load a program into the CNC from a floppy or NC tape.

Inputting a program

Procedure

1 Make sure the input device is ready for reading.
For the two–path control, select the tool post for which a program to be input is used with the tool post selection switch.

2 Press the EDIT switch on the machine operator's panel.

3 When using a floppy, search for the required file according to the procedure in **III–8.2**.

4 Press function key [PROG], then the program contents display screen or program directory screen appears.

5 Press soft key **[(OPRT)]**.

6 Press the rightmost soft key [▷] (next–menu key).

7 After entering address O, specify a program number to be assigned to the program. When no program number is specified here, the program number used on the floppy or NC tape is assigned.

8 Press soft keys **[READ]** and **[EXEC]**
The program is input and the program number specified in step **7** is assigned to the program.

Explanations

- **Collation**

If a program is input while the data protect key on the machine operator's panel turns ON, the program loaded into the memory is verified against the contents of the floppy or NC tape.
If a mismatch is found during collation, the collation is terminated with an alarm (P/S No. 079).
If the operation above is performed with the data protection key turns OFF, collation is not performed, but programs are registered in memory.

- **Inputting multiple programs from an NC tape**

When a tape holds multiple programs, the tape is read up to ER (or %).



- **Program numbers on a NC tape**

  - When a program is entered without specifying a program number.
    - The O–number of the program on the NC tape is assigned to the program.
      If the program has no O–number, the N–number in the first block is assigned to the program.
    - When the program has neither an O–number nor N–number, the previous program number is incremented by one and the result is assigned to the program.
    - When the program does not have an O–number but has a five–digit sequence number at the start of the program, the lower four digits of the sequence number are used as the program number. If the lower four digits are zeros, the previously registered program number is incremented by one and the result is assigned to the program.
  - When a program is entered with a program number
    The O–number on the NC tape is ignored and the specified number is assigned to the program. When the program is followed by additional programs, the first additional program is given the program number. Additional program numbers are calculated by adding one to the last program.

- **Program registration in the background**

  The method of registration operation is the same as the method of foreground operation. However, this operation registers a program in the background editing area. As with edit operation, the operations described below are required at the end to register a program in foreground program memory.

  [(OPRT)] [BG–END]

- **Additional program input**

  You can input a program to be appended to the end of a registered program.

Registered program	Input program	Program after input
○1234 ;	○5678 ;	○1234 ;
□□□□□□□□ ;	○○○○○○○○ ;	□□□□□□□□ ;
□□□□□□ ;	○○○○○○ ;	□□□□□□ ;
□□□□ ;	○○○○ ;	□□□□ ;
□□□ ;	○○○ ;	□□□ ;
%	%	%
		○5678 ;
		○○○○○○○○ ;
		○○○○○○ ;
		○○○○ ;
		○○○ ;
		%

  In the above example, all lines of program O5678 are appended to the end of program O1234. In this case, program number O5678 is not registered. When inputting a program to be appended to a registered program, press the **[READ]** soft key without specifying a program number in step 8. Then, press the **[CHAIN]** and **[EXEC]** soft keys.

  - In entire program input, all lines of a program are appended, except for its O number.
  - When canceling additional input mode, press the reset key or the [CAN] or [STOP] soft key.

- Pressing the [CHAIN] soft key positions the cursor to the end of the registered program. Once a program has been input, the cursor is positioned to the start of the new program.
- Additional input is possible only when a program has already been registered.

● Defining the same program number as that of an existing program

If an attempt has been made to register a program having the same number as that of a previously registered program, P/S alarm 073 is issued and the program cannot be registered.

Alarm

Alarm No.	Description
70	The size of memory is not sufficient to store the input programs
73	An attempt was made to store a program with an existing program number.
79	The verification operation found a mismatch between a program loaded into memory and the contents of the program on the floppy or NC tape.

8.4.2 Outputting a Program

A program stored in the memory of the CNC unit is output to a floppy or NC tape.

Outputting a program

Procedure

1. Make sure the output device is ready for output.
2. To output to an NC tape, specify the punch code system (ISO or EIA) using a parameter.
3. Press the EDIT switch on the machine operator's panel.
4. Press function key [PROG], then the program contents display screen or program directory screen appears.
5. Press soft key **[(OPRT)]**.
6. Press the rightmost soft key [▷] (next–menu key).
7. Enter address O.
8. Enter a program number. If –9999 is entered, all programs stored in memory are output.
   To output multiple programs at one time, enter a range as follows :
   OΔΔΔΔ,O□□□□
   Programs No.ΔΔΔΔ to No.□□□□ are output.
   The program library screen displays program numbers in ascending order when bit 4 (SOR) of parameter No. 3107 is set to 1.
9. Press soft keys **[PUNCH]** and **[EXEC]**
   The specified program or programs are output.

Explanations (Output to a floppy)

- **File output location**

  When output is conducted to the floppy, the program is output as the new file after the files existing in the floppy. New files are to be written from the beginning with making the old files invalid, use the above output operation after the N0 head searching.

- **An alarm while a program is output**

  When P/S alarm (No. 86) occurs during program output, the floppy is restored to the condition before the output.

- **Outputting a program after file heading**

  When program output is conducted after N1 to N9999 head searching, the new file is output as the designated n–th position. In this case, 1 to n–1 files are effective, but the files after the old n–th one are deleted. If an alarm occurs during output, only the 1 to n–1 files are restored.

- **Efficient use of memory**

  To efficiently use the memory in the cassette or card, output the program by setting parameter NFD (No. 0101#7,No. 0111#7 or 0121#7) to 1. This parameter makes the feed is not output, utilizing the memory efficiently.

- **On the memo record**

  Head searching with a file No. is necessary when a file output from the CNC to the floppy is again input to the CNC memory or compared with the content of the CNC memory. Therefore, immediately after a file is output from the CNC to the floppy, record the file No. on the memo.

- **Punching programs in the background**

Punch operation can be performed in the same way as in the foreground. This function alone can punch out a program selected for foreground operation.
<O> (Program No.) **[PUNCH] [EXEC]**: Punches out a specified program.
<O> H–9999I **[PUNCH] [EXEC]**: Punches out all programs.

Explanations (Output to an NC tape)

- **Format**

A program is output to paper tape in the following format:

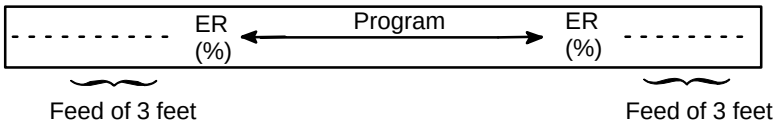

If three–feet feeding is too long, press the CAN key during feed punching to cancel the subsequent feed punching.

- **TV check**

A space code for TV check is automatically punched.

- **ISO code**

When a program is punched in ISO code, two CR codes are punched after an LF code.

By setting NCR (bit 3 of parameter No. 0100), CRs can be omitted so that each LF appears without a CR.

- **Stopping the punch**

Press the RESET key to stop punch operation.

- **Punching all programs**

All programs are output to paper tape in the following format.

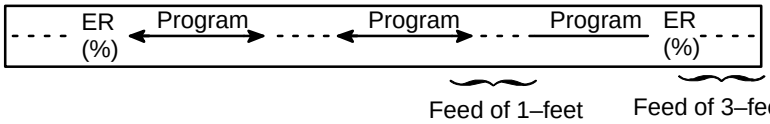

The sequence of the programs punched is undefined.

8.5 OFFSET DATA INPUT AND OUTPUT

8.5.1 Inputting Offset Data

Offset data is loaded into the memory of the CNC from a floppy or NC tape. The input format is the same as for offset value output. See III– 8.5.2. When an offset value is loaded which has the same offset number as an offset number already registered in the memory, the loaded offset data replaces existing data.

Inputting offset data

Procedure

1 Make sure the input device is ready for reading.

2 Press the EDIT switch on the machine operator's panel.

3 When using a floppy, search for the required file according to the procedure in III–8.2.

4 Press function key [OFFSET SETTING] , then the tool compensation screen appears.

5 Press soft keys **[(OPRT)]**.

6 Press rightmost soft key [▷] (next menu key).

7 Press soft keys **[READ]** and **[EXEC]**.

8 The input offset data will be displayed on the screen after completion of input operation.

8.5.2 Outputting Offset Data

All offset data is output in a output format from the memory of the CNC to a floppy or NC tape.

Outputting offset data

Procedure

1 Make sure the output device is ready for output.

2 Specify the punch code system (ISO or EIA) using a parameter.

3 Press the EDIT switch on the machine operator's panel.

4 Press function key [OFFSET SETTING], then the tool compensation screen appears.

5 Press soft key **[(OPRT)]**.

6 Press the rightmost soft key [▷] (next–menu key)

7 Press soft keys **[PUNCH]** and **[EXEC]**.
Offset data is output in the output format described below.

Explanations

- **Output format**

Output format is as follows:

Format

(1) For tool compensation memory A
G10 L11 P_R_;
where P_: Offset No.
R_: Tool compensation amount

(2) For tool compensation memory B
Setting/changing the geometric compensation amount
G10 L10 P_R_;
Setting/changing the wear compensation amount
G10 L11 P_R_;

(3) For tool compensation memory C
Setting/changing the geometric compensation amount for H code
G10 L10 P_R_;
Setting/changing the geometric compensation amount for D code
G10 L12 P_R_;
Setting/changing the wear compensation amount for H code
G10 L11 P_R_;
Setting/changing the wear compensation amount for D code
G10 L13 P_R_;

The L1 command may be used instead of L11 for format compatibility of the conventional CNC.

- **Output file name**

When the floppy disk directory display function is used, the name of the output file is OFFSET.

8.6 INPUTTING AND OUTPUTTING PARAMETERS AND PITCH ERROR COMPENSATION DATA

Parameters and pitch error compensation data are input and output from different screens, respectively. This chapter describes how to enter them.

8.6.1 Inputting Parameters

Parameters are loaded into the memory of the CNC unit from a floppy or NC tape. The input format is the same as the output format. See **III–8.6.2**. When a parameter is loaded which has the same data number as a parameter already registered in the memory, the loaded parameter replaces the existing parameter.

Inputting parameters

Procedure

1 Make sure the input device is ready for reading.

2 When using a floppy, search for the required file according to the procedure in **III–8.2**.

3 Press the EMERGENCY STOP button on the machine operator's panel.

4 Press function key [OFFSET SETTING] .

5 Press the soft key **[SETING]** for chapter selection, then the setting screen appears.

6 Enter 1 in response to the prompt for "PARAMETER WRITE (PWE)" in setting data. Alarm P/S100 (indicating that parameters can be written) appears.

7 Press soft key [SYSTEM] .

8 Press chapter selection soft key **[PARAM]**, then the parameter screen appears.

9 Press soft key **[(OPRT)]**.

10 Press the rightmost soft key [▷] (next–menu key).

11 Press soft keys **[READ]** and **[EXEC]**.
Parameters are read into memory. Upon completion of input, the "INPUT" indicator at the lower–right corner of the screen disappears.

12 Press function key [OFFSET SETTING] .

13 Press soft key **[SETING]** for chapter selection.

14 Enter 0 in response to the prompt for "PARAMETER WRITE (PWE)" in setting data.

15 Turn the power to the CNC back on.

16 Release the EMERGENCY STOP button on the machine operator's panel.

8.6.2 Outputting Parameters

All parameters are output in the defined format from the memory of the CNC to a floppy or NC tape.

Outputting parameters

Procedure

1 Make sure the output device is ready for output.

2 Specify the punch code system (ISO or EIA) using a parameter.

3 Press the EDIT switch on the machine operator's panel.

4 Press function key [SYSTEM], then the parameter screen appears.

5 Press chapter selection soft key **[PARAM]**.

6 Press soft key **[(OPRT)]**.

7 Press rightmost soft key [▷] (next–menu key).

8 Press soft keys **[PUNCH]**.

9 To output all parameters, press the **[ALL]** soft key. To output only parameters which are set to other than 0, press the **[NON–0]** soft key.

10 Press soft key **[EXEC]**.
All parameters are output in the defined format.

Explanations

- **Output format**

Output format is as follows:
N . . . P . . . . ;
N . . . A1P . A2P . . AnP . . ;
N . . . P . . . . ;

N . . . : Parameter No.
A . . . : Axis No.(n is the number of control axis)
P . . . : Parameter setting value .

- **Suppressing output of parameters set to 0**

To suppress the output of the following parameters, press the **[PUNCH]** soft key then **[NON–0]** soft key.

	Other than axis type	Axis type
Bit type	Parameter for which all bits are set to 0	Parameter for an axis for which all bits are set to 0.
Value type	Paramter whose value is 0.	Parameter for an axis for which the value is 0.

- **Output file name**

When the floppy disk directory display function is used, the name of the output file is PARAMETER.
Once all parameters have been output, the output file is named ALL PARAMETER. Once only parameters which are set to other than 0 have been output, the output file is named NON–0. PARAMETER.

8.6.3 Inputting Pitch Error Compensation Data

Pitch error compensation data are loaded into the memory of the CNC from a floppy or NC tape. The input format is the same as the output format. See **III–8.6.4.** When a pitch error compensation data is loaded which has the corresponding data number as a pitch error compensation data already registered in the memory, the loaded data replaces the existing data.

Pitch error compensation data

Procedure

1 Make sure the input device is ready for reading.

2 When using a floppy, search for the required file according to the procedure in **III–8.2**.

3 Press the EMERGENCY STOP button on the machine operator's panel.

4 Press function key [OFFSET SETTING] .

5 Press the soft key **[SETING]** for chapter selection.

6 Enter 1 in response to the prompt for writing parameters (PWE). Alarm P/S100 (indicating that parameters can be written) appears.

7 Press soft key [SYSTEM] .

8 Press the rightmost soft key [▷] (next–menu key)and press chapter selection soft key **[PITCH]**.

9 Press soft key **[(OPRT)]**.

10 Press the rightmost soft key [▷] (next–menu key).

11 Press soft keys **[READ]** and **[EXEC]**.
Parameters are read into memory. Upon completion of input, the "INPUT" indicator at the lower–right corner of the screen disappears.

12 Press function key [OFFSET SETTING] .

13 Press soft key **[SETING]** for chapter selection.

14 Enter 0 in response to the prompt for "PARAMETER WRITE (PWE)" in setting data.

15 Turn the power to the CNC back on.

16 Release the EMERGENCY STOP button on the machine operator's panel.

Explanations

- **Pitch error compensation**

Parameters 3620 to 3624 and pitch error compensation data must be set correctly to apply pitch error compensation correctly (See **III–11.5.2**).

8.6.4 Outputting Pitch Error Compensation Data

All pitch error compensation data are output in the defined format from the memory of the CNC to a floppy or NC tape.

Outputting Pitch Error Compensation Data

Procedure

1 Make sure the output device is ready for output.
For the two–path control, select the tool post for which pitch error compensation data to be input is used with the tool post selection switch.

2 Specify the punch code system (ISO or EIA) using a parameter.

3 Press the EDIT switch on the machine operator's panel.

4 Press function key [SYSTEM] .

5 Press the rightmost soft key [▷] (next–menu key) and press chapter selection soft key **[PITCH]**.

6 Press soft key **[(OPRT)]**.

7 Press rightmost soft key [▷] (next–menu key).

8 Press soft keys **[PUNCH]** and **[EXEC]**.
All parameters are output in the defined format.

Explanations

- **Output format**

Output format is as follows:
N 10000 P . . . ;
N 11023 P . . . . . ;
N . . . : Pitch error compensation point No. +10000
P . . . : Pitch error compensation data

When bi–directional pitch error compensation is used, output format is as follows :
N20000 P.... ;
N21023 P.... ;
N23000 P.... ;
N24023 P.... ;
N : Pitch error compensation point + 20000
P : Pitch error compensation data

- **Output file name**

When the floppy disk directory display function is used, the name of the output file is **"PITCH ERROR"**.

8.7 INPUTTING/OUTPUTTING CUSTOM MACRO COMMON VARIABLES

8.7.1 Inputting Custom Macro Common Variables

The value of a custom macro common variable (#500 to #999) is loaded into the memory of the CNC from a floppy or NC tape. The same format used to output custom macro common variables is used for input. See **III–8.7.2.** For a custom macro common variable to be valid, the input data must be executed by pressing the cycle start button after data is input. When the value of a common variable is loaded into memory, this value replaces the value of the same common variable already existing (if any) in memory.

Inputting custom macro common variables

Procedure

1 Register the program which has been output, as described in Section III–8.7.2, in memory according to the program input procedure described in Section III–8.4.1.

2 Press the MEMORY switch on the machine operator's panel upon completing input.

3 Press the cycle start button to execute the loaded program.

4 Display the macro vriable screen to chek whether the values of the common variables have been set correctly.

Display of the macro variable screen

- Press function key [OFFSET SETTING] .
- Press the rightmost soft key (next–menu key).
- Press soft key **[MACRO]**.
- Select a variable with the page keys or numeric keys and soft key **[NO.SRH]**.

Explanations

- **Common variables**

The common variables (#500 to #531) can be input and output.
When the option for adding a common variable is specified, values from #500 to #999 can be input and output. #100 to #199 can be input and output when bit 3 (PU5) of parameter No. 6001 is set to 1.

8.7.2 Outputting Custom Macro Common Variable

Custom macro common variables (#500 to #999) stored in the memory of the CNC can be output in the defined output format to a floppy or NC tape.

Outputting custom macro common variable

Procedure

1 Make sure the output device is ready for output.

2 Specify the punch code system (ISO or EIA) using a parameter.

3 Press the EDIT switch on the machine operator's panel.

4 Press function key [OFFSET SETTING].

5 Press the rightmost soft key [▷] (next–menu key), then press soft key **[MACRO]**.

6 Press soft key **[(OPRT)]**.

7 Press the rightmost soft key [▷] (next–menu key).

8 Press soft keys **[PUNCH]** and **[EXEC]**.
Common variables are output in the defined format.

Explanations

- **Output format**

The output format is as follows:

```
%
;
#500=[25283*65536+65536]/134217728 ..... (1)
#501=#0; ..... (2)
#502=0; ..... (3)
#503= ..... ;
..... ;
..... ;
#531= ..... ;
M02;
%
```

(1) The precision of a variable is maintained by outputting the value of the variable as <expression>.

(2) Undefined variable

(3) When the value of a variable is 0

- **Output file name**

When the floppy disk directory display function is used, the name of the output file is "**MACRO VAR**".

- **Common variable**

The common variables (#500 to #531) can be input and output.
When the option for adding a common variable is specified, values from #500 to #999 can be input and output.
#100 to #199 can be input and output when bit 3 (PU5) of parameter No. 6001 is set to 1.

8.8 DISPLAYING DIRECTORY OF FLOPPY CASSETTE

On the floppy directory display screen, a directory of the FANUC Handy File, FANUC Floppy Cassette, or FANUC FA Card files can be displayed. In addition, those files can be loaded, output, and deleted.

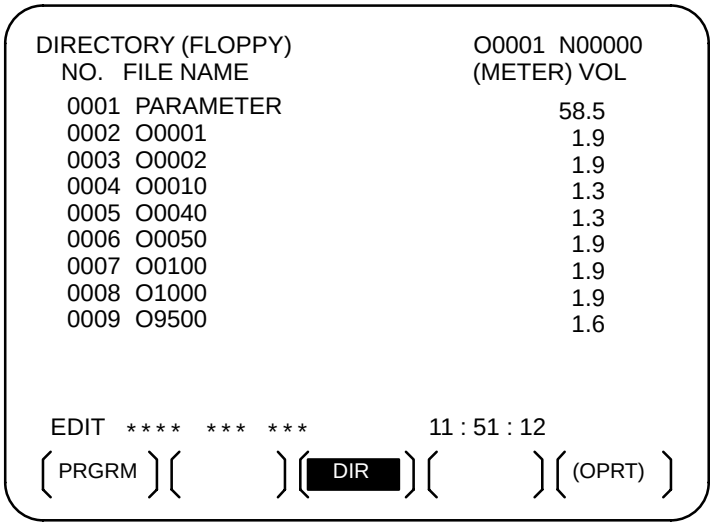

8.8.1 Displaying the Directory

Displaying the directory of floppy cassette files

Procedure 1

Use the following procedure to display a directory of all the files stored in a floppy:

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG] .

3 Press the rightmost soft key [▷] (next–menu key).

4 Press soft key **[FLOPPY]**.

5 Press page key [PAGE↑] or [PAGE↓].

6 The screen below appears.

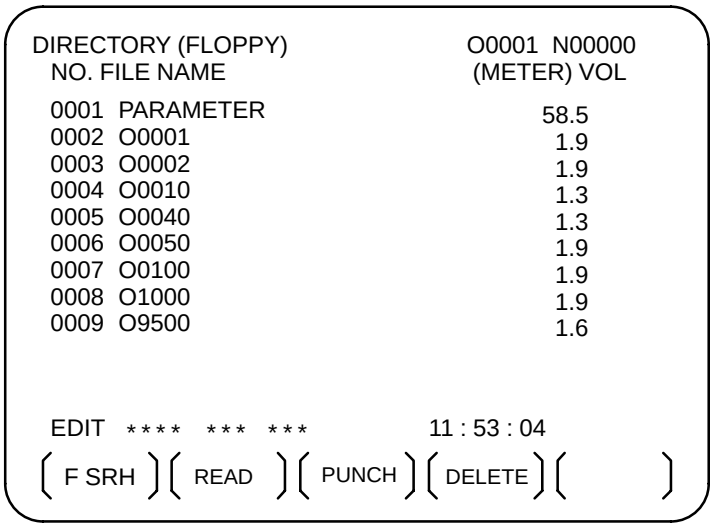

Fig.8.8.1 (a)

7 Press a page key again to display another page of the directory.

Procedure 2

Use the following procedure to display a directory of files starting with a specified file number :

1 Press the EDIT switch on the machine operator’s panel.

2 Press function key PROG .

3 Press the rightmost soft key ▷ (next–menu key).

4 Press soft key **[FLOPPY]**.

5 Press soft key **[(OPRT)]**.

6 Press soft key **[F SRH]**.

7 Enter a file number.

8 Press soft keys **[F SET]** and **[EXEC]**.

9 Press a page key to display another page of the directory.

10 Press soft key **[CAN]** to return to the soft key display shown in the screen of **Fig 8.8.1 (a)**.

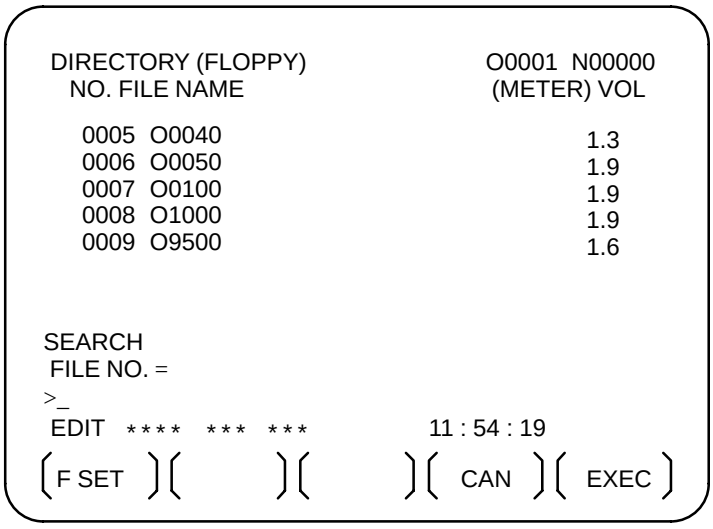

Fig.8.8.1 (b)

Explanations

- **Screen fields and their meanings**

NO:Displays the file number
FILE NAME: Displays the file name.
(METER) : Converts and prints out the file capacity to paper tape length.You can also produce H
(FEET) I by setting the INPUT UNIT to INCH of the setting data.
VOL. : When the file is multi–volume, that state is displayed.

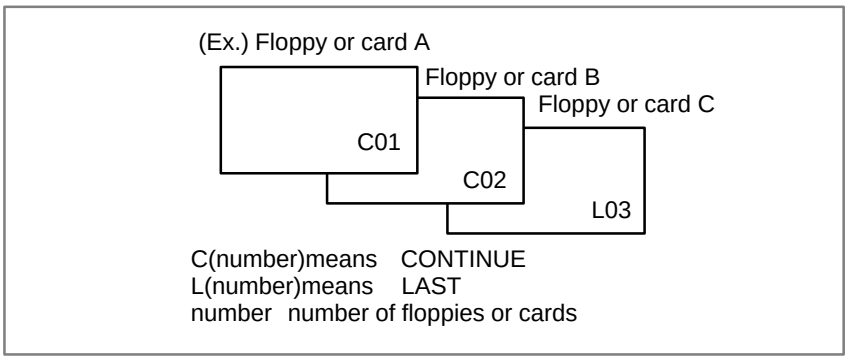

8.8.2 Reading Files

The contents of the specified file number are read to the memory of NC.

Reading files

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG] .

3 Press the rightmost soft key [▷] (next–menu key).

4 Press soft key **[FLOPPY]**.

5 Press soft key **[(OPRT)]**.

6 Press soft key **[READ]**.

```
DIRECTORY (FLOPPY)                    O0001  N00000
  NO. FILE NAME                       (METER) VOL
   0001  PARAMETER                          58.5
   0002  O0001                              1.9
   0003  O0002                              1.9
   0004  O0010                              1.3
   0005  O0040                              1.3
   0006  O0050                              1.9
   0007  O0100                              1.9
   0008  O1000                              1.9
   0009  O9500                              1.6
READ
 FILE NO. =                        PROGRAM NO. =
>_
EDIT   ****  ***  ***               11 : 55 : 04
[F SET ][ O SET ][ STOP ][ CAN ][ EXEC ]
```

7 Enter a file number.

8 Press soft key **[F SET]**.

9 To modify the program number, enter the program number, then press soft key **[O SET]**.

10 Press soft key **[EXEC]**. The file number indicated in the lower–left corner of the screen is automatically incremented by one.

11 Press soft key **[CAN]** to return to the soft key display shown in the screen of **Fig. 8.8.1.(a)**.

8.8.3 Outputting Programs

Any program in the memory of the CNC unit can be output to a floppy as a file.

Outputting programs

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG] .

3 Press the rightmost soft key [▷] (next–menu key).

4 Press soft key **[FLOPPY]**.

5 Press soft key **[(OPRT)]**.

6 Press soft key **[PUNCH]**.

```
DIRECTORY (FLOPPY)                O0002  N01000
  NO. FILE NAME                   (METER) VOL
   0001  PARAMETER                      58.5
   0002  O0001                          1.9
   0003  O0002                          1.9
   0004  O0010                          1.3
   0005  O0040                          1.3
   0006  O0050                          1.9
   0007  O0100                          1.9
   0008  O1000                          1.9
   0009  O9500                          1.6
PUNCH
 FILE NO. =                     PROGRAM NO. =
>_
EDIT  ****  ***  ***              11 : 55 : 26
[F SET ][ O SET ][ STOP ][ CAN ][ EXEC ]
```

7 Enter a program number. To write all programs into a single file, enter –9999 in the program number field. In this case, the file name "**ALL.PROGRAM**" is registered.

8 Press soft key **[O SET]**.

9 Press soft key **[EXEC]**. The program or programs specified in step **7** are written after the last file on the floppy. To output the program after deleting files starting with an existing file number, key in the file number, then press soft key **[F SET]** followed by soft key **[EXEC]**.

10 Press soft key **[CAN]** to return to the soft key display shown in the screen of **Fig.8.8.1(a)**.

8.8.4 Deleting Files

The file with the specified file number is deleted.

Deleting files

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG] .

3 Press the rightmost soft key [▷] (next–menu key).

4 Press soft key **[FLOPPY]**.

5 Press soft key **[(OPRT)]**.

6 Press soft key **[DELETE]**.

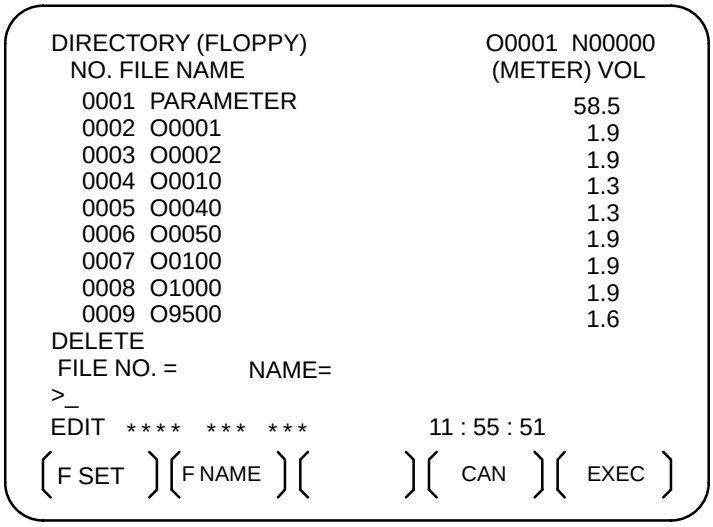

7 Specify the file to be deleted.
When specifying the file with a file number, type the number and press soft key **[F SET]**. When specifying the file with a file name, type the name and press soft key **[F NAME]**.

8 Press soft key **[EXEC]**.
The file specified in the file number field is deleted. When a file is deleted, the file numbers after the deleted file are each decremented by one.

9 Press soft key **[CAN]** to return to the soft key display shown in the screen of **Fig. 8.8.1(a)**.

Restrictions

- **Inputting file numbers and program numbers with keys**

  If **[F SET]** or **[O SET]** is pressed without key inputting file number and program number, file number or program number shows blank. When 0 is entered for file numbers or program numbers, 1 is displayed.

- **I/O devices**

  To use channel 0 ,set a device number in parameter (No. 102).
  Set the I/O device number to parameter (No. 112) when cannel 1 is used.
  Set it to (No. 0122) when channel 2 is used.

- **Significant digits**

  For the numeral input in the data input area with FILE No. and PROGRAM No., only lower 4 digits become valid.

- **Collation**

  When the data protection key on the machine operator's panel is ON, no programs are read from the floppy. They are verified against the contents of the memory of the CNC instead.

ALARM

Alarm No.	Contents
71	An invalid file number or program number was entered. (Specified program number is not found.)
79	Verification operation found a mismatch between a program loaded into memory and the contents of the floppy
86	The dataset–ready signal (DR) for the input/output device is turned off. (The no file error or duplicate file error occurred on the input/output device because an invalid file number, program number, or file name was entered.

8.9 OUTPUTTING A PROGRAM LIST FOR A SPECIFIED GROUP

CNC programs stored in memory can be grouped according to their names, thus enabling the output of CNC programs in group units. Section III–11.3.3 explains the display of a program listing for a specified group.

Procedure for Outputting a Program List for a Specified Group

Procedure

1 Display the program list screen for a group of programs, as described in Section III–11.3.2.

```
PROGRAM DIRECTORY (GROUP)          O0001  N00010

        PROGRAM (NUM.)          MEMORY (CHAR.)
        USED:          60                 3321
        FREE:           2                  429
  O0020  (GEAR–1000  MAIN     )
  O0040  (GEAR–1000  SUB–1    )
  O0200  (GEAR–1000  SUB–2    )
  O2000  (GEAR–1000  SUB–3    )

>_
EDIT  ****  ***  ***  ***        16 : 52 : 13
[PRGRM][ DIR ][      ][      ][(OPRT)]
```

2 Press the **[(OPRT)]** operation soft key.

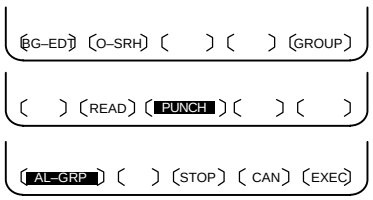

3 Press the right–most soft key ▷ (continuous menu key).

4 Press the **[PUNCH]** operation soft key.

5 Press the **[AL–GRP]** operation soft key.

The CNC programs in the group for which a search is made are output. When these programs are output to a floppy disk, they are output to a file named GROUP.PROGRAM.

8.10 DATA INPUT/OUTPUT ON THE ALL IO SCREEN

To input/output a particular type of data, the corresponding screen is usually selected. For example, the parameter screen is used for parameter input from or output to an external input/output unit, while the program screen is used for program input or output. However, programs, parameters, offset data, and macro variables can all be input and output using a single common screen, that is, the ALL IO screen.

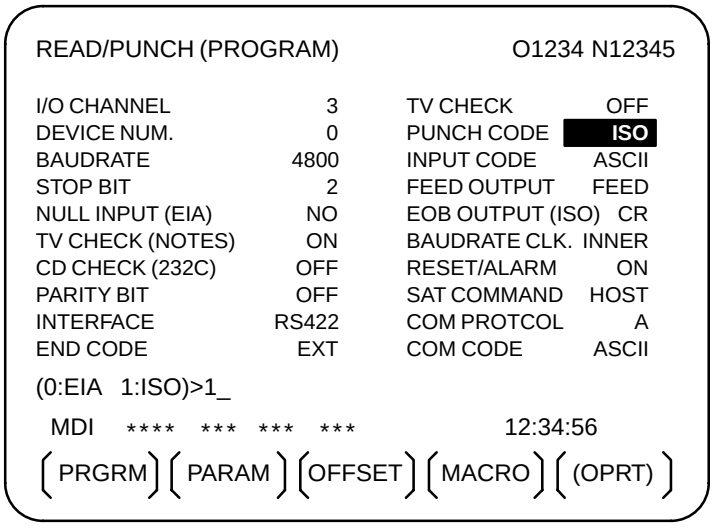

Fig. 8.10 ALL IO screen (when channel 3 is being used for input/output)

8.10.1 Setting Input/Output–Related Parameters

Input/output–related parameters can be set on the ALL IO screen. Parameters can be set, regardless of the mode.

Setting input/output–related parameters

Procedure

1 Press function key SYSTEM .

2 Press the rightmost soft key ▷ (next–menu key) several times.

3 Press soft key **[ALL IO]** to display the ALL IO screen.

NOTE
1 If program or floppy is selected in EDIT mode, the program directory or floppy screen is displayed.
2 When the power is first turned on, program is selected by default.

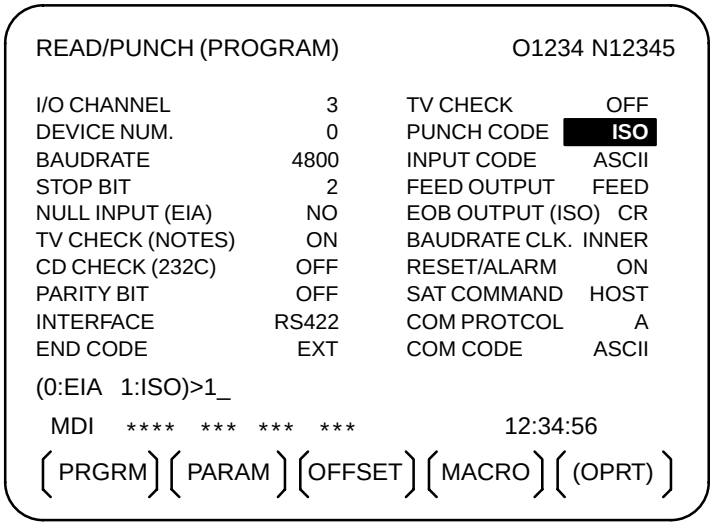

NOTE
Baud rate clock, CD check (232C), reset/alarm report, and the parity bit for parameter No. 134, as well as the communication code, end code, communication protocol, interface, and SAT command for parameter No. 135 are displayed only when channel 3 is being used for input/output.

4 Select the soft key corresponding to the desired type of data (program, parameter, and so forth).

5 Set the parameters corresponding to the type of input/output unit to be used. (Parameter setting is possible regardless of the mode.)

8.10.2 Inputting and Outputting Programs

A program can be input and output using the ALL IO screen.
When entering a program using a cassette or card, the user must specify the input file containing the program (file search).

File search

Procedure

1 Press soft key **[PRGRM]** on the ALL IO screen, described in Section III–8.10.1.

2 Select **EDIT** mode. A program directory is displayed.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

- A program directory is displayed only in EDIT mode. In all other modes, the ALL IO screen is displayed.

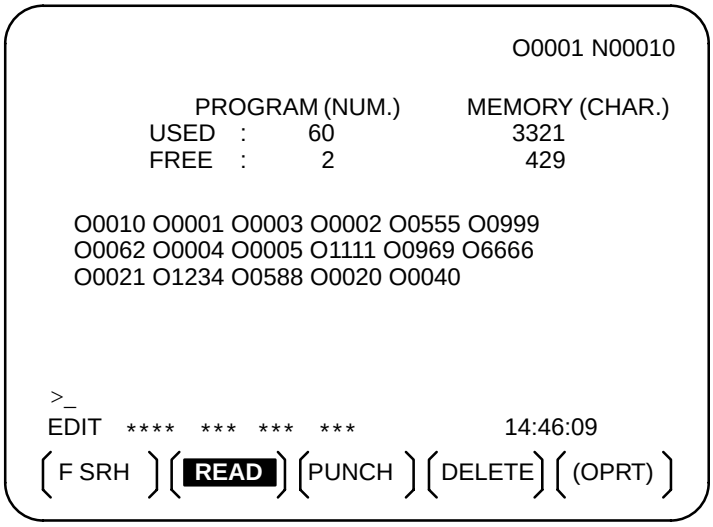

4 Enter address N.

5 Enter the number of the file to be found.

- N0

  The first floppy file is found.
- One of N1 to N9999

  Among the files numbered from 1 to 9999, a specified file is found.
- N–9999

  The file immediately after that used most recently is found.
- N–9998

  When –9998 is specified, the next file is found. Then, each time a file input/output operation is performed, N–9999 is automatically inserted. This means that subsequent files can be sequentially found automatically.

  This state is canceled by specifying N0, N1 to N9999, or N–9999, or upon a reset.



6 Press soft keys **[F SRH]** and **[EXEC**].
The specified file is found.

Explanations

- **Difference between N0 and N1**

When a file already exists in a cassette or card, specifying N0 or N1 has the same effect. If N1 is specified when there is no file on the cassette or card, an alarm is issued because the first file cannot be found. Specifying N0 places the head at the start of the cassette or card, regardless of whether the cassette/card already contains files. So, no alarm is issued in this case. N0 can be used, for example, when a program is written into a new cassette or card, or when a previously used cassette or card is used once all the files it contains have been erased.

- **Alarm issue during file search**

If an alarm (file search failure, for example) is generated during file search, the CNC does not issue an alarm immediately. However, a P/S alarm (No. 086) is issued if input/output is subsequently performed on that file.

- **File search using N–9999**

Instead of sequentially searching for files by specifying actual file numbers every time, the user can specify the first file number, then find the subsequent files by specifying N–9999. When N–9999 is specified, the time required for file search can be reduced.

Inputting a program

Procedure

1 Press soft key **[PRGRM]** on the ALL IO screen, described in Section III–8.10.1.

2 Select EDIT mode. A program directory is displayed.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

- A program directory is displayed only in EDIT mode. In all other modes, the ALL IO screen is displayed.

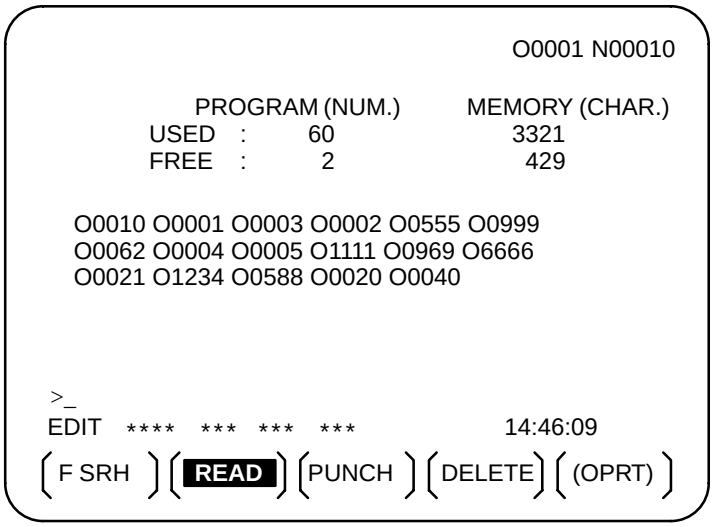

4 To specify a program number to be assigned to an input program, enter address O, followed by the desired program number.
If no program number is specified, the program number in the file or on the NC tape is assigned as is.



5 Press soft key **[READ]**, then **[EXEC]**.
The program is input with the program number specified in step **4** assigned.
To cancel input, press soft key **[CAN]**.
To stop input prior to its completion, press soft key **[STOP]**.

Outputting programs

Procedure

1 Press soft key **[PRGRM]** on the ALL IO screen, described in Section III–8.10.1.

2 Select EDIT mode. A program directory is displayed.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

- A program directory is displayed only in EDIT mode. In all other modes, the ALL IO screen is displayed.

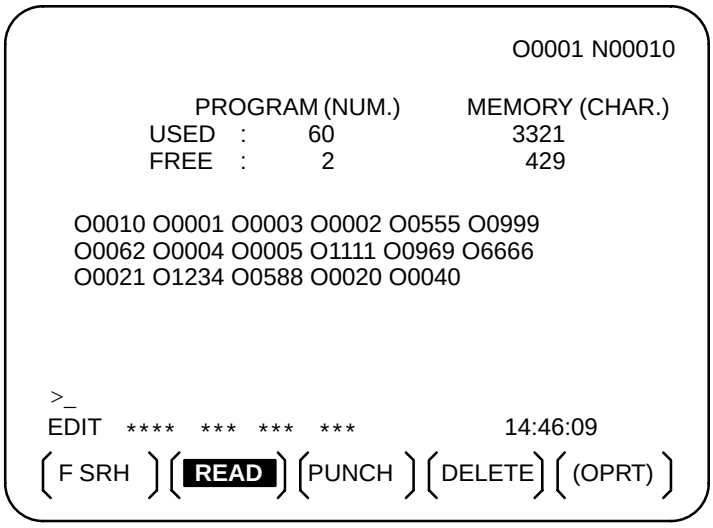

4 Enter address O.

5 Enter a desired program number.
If –9999 is entered, all programs in memory are output.
To output a range of programs, enter OΔΔΔΔ, O□□□□.. The programs numbered from ΔΔΔΔ to □□□□ are output.
When bit 4 (SOR) of parameter No. 3107 for sorted display is set to 1 on the program library screen, programs are output in order, starting from those having the smallest program numbers.



6 Press soft key **[PUNCH]**, then **[EXEC]**.
The specified program or programs are output. If steps **4** and **5** are omitted, the currently selected program is output.
To cancel output, press soft key **[CAN]**.
To stop output prior to its completion, press soft key **[STOP]**.

Deleting files

Procedure

1 Press soft key **[PRGRM]** on the ALL IO screen, described in Section III–8.10.1.

2 Select EDIT mode. A program directory is displayed.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

- A program directory is displayed only in EDIT mode. In all other modes, the ALL IO screen is displayed.

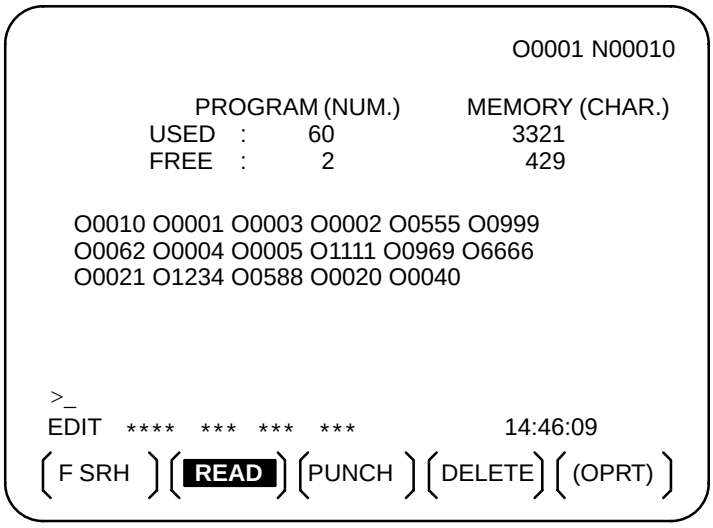

4 Press soft key **[DELETE]**.

5 Enter a file number, from 1 to 9999, to indicate the file to be deleted.



6 Press soft key **[EXEC]**.
The k–th file, specified in step 5, is deleted.

Explanations

- **File numbers after deletion**

After deletion of the k–th file, the previous file numbers (k+1) to n are decremented by 1 to k to (n–1).

Before deletion	After deletion
1 to (k–1)	1 to (k–1)
K	Delete
(k+1) to n	k to (n–1)

- **Write protect**

Before a file can be deleted, the write protect switch of the cassette must be set to make the cassette writable.

8.10.3 Inputting and Outputting Parameters

Parameters can be input and output using the ALL IO screen.

Inputting parameters

Procedure

1 Press soft key **[PARAM]** on the ALL IO screen, described in Section III–8.10.1.

2 Select EDIT mode.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

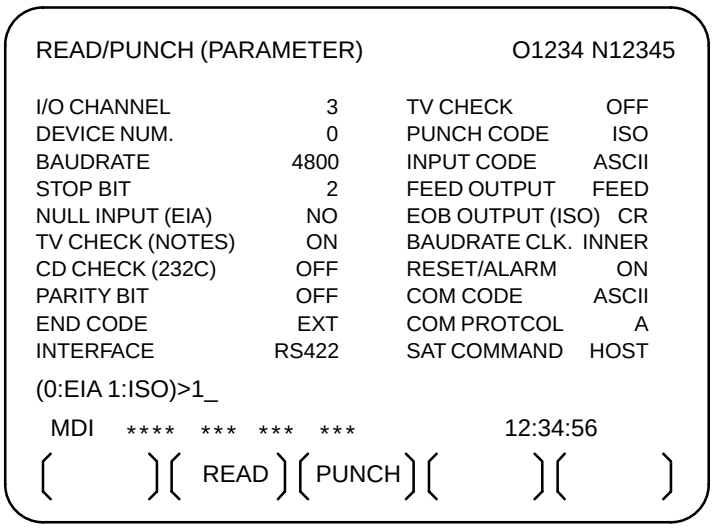



4 Press soft key **[READ]**, then **[EXEC]**.
The parameters are read, and the ”INPUT” indicator blinks at the lower–right corner of the screen. Upon the completion of input, the ”INPUT” indicator is cleared from the screen.
To cancel input, press soft key **[CAN]**.

Outputting parameters

Procedure

1 Press soft key **[PARAM]** on the ALL IO screen, described in Section III–8.10.1.

2 Select EDIT mode.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

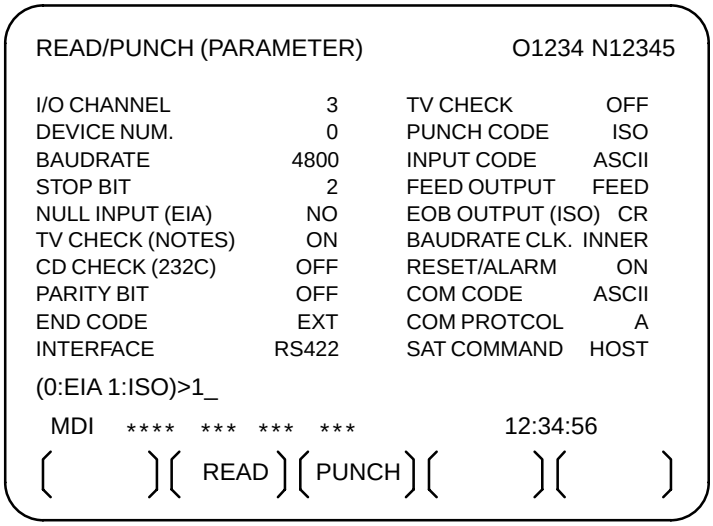



4 Press soft key **[PUNCH]**, then **[EXEC]**.
The parameters are output, and the ”OUTPUT” indicator blinks at the lower–right corner of the screen. Upon the completion of output, the ”OUTPUT” indicator is cleared from the screen.
To cancel output, press soft key **[CAN]**.

8.10.4 Inputting and Outputting Offset Data

Offset data can be input and output using the ALL IO screen.

Inputting offset data

Procedure

1 Press soft key **[OFFSET]** on the ALL IO screen, described in Section III–8.10.1.

2 Select EDIT mode.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

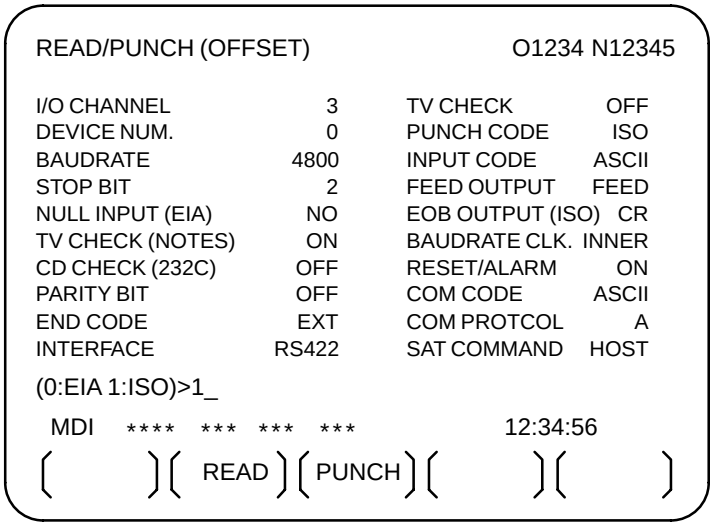



4 Press soft key **[READ]**, then **[EXEC]**.
The offset data is read, and the ”INPUT” indicator blinks at the lower–right corner of the screen.
Upon the completion of input, the ”INPUT” indicator is cleared from the screen.
To cancel input, press soft key **[CAN]**.

Outputting offset data

Procedure

1 Press soft key **[OFFSET]** on the ALL IO screen, described in Section III–8.10.1.

2 Select EDIT mode.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

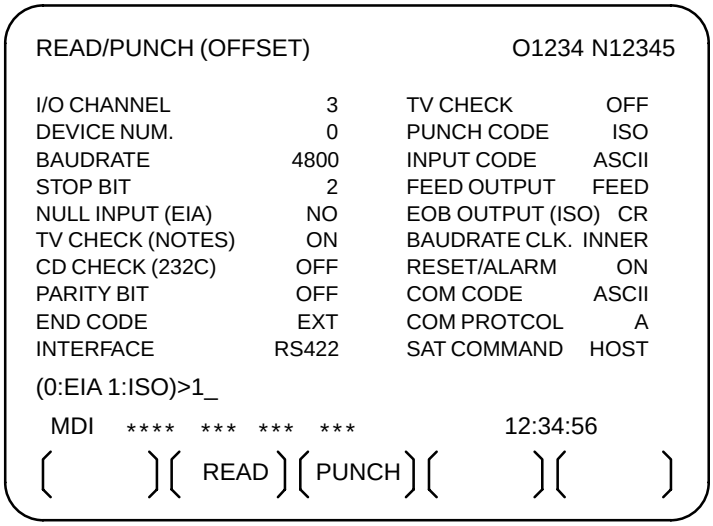



4 Press soft key **[PUNCH]**, then **[EXEC]**.
The offset data is output, and the ”OUTPUT” indicator blinks at the lower–right corner of the screen. Upon the completion of output, the ”OUTPUT” indicator is cleared from the screen.
To cancel output, press soft key **[CAN**].

8.10.5 Outputting Custom Macro Common Variables

Custom macro common variables can be output using the ALL IO screen.

Outputting custom macro common variables

Procedure

1 Press soft key **[MACRO]** on the ALL IO screen, described in Section III–8.10.1.

2 Select EDIT mode.

3 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

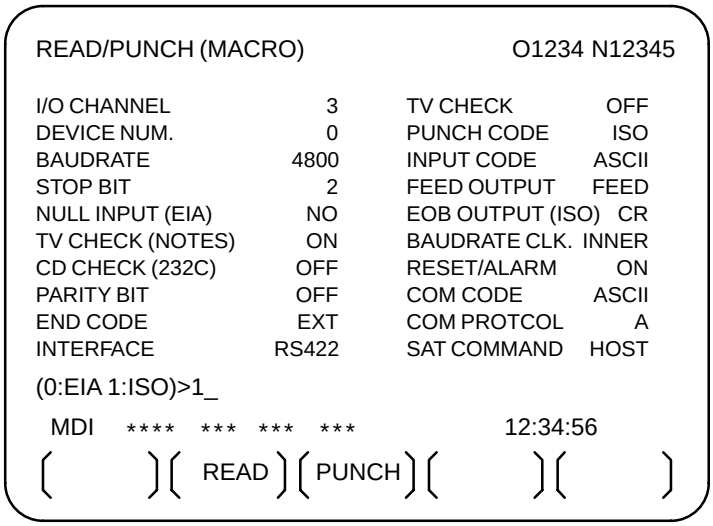



4 Press soft key **[PUNCH]**, then **[EXEC]**.
The custom macro common variables are output, and the ”OUTPUT” indicator blinks at the lower–right corner of the screen. Upon the completion of output, the ”OUTPUT” indicator is cleared from the screen.
To cancel output, press soft key **[CAN]**.

NOTE
To input a macro variable, read the desired custom macro statement as a program, then execute the program.

8.10.6 Inputting and Outputting Floppy Files

The ALL IO screen supports the display of a directory of floppy files, as well as the input and output of floppy files.

Displaying a file directory

Procedure

1 Press the rightmost soft key [▷] (next–menu key) on the ALL IO screen, described in Section III–8.10.1.

2 Press soft key **[FLOPPY**].

3 Select EDIT mode. The floppy screen is displayed.

4 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.

- The floppy screen is displayed only in EDIT mode. In all other modes, the ALL IO screen is displayed.

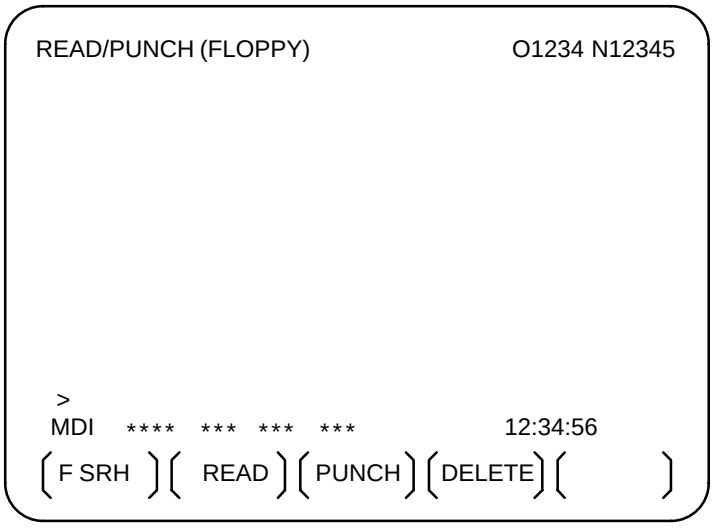

5 Press soft key **[F SRH]**.



6 Enter the number of the desired file, then press soft key **[F SET]**.

7 Press soft key **[EXEC]**. A directory is displayed, with the specified file uppermost. Subsequent files in the directory can be displayed by pressing the page key.

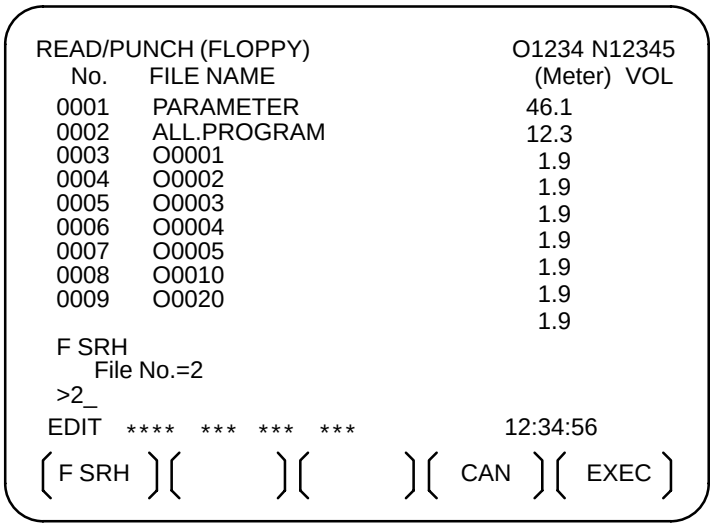

A directory in which the first file is uppermost can be displayed simply by pressing the page key. (Soft key **[F SRH]** need not be pressed.)

Inputting a file

Procedure

1 Press the rightmost soft key [▷] (next–menu key) on the ALL IO screen, described in Section III–8.10.1.

2 Press soft key **[FLOPPY]**.

3 Select EDIT mode. The floppy screen is displayed.

4 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.
The floppy screen is displayed only in EDIT mode. In all other modes, the ALL IO screen is displayed.

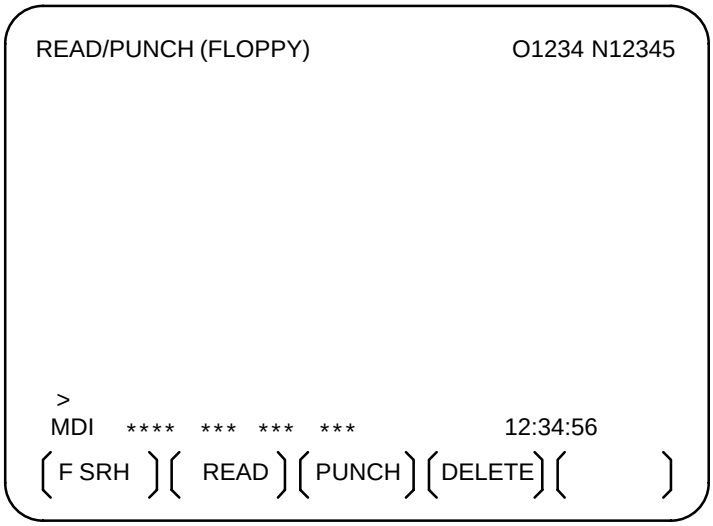

5 Press soft key **[READ]**.



6 Enter the number of a file or program to be input.

- Setting a file number: Enter the number of the desired file, then press soft key **[F SET]**.
- Setting a program number: Enter the number of the desired program, then press soft key **[O SET]**.

7 Press soft key **[EXEC]**.
The specified file or program is read, and the ”INPUT” indicator blinks at the lower–right corner of the screen. Upon the completion of input, the ”INPUT” indicator is cleared from the screen.

Outputting a file

Procedure

1 Press the rightmost soft key [▷] (next–menu key) on the ALL IO screen, described in Section III–8.10.1.

2 Press soft key **[FLOPPY]**.

3 Select EDIT mode. The floppy screen is displayed.

4 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.
The floppy screen is displayed only in EDIT mode. In all other modes, the ALL IO screen is displayed.

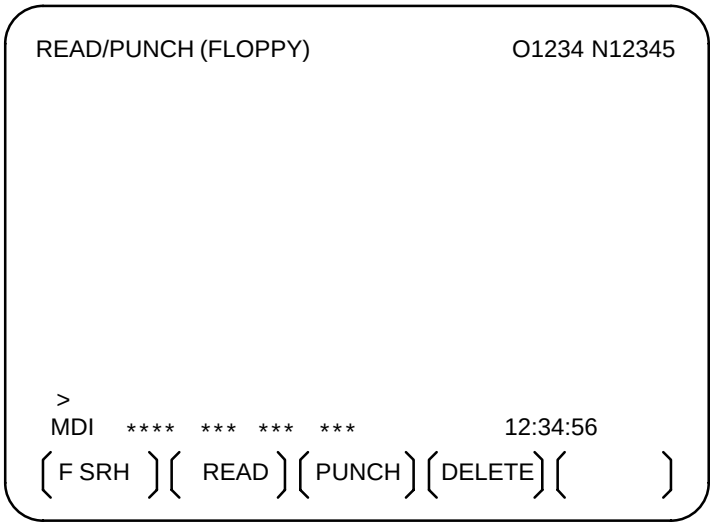

5 Press soft key **[PUNCH]**.



6 Enter the number of the program to be output, together with a desired output file number.

- Setting a file number: Enter the number of the desired file, then press soft key **[F SET]**.
- Setting a program number: Enter the number of the desired program, then press soft key **[O SET]**.

7 Press soft key **[EXEC]**.
The specified program is output, and the ”OUTPUT” indicator blinks at the lower–right corner of the screen. Upon the completion of output, the ”OUTPUT” indicator is cleared from the screen.
If no file number is specified, the program is written at the end of the currently registered files.

Deleting a file

Procedure

1 Press the rightmost soft key [▷] (next–menu key) on the ALL IO screen, described in Section III–8.10.1.

2 Press soft key **[FLOPPY]**.

3 Select EDIT mode. The floppy screen is displayed.

4 Press soft key **[(OPRT)]**. The screen and soft keys change as shown below.
The floppy screen is displayed only in EDIT mode. In all other modes, the ALL IO screen is displayed.

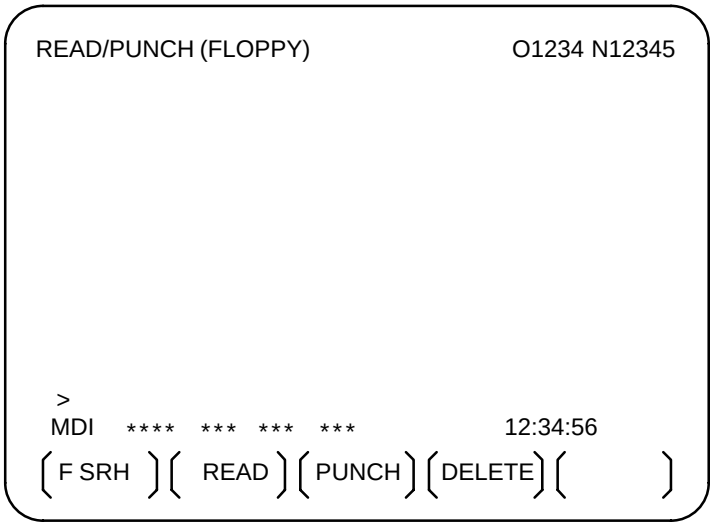

5 Press soft key **[DELETE]**.



6 Enter the number of the desired file, then press soft key **[F SET]**.

7 Press soft key **[EXEC]**. The specified file is deleted. After the file has been deleted, the subsequent files are shifted up.

8.10.7 Memory Card Input/Output

Data held in CNC memory can be saved to a memory card in MS–DOS format. Data held on a memory card can be loaded into CNC memory. A save or load operation can be performed using soft keys while the CNC is operating.
Loading can be performed in either of two ways. In the first method, all saved memory data is loaded. In the second method, only selected data is loaded.

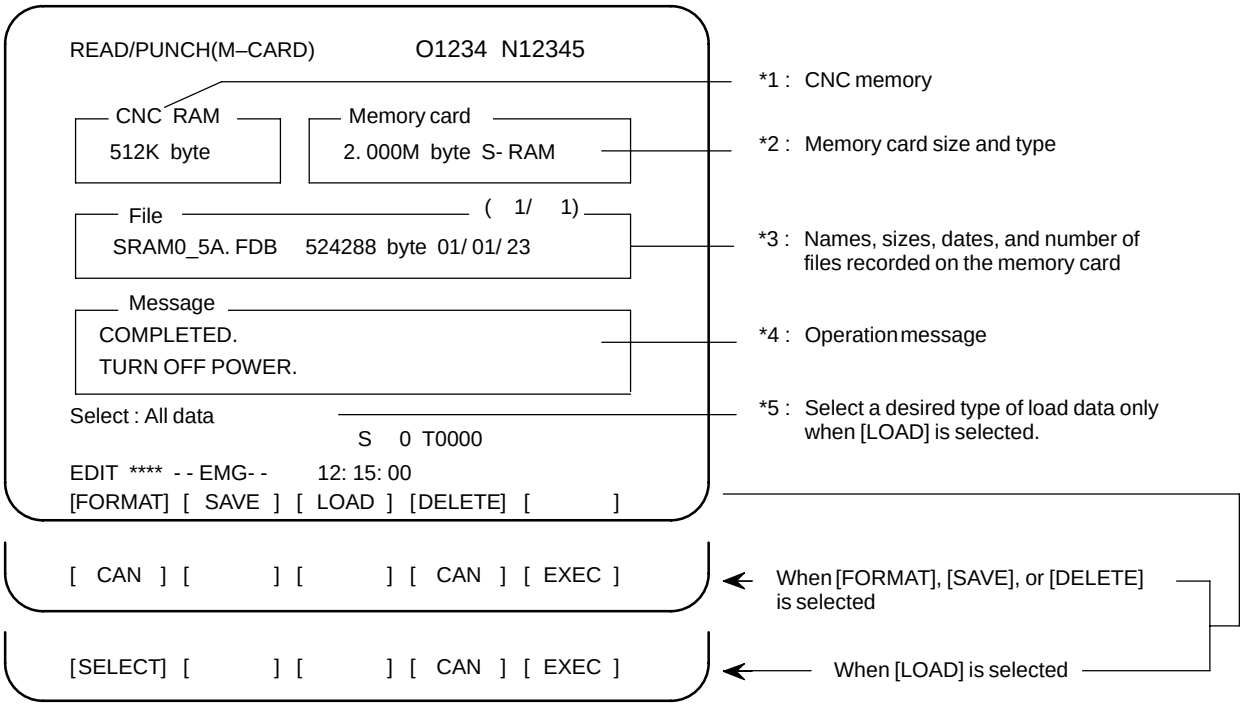

- The CNC memory size (*1) is displayed at all times.
- When no memory card is inserted, the message field (*4) displays a message prompting the user to insert a memory card, but does not display the memory card states (*2 and *3).
- If an inserted memory card is invalid (if there is no attribute memory, or if the attribute memory does not contain any device information), the message field (*4) displays an error message, but does not display the memory card states (*2 and *3).

Saving memory data

Data held in CNC memory can be saved to a memory card in MS–DOS format.

Saving memory data

Procedure

1 Press the rightmost soft key [▷] (next–menu key) on the ALL IO screen, described in Section 8.10.1.

2 Press soft key **[M–CARD]**.

3 Place the CNC in the emergency stop state.

4 When a memory card is inserted, the state of the memory card is displayed as shown below.

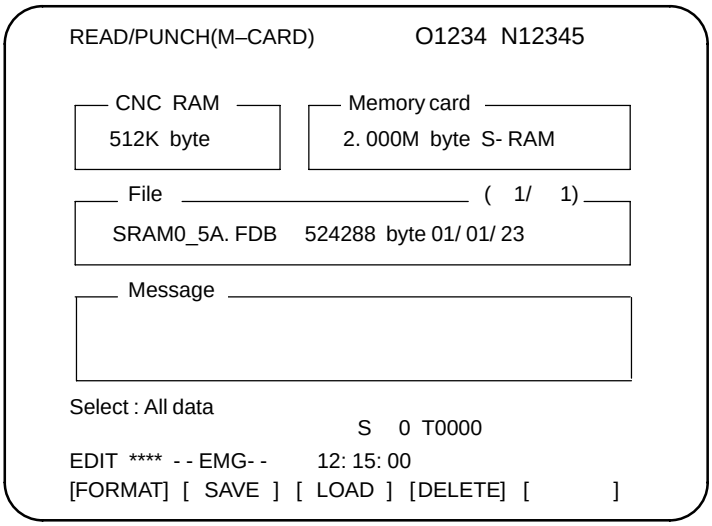



5 Press soft key **[SAVE]**.

6 A message prompting the user to confirm the operation is displayed. Press soft key **[EXEC]** to execute the save operation.

7 As the data is being saved to the card, the message ”RUNNING” blinks, and the number of bytes saved is displayed in the message field.

8 Once all data has been saved to the card, the message ”COMPLETED” is displayed in the message field, with the message ”PRESS RESET KEY.” displayed on the second line.

9 Press the RESET key. The displayed messages are cleared from the screen, and the display of the memory card state is replaced with that of the saved file.

NOTE
All CNC memory data is saved to a memory card. CNC memory data cannot be saved selectively.

Explanations

- **File name**

The file name used for save operation is determined by the amount of SRAM mounted in the CNC. The file to be saved is divided into 512 KB blocks.

SRAM file

Amount of SRAM		256KB	512KB	1.0MB	2.0MB	3.0MB
Number of files	1	SRAM256A.FDB	SRAM0_5A.FDB	SRAM1_0A.FDB	SRAM2_0A.FDB	SRAM3_0A.FDB
	2			SRAM1_0B.FDB	SRAM2_0B.FDB	SRAM3_0B.FDB
	3				SRAM2_0C.FDB	SRAM3_0C.FDB
	4				SRAM2_0D.FDB	SRAM3_0D.FDB
	5					SRAM3_0E.FDB
	6					SRAM3_0F.FDB

- **Canceling saving**

To cancel file save prior to its completion, press the RESET key on the MDI panel.

- **Memory card replacement request**

When the memory card has less than 512K bytes of free space, a memory card replacement request is displayed. Insert a new memory card.

Loading Data into Memory (Restoration)

CNC memory data that has been saved to a memory card can be loaded (restored) back into CNC memory.
CNC memory data can be loaded in either of two ways. In the first method, all saved memory data is loaded. In the second method, only selected data is loaded.

Loading memory data

Procedure

1 Press the rightmost soft key [▷] (next–menu key) on the ALL IO screen, described in Section III–8.10.1.

2 Press soft key **[M–CARD]**.

3 Place the CNC in the emergency stop state.

4 When a memory card is inserted, the state of the memory card is displayed as shown below.

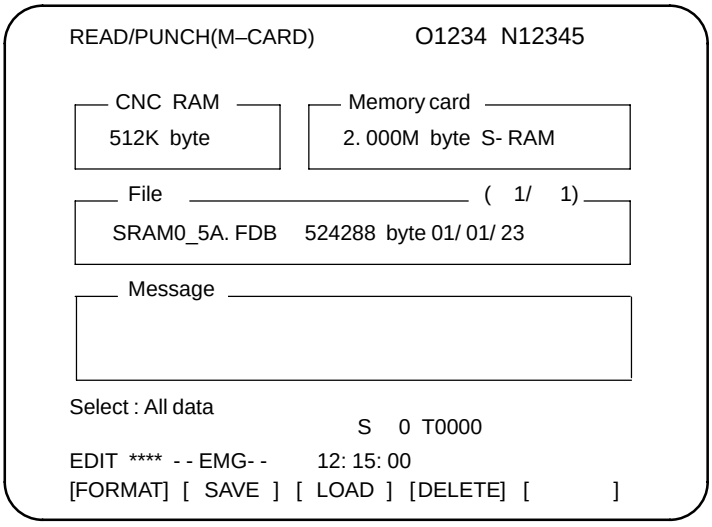

5 Press soft key **[LOAD]**.

6 With cursor keys [↑] and [↓], select the file to be loaded from the memory card.



7 To perform selective data loading, press soft key **[SELECT]**, then select the data to be loaded. Each time the soft key is pressed, the information displayed changes cyclically, as shown below.

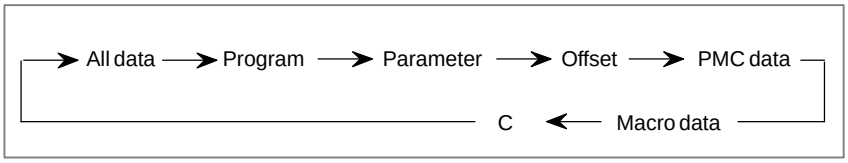

8 After checking the file selection, press soft key **[EXEC]**.

9 During loading, the message ”RUNNING” blinks, and the number of bytes loaded is displayed in the message field.

10 Upon the completion of loading, the message ”COMPLETED” is displayed in the message field, with the message ”PRESS RESET KEY.” displayed on the second line.

11 Press the RESET key. The messages are cleared from the screen.

Explanations

- **Canceling loading**

To cancel file load prior to its completion, press the RESET key on the MDI panel.

- **Turning off the power after loading**

Depending on the type of data, the system power may have to be turned off, then back on, for the load to become effective. When necessary, the message ”TURN OFF POWER.” is displayed in the message field.

- **Parameter/PMC data**

Before performing parameter/PMC data load, enable parameter write.

- **Program/offset data**

Before performing program/offset data load, set the data protection key, on the machine operator’s panel, to the ON position.

- **Loading files from multiple memory cards**

When multiple files are to be loaded from multiple memory cards, a message requesting memory card replacement is displayed.

NOTE

If the saved data and CNC system onto which the saved data is to be loaded do not satisfy the conditions described below, an error message is displayed in the message field, and loading is disabled. Note, however, that in selective loading, even if the CNC system structure differs from that of a saved file, the file is never the less loaded.

- The size of a saved file does not match the size of CNC RAM.
- The saved file has a different extension.

Memory card formatting

Before a file can be saved to a memory card, the memory card must be formatted.

Formatting a memory card

Procedure

1 Press the rightmost soft key ▷ (next–menu key) on the ALL IO screen, described in Section III–8.10.1.

2 Press soft key **[M–CARD]**.

3 Place the CNC in the emergency stop state.

4 When a memory card is inserted, the state of the memory card is displayed as shown below.

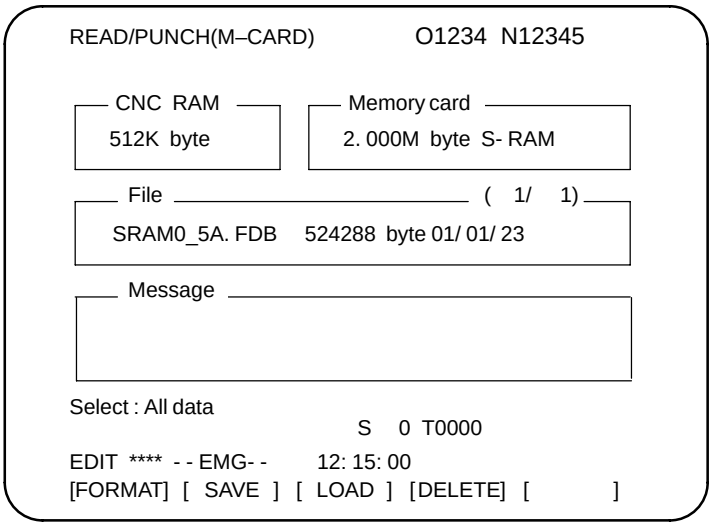

5 Press soft key **[FORMAT]**.



6 A message prompting the user to confirm the operation is displayed. Press soft key **[EXEC]** to execute the formatting operation.

7 As formatting is being performed, the message ”FORMATTING” blinks.

8 Upon the completion of formatting, the message ”COMPLETED” is displayed in the message field.

Deleting files

Unnecessary saved files can be deleted from a memory card.

Deleting files

Procedure

1 Press the rightmost soft key [▷] (next–menu key) on the ALL IO screen, described in Section III–8.10.1.

2 Press soft key **[M–CARD]**.

3 Place the CNC in the emergency stop state.

4 When a memory card is inserted, the state of the memory card is displayed as shown below.

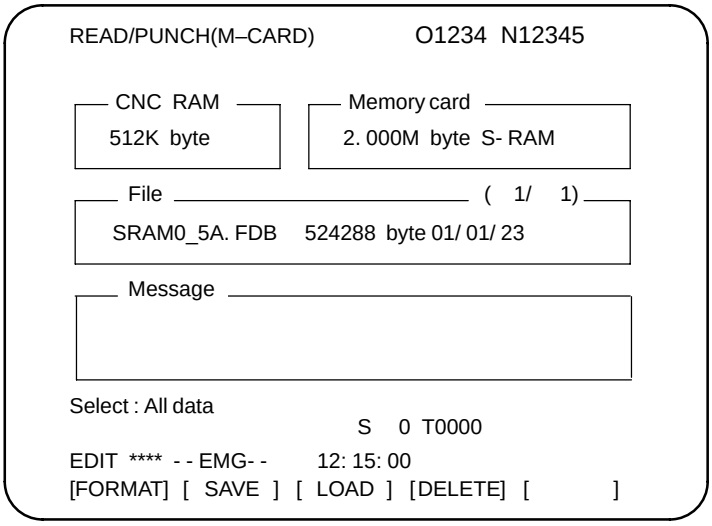

5 Press soft key **[DELETE]**.



6 With cursor keys [↑] and [↓], select the file to be deleted from the memory card.

7 After checking the file selection, press soft key **[EXEC]**.

8 As detection is being performed, the message ”DELETING” blinks in the message field.

9 Upon the completion of deletion, the message ”COMPLETED” is displayed in the message field

NOTE
An SRAM of 1M bytes or more will contain multiple files. To delete the contents of such an SRAM, delete all the contained files.

Messages and restrictions

Messages

Message	Description
INSERT MEMORY CARD.	No memory card is inserted.
UNUSABLE MEMORY CARD	The memory card does not contain device information.
FORMAT MEMORY CARD.	The memory card is not formatted. Format the memory card before use.
THE FILE IS UNUSABLE.	The format or extension of the file to be loaded is invalid. Alternatively, the data stored on the memory card does not match the CNC memory size.
REPLACE MEMORY CARD.	Replace the memory card.
FILE SYSTEM ERROR □□□	An error occurred during file system processing. □□□ represents a file system error code.
SET EMERGENCY STOP STATE.	Save/load operation is enabled in the emergency stop state only.
WRITE–PROTECTED	Save operation: The protect switch of the memory card is set to the disabled position. Load operation: Parameter write is disabled.
VOLTAGE DECREASED.	The battery voltage of the memory card has dropped. (The battery requires replacement.)
DEVICE IS BUSY.	Another user is using the memory card. Alternatively, the device cannot be accessed because automatic operation is in progress.
SRAM → MEMORY CARD?	This message prompts the user to confirm the start of data saving.
MEMORY CARD → SRAM?	This message prompts the user to confirm the start of data loading.
DO YOU WANT TO DELETE FILE(S)?	This message prompts the user to confirm the start of deletion.
DO YOU WANT TO PERFORM FORMATTING?	This message prompts the user to confirm the start of formatting.
SAVING	Saving is currently being performed.
LOADING	Loading is currently being performed.
DELETING	File deletion is currently being performed.
FORMATTING	Memory card formatting is currently being performed.
COMPLETED	Save or load processing has been completed.
PRESS RESET KEY.	Press the RESET key.
TURN OFF POWER.	Turn the power off, then back on again.

File system error codes

Code	Meaning
99	A portion that precedes the FAT area on the memory card is disrupted.
102	The memory card does not have sufficient free space.
105	No memory card is mounted.
106	A memory card is already mounted.
110	The specified directory cannot be found.
111	There are too many files under the root directory to allow a directory to be added.
114	The specified file cannot be found.
115	The specified file is protected.
117	The file has not yet been opened.
118	The file is already open.
119	The file is locked.
121	There is not enough free space on the memory card.
122	The specified file name is invalid.
124	The extension of the specified file is invalid.
129	A non–corresponding function was specified.
130	The specification of a device is invalid.
131	The specification of a pathname is invalid.
133	Multiple files are open at the same time.
135	The device is not formatted.
140	The file has the read/write disabled attribute.

Restrictions

- **Memory card size**

  The size of the memory card to be used must be larger than that of the RAM module mounted in the CNC. The size of the RAM module can be determined from the system configuration screen.

- **Memory card specifications**

  Use a memory card that conforms to PCMCIA Ver. 2.0, or JEIDA Ver. 4.1.

- **Attribute memory**

  A memory card which has no attribute memory, or no device information in its attribute memory, cannot be used.

- **Compatibility of saved data**

  Data saved to a memory card is compatible only with CNCs that have the same hardware configuration and the same option configuration.

- **Flash ROM card**

  A flash ROM card can be used only for data loading.

- **Operation during automatic operation**

  During automatic operation, the contents of a memory card cannot be displayed, formatted, or deleted. To enable these operations, therefore, stop or suspend automatic operation.

8.11 DATA INPUT/OUTPUT USING A MEMORY CARD

Setting the I/O channel (parameter No. 20) to 4 enables files on a memory card inserted in the memory card interface beside the indicator to be referenced. It also enables different types of data such as part programs, parameters, and offset data to be input and output in text file format. The major functions are listed below.

- Displaying a directory of stored files

  The files stored on a memory card can be displayed on the directory screen.
- Searching for a file

  A search is made for a file on a memory card and, if found, it is displayed on the directory screen.
- Reading a file

  Text–format files can be read from a memory card.
- Writing a file

  Data such as part programs can be stored to a memory card in text file format.
- Deleting a file

  A file can be selected and deleted from a memory card.

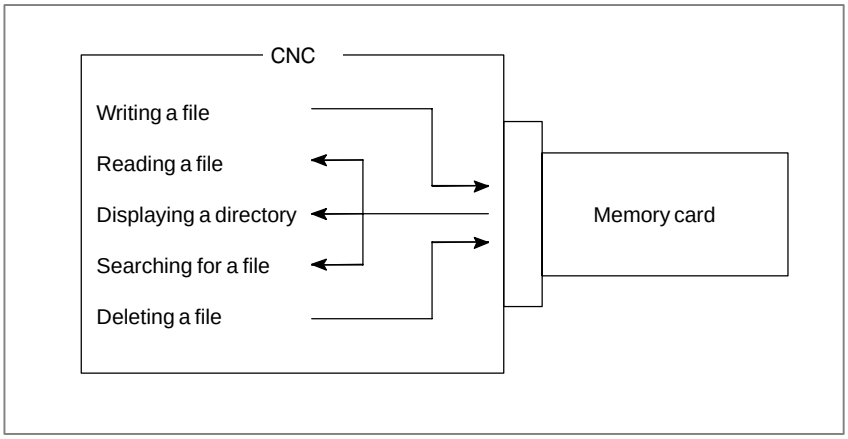

Displaying a directory of stored files

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG] .

3 Press the rightmost soft key [▷] (continuous–menu key).

4 Press soft key **[CARD]**. The screen shown below is displayed. Using page keys [↑] and [↓] , the screen can be scrolled.

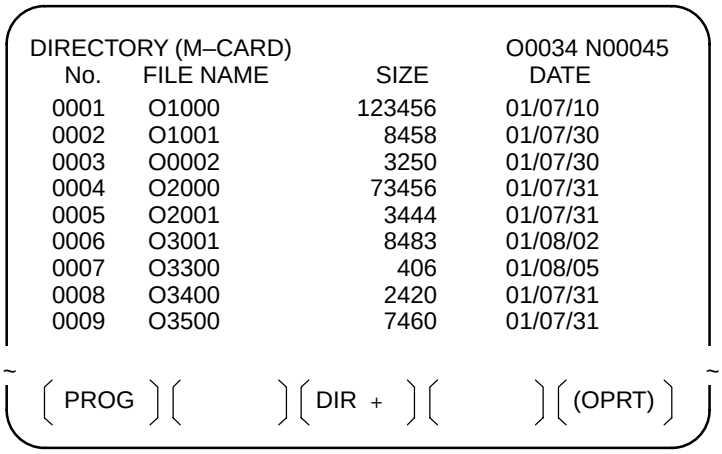

5 Comments relating to each file can be displayed by pressing soft key **[DIR+]**.

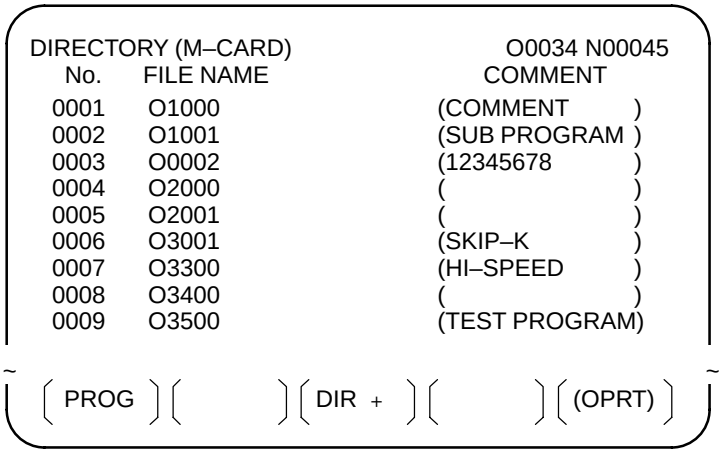

6 Repeatedly pressing soft key **[DIR+]** toggles the screen between the display of comments and the display of sizes and dates.
Any comment described after the O number in the file is displayed. Up to 18 characters can be displayed on the screen.

Searching for a file

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG].

3 Press the rightmost soft key [▷] (continuous–menu key).

4 Press soft key **[CARD]**. The screen shown below is displayed.

```
DIRECTORY (M–CARD)                    O0034 N00045
  No.    FILE NAME        SIZE          DATE
 0001    O1000          123456        01/07/10
 0002    O1001            8458        01/07/30
 0003    O0002            3250        01/07/30
 0004    O2000           73456        01/07/31
 0005    O2001            3444        01/07/31
 0006    O3001            8483        01/08/02
 0007    O3300             406        01/08/05
 0008    O3400            2420        01/07/31
 0009    O3500            7460        01/07/31
~                                              ~
[ PROG ][      ][ DIR + ][      ][ (OPRT) ]
```

5 Press soft key **[(OPRT)]**.

[F SRH] [F READ] [N READ] [PUNCH] [DELETE]

6 Set the number of the desired file number with soft key **[F SRH]**. Then, start the search by pressing soft key **[EXEC]**. If found, the file is displayed at the top of the directory screen.

When a search is made for file number 19

```
DIRECTORY (M–CARD)                    O0034 N00045
  No.    FILE NAME          COMMENT
 0019    O1000          (MAIN PROGRAM)
 0020    O1010          (SUBPROGRAM–1)
 0021    O1020          (COMMENT      )
 0022    O1030          (COMMENT      )
~                                              ~
```

Reading a file

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG] .

3 Press the rightmost soft key (continuous–menu key).

4 Press soft key **[CARD]**. Then, the screen shown below is displayed.

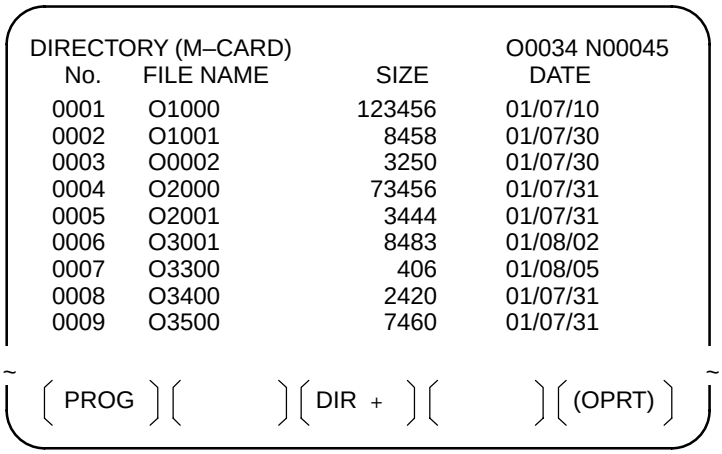



5 Press soft key **[(OPRT)]**.

6 To specify a file number, press soft key **[F READ]**. The screen shown below is displayed.

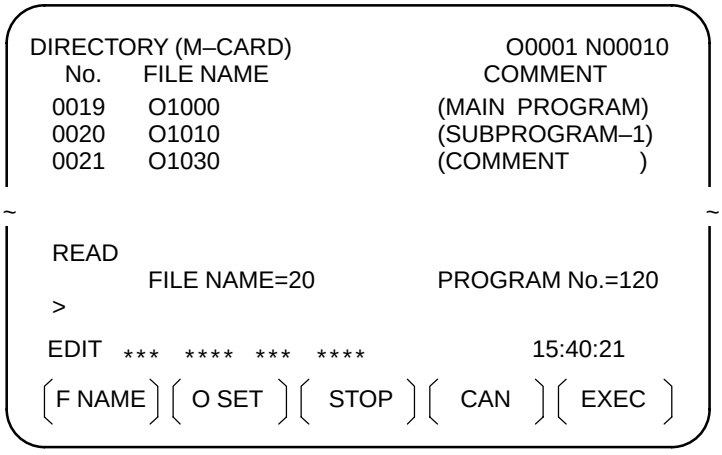

7 Enter file number 20 from the MDI panel, then set the file number by pressing soft key **[F SET]**. Next, enter program number 120, then set the program number by pressing soft key **[O SET]**. Then, press soft key **[EXEC]**.

- File number 20 is registered as O0120 in the CNC.
- Set a program number to register a read file with a separate O number. If no program number is set, the O number in the file name column is registered.

8 To specify a file with its file name, press soft key **[N READ]** in step 6 above. The screen shown below is displayed.

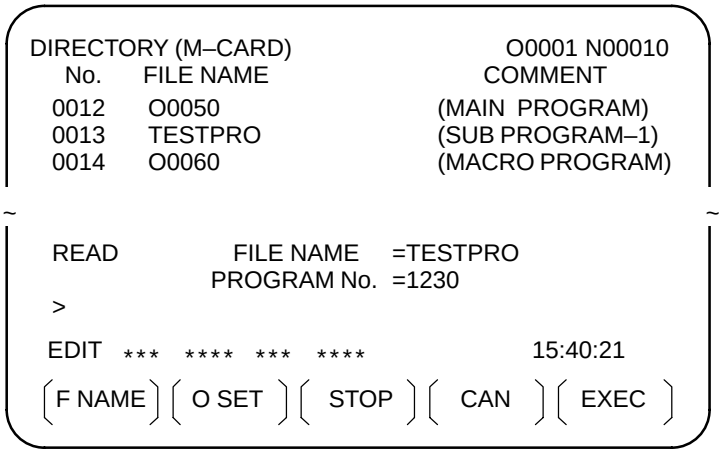

9 To register file name TESTPRO as O1230, enter file name TESTPRO from the MDI panel, then set the file name with soft key **[F NAME]**. Next, enter program number 1230, then set the program number with soft key [O SET]. Then, press soft key **[EXEC]**.

Writing a file

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG] .

3 Press the rightmost soft key [▷] (continuous–menu key).

4 Press soft key **[CARD]**. The screen shown below is displayed.

```
DIRECTORY (M–CARD)                    O0034 N00045
  No.   FILE NAME      SIZE          DATE
 0001   O1000         123456        96/07/10
 0002   O1001           8458        96/07/30
 0003   O0002           3250        96/07/30
 0004   O2000          73456        96/07/31
 0005   O2001           3444        96/07/31
 0006   O3001           8483        96/08/02
 0007   O3300            406        96/08/05
 0008   O3400           2420        96/07/31
 0009   O3500           7460        96/07/31
~ [ PROG ][      ][DIR +][      ][(OPRT)] ~
```

5 Press soft key **[(OPRT)]**.

```
[F SRH][F READ][N READ][PUNCH][DELETE]
```

6 Press soft key **[PUNCH]**.

7 Enter a desired O number from the MDI panel, then set the program number with soft key **[O SET]**.
When soft key **[EXEC]** is pressed after the setting shown below has been made, for example, the file is written under program number O1230.

```
~                                                ~
 PUNCH          FILE NAME  =
                PROGRAM No. =1230
 >
 EDIT  ***  ****  ***  ****              15:40:21
[F NAME][O SET][ STOP ][ CAN ][ EXEC ]
```

8 In the same way as for O number setting, enter a desired file name from the MDI panel, then set the file name with soft key **[F SET]**.
When soft key **[EXEC]** is pressed after the setting shown below has been made, for example, the file is written under program number O1230 and file name ABCD12.

```
~                                                ~
 PUNCH          FILE NAME  =ABCD12
                PROGRAM No. =1230
 >
 EDIT  ***  ****  ***  ****              15:40:21
[F NAME][O SET][ STOP ][ CAN ][ EXEC ]
```

Explanations

- **Registering the same file name**

When a file having the same name is already registered in the memory card, the existing file will be overwritten.

- **Writing all programs**

To write all programs, set program number = –9999. If no file name is specified in this case, file name PROGRAM.ALL is used for registration.

- **File name restrictions**

The following restrictions are imposed on file name setting:

<File name setting> ×××××××× . □□□

↑ Not longer than 8 characters

↑ Extension not longer than 3 characters

Deleting a file

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [PROG].

3 Press the rightmost soft key [▷] (continuous–menu key).

4 Press soft key **[CARD]**. The screen shown below is displayed.

```
DIRECTORY (M–CARD)                    O0034 N00045
  No.    FILE NAME        SIZE          DATE
 0001    O1000          123456        96/07/10
 0002    O1001            8458        96/07/30
 0003    O0002            3250        96/07/30
 0004    O2000           73456        96/07/31
 0005    O2001            3444        96/07/31
 0006    O3001            8483        96/08/02
 0007    O3300             406        96/08/05
 0008    O3400            2420        96/07/31
 0009    O3500            7460        96/07/31
~
[ PROG ][      ][ DIR + ][      ][ (OPRT) ]
```

5 Press soft key **[(OPRT)]**.

```
[F SRH] [F READ] [N READ] [PUNCH] [DELETE]
```

6 Set the number of the desired file with soft key **[DELETE]**, then press soft key **[EXEC]**. The file is deleted, and the directory screen is displayed again.

When file number 21 is deleted

```
DIRECTORY (M–CARD)                    O0034 N00045
  No.    FILE NAME          COMMENT
 0019    O1000          (MAIN PROGRAM)
 0020    O1010          (SUBPROGRAM–1)
 0021    O1020          (COMMENT      )
 0022    O1030          (COMMENT      )
~
```

File name O1020 is deleted.

```
DIRECTORY (M–CARD)                    O0034 N00045
  No.    FILE NAME          COMMENT
 0019    O1000          (MAIN PROGRAM)
 0020    O1010          (SUBPROGRAM–1)
 0021    O1020          (COMMENT      )
 0022    O1030          (COMMENT      )
~
```

File number 21 is assigned to the next file name.

Batch input/output with a memory card

On the ALL IO screen, different types of data including part programs, parameters, offset data, pitch error data, custom macros, and workpiece coordinate system data can be input and output using a memory card; the screen for each type of data need not be displayed for input/output.

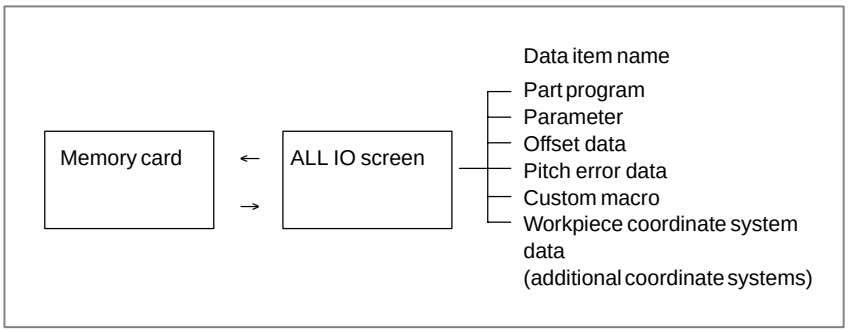

Procedure

1 Press the EDIT switch on the machine operator's panel.

2 Press function key [SYSTEM].

3 Press the rightmost soft key [▷] (continuous–menu key) several times.

4 Press soft key **[ALL IO]**. The screen shown below is displayed.

```
READ/PUNCH (PROGRAM)                    O0001 N00001
  No.    FILE NAME          SIZE          DATE
 *0001   O0222              332010        96–04–06
 *0002   O1003              334450        96–05–04
 *0003   MACROVAR.DAT       653400        96–05–12
 *0004   O0002              341205        96–05–13
    [PROGRAM]
 *O0001  O0002  O0003  O0005  O0100  O0020
 *O0006  O0004  O0110  O0200  O2200  O0441
 *O0330
 >
 EDIT  ***  ****  ***  ****              10:07:37
 [ PROG ][ PARAM ][OFFSET][      ][ (OPRT) ]
```

Upper part : Directory of files on the memory card
Lower part : Directory of registered programs

5 With cursor keys [↑] and [↓], the user can choose between upper part scrolling and lower part scrolling. (An asterisk (*) displayed at the left edge indicates the part for which scrolling is possible.)

[↑] : Used for memory card file directory scrolling.

[↓] : Used for program directory scrolling.

6 With page keys [↑] and [↓], scroll through the file directory or program directory.

Explanations

- **Each data item**

When this screen is displayed, the program data item is selected. The soft keys for other screens are displayed by pressing the rightmost soft key [▷] (continuous–menu key). Soft key **[M–CARD]** represents a separate memory card function for saving and restoring system RAM data. (See Sections 8.10.7.)

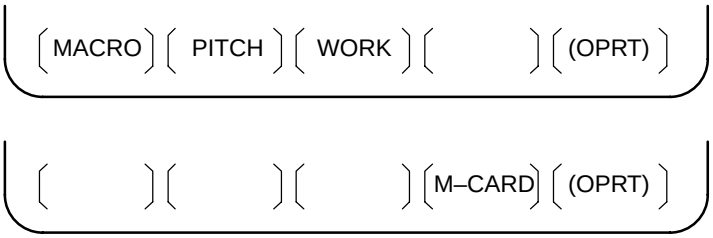

When a data item other than program is selected, the screen displays only a file directory.
A data item is indicated, in parentheses, on the title line.

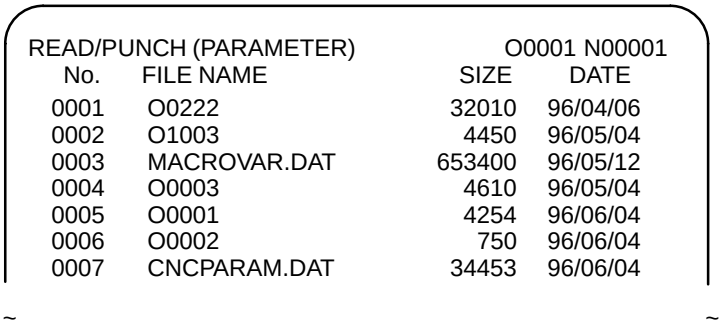

READ/PUNCH (PARAMETER) O0001 N00001

No.	FILE NAME	SIZE	DATE
0001	O0222	32010	96/04/06
0002	O1003	4450	96/05/04
0003	MACROVAR.DAT	653400	96/05/12
0004	O0003	4610	96/05/04
0005	O0001	4254	96/06/04
0006	O0002	750	96/06/04
0007	CNCPARAM.DAT	34453	96/06/04

~ ~

- **Program directory display**

Program directory display does not match bit 0 (NAM) of parameter No. 3107, or bit 4 (SOR) of parameter No. 3107.

- **Using each function**

Display the following soft keys with soft key **[(OPRT)]**.

The operation of each function is the same as on the directory (memory card) screen. Soft key **[O SET]**, used for program number setting, and the ”PROGRAM NUMBER =” indication are not displayed for data items other than program.

[F SRH] : Finds a specified file number.
[F READ] : Reads a specified file number.
[PUNCH] : Writes a file.
[N READ] : Reads a file under a specified file name.
[DELETE] : Deletes a specified file number.

NOTE
See Section 4.10 of Part III for explanations about the RMT mode operation based on a program from a memory card and about the subprogram call function based on the M198 command.

File format and error messages

Format

All files that are read from and written to a memory card are of text format. The format is described below.
A file starts with % or LF, followed by the actual data. A file always ends with %. In a read operation, data between the first % and the next LF is skipped. Each block ends with an LF, not a semicolon (;).

- LF: 0A (hexadecimal) of ASCII code
- When a file containing lowercase letters, kana characters, and several special characters (such as $, \, and !) is read, those letters and characters are ignored.
  Example:

```
%
O0001(MEMORY CARD SAMPLE FILE)
G17 G49 G97
G92 X–11.3 Y2.33
  .
  .
M30
%
```

- ASCII code is used for input/output, regardless of the setting parameter (ISO/EIA).
- Bit 3 of parameter No. 0100 can be used to specify whether the end of block code (EOB) is output as ”LF” only, or as ”LF, CR, CR.”

Error messages

If an error occurs during memory card input/output, a corresponding error message is displayed.

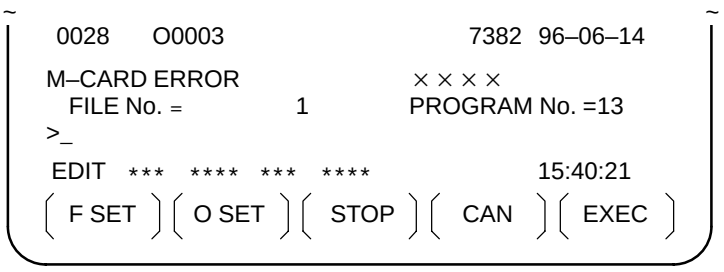

×××× represents a memory card error code.

Memory Card Error Codes

Code	Meaning
99	A portion that precedes the FAT area on the memory card is disrupted.
102	The memory card does not have sufficient free space.
105	No memory card is mounted.
106	A memory card is already mounted.
110	The specified directory cannot be found.
111	There are too many files under the root directory to allow a directory to be added.
114	The specified file cannot be found.
115	The specified file is protected.
117	The file has not yet been opened.
118	The file is already open.
119	The file is locked.
121	There is not enough free space on the memory card.
122	The specified file name is invalid.
124	The extension of the specified file is invalid.
129	A non–corresponding function was specified.
130	The specification of a device is invalid.
131	The specification of a pathname is invalid.
133	Multiple files are open at the same time.
135	The device is not formatted.
140	The file has the read/write disabled attribute.

9 EDITING PROGRAMS

General

This chapter describes how to edit programs registered in the CNC. Editing includes the insertion, modification, deletion, and replacement of words. Editing also includes deletion of the entire program and automatic insertion of sequence numbers. The extended part program editing function can copy, move, and merge programs. This chapter also describes program number search, sequence number search, word search, and address search, which are performed before editing the program.

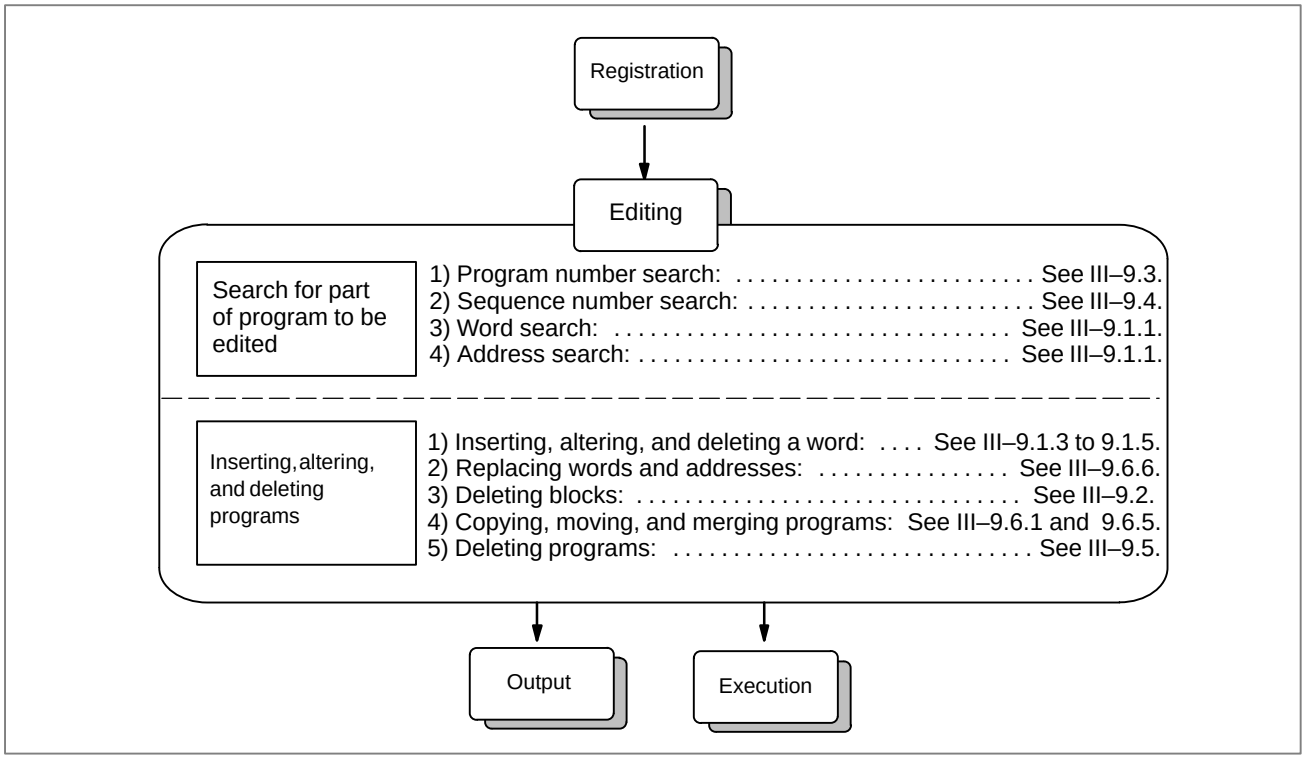

9.1 INSERTING, ALTERING AND DELETING A WORD

This section outlines the procedure for inserting, modifying, and deleting a word in a program registered in memory.

Procedure for inserting, altering and deleting a word

1 Select **EDIT** mode.

2 Press PROG .

3 Select a program to be edited.
If a program to be edited is selected, perform the operation 4.
If a program to be edited is not selected, search for the program number.

4 Search for a word to be modified.
- Scan method
- Word search method

5 Perform an operation such as altering, inserting, or deleting a word.

Explanation

• Concept of word and editing unit

A word is an address followed by a number. With a custom macro, the concept of word is ambiguous.
So the editing unit is considered here.
The editing unit is a unit subject to alteration or deletion in one operation.
In one scan operation, the cursor indicates the start of an editing unit.
An insertion is made after an editing unit.
Definition of editing unit

(i) Program portion from an address to immediately before the next address

(ii) An address is an alphabet, **IF**, **WHILE**, **GOTO**, **END**, **DO**=,or **; (EOB)**. According to this definition, a word is an editing unit.

The word “word,” when used in the description of editing, means an editing unit according to the precise definition.

WARNING
The user cannot continue program execution after altering, inserting, or deleting data of the program by suspending machining in progress by means of an operation such as a single block stop or feed hold operation during program execution. If such a modification is made, the program may not be executed exactly according to the contents of the program displayed on the screen after machining is resumed. So, when the contents of memory are to be modified by part program editing, be sure to enter the reset state or reset the system upon completion of editing before executing the program.

9.1.1 Word Search

A word can be searched for by merely moving the cursor through the text (scanning), by word search, or by address search.

Procedure for scanning a program

1 Press the cursor key [→].

The cursor moves forward word by word on the screen; the cursor is displayed at a selected word.

2 Press the cursor key [←].

The cursor moves backward word by word on the screen; the cursor is displayed at a selected word.

Example) When Z1250.0 is scanned

```
Program                                  O0050  N01234
O0050 ;
N01234  X100.0 Z1250.0 ;
S12 ;
N56789  M03 ;
M02 ;
%
```

3 Holding down the cursor key [→] or [←] scans words continuously.

4 The first word of the next block is searched for when the cursor key [↓] is pressed.

5 The first word of the previous block is searched for when the cursor key [↑] is pressed.

6 Holding down the cursor key [↓] or [↑] moves the cursor to the head of a block continuously.

7 Pressing the page key [PAGE ↓] displays the next page and searches for the first word of the page.

8 Pressing the page key [↑ PAGE] displays the previous page and searches for the first word of the page.

9 Holding down the page key [PAGE ↓] or [↑ PAGE] displays one page after another.

Procedure for searching a word

Example) of Searching for S12

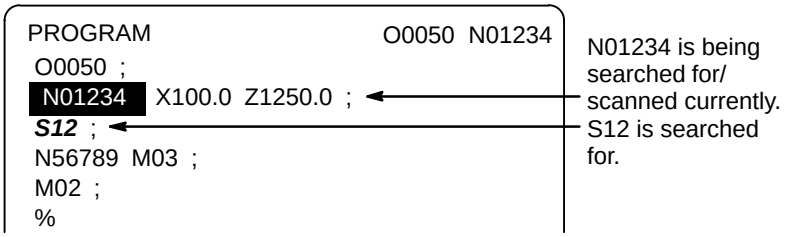

1 Key in address [S] .

2 Key in [1] [2] .

- S12 cannot be searched for if only S1 is keyed in.
- S09 cannot be searched for by keying in only S9.
  To search for S09, be sure to key in S09.

3 Pressing the **[SRH↓]** key starts search operation.
Upon completion of search operation, the cursor is displayed at S12.
Pressing the **[SRH↑]** key rather than the **[SRH↓]** key performs search operation in the reverse direction.

Procedure for searching an address

Example) of Searching for M03

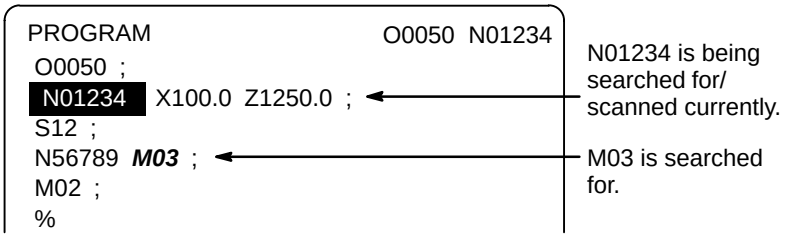

1 Key in address [M] .

2 Press the **[SRH↓]** key.
Upon completion of search operation, the cursor is displayed at M03.
Pressing the **[SRH↑]** key rather than the **[SRH↓]** key performs search operation in the reverse direction.

Alarm

Alarm number	Description
71	The word or address being searched for was not found.

9.1.2 Heading a Program

The cursor can be jumped to the top of a program. This function is called heading the program pointer. This section describes the three methods for heading the program pointer.

Procedure for Heading a Program

Method 1

1 Press RESET when the program screen is selected in EDIT mode. When the cursor has returned to the start of the program, the contents of the program are displayed from its start on the screen.

Method 2

Search for the program number.

1 Press address O ,when a program screen is selected in the **MEMORY** or **EDIT** mode.

2 Input a program number.

3 Press the soft key **[O SRH]**.

Method 3

1 Select **[MEMORY]** or **[EDIT]** mode.

2 Press PROG .

3 Press the **[(OPRT)]** key.

4 Press the **[REWIND]** key.

9.1.3 Inserting a Word

Procedure for inserting a word

1 Search for or scan the word immediately before a word to be inserted.

2 Key in an address to be inserted.

3 Key in data.

4 Press the INSERT key.

Example of Inserting T15

Procedure

1 Search for or scan Z1250.

2 Key in T 1 5 .

3 Press the INSERT key.

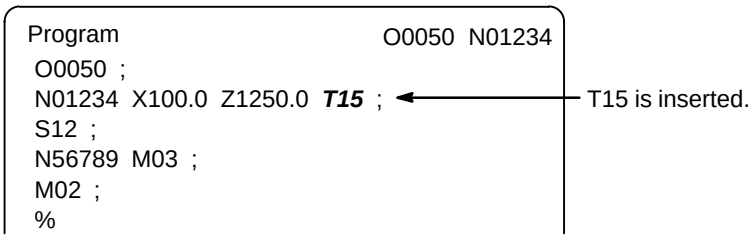

9.1.4 Altering a Word

Procedure for altering a word

1 Search for or scan a word to be altered.

2 Key in an address to be inserted.

3 Key in data.

4 Press the ALTER key.

Example of changing T15 to M15

Procedure

1 Search for or scan T15.

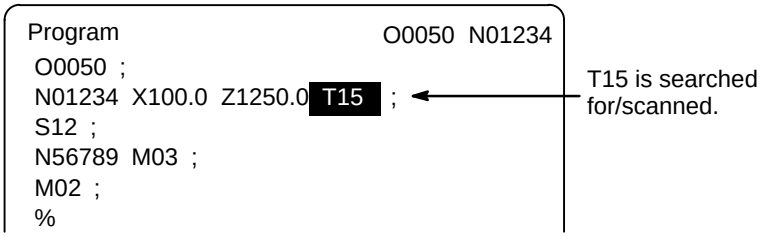

2 Key in M 1 5 .

3 Press the ALTER key.

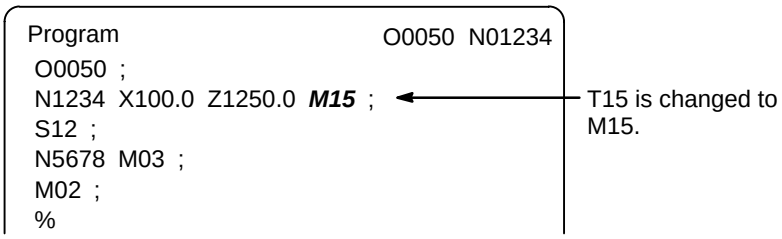

9.1.5 Deleting a Word

Procedure for deleting a word

1 Search for or scan a word to be deleted.

2 Press the DELETE key.

Example of deleting X100.0

Procedure

1 Search for or scan X100.0.

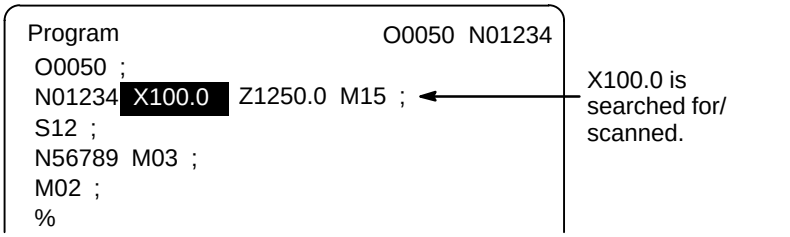

2 Press the DELETE key.

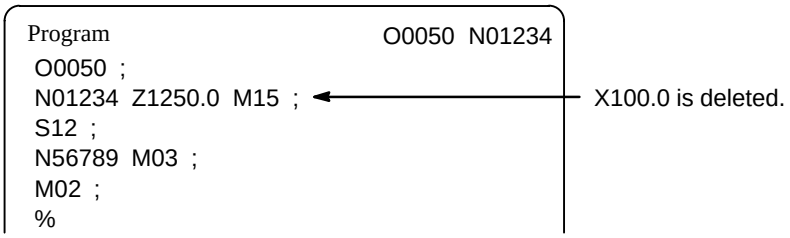

9.2 DELETING BLOCKS

A block or blocks can be deleted in a program.

9.2.1 Deleting a Block

The procedure below deletes a block up to its EOB code; the cursor advances to the address of the next word.

Procedure for deleting a block

1 Search for or scan address N for a block to be deleted.

2 Key in [EOB].

3 Press the [DELETE].

Example of deleting a block of N01234

Procedure

1 Search for or scan N01234.

2 Key in [EOB].

3 Press the [DELETE] key.

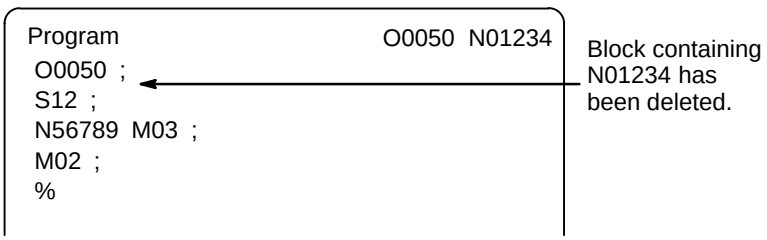

9.2.2 Deleting Multiple Blocks

The blocks from the currently displayed word to the block with a specified sequence number can be deleted.

Procedure for deleting multiple blocks

1 Search for or scan a word in the first block of a portion to be deleted.

2 Key in address [N] .

3 Key in the sequence number for the last block of the portion to be deleted.

4 Press the [DELETE] key.

Example of deleting blocks from a block containing N01234 to a block containing N56789

Procedure

1 Search for or scan N01234.

2 Key in [N] [5] [6] [7] [8] [9] .

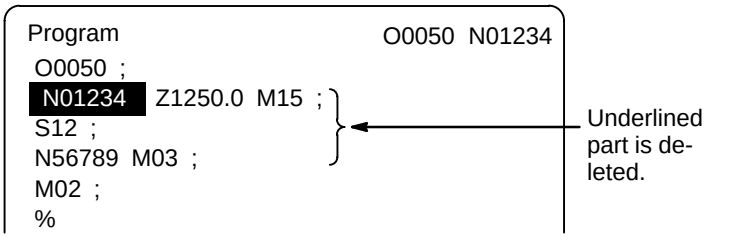

3 Press the [DELETE] key.

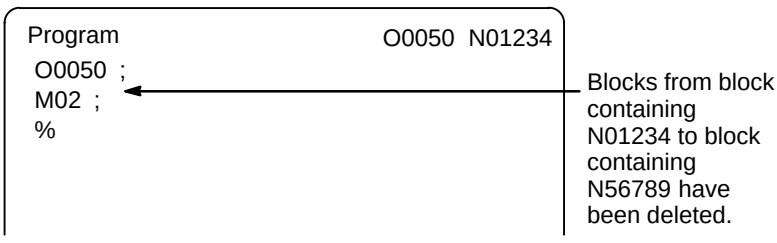

9.3 PROGRAM NUMBER SEARCH

When memory holds multiple programs, a program can be searched for. There are three methods as follows.

Procedure for program number search

Method 1

1 Select **EDIT** or **MEMORY** mode.

2 Press PROG to display the program screen.

3 Key in address O .

4 Key in a program number to be searched for.

5 Press the **[O SRH]** key.

6 Upon completion of search operation, the program number searched for is displayed in the upper–right corner of the screen
If the program is not found , P/S alarm No. 71 occurs.

Method 2

1 Select **EDIT** or **MEMORY** mode.

2 Press PROG to display the program screen.

3 Press the **[O SRH]** key.
In this case, the next program in the directory is searched for .

Method 3

This method searches for the program number (0001 to 0015) corresponding to a signal on the machine tool side to start automatic operation. Refer to the relevant manual prepared by the machine tool builder for detailed information on operation.

1 Select **MEMORY** mode.

2 Set the reset state(*1)
·The reset state is the state where the LED for indicating that automatic operation is in progress is off. (Refer to the relevant manual of the machine tool builder.)

3 Set the program number selection signal on the machine tool side to a number from 01 to 15.

· If the program corresponding to a signal on the machine tool side is not registered, P/S alarm (No. 059) is raised.

4 Press the cycle start button.

· When the signal on the machine tool side represents 00, program number search operation is not performed.

Alarm

No.	Contents
59	The program with the selected number cannot be searched during external program number search.
71	The specified program number was not found during program number search.

9.4 SEQUENCE NUMBER SEARCH

Sequence number search operation is usually used to search for a sequence number in the middle of a program so that execution can be started or restarted at the block of the sequence number.

Example) Sequence number 02346 in a program (O0002) is searched for.

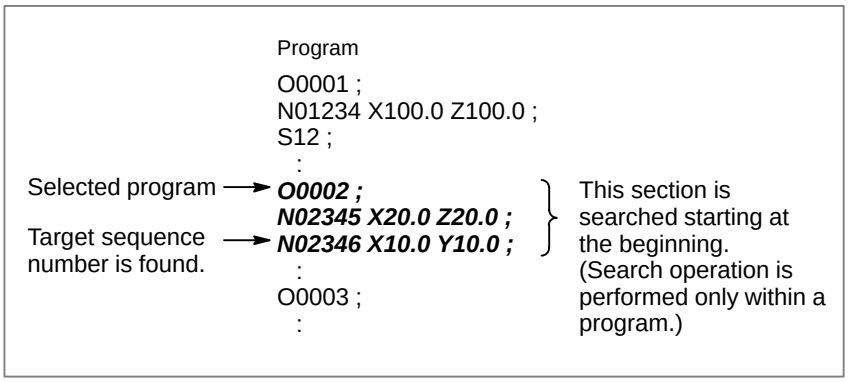

Procedure for sequence number search

1 Select **MEMORY** mode.

2 Press PROG .

3 · If the program contains a sequence number to be searchedfor, perform the operations 4 to 7 below.

· If the program does not contain a sequence number to be searched for,select the program number of the program that contains the sequence number to be searched for.

4 Key in address N .

5 Key in a sequence number to be searched for.

6 Press the **[N SRH]** key.

7 Upon completion of search operation, the sequence number searched for is displayed in the upper–right corner of the screen.
If the specified sequence number is not found in the program currently selected, P/S alarm No. 060 occurs.

Explanations

- **Operation during Search**

Those blocks that are skipped do not affect the CNC. This means that the data in the skipped blocks such as coordinates and M, S, and T codes does not alter the CNC coordinates and modal values.
So, in the first block where execution is to be started or restarted by using a sequence number search command, be sure to enter required M, S, and T codes and coordinates. A block searched for by sequence number search usually represents a point of shifting from one process to another. When a block in the middle of a process must be searched for to restart execution at the block, specify M, S, and T codes, G codes, coordinates, and so forth as required from the MDI after closely checking the machine tool and NC states at that point.

- **Checking during search**

During search operation, the following checks are made:
· Optional block skip
· P/S alarm (No. 003 to 010)

Limitations

- **Searching in sub–program**

During sequence number search operation, M98Pxxxx (subprogram call) is not executed. So a P/S alarm (No.060) is raised if an attempt is made to search for a sequence number in a subprogram called by the program currently selected.

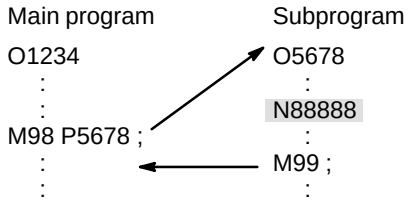

If an attempt is made to search for N8888 in the example above, an alarm is raised.

Alarm

Number	Contents
60	Command sequence number was not found in the sequence number search.

9.5 DELETING PROGRAMS

Programs registered in memory can be deleted,either one program by one program or all at once. Also, More than one program can be deleted by specifying a range.

9.5.1 Deleting One Program

A program registered in memory can be deleted.

Procedure for deleting one program

1 Select the **EDIT** mode.

2 Press [PROG] to display the program screen.

3 Key in address [O] .

4 Key in a desired program number.

5 Press the [DELETE] key.
The program with the entered program number is deleted.

9.5.2 Deleting All Programs

All programs registered in memory can be deleted.

Procedure for deleting all programs

1 Select the **EDIT** mode.

2 Press [PROG] to display the program screen.

3 Key in address [O] .

4 Key in –9999.

5 Press edit key [DELETE] to delete all programs.

9.5.3 Deleting More Than One Program by Specifying a Range

Programs within a specified range in memory are deleted.

Procedure for deleting more than one program by specifying a range

1 Select the **EDIT** mode.

2 Press PROG to display the program screen.

3 Enter the range of program numbers to be deleted with address and numeric keys in the following format:
OXXXX,OYYYY
where XXXX is the starting number of the programs to be deleted and YYYY is the ending number of the programs to be deleted.

4 Press edit key DELETE to delete programs No. XXXX to No. YYYY.

9.6 EXTENDED PART PROGRAM EDITING FUNCTION

With the extended part program editing function, the operations described below can be performed using soft keys for programs that have been registered in memory.
Following editing operations are available :

- All or part of a program can be copied or moved to another program.
- One program can be merged at free position into other programs.
- A specified word or address in a program can be replaced with another word or address.

9.6.1 Copying an Entire Program

A new program can be created by copying a program.

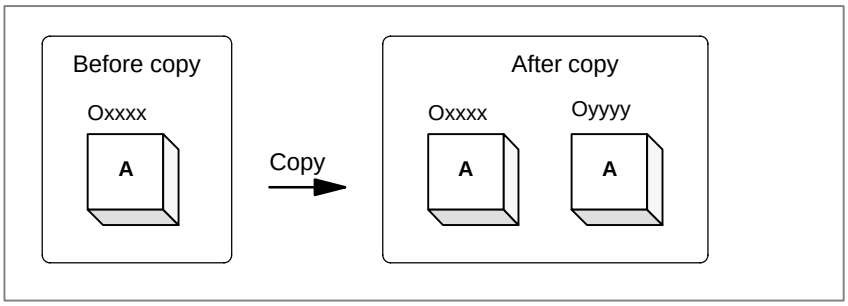

Fig. 9.6.1 Copying an entire program

In Fig. 9.6.1, the program with program number xxxx is copied to a newly created program with program number yyyy. The program created by copy operation is the same as the original program except the program number.

Procedure of copying an entire program

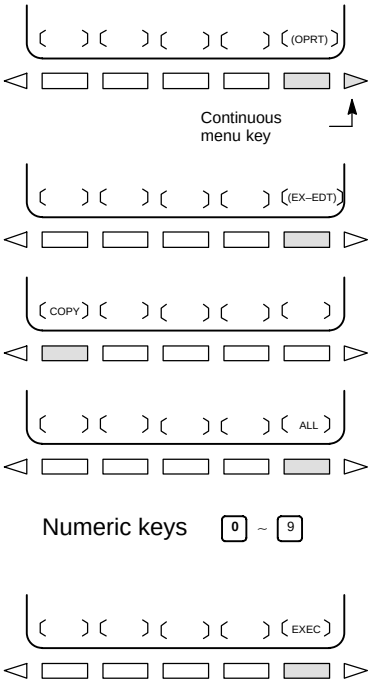

1 Enter the **EDIT** mode.

2 Press function key PROG .

3 Press soft key **[(OPRT)]**.

4 Press the continuous menu key.

5 Press soft key **[EX–EDT]**.

6 Check that the screen for the program to be copied is selected and press soft key **[COPY]**.

7 Press soft key **[ALL]**.

8 Enter the number of the new program (with only numeric keys) and press the INPUT key.

9 Press soft key **[EXEC]**.

9.6.2 Copying Part of a Program

A new program can be created by copying part of a program.

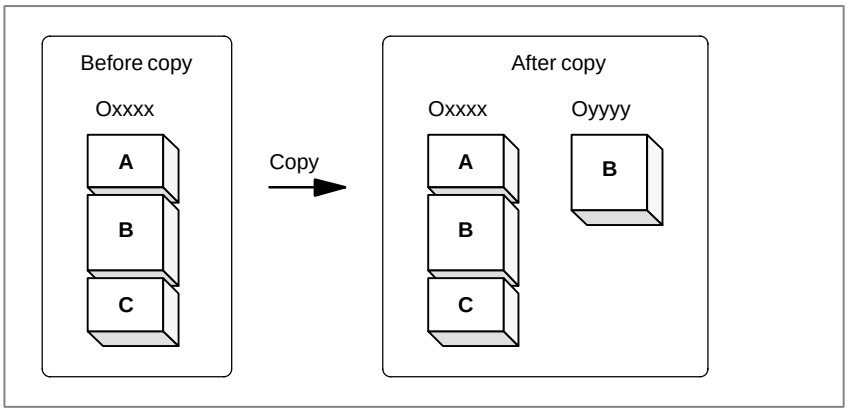

Fig. 9.6.2 Copying part of a program

In Fig. 9.6.2, part B of the program with program number xxxx is copied to a newly created program with program number yyyy. The program for which an editing range is specified remains unchanged after copy operation.

Procedure for copying part of a program

1 Perform steps **1** to **6** in **III–9.6.1**.



2 Move the cursor to the start of the range to be copied and press soft key **[CRSR∼]**.



3 Move the cursor to the end of the range to be copied and press soft key **[∼CRSR]** or **[∼BTTM]** (in the latter case, the range to the end of the program is copied regardless of the position of the cursor).

Numeric keys 0 ~ 9

4 Enter the number of the new program (with only numeric keys) and press the INPUT key.



5 Press soft key **[EXEC]**.

9.6.3 Moving Part of a Program

A new program can be created by moving part of a program.

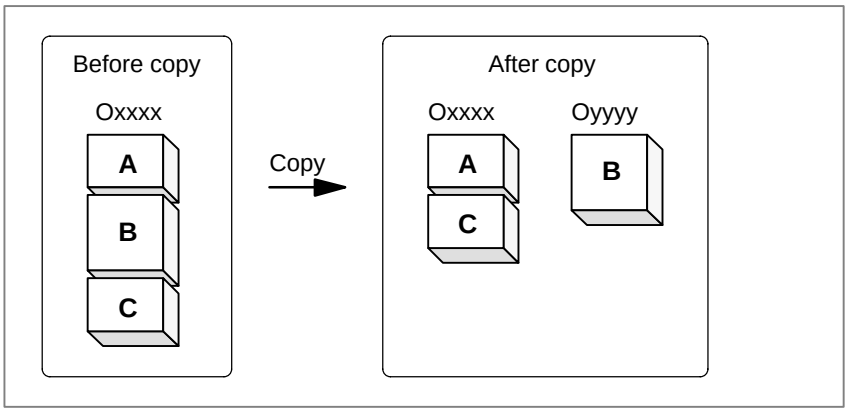

Fig. 9.6.3 Moving part of a program

In **Fig. 9.6.3**, part B of the program with program number xxxx is moved to a newly created program with program number yyyy; part B is deleted from the program with program number xxxx.

Procedure for moving part of a program



1 Perform steps 1 to 5 in **III–9.6.1**.

2 Check that the screen for the program to be moved is selected and press soft key **[MOVE]**.



3 Move the cursor to the start of the range to be moved and press soft key **[CRSR∼]**.



4 Move the cursor to the end of the range to be moved and press soft key **[∼CRSR]** or **[∼BTTM]**(in the latter case, the range to the end of the program is copied regardless of the position of the cursor).

5 Enter the number of the new program (with only numeric keys) and press the INPUT key.

Numeric keys 0 ~ 9



6 Press soft key **[EXEC]**.

9.6.4 Merging a Program

Another program can be inserted at an arbitrary position in the current program.

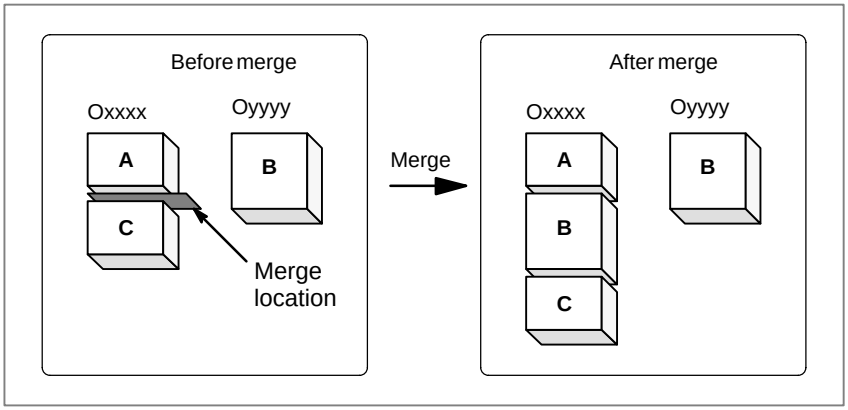

Fig. 9.6.4 Merging a program at a specified location

In **Fig. 9.6.4,** the program with program number XXXX is merged with the program with program number YYYY. The OYYYY program remains unchanged after merge operation.

Procedure for merging a program





Numeric keys 0 ~ 9



1 Perform steps **1** to **5** in **III–9.6.1**.

2 Check that the screen for the program to be edited is selected and press soft key **[MERGE]**.

3 Move the cursor to the position at which another program is to be inserted and press soft key **[~'CRSR]** or **[~BTTM']**(in the latter case, the end of the current program is displayed).

4 Enter the number of the program to be inserted (with only numeric keys) and press the INPUT key.

5 Press soft key **[EXEC]**.
The program with the number specified in step 4 is inserted before the cursor positioned in step 3.

9.6.5 Supplementary Explanation for Copying, Moving and Merging

Explanations

- **Setting an editing range**

The setting of an editing range start point with **[CRSR∼]** can be changed freely until an editing range end point is set with **[∼CRSR]** or **[∼BTTM]**. If an editing range start point is set after an editing range end point, the editing range must be reset starting with a start point.
The setting of an editing range start point and end point remains valid until an operation is performed to invalidate the setting.
One of the following operations invalidates a setting:

- An edit operation other than address search, word search/scan, and search for the start of a program is performed after a start point or end point is set.
- Processing is returned to operation selection after a start point or end point is set.

- **Without specifying a program number**

In copying program and moving program, if **[EXEC]** is pressed without specifying a program number after an editing range end point is set, a program with program number O0000 is registered as a work program. This O0000 program has the following features:

- The program can be edited in the same way as a general program. (Do not run the program.)
- If a copy or move operation is newly performed, the previous information is deleted at execution time, and newly set information (all or part of the program) is reregistered. (In merge operation, the previous information is not deleted.) However, the program, when selected for foreground operation, cannot be reregistered in the background. (A BP/S alarm No. 140 is raised.) When the program is reregistered, a free area is produced. Delete such a free area with the RESET key.
- When the program becomes unnecessary, delete the program by a normal editing operation.

- **Editing when the system waiting for a program number to be entered**

When the system is waiting for a program number to be entered, no edit operation can be performed.

Limitations

- **Number of digits for program number**

If a program number is specified by 5 or more digits, a format error is generated.

Alarm

Alarm no.	Contents
70	Memory became insufficient while copying or inserting a program. Copy or insertion is terminated.
101	The power was interrupted during copying, moving, or inserting a program and memory used for editing must be cleared. When this alarm occurs, press the key RESET while pressing function key PROG. Only the program being edited is deleted.

9.6.6 Replacement of Words and Addresses

Replace one or more specified words.
Replacement can be applied to all occurrences or just one occurrence of specified words or addresses in the program.

Procedure for hange of words or addresses

1 Perform steps 1 to 5 in III–9.6.1.



2 Press soft key **[CHANGE]**.

3 Enter the word or address to be replaced.



4 Press soft key **[BEFORE]**.

5 Enter the new word or address.



6 Press soft key **[AFTER]**.



7 Press soft key **[EXEC]** to replace all the specified words or addresses after the cursor.
Press soft key **[1–EXEC]** to search for and replace the first occurrence of the specified word or adress after the cursor.
Press soft key **[SKIP]** to only search for the first occurrence of the specified word or address after the cursor.

Examples

- **Replace X100 with Y200**

  [CHANGE] X 1 0 0 **[BEFORE]** Y 2 0 0 **[AFTER][EXEC]**

- **Replace X100Y200 with X30**

  [CHANGE] X 1 0 0 Y 2 0 0 **[BEFORE]** X 3 0 **[AFTER][EXEC]**

- **Replace IF with WHILE**

  [CHANGE] I F **[BEFORE]** W H I L E **[AFTER] [EXEC]**

- **Replace X with ,C10**

  [CHANGE] X **[BEFORE]** , C 1 0 **[AFTER][EXEC]**

Explanation

- **Replacing custom macros**

The following custom macro words are replaceable:
IF, WHILE, GOTO, END, DO, BPRNT, DPRINT, POPEN, PCLOS
The abbreviations of custom macro words can be specified.
When abbreviations are used, however, the screen displays the abbreviations as they are key input, even after soft key **[BEFORE]** and **[AFTER]** are pressed.

Restrictions

- **The number of characters for replacement**

Up to 15 characters can be specified for words before or after replacement. (Sixteen or more characters cannot be specified.)

- **The characters for replacement**

Words before or after replacement must start with a character representing an address.(A format error occurs.)

9.7 EDITING OF CUSTOM MACROS

Unlike ordinary programs, custom macro programs are modified, inserted, or deleted based on editing units.
Custom macro words can be entered in abbreviated form.
Comments can be entered in a program.
Refer to the III–10.1 for the comments of a program.

Explanations

● Editing unit

When editing a custom macro already entered, the user can move the cursor to each editing unit that starts with any of the following characters and symbols:

(a) Address
(b) # located at the start of the left side of a substitution statement
(c) /, (,=, and ;
(d) First character of IF, WHILE, GOTO, END, DO, POPEN, BPRNT, DPRNT and PCLOS

On the CRT screen, a blank is placed before each of the above characters and symbols.
(Example) Head positions where the cursor is placed

```
N001 X–#100 ;
#1 =123 ;
N002 /2 X[12/#3] ;
N003 X–SQRT[#3/3∗[#4+1]] ;
N004 X–#2 Z#1 ;
N005 #5 =1+2–#10 ;
IF[#1NE0] GOTO10 ;
WHILE[#2LE5] DO1 ;
#[200+#2] =#2∗10 ;
#2 =#2+1 ;
END1 ;
```

● Abbreviations of custom macro word

When a custom macro word is altered or inserted, the first two characters or more can replace the entire word.
Namely,

WHILE → WH	**GOTO → GO**	**XOR → XO**	**AND → AN**
SIN → SI	**ASIN → AS**	**COS → CO**	**ACOS → AC**
TAN → TA	**ATAN → AT**	**SQRT → SQ**	**ABS → AB**
BCD → BC	**BIN → BI**	**FIX → FI**	**FUP → FU**
ROUND → RO	**END → EN**	**EXP → EX**	**THEN → TH**
POPEN → PO	**BPRNT → BP**	**DPRNT → DP**	**PCLOS → PC**

(Example) Keying in

```
WH [AB [#2 ] LE RO [#3 ] ]
```

has the same effect as

```
WHILE  [ABS  [#2 ] LE ROUND [#3 ] ]
```

The program is also displayed in this way.

9.8 BACKGROUND EDITING

Editing a program while executing another program is called background editing. The method of editing is the same as for ordinary editing (foreground editing).
A program edited in the background should be registered in foreground program memory by performing the following operation:
During background editing, all programs cannot be deleted at once.

Procedure for background editing

1 Enter **EDIT** or **MEMORY** mode.
Memory mode is allowed even while the program is being executed.

2 Press function key [PROG] .

3 Press soft key **[(OPRT)]**, then press soft key **[BG–EDT]**.
The background editing screen is displayed (PROGRAM (BG–EDIT) is displayed at the top left of the screen).

4 Edit a program on the background editing screen in the same way as for ordinary program editing.

5 After editing is completed, press soft key **[(OPRT)]**, then press soft key **[BG–EDT].** The edited program is registered in foreground program memory.

Explanation

- **Alarms during background editing**

Alarms that may occur during background editing do not affect foreground operation. Conversely, alarms that may occur during foreground operation do not affect background editing. In background editing, if an attempt is made to edit a program selected for foreground operation, a BP/S alarm (No. 140) is raised. On the other hand, if an attempt is made to select a program subjected to background editing during foreground operation (by means of subprogram calling or program number search operation using an external signal), a P/S alarm (Nos. 059, 078) is raised in foreground operation. As with foreground program editing, P/S alarms occur in background editing. However, to distinguish these alarms from foreground alarms, BP/S is displayed in the data input line on the background editing screen.

9.9 PASSWORD FUNCTION

The password function (bit 4 (NE9) of parameter No. 3202) can be locked using parameter No. 3210 (PASSWD) and parameter No. 3211 (KEYWD) to protect program Nos. 9000 to 9999. In the locked state, parameter NE9 cannot be set to 0. In this state, program Nos. 9000 to 9999 cannot be modified unless the correct keyword is set.
A locked state means that the value set in the parameter PASSWD differs from the value set in the parameter KEYWD. The values set in these parameters are not displayed. The locked state is released when the value already set in the parameter PASSWD is also set in parameter KEYWD. When 0 is displayed in parameter PASSWD, parameter PASSWD is not set.

Procedure for locking and unlocking

Locking

1 Set the MDI mode.
2 Enable parameter writing. At this time, P/S alarm No. 100 is issued on the CNC.
3 Set parameter No. 3210 (PASSWD). At this time, the locked state is set.
4 Disable parameter writing.
5 Press the RESET key to release the alarm state.

Unlocking

1 Set the MDI mode.
2 Enable parameter writing. At this time, P/S alarm No. 100 is issued on the CNC.
3 In parameter No. 3211 (KEYWD), set the same value as set in parameter No. 3210 (PASSWD) for locking. At this time, the locked state is released.
4 Set bit 4 (NE9) of parameter No. 3202 to 0.
5 Disable parameter writing.
6 Press the RESET key to release the alarm state.
7 Subprograms from program Nos. 9000 to 9999 can now be edited.

Explanations

- **Setting parameter PASSWD**

The locked state is set when a value is set in the parameter PASSWD. However, note that parameter PASSWD can be set only when the locked state is not set (when PASSWD = 0, or PASSWD = KEYWD). If an attempt is made to set parameter PASSWD in other cases, a warning is given to indicate that writing is disabled. When the locked state is set (when PASSWD = 0 and PASSWD = KEYWD), parameter NE9 is automatically set to 1. If an attempt is made to set NE9 to 0, a warning is given to indicate that writing is disabled.

- **Changing parameter PASSWD**

Parameter PASSWD can be changed when the locked state is released (when PASSWD = 0, or PASSWD = KEYWD). After step 3 in the procedure for unlocking, a new value can be set in the parameter PASSWD. From that time on, this new value must be set in parameter KEYWD to release the locked state.

- **Setting 0 in parameter PASSWD**

When 0 is set in the parameter PASSWD, the number 0 is displayed, and the password function is disabled. In other words, the password function can be disabled by either not setting parameter PASSWD at all, or by setting 0 in parameter PASSWD after step 3 of the procedure for unlocking. To ensure that the locked state is not entered, care must be taken not to set a value other than 0 in parameter PASSWD.

- **Re–locking**

After the locked state has been released, it can be set again by setting a different value in parameter PASSWD, or by turning the power to the NC off then on again to reset parameter KEYWD.

CAUTION

Once the locked state is set, parameter NE9 cannot be set to 0 and parameter PASSWD cannot be changed until the locked state is released or the memory all–clear operation is performed. Special care must be taken in setting parameter PASSWD.

10 CREATING PROGRAMS

Programs can be created using any of the following methods:

- MDI keyboard
- PROGRAMMING IN TEACH IN MODE
- CONVERSATIONAL AUTOMATIC PROGRAMMING FUNCTION
- AUTOMATIC PROGRAM PREPARATION DEVICE (FANUC SYSTEM P)

This chapter describes creating programs using the MDI panel, Teach IN mode, and conversational programming with graphic function. This chapter also describes the automatic insertion of sequence numbers.

10.1 CREATING PROGRAMS USING THE MDI PANEL

Programs can be created in the EDIT mode using the program editing functions described in III–9.

Procedure for Creating Programs Using the MDI Panel

Procedure

1 Enter the **EDIT** mode.

2 Press the [PROG] key.

3 Press address key [O] and enter the program number.

4 Press the [INSERT] key.

5 Create a program using the program editing functions described in III–9.

Explanation

- **Comments in a program**

Comments can be written in a program using the control in/out codes.

Example) O0001 (FANUC SERIES 16) ;
M08 (COOLANT ON) ;

- When the [INSERT] key is pressed after the control–out code "(", comments, and control–in code ")" have been typed, the typed comments are registered.
- When the [INSERT] key is pressed midway through comments, to enter the rest of comments later, the data typed before the [INSERT] key is pressed may not be correctly registered (not entered, modified, or lost) because the data is subject to an entry check which is performed in normal editing.

Note the following to enter a comment:

- Control–in code ")" cannot be registered by itself.
- Comments entered after the [INSERT] key is pressed must not begin with a number, space, or address O.
- If an abbreviation for a macro is entered, the abbreviation is converted into a macro word and registered (see Section 9.7).
- Address O and subsequent numbers, or a space can be entered but are omitted when registered.

10.2 AUTOMATIC INSERTION OF SEQUENCE NUMBERS

Sequence numbers can be automatically inserted in each block when a program is created using the MDI keys in the EDIT mode.
Set the increment for sequence numbers in parameter 3216.

Procedure for automatic insertion of sequence numbers

Procedure

1 Set 1 for SEQUENCE NO. (see III–11.4.3).

2 Enter the **EDIT** mode.

3 Press [PROG] to display the program screen.

4 Search for or register the number of a program to be edited and move the cursor to the EOB (;) of the block after which automatic insertion of sequence numbers is started.
When a program number is registered and an EOB (;) is entered with the [INSERT] key, sequence numbers are automatically inserted starting with 0. Change the initial value, if required, according to step 10, then skip to step 7.

5 Press address key [N] and enter the initial value of N.

6 Press [INSERT].

7 Enter each word of a block.

8 Press [EOB].

9 Press INSERT. The EOB is registered in memory and sequence numbers are automatically inserted. For example, if the initial value of N is 10 and the parameter for the increment is set to 2, N12 inserted and displayed below the line where a new block is specified.

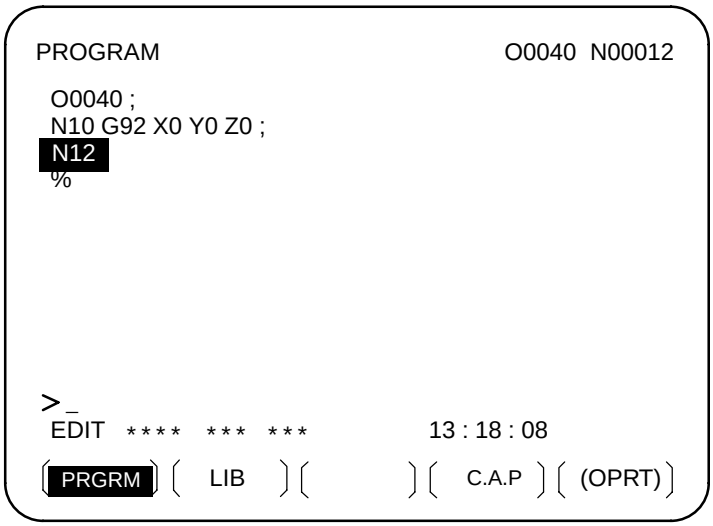

10
- In the example above, if N12 is not necessary in the next block, pressing the DELETE key after N12 is displayed deletes N12.
- To insert N100 in the next block instead of N12, enter N100 and press ALTER after N12 is displayed. N100 is registered and initial value is changed to 100.

10.3 CREATING PROGRAMS IN TEACH IN MODE (PLAYBACK)

When the playback option is selected, the **TEACH IN JOG** mode and **TEACH IN HANDLE** mode are added. In these modes, a machine position along the X, Y, and Z axes obtained by manual operation is stored in memory as a program position to create a program.
The words other than X, Y, and Z, which include O, N, G, R, F, C, M, S, T, P, Q, and EOB, can be stored in memory in the same way as in **EDIT** mode.

Procedure for Creating Programs in TEACH IN Mode

Procedure

The procedure described below can be used to store a machine position along the X, Y, and Z axes.

1 Select the **TEACH IN JOG** mode or **TEACH IN HANDLE** mode.

2 Move the tool to the desired position with jog or handle.

3 Press [PROG] key to display the program screen. Search for or register the number of a program to be edited and move the cursor to the position where the machine position along each axis is to be registered (inserted).

4 Key in address [X] .

5 Press the [INSERT] key. Then a machine position along the X axis is stored in memory.

(Example) X10.521 Absolute positon (for mm input)
X10521 Data stored in memory

6 Similarly, key in [Y] , then press the [INSERT] key. Then a machine position along the Y axis is stored in memory. Further, key in [Z] , then press the [INSERT] key. Then a machine position along the Z axis is stored in memory.

All coordinates stored using this method are absolute coordinates.

Examples

```
O1234 ;
N1 G92 X10000 Y0 Z10000 ;
N2 G00 G90 X3025 Y23723 ;
N3 G01 Z–325 F300 ;
N4 M02 ;
```

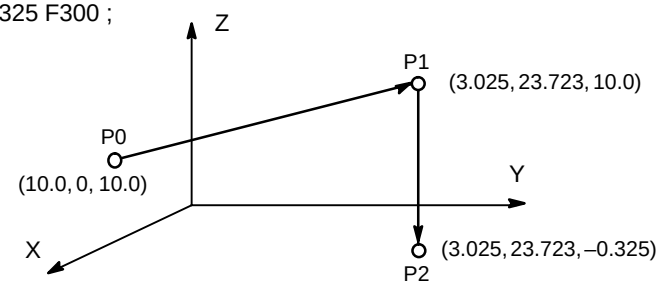

1 Set the setting data SEQUENCE NO. to 1 (on). (The incremental value parameter (No. 3216) is assumed to be “1”.)

2 Select the **TEACH IN HANDLE** mode.

3 Make positioning at position P0 by the manual pulse generator.

4 Select the program screen.

5 Enter program number O1234 as follows:

O 1 2 3 4 INSERT

This operation registers program number O1234 in memory.
Next, press the following keys:

EOB INSERT

An EOB (;) is entered after program number O1234. Because no number is specified after N, sequence numbers are automatically inserted for N0 and the first block (N1) is registered in memory.

6 Enter the P0 machine position for data of the first block as follows:

G 9 2 INSERT X INSERT Y INSERT Z
INSERT EOB INSERT

This operation registers G92X10000Y0Z10000; in memory. The automatic sequence number insertion function registers N2 of the second block in memory.

7 Position the tool at P1 with the manual pulse generator.

8 Enter the P1 machine position for data of the second block as follows:

G 0 0 INSERT G 9 0 X INSERT Y
INSERT EOB INSERT

This operation registers G00G90X3025Z23723; in memory. The automatic sequence number insertion function registers N3 of the third block in memory.

9 Position the tool at P2 with the manual pulse generator.

10 Enter the P2 machine position for data of the third block as follows:

G 0 1 INSERT Z INSERT F 3 0 0
INSERT EOB INSERT

This operation registers G01Z –325F300; in memory.
The automatic sequence number insertion function registers N4 of the fourth block in memory.

11 Register M02; in memory as follows:

M 0 2 INSERT EOB INSERT

N5 indicating the fifth block is stored in memory using the automatic sequence number insertion function. Press the DELETE key to delete it.

This completes the registration of the sample program.

Explanations

- **Checking contents of the memory**

The contents of memory can be checked in the **TEACH IN** mode by using the same procedure as in **EDIT** mode.

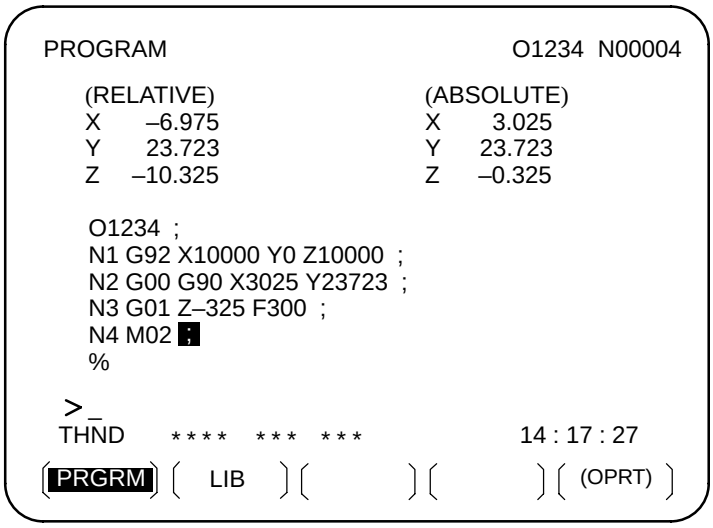

- **Registering a position with compensation**

When a value is keyed in after keying in address [X], [Y], or [Z], then the [INSERT] key is pressed, the value keyed in for a machine position is added for registration. This operation is useful to correct a machine position by key–in operation.

- **Registering commands other than position commands**

Commands to be entered before and after a machine position must be entered before and after the machine position is registered, by using the same operation as program editing in **EDIT** mode.

11 SETTING AND DISPLAYING DATA

General

To operate a CNC machine tool, various data must be set on the MDI panel for the CNC. The operator can monitor the state of operation with data displayed during operation.
This chapter describes how to display and set data for each function.

Explanations

·Screen transition chart

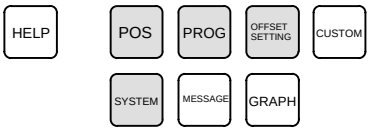

MDI function keys
(Shaded keys (▢) are described in this chapter.)

The screen transition for when each function key on the MDI panel is pressed is shown below. The subsections referenced for each screen are also shown. See the appropriate subsection for details of each screen and the setting procedure on the screen. See other chapters for screens not described in this chapter.

See Chapter 7 for the screen that appears when function key MESSAGE is pressed. See Chapter 12 for the screen that appears when function key GRAPH is pressed. See Chapter 13 for the screen that appears when function key HELP is pressed. In general, function key CUSTOM is prepared by the machine tool builder and used for macros. Refer to the manual issued by the machine tool builder for the screen that appears when function key CUSTOM is pressed.

• Data protection key

The machine may have a data protection key to protect part programs, tool compensation values, setting data, and custom macro variables. Refer to the manual issued by the machine tool builder for where the data protection key is located and how to use it.

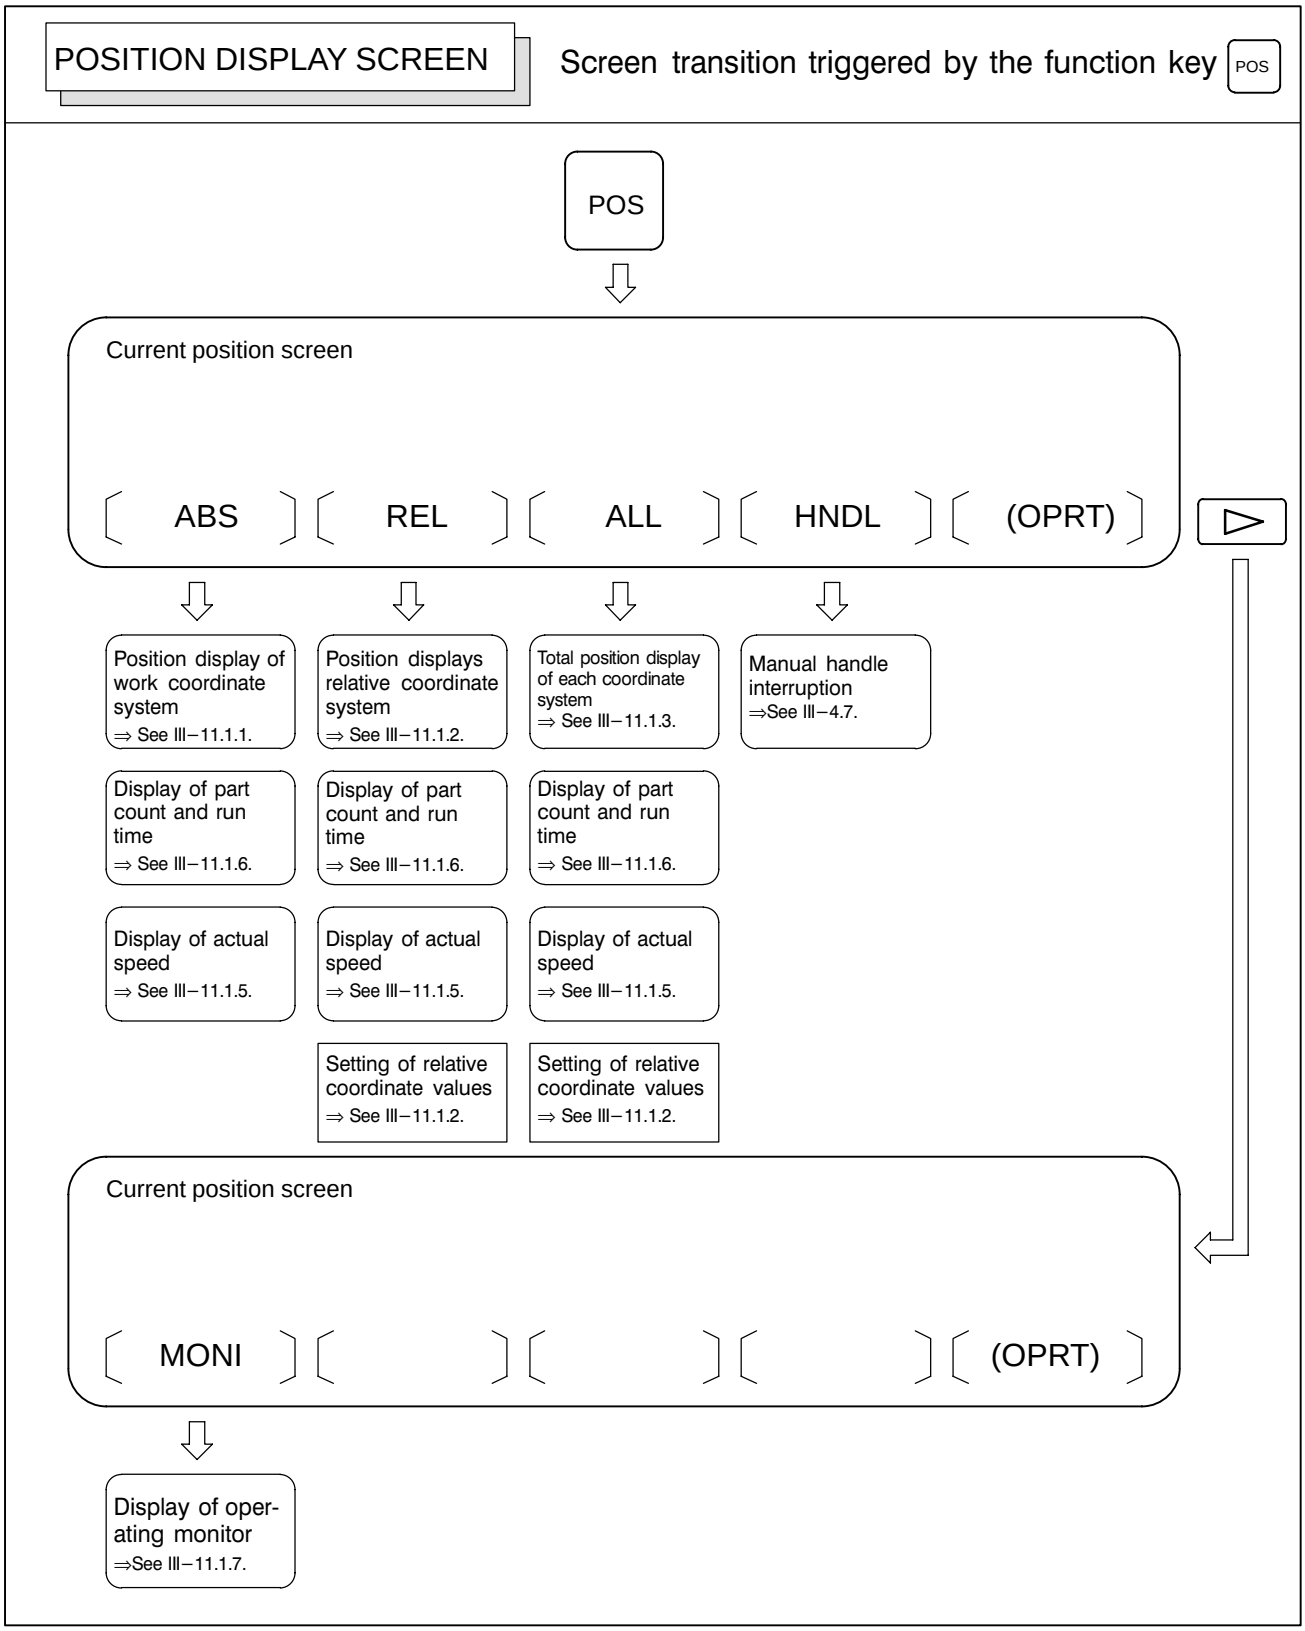
POSITION DISPLAY SCREEN
Screen transition triggered by the function key POS
POS
Current position screen
ABS
REL
ALL
HNDL
(OPRT)
Position display of work coordinate system
⇒ See III−11.1.1.
Position displays relative coordinate system
⇒ See III−11.1.2.
Total position display of each coordinate system
⇒ See III−11.1.3.
Manual handle interruption
⇒See III−4.7.
Display of part count and run time
⇒ See III−11.1.6.
Display of part count and run time
⇒ See III−11.1.6.
Display of part count and run time
⇒ See III−11.1.6.
Display of actual speed
⇒ See III−11.1.5.
Display of actual speed
⇒ See III−11.1.5.
Display of actual speed
⇒ See III−11.1.5.
Setting of relative coordinate values
⇒ See III−11.1.2.
Setting of relative coordinate values
⇒ See III−11.1.2.
Current position screen
MONI
(OPRT)
Display of operating monitor
⇒See III−11.1.7.

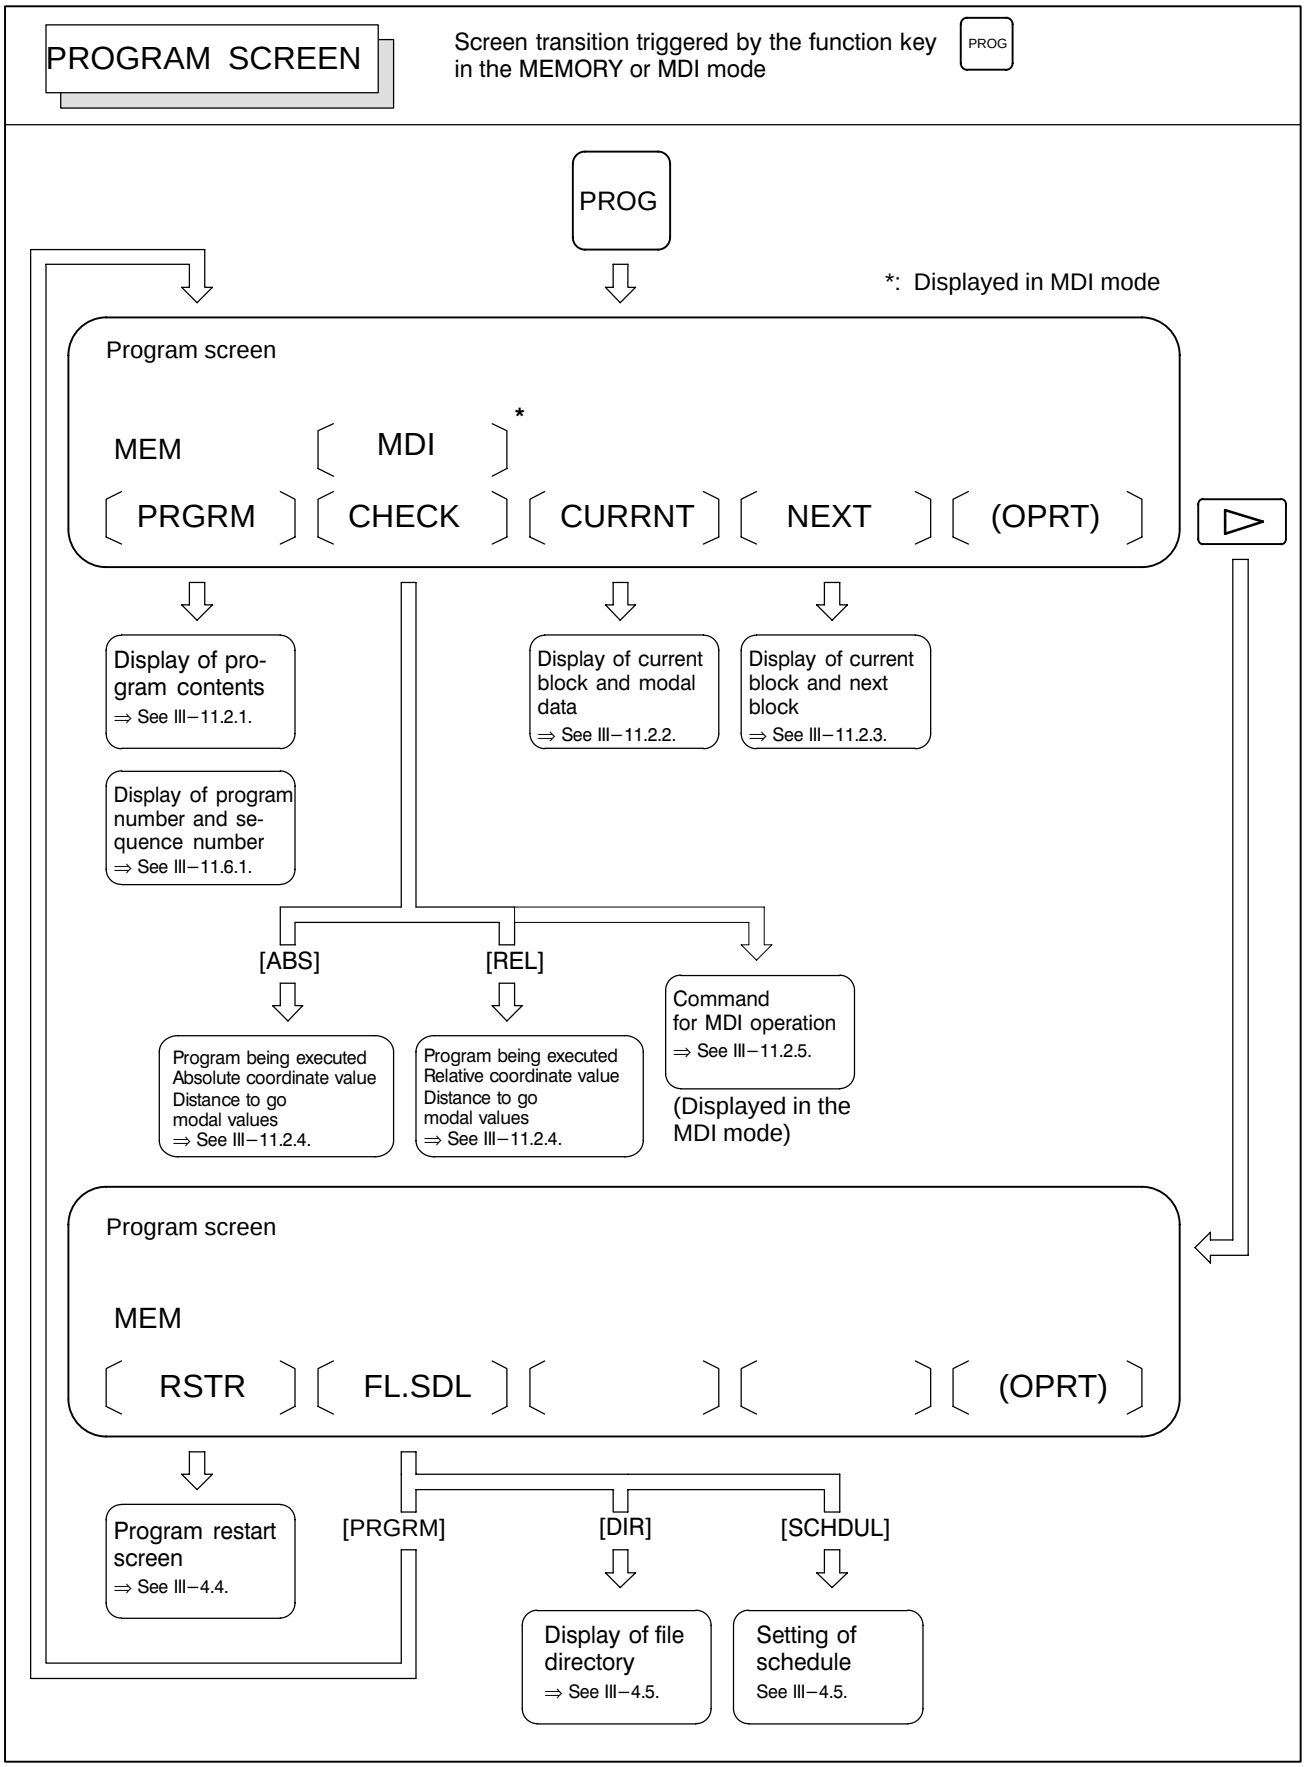
PROGRAM SCREEN
Screen transition triggered by the function key in the MEMORY or MDI mode
PROG
PROG
*: Displayed in MDI mode
Program screen
MEM
MDI
*
PRGRM
CHECK
CURRNT
NEXT
(OPRT)
Display of program contents
⇒ See III−11.2.1.
Display of current block and modal data
⇒ See III−11.2.2.
Display of current block and next block
⇒ See III−11.2.3.
Display of program number and sequence number
⇒ See III−11.6.1.
[ABS]
[REL]
Command for MDI operation
⇒ See III−11.2.5.
(Displayed in the MDI mode)
Program being executed
Absolute coordinate value
Distance to go
modal values
⇒ See III−11.2.4.
Program being executed
Relative coordinate value
Distance to go
modal values
⇒ See III−11.2.4.
Program screen
MEM
RSTR
FL.SDL
(OPRT)
Program restart screen
⇒ See III−4.4.
[PRGRM]
[DIR]
[SCHDUL]
Display of file directory
⇒ See III−4.5.
Setting of schedule
See III−4.5.

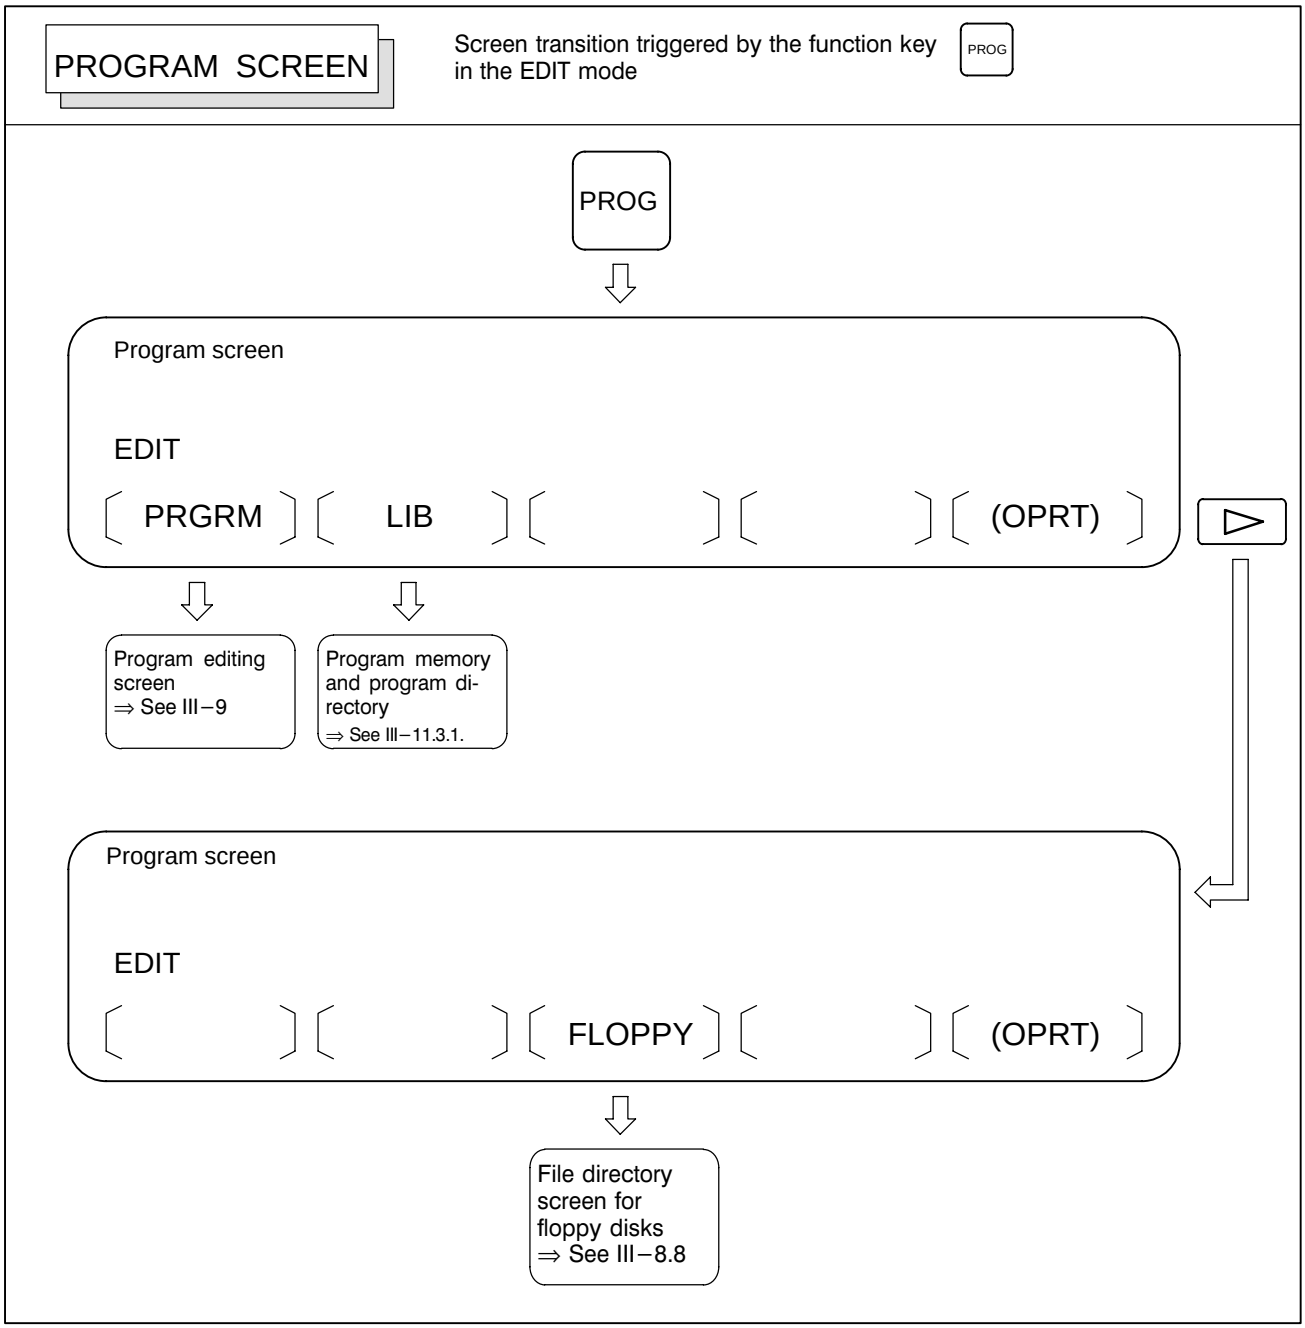
PROGRAM SCREEN
Screen transition triggered by the function key in the EDIT mode
PROG
PROG
Program screen
EDIT
PRGRM
LIB
(OPRT)
Program editing screen
⇒ See III–9
Program memory and program directory
⇒ See III–11.3.1.
Program screen
EDIT
FLOPPY
(OPRT)
File directory screen for floppy disks
⇒ See III–8.8

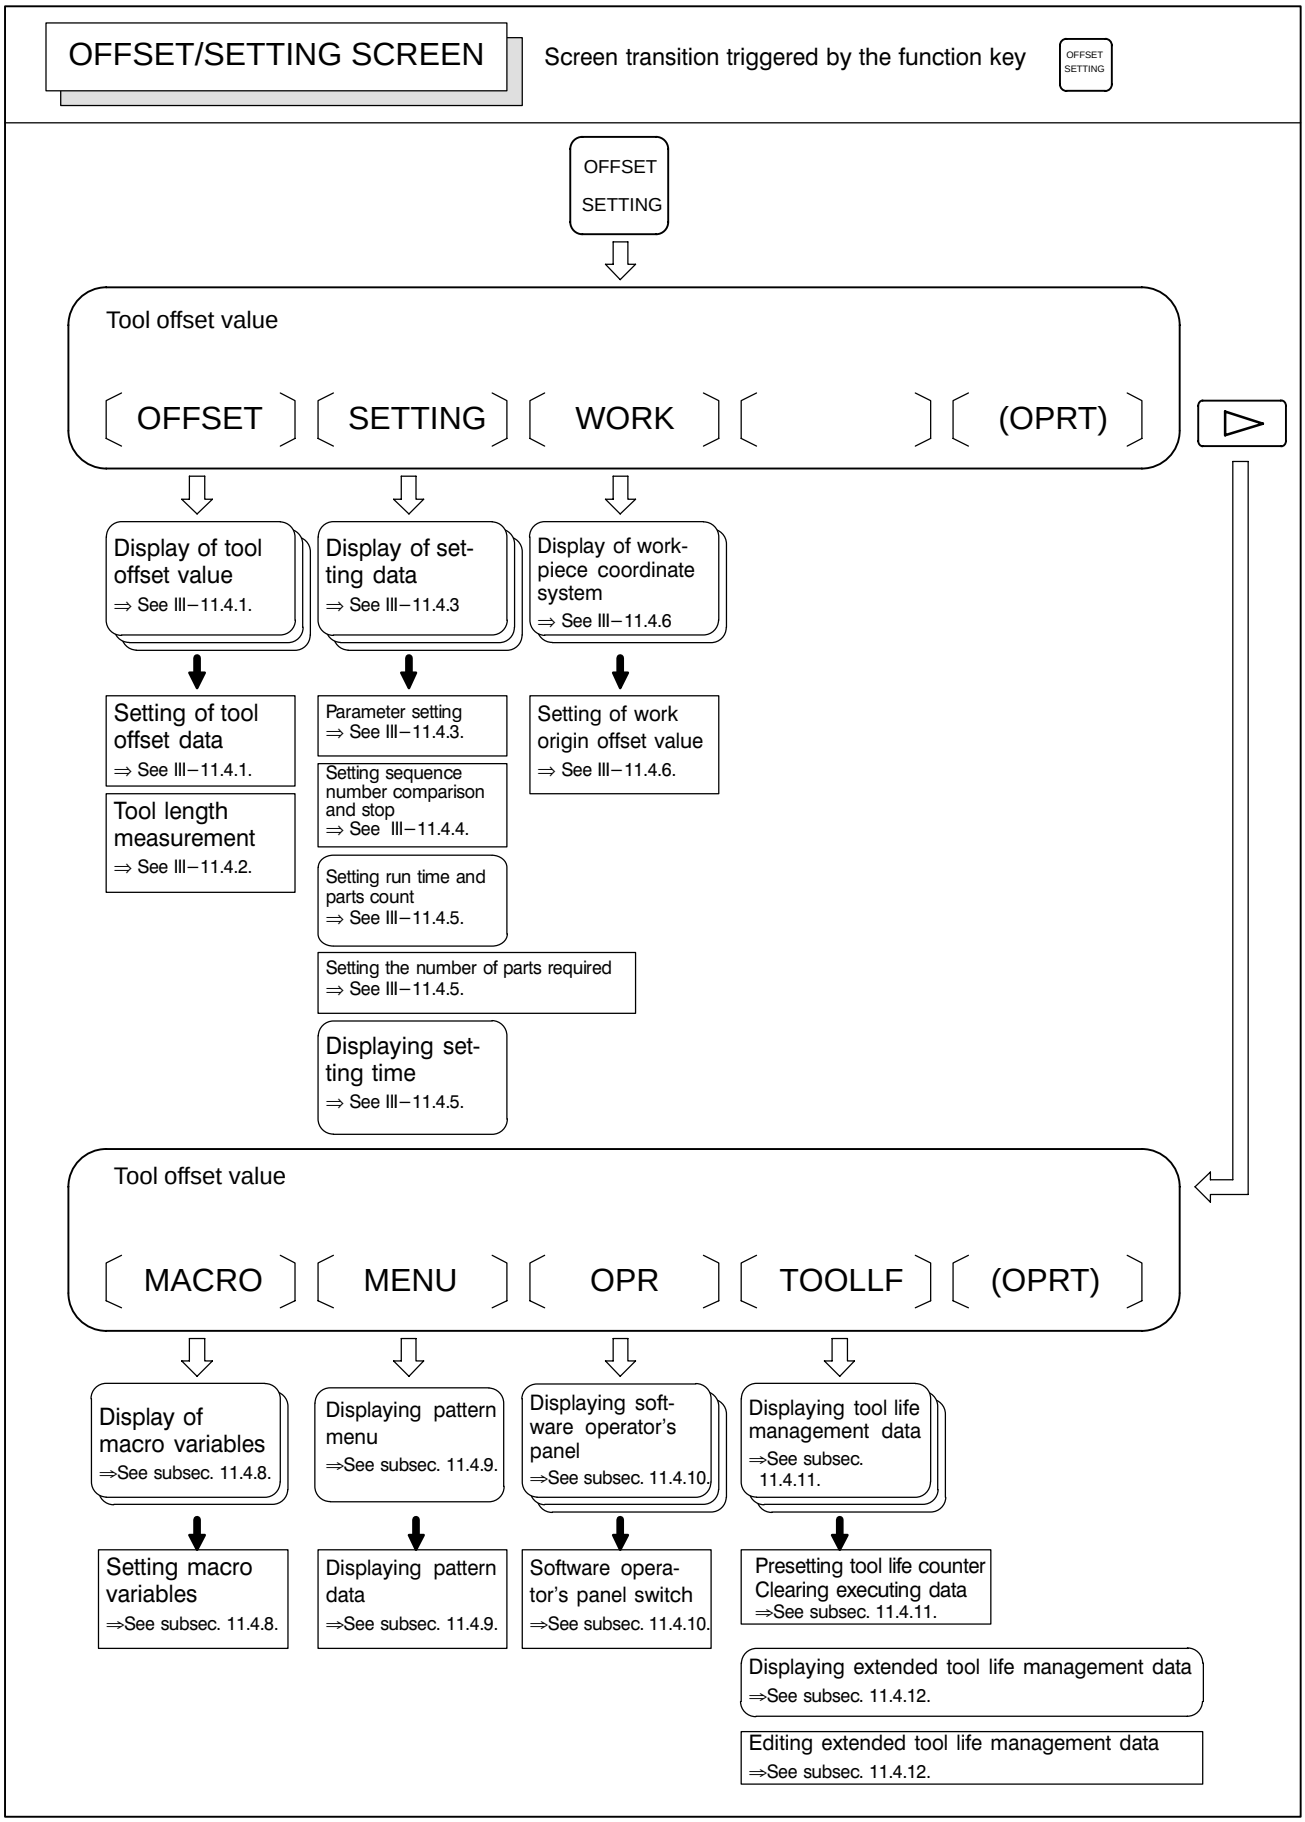
OFFSET/SETTING SCREEN
Screen transition triggered by the function key
OFFSET SETTING
OFFSET SETTING
Tool offset value
OFFSET
SETTING
WORK
(OPRT)
Display of tool offset value
⇒ See III–11.4.1.
Display of setting data
⇒ See III–11.4.3
Display of workpiece coordinate system
⇒ See III–11.4.6
Setting of tool offset data
⇒ See III–11.4.1.
Tool length measurement
⇒ See III–11.4.2.
Parameter setting
⇒ See III–11.4.3.
Setting sequence number comparison and stop
⇒ See III–11.4.4.
Setting run time and parts count
⇒ See III–11.4.5.
Setting the number of parts required
⇒ See III–11.4.5.
Displaying setting time
⇒ See III–11.4.5.
Setting of work origin offset value
⇒ See III–11.4.6.
Tool offset value
MACRO
MENU
OPR
TOOLLF
(OPRT)
Display of macro variables
⇒See subsec. 11.4.8.
Displaying pattern menu
⇒See subsec. 11.4.9.
Displaying software operator's panel
⇒See subsec. 11.4.10.
Displaying tool life management data
⇒See subsec. 11.4.11.
Setting macro variables
⇒See subsec. 11.4.8.
Displaying pattern data
⇒See subsec. 11.4.9.
Software operator's panel switch
⇒See subsec. 11.4.10.
Presetting tool life counter
Clearing executing data
⇒See subsec. 11.4.11.
Displaying extended tool life management data
⇒See subsec. 11.4.12.
Editing extended tool life management data
⇒See subsec. 11.4.12.

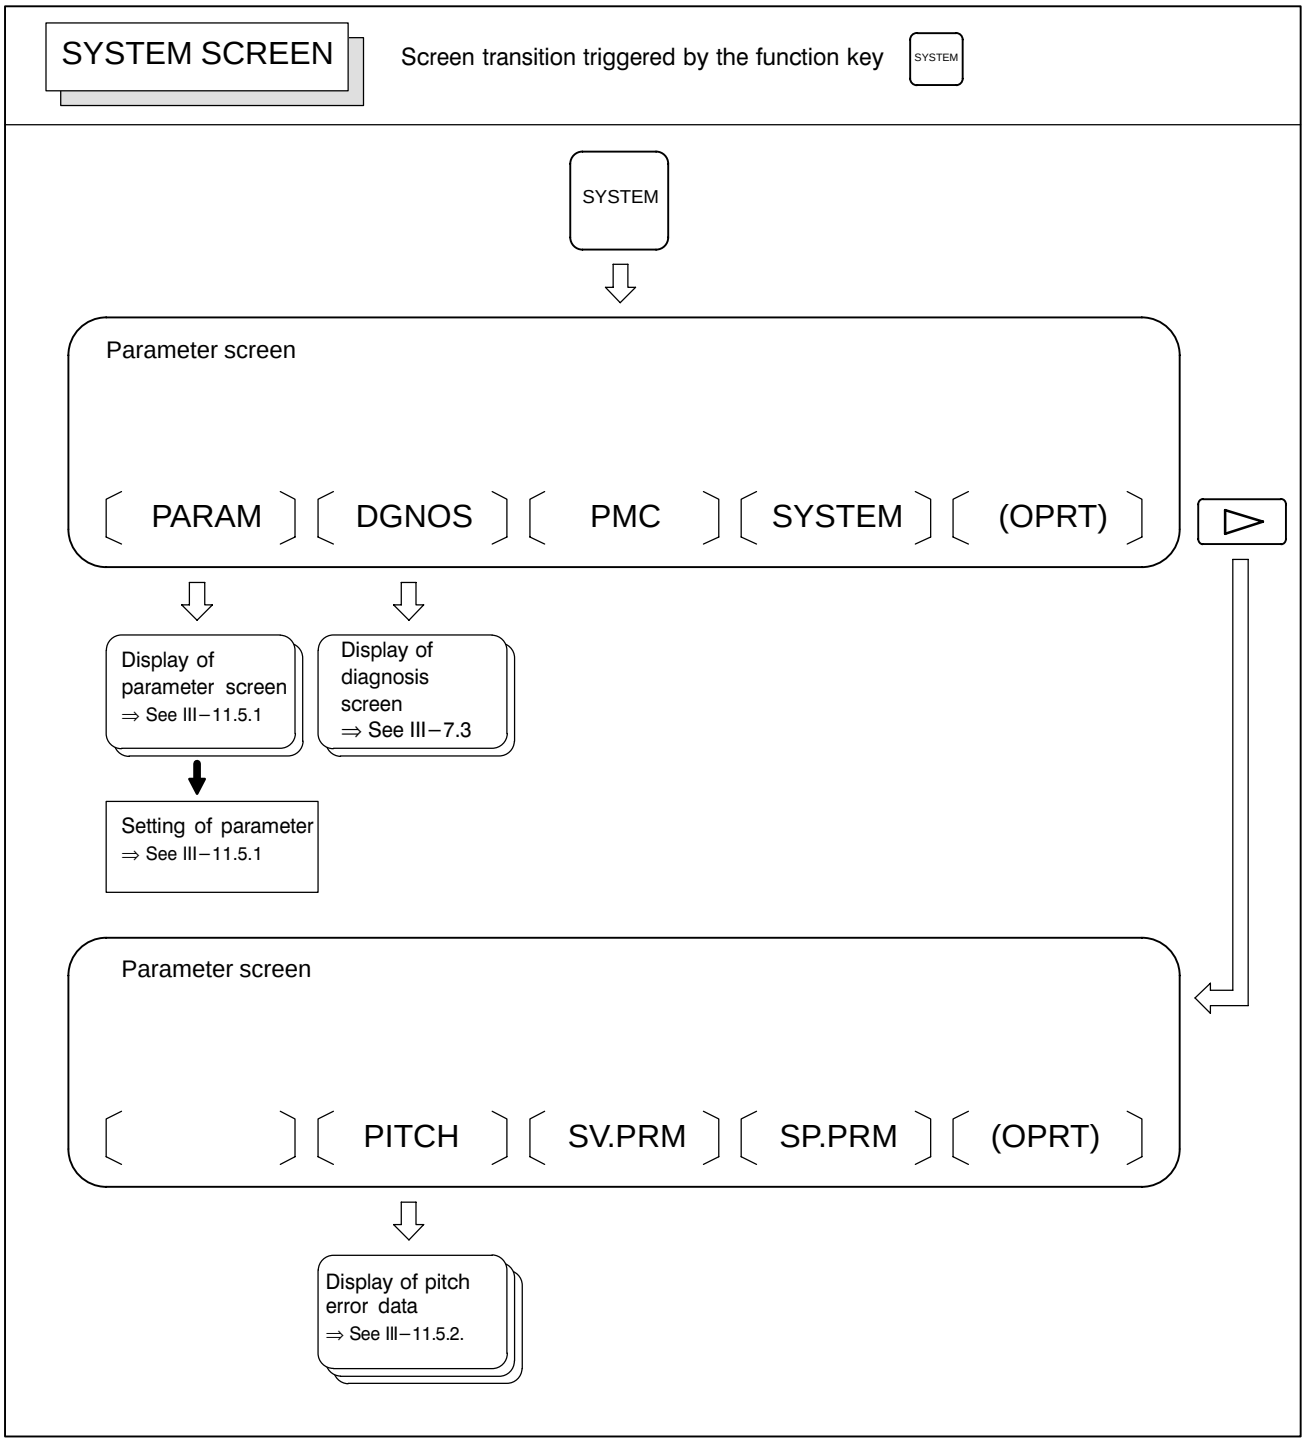
SYSTEM SCREEN
Screen transition triggered by the function key
SYSTEM
SYSTEM
Parameter screen
PARAM
DGNOS
PMC
SYSTEM
(OPRT)
Display of parameter screen
⇒ See III−11.5.1
Display of diagnosis screen
⇒ See III−7.3
Setting of parameter
⇒ See III−11.5.1
Parameter screen
PITCH
SV.PRM
SP.PRM
(OPRT)
Display of pitch error data
⇒ See III−11.5.2.

- **Setting screens**

The table below lists the data set on each screen.

Table.11. Setting screens and data on them

No.	Setting screen	Contents of setting	Reference item
1	Tool offset value	Tool offset value Tool length offset value Cutter compensation value	III–11.4.1
		Tool length measurement	III–11.4.2
2	Setting data(handy)	Parameter write TV check Punch code Input unit (mm/inch) I/O channel Automatic insert of Sequence No. Conversion of tape format (F15)	III–11.4.3
		Sequence number comparison and stop	III–11.4.4
3	Setting data (mirror image)	Mirror image	III–11.4.3
4	Setting data (timer)	Parts required	III–11.4.5
5	Macro variables	Custom macro common variables (#100 to #149) or (#100 to #199) (#500 to #531) or (#500 to #599)	III–11.4.8
6	Parameter	Parameter	III–11.5.1
7	Pitch error	Pitch error compensation data	III–11.5.2
8	software operator’s panel	Mode selection Jog feed axis selection Jog rapid traverse Axis selection for Manual pulse generator Multiplication for manual pulse generator Jog feedrate Feedrate override Rapid traverse override Optional block skip Single block Machine lock Dry run Protect key Feed hold	III–11.4.10
9	Tool life data (Tool life management)	Life count	III–11.4.11
10	Tool life data (Extended tool life management)	Life count type (cycle or minute) Life value Life counter Tool number H code D code New tool group New tool number Skipping tool Clearing tool	III–11.4.12
11	Work coordinate system setting	Work origin offset value	III–11.4.6

11.1 SCREENS DISPLAYED BY FUNCTION KEY POS

Press function key POS to display the current position of the tool.

The following three screens are used to display the current position of the tool:

·Position display screen for the work coordinate system.
·Position display screen for the relative coordinate system.
·Overall position display screen.

The above screens can also display the feedrate, run time, and the number of parts. In addition, a floating reference position can be set on these screens.

Function key POS can also be used to display the load on the servo motor and spindle motor and the rotation speed of the spindle motor (operating monitor display).

Function key POS can also be used to display the screen for displaying the distance moved by handle interruption. See III– 4.8 for details on this screen.

11.1.1 Position Display in the Work Coordinate System

Displays the current position of the tool in the workpiece coordinate system. The current position changes as the tool moves. The least input increment is used as the unit for numeric values. The title at the top of the screen indicates that absolute coordinates are used.

Display procedure for the current position screen in the workpiece coordinate system

1 Press function key [POS] .

2 Press soft key **[ABS]**.

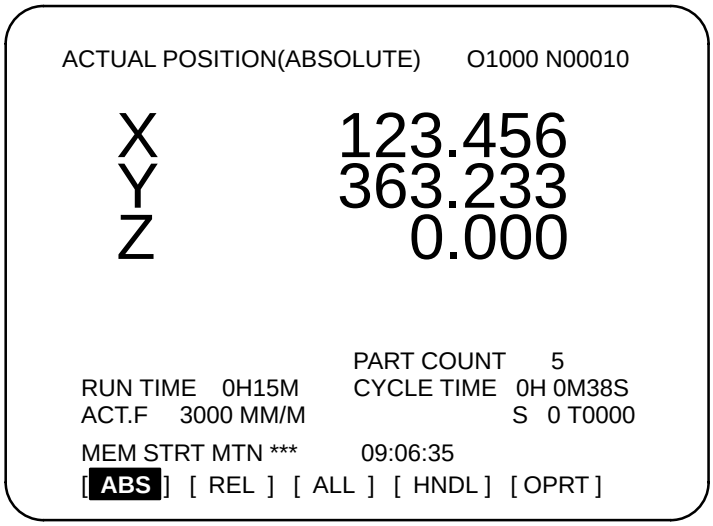

Explanations

- **Display including compensation values**

Bits 6 and 7 of parameter 3104 (DAL, DAC) can be used to select whether the displayed values include tool length offset and cutter compensation.

11.1.2 Position Display in the Relative Coordinate System

Displays the current position of the tool in a relative coordinate system based on the coordinates set by the operator. The current position changes as the tool moves. The increment system is used as the unit for numeric values. The title at the top of the screen indicates that relative coordinates are used.

Display procedure for the current position screen with the relative coordinate system

1 Press function key [POS] .

2 Press soft key **[REL]**.

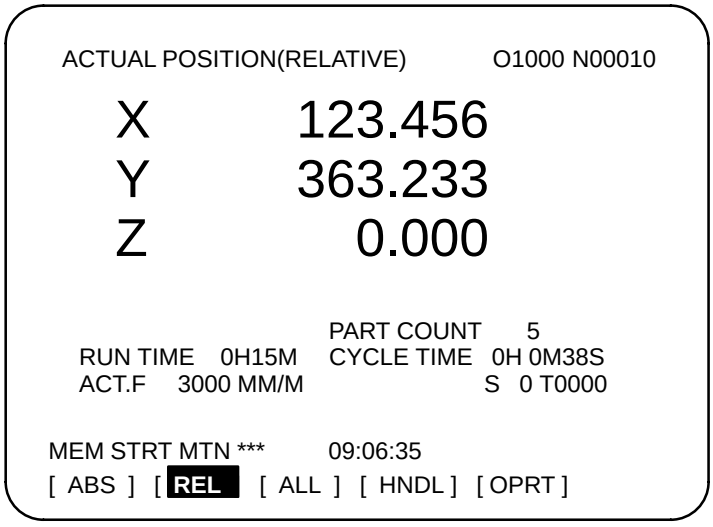

See Explanations for the procedure for setting the coordinates.

Explanations

- **Resetting the relative coordinates**

The current position of the tool in the relative coordinate system can be reset to 0 or preset to a specified value as follows:

Procedure to set the axis coordinate to a specified value

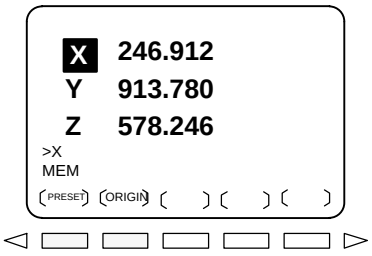

1 Enter an axis address (such as X or Y) on the screen for the relative coordinates. The indication for the specified axis blinks and the soft keys change as shown on the left.

2 · To reset the coordinate to 0, press soft key **[ORGIN]**. The relative coordinate for the blinking axis is reset to 0.

· To preset the coordinate to a specified value, enter the value and press soft key **[PRESET]**. The relative coordinate for the blinking axis is set to the entered value.

Procedure to reset all axes

Procedure



1 Press soft key **[(OPRT)]**.



2 Press soft key **[ORIGIN]**.



3 Press soft key **[ALLEXE]**.
The relative coordinates for all axes are reset to 0.

- **Display including compensation values**

Bits 4 and 5 of parameter 3104 (DRL, DRC) can be used to select whether the displayed values include tool length offset and cutter compensation.

- **Presetting by setting a coordinate system**

Bit 3 of parameter 3104 (PPD) is used to specify whether the displayed positions in the relative coordinate system are preset to the same values as in the workpiece coordinate system when a coordinate system is set by a G92 command or when the manual reference position return is made.

11.1.3 Overall Position Display

Displays the following positions on a screen : Current positions of the tool in the workpiece coordinate system, relative coordinate system, and machine coordinate system, and the remaining distance. The relative coordinates can also be set on this screen. See III–11.1.2 for the procedure.

Procedure for displaying overall position display screen

Procedure

1 Press function key [POS] .

2 Press soft key **[ALL]**.

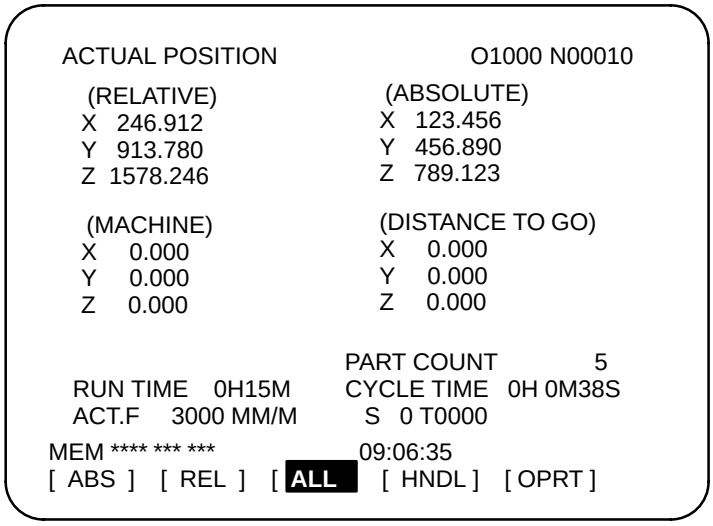

Explanations

- **Coordinate display**

The current positions of the tool in the following coordinate systems are displayed at the same time:
- Current position in the relative coordinate system (relative coordinate)
- Current position in the work coordinate system (absolute coordinate)
- Current position in the machine coordinate system (machine coordinate)
- Distance to go (distance to go)

- **Distance to go**

The distance remaining is displayed in the MEMORY or MDI mode. The distance the tool is yet to be moved in the current block is displayed.

- **Machine coordinate system**

The least command increment is used as the unit for values displayed in the machine coordinate system. However, the least input increment can be used by setting bit 0 (MCN) of parameter 3104.

- **Resetting the relative coordinates**

The total position display screen also supports the resetting of the relative coordintes to 0 or presetting of them to specified values. See the procedure for resetting the relative coordintes described in Subsection III–11.1.2

11.1.4 Presetting the Workpiece Coordinate System

A workpiece coordinate system shifted by an operation such as manual intervention can be preset using MDI operations to a pre–shift workpiece coordinate system. The latter coordinate system is displaced from the machine zero point by a workpiece zero point offset value.
A command (G92.1) can be programmed to preset a workpiece coordinate system. (See II–7.2.4 in the section for programming.)

Procedure for Presetting the Workpiece Coordinate System

Procedure

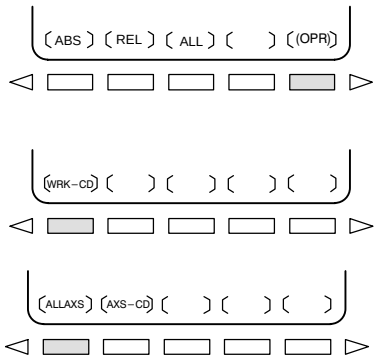

1 Press function key [POS] .

2 Press soft key **[(OPRT)]**.

3 When **[WRK–CD]** is not displayed, press the continuous menu key [▷].

4 Press soft key **[WRK–CD]**.

5 Press soft key **[ALLAXS]** to preset all axes.

6 To preset a particular axis in step 5, enter the axis name ([X], [Y], ...) and [0] , then press soft key **[AXS–CD]**.

Explanations

- **Operation mode**

This function can be executed when the reset state or automatic operation stop state is entered, regardless of the operation mode.

- **Presetting relative coordinates**

As with absolute coordinates, bit 3 (PPD) of parameter No. 3104 is used to specify whether to preset relative coordinates (RELATIVE).

11.1.5 Actual Feedrate Display

The actual feedrate on the machine (per minute) can be displayed on a current position display screen or program check screen by setting bit 0 (DPF) of parameter 3105. On the 9.5″/10.4″ LCD, the actual feedrate is always displayed.

Display procedure for the actual feedrate on the current position display screen

Procedure

1 Press function key [POS] to display a current position display screen.

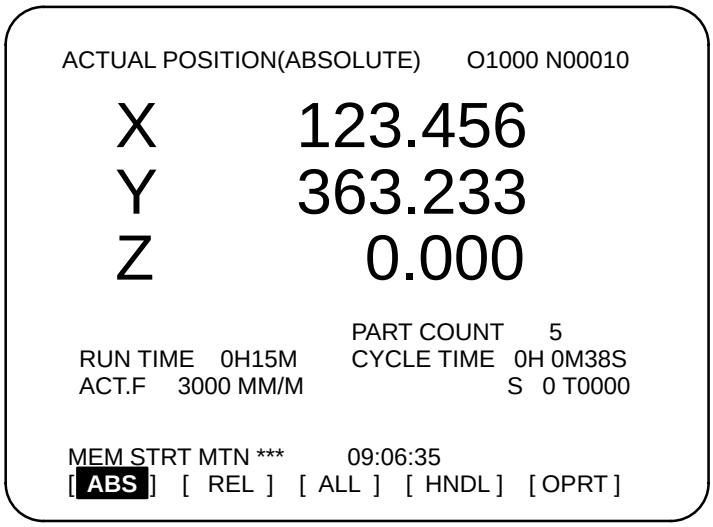

Actual feedrate is displayed after ACT.F.

Explanations

The actual feedrate is displayed in units of millimeter/min or inch/min (depending on the specified least input increment) under the display of the current position.

- **Actual feedrate value**

The actual rate is calculated by the following expression:

$$Fact = \sqrt{\sum_{i=1}^{n}(fi)^2}$$

where

n : Number of axes

fi : Cutting feed rate in the tangential direction of each axis or rapid traverse rate

Fact : Actual feedrate displayed

The display unit: mm/min (metric input).
inch/min (Inch input, Two digits below the decimal point are displayed.)

The feedrate along the PMC axis can be omitted by setting bit 1 (PCF) of parameter 3105.

- **Actual feedrate display of feed per revolution**

In the case of feed per revolution and thread cutting, the actual feedrate displayed is the feed per minute rather than feed per revolution.

- **Actual feedrate display of rotary axis**

In the case of movement of rotary axis, the speed is displayed in units of deg/min but is displayed on the screen in units of input system at that time. For example, when the rotary axis moves at 50 deg/min, the following is displayed: 0.50 INCH/M

- **Actual feedrate display on the other screen**

The program check screen also displays the actual feedrate.

11.1.6 Display of Run Time and Parts Count

The run time, cycle time, and the number of machined parts are displayed on the current position display screens.

Procedure for displaying run time and parts count on the current position display screen

Procedure

1 Press function key [POS] to display a current position display screen.

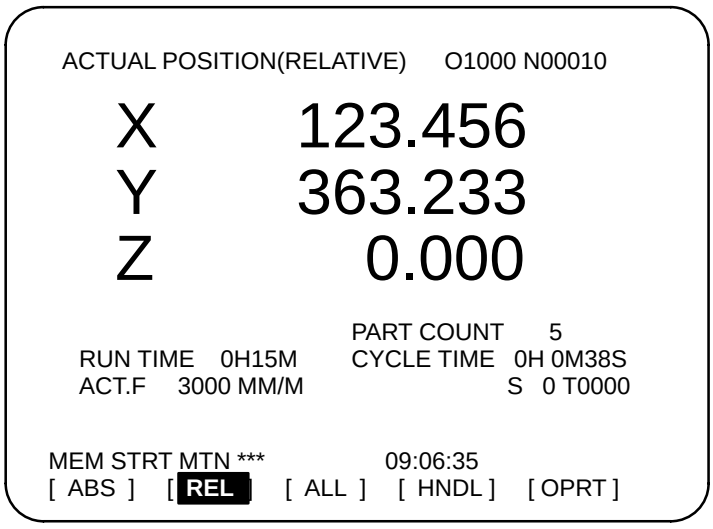

The number of machined parts (PART COUNT), run time (RUN TIME), and cycle time (CYCLE TIME) are displayed under the current position.

Explanations

- **PART COUNT**

  Indicates the number of machined parts. The number is incremented each time M02, M30, or an M code specified by parameter 6710 is executed.

- **RUN TIME**

  Indicates the total run time during automatic operation, excluding the stop and feed hold time.

- **CYCLE TIME**

  Indicates the run time of one automatic operation, excluding the stop and feed hold time. This is automatically preset to 0 when a cycle start is performed at reset state. It is preset to 0 even when power is removed.

- **Display on the other screen**

  Details of the run time and the number of machined parts are displayed on the setting screen. See III–11.4.5.

- **Parameter setting**

  The number of machined parts and run time cannot be set on current position display screens. They can be set by parameters No. 6711, 6751, and 6752 or on the setting screen.

- **Incrementing the number of machined parts**

  Bit 0 (PCM) of parameter 6700 is used to specify whether the number of machined parts is incremented each time M02, M30, or an M code specified by parameter 6710 is executed, or only each time an M code specified by parameter 6710 is executed.

11.1.7 Operating Monitor Display

The reading on the load meter can be displayed for each servo axis and the serial spindle by setting bit 5 (OPM) of parameter 3111 to 1. The reading on the speedometer can also be displayed for the serial spindle.

Procedure for displaying the operating monitor

Procedure

1 Press function key [POS] to display a current position display screen.

2 Press the continuous–menu key [▷].

3 Press soft key **[MONI]**.

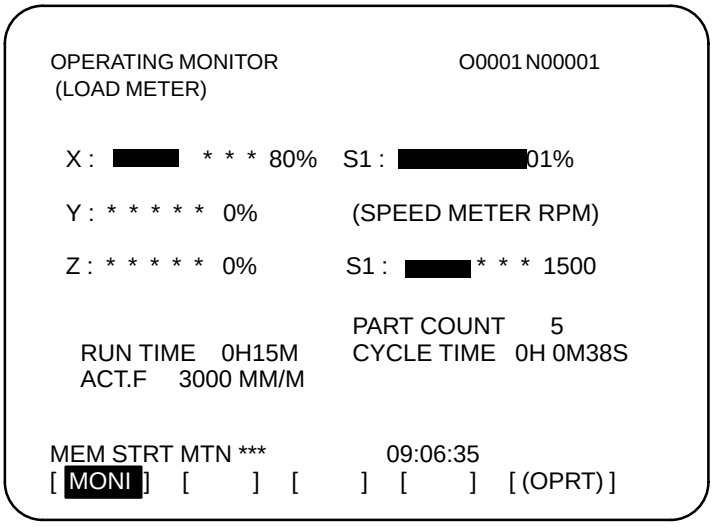

Explanations

- **Display of the servo axes**

The reading on the load meter can be displayed for up to eight servo axes by setting parameters 3151 to 3158.
When all these parameters are set to 0, data is displayed only to the 3rd axis.

- **Display of the spindle axes**

When serial spindles are used, the reading on the load meter and speedometer can be displayed only for the main serial spindle.

- **Unit of graph**

The bar graph for the load meter shows load up to 200% (only a value is displayed for load exceeding 200%). The bar graph for the speedometer shows the ratio of the current spindle speed to the maximum spindle speed (100%).

- **Load meter**

The reading on the load meter depends on servo parameter 2086 and spindle parameter 4127.

- **Speedometer**

Although the speedometer normally indicates the speed of the spindle motor, it can also be used to indicate the speed of the spindle by setting bit 6 (OPS) of parameter 3111 to 1.
The spindle speed to be displayed during operation monitoring is calculated from the speed of the spindle motor (see the formula below). The spindle speed can therefore be displayed, during operation monitoring, even when no position coder is used. To display the correct spindle speed, however, the maximum spindle speed for each gear (spindle speed at each gear ratio when the spindle motor rotates at the maximum speed) must be set in parameters No. 3741 to 3744.

The input of the clutch and gear signals for the first serial spindle is used to determine the gear which is currently selected. Control the input of the CTH1A and CTH2A signals according to the gear selection, by referring to the table below.

(Formula for calculating the spindle speed to be displayed)

$$\text{Spindle speed displayed during operation monitoring} = \frac{\text{Speed of spindle motor}}{\text{Maximum speed of spindle motor}} \times \text{Maximum spindle speed with the gear being used}$$

The following table lists the correspondence between clutch and gear selection signals CTH1A and CTH2A, used to determine the gear being used, and parameters:

CTH1A	CTH2A	Parameter	Serial spindle spec
0	0	=No.3741 (Maximum spindle speed with gear 1)	HIGH
0	1	=No.3742 (Maximum spindle speed with gear 2)	MEDIUM HIGH
1	0	=No.3743 (Maximum spindle speed with gear 3)	MEDIUM LOW
1	1	=No.3744 (Maximum spindle speed with gear 4)	LOW

The speed of the spindle motor and spindle can be displayed, during operation monitoring, only for the first serial spindle and the spindle switching axis for the first serial spindle. It cannot be displayed for the second spindle.

- **Color of graph**

If the value of a load meter exceeds 100%, the bar graph turns purple.

11.2 SCREENS DISPLAYED BY FUNCTION KEY PROG (IN MEMORY MODE OR MDI MODE)

This section describes the screens displayed by pressing function key PROG in MEMORY or MDI mode.The first four of the following screens display the execution state for the program currently being executed in MEMORY or MDI mode and the last screen displays the command values for MDI operation in the MDI mode:

1. Program contents display screen
2. Current block display screen
3. Next block display screen
4. Program check screen
5. Program screen for MDI operation

Function key PROG can also be pressed in MEMORY mode to display the program restart screen and scheduling screen.
See III–4.5 for the program restart screen.
See III–4.6 for the scheduling screen.

11.2.1 Program Contents Display

Displays the program currently being executed in MEMORY or MDI mode.

Procedure for displaying the program contents

1 Press function key PROG to display the program screen.

2 Press chapter selection soft key **[PRGRM]**.
The cursor is positioned at the block currently being executed.

```
PROGRAM                                O2000 N00130
  O2000 ;
  N100 G92 X0 Y0 Z70. ;
  N110 G91 G00 Y–70. ;
  N120 Z–70. ;
  N130 G42 G39 I–17.5 ;
  N140 G41 G03 X–17.5 Y17.5 R17.5 ;
  N150 G01 X–25. ;
  N160 G02 X27.5 Y27.5 R27.5 ;
  N170 G01 X20. ;
  N180 G02 X45. Y45. R45. ;


>_                                                S  0  T0000
MEM STRT   ***                 16:05:59
[ PRGRM ] [ CHECK ] [ CURRNT ] [ NEXT ] [ (OPRT) ]
```

Explanations

- **12 soft keys display unit**

The contents of the program are displayed on the right half of the screen or on the entire screen (switched each time soft key **[PRGRM]** is pressed).

```
PROGRAM                                O0006  N00000
O0003 ;
N001  G92X0Y0Z0;
N002  G90 G00 Z250.0 T11 M6;
N003  G43 Z0 H11;
N004  S30 M3
N005  G99 G81X400.0 R Y–350.0
      Z–153.0R–97.0 F120;
N006  Y–550.0;
N007  G98Y–750.0;
N008  G99X1200.0;
N009  Y–550.0;
N010  G98Y–350.0;
N011  G00X0Y0M5;
N012  G49Z250.0T15M6;
N013  G43Z0H15;
N014  S20M3;
N015  G99G82X550.0Y–450.0
      Z–130.0R–97.0P300F70;
N016  G98Y–650.0;
N017  G99X1050.0;
N018  G98Y–450.0;
N019  G00X0Y0M5;
N020  G49Z250.0T31M6;
N021  G43Z0H31;
N022  S10M3;
N023  G85G99X800.0Y–350.0
      Z–153.0R47.0F50;
N024  G91Y–200.0K2;
N025  G28X0Y0M5;
N026  G49Z0;
N027  M0;

                                   EDIT **** *** ***     07:12:55
                                   [ O SRH ][ SRH↑ ][ SRH↓ ][ REWIND ][ + ]
```

11.2.2 Current Block Display Screen

Displays the block currently being executed and modal data in the MEMORY or MDI mode.

Procedure for displaying the current block display screen

Procedure

1 Press function key PROG .

2 Press chapter selection soft key **[CURRNT]**.
The block currently being executed and modal data are displayed.
The screen displays up to 22 modal G codes and up to 11 G codes specified in the current block.

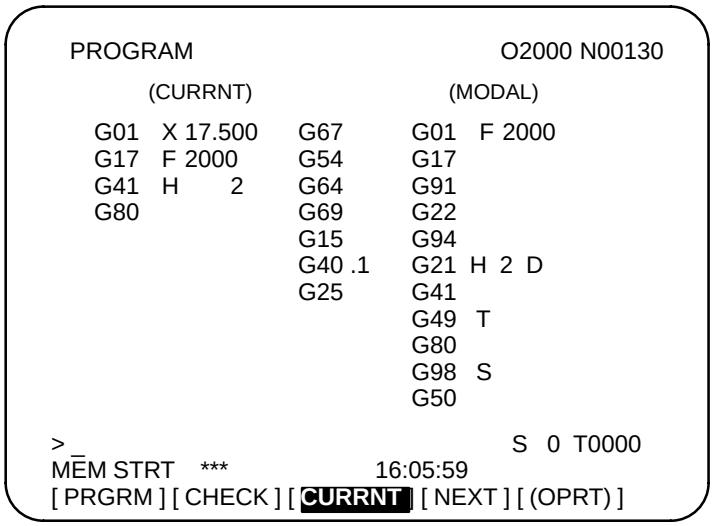

Explanations

- **12 soft keys display unit**

The current block display screen is not provided for 12 soft keys display unit. Press soft key **[PRGRM]** to display the contents of the program on the right half of the screen. The block currently being executed is indicated by the cursor. Modal data is displayed on the left half of the screen. The screen displays up to 18 modal G codes.

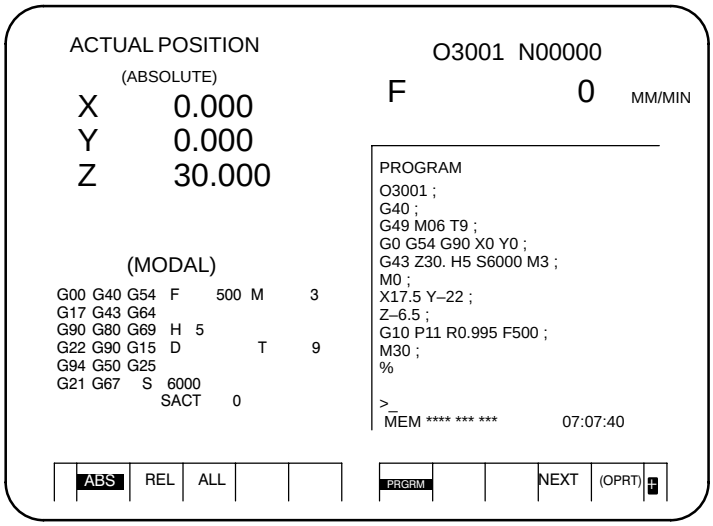

11.2.3 Next Block Display Screen

Displays the block currently being executed and the block to be executed next in the MEMORY or MDI mode.

Procedure for displaying the next block display screen

Procedure

1 Press function key PROG .

2 Press chapter selection soft key **[NEXT]**.
The block currently being executed and the block to be executed next are displayed.
The screen displays up to 11 G codes specified in the current block and up to 11 G codes specified in the next block.

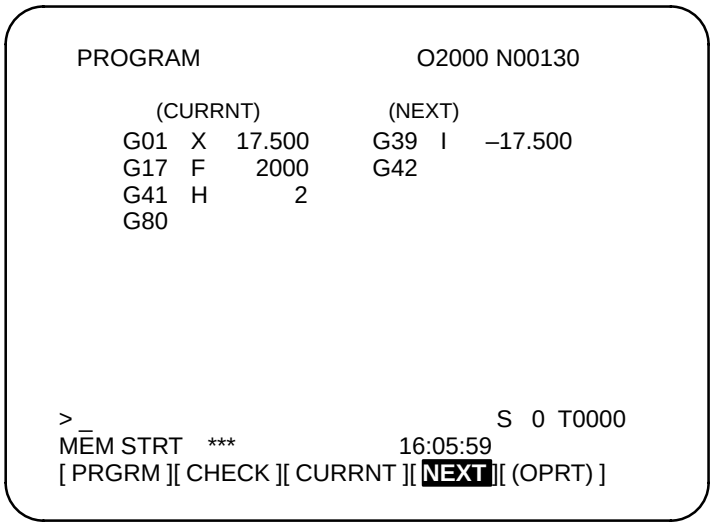

11.2.4 Program Check Screen

Displays the program currently being executed, current position of the tool, and modal data in the MEMORY mode.

Procedure for displaying the program check screen

Procedure

1 Press function key PROG .

2 Press chapter selection soft key **[CHECK]**.
The program currently being executed, current position of the tool, and modal data are displayed.

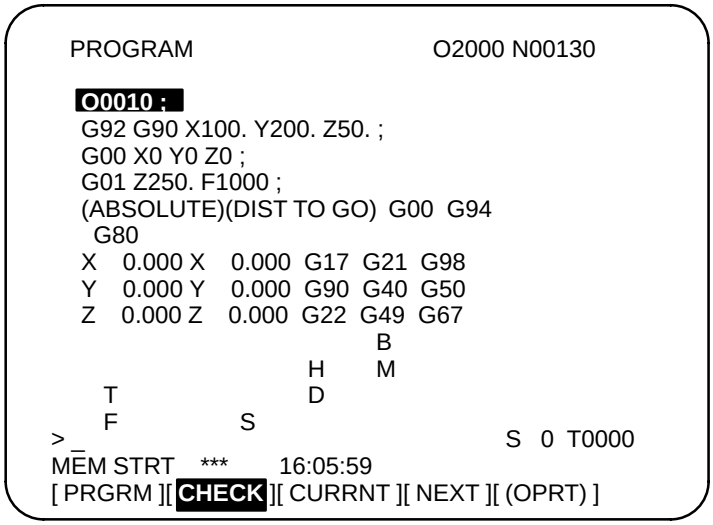

Explanations

- **Program display**

The screen displays up to four blocks of the current program, starting from the block currently being executed. The block currently being executed is displayed in reverse video. During DNC operation, however, only three blocks can be displayed.

- **Current position display**

The position in the workpiece coordinate system or relative coordinate system and the remaining distance are displayed. The absolute positions and relative positions are switched by soft keys **[ABS]** and **[REL]**.

- **Modal G codes**

Up to 12 modal G codes are displayed.

- **Display during automatic operation**

During automatic operation, the actual speed, SACT, and repeat count are displayed. The key input prompt (>_) is displayed otherwise.

- **T codes**

Then bit 2 (PCT) of parameter No. 3108 is set to 1, the T codes specified with the PMC (HD.T/NX.T) are displayed instead of those specified in the program. Refer to the FANUC PMC Programming Manual (B–61863E) for details of HD.T/NX.T.

- **12 soft keys display unit**

The program check screen is not provided for 12 soft keys display unit. Press soft key **[PRGRM]** to display the contents of the program on the right half of the screen. The block currently being executed is indicated by the cursor. The current position of the tool and modal data are displayed on the left half of the screen.
Up to 18 modal G codes are displayed.

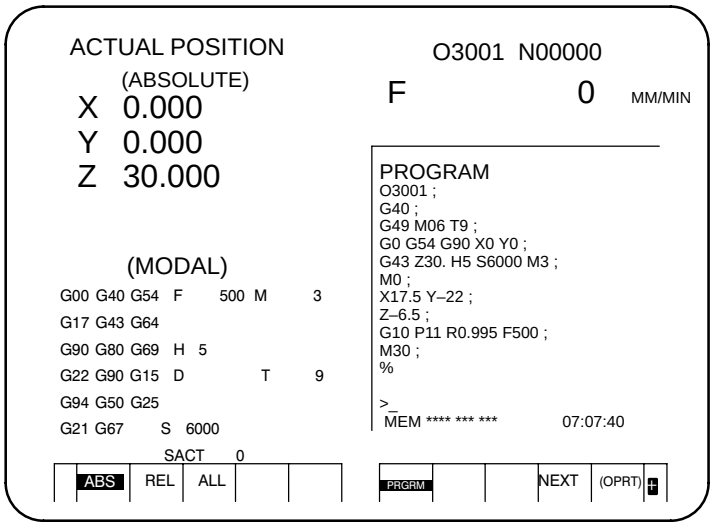

11.2.5 Program Screen for MDI Operation

Displays the program input from the MDI and modal data in the MDI mode.

Procedure for displaying the program screen for MDI operation

Procedure

1 Press function key [PROG] .

2 Press chapter selection soft key **[MDI]**.
The program input from the MDI and modal data are displayed.

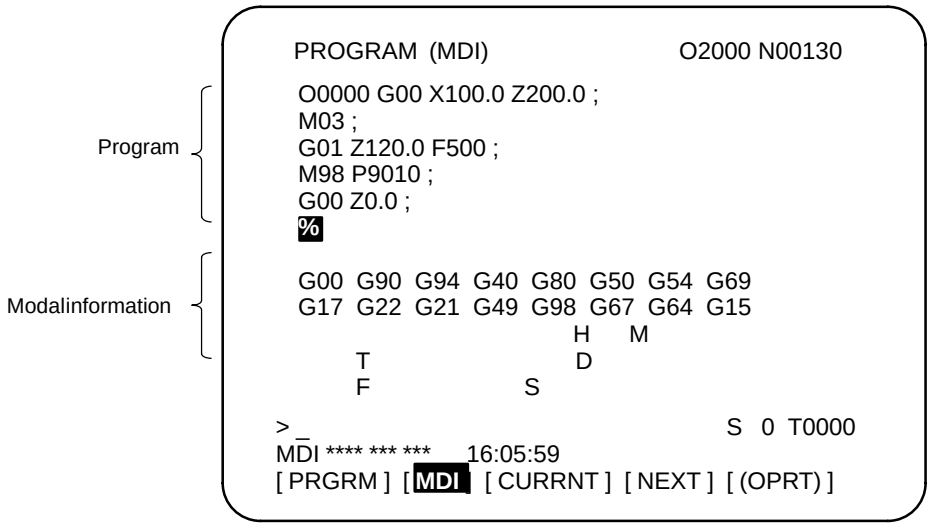

Explanations

- **MDI operation**

See III–4.2 for MDI operation.

- **Modal information**

The modal data is displayed when bit 7 (MDL) of parameter 3107 is set to 1. Up to 16 modal G codes are displayed. However, the contents of the program are displayed on the right half of the screen and the modal data is displayed on the left half of the screen, regardless of this parameter.

- **Displaying during automatic operation**

During automatic operation, the actual speed, SACT, and repeat count are displayed. The key input prompt (>_) is displayed otherwise.

11.3 SCREENS DISPLAYED BY FUNCTION KEY PROG (IN THE EDIT MODE)

This section describes the screens displayed by pressing function key PROG in the EDIT mode. Function key PROG in the EDIT mode can display the program editing screen and the program list screen (displays memory used and a list of programs). Pressing function key PROG in the EDIT mode can also display the conversational graphics programming screen and the floppy file directory screen. See III–9 and 10 for the program editing screen and conversational graphics programming screen. See III–8 for the floppy file directory screen.

11.3.1 Displaying Memory Used and a List of Programs

Displays the number of registered programs, memory used, and a list of registered programs.

Procedure for displaying memory used and a list of programs

Procedure

1 Select the **EDIT** mode.

2 Press function key PROG .

3 Press chapter selection soft key **[DIR]**.

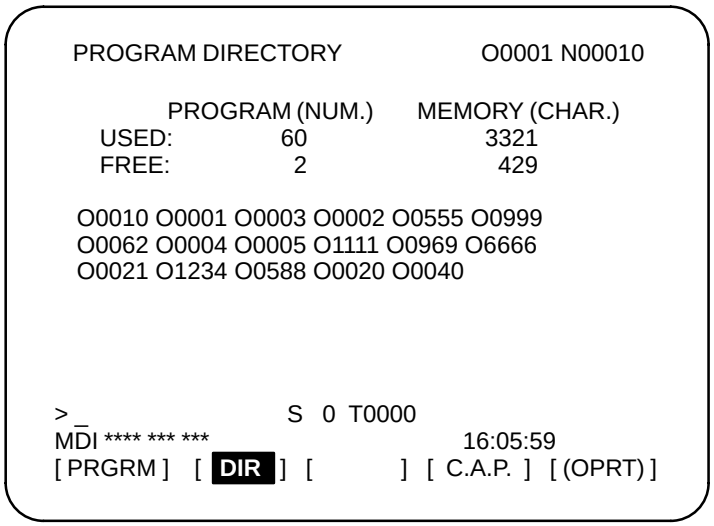

Explanations

- **Details of memory used**

PROGRAM NO. USED

PROGRAM NO. USED : The number of the programs registered (including the subprograms)

FREE : The number of programs which can be registered additionally.

MEMORY AREA USED

MEMORY AREA USED : The capacity of the program memory in which data is registered (indicated by the number of characters).

FREE : The capacity of the program memory which can be used additionally (indicated by the number of characters).

- **Program library list**

Program Nos. registered are indicated.
When parameter NAM (No.3107#0) is set to 1, program names or program sizes coupled with program update dates can be displayed in the program list.
The display toggles between the screen listing program names (Fig. 11.3.1 (a)) and the screen listing program sizes and program update dates (Fig. 11.3.1 (b)) each time the **[DIR]** soft key is clicked.
A program update date is also changed when the corresponding program number is changed.

```
PROGRAM DIRECTORY                O0001 N00010
          PROGRAM (NUM.)     MEMORY (CHAR.)
    USED:          60               3321
    FREE:           2                429

  O0001  (MACRO–GCODE.MAIN)
  O0002  (MACRO–GCODE.SUB1)
  O0010  (TEST–PROGRAM.ARTHMETIC NO.1)
  O0020  (TEST–PROGRAM.F10–MACRO)
  O0040  (TEST–PROGRAM.OFFSET)
  O0050
  O0100  (INCH/MM CONVERT CHECK NO.1)
  O0200  (MACRO–MCODE.MAIN)

> _
EDIT **** *** ***    16:05:59
[ PRGRM ] [ DIR ] [       ] [       ] [ (OPRT) ]
```

Fig. 11.3.1 (a)

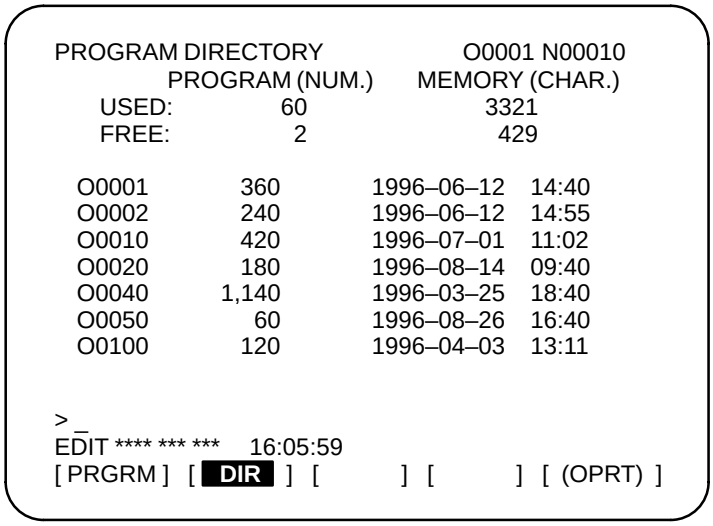

Fig. 11.3.1 (b)

When parameter NAM (No.3107#0) is 0, only program numbers are displayed.

- **Program name**

Always enter a program name between the control out and control in codes immediately after the program number.
Up to 31 characters can be used for naming a program within the parentheses. If 31 characters are exceeded, the exceeded characters are not displayed.
Only program number is displayed for the program without any program name.

○ □□□□ (ΔΔΔΔ…Δ) ;

Program number — Program name (up to 31 characters)

- **Software series**

Software series of the system is displayed.
It is used for maintenance ; user is not required this information.

- **Order in which programs are displayed in the program library list**

Programs are displayed in the same order that they are registered in the program library list. However, if bit 4 (SOR) of parameter 3107 is set to 1, programs are displayed in the order of program number starting from the smallest one.

● Order in which programs are registered

When no program has been deleted from the list, each program is registered at the end of the list.
If some programs in the list were deleted, then a new program is registered, the new program is inserted in the empty location in the list created by the deleted programs.

Example) When bit 4 (SOR) of parameter 3107 is 0

1. **After clearing all programs, register programs O0001, O0002, O0003, O0004, and O0005 in this order. The program library list displays the programs in the following order:**
   O0001, O0002, O0003, O0004, O0005

2. **Delete O0002 and O0004. The program library list displays the programs in the following order:**
   O0001, O0003, O0005

3. **Register O0009. The program library list displays the programs in the following order:**
   O0001, O0009, O0003, O0005

11.3.2 Displaying a Program List for a Specified Group

In addition to the normal listing of the numbers and names of CNC programs stored in memory, programs can be listed in units of groups, according to the product to be machined, for example.

To assign CNC programs to the same group, assign names to those programs, beginning each name with the same character string.

By searching through the program names for a specified character string, the program numbers and names of all the programs having names including that string are listed.

Procedure for Displaying a Program List for a Specified Group

Procedure

1 Enter EDIT or background editing mode.

2 Press the PROG function key.

3 Press the PROG function key or **[DIR]** soft key to display the program list.

```
PROGRAM DIRECTORY                O0001 N00010
          PROGRAM (NUM.)     MEMORY (CHAR.)
    USED:          60               3321
    FREE:           2                429

  O0020  (GEAR–1000 MAIN)
  O0040  (GEAR–1000 SUB–1)
  O0060  (SHAFT–2000 MAIN)
  O0100  (SHAFT–2000 SUB–1)
  O0200  (GEAR–1000 SUB–2)
  O1000  (FRANGE–3000 MAIN)
  O2000  (GEAR–1000 SUB–3)
  O3000  (SHAFT–2000 SUB–2)

> _
EDIT **** *** *** ***    16:52:13
[ PRGRM ] [  DIR  ] [       ] [       ] [ (OPRT) ]
```

4 Press the **[(OPRT)]** operation soft key.

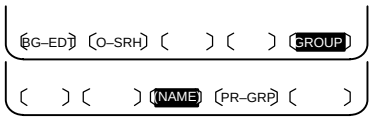

5 Press the **[GROUP]** operation soft key.

6 Press the **[NAME]** operation soft key.

7 Enter the character string corresponding to the group for which a search is to be made, using the MDI keys. No restrictions are imposed on the length of a program name. Note, however, that search is made based on only the first 32 characters.

Example: To search for those CNC programs having names that begin with character string “GEAR–1000,” enter the following:
>GEAR–1000*_



8 Pressing the **[EXEC]** operation soft key displays the group–unit program list screen, listing all those programs whose name includes the specified character string.

```
PROGRAM DIRECTORY (GROUP)       O0001 N00010
          PROGRAM (NUM.)     MEMORY (CHAR.)
   USED:          60               3321
   FREE:           2                429

  O0020  (GEAR–1000 MAIN)
  O0040  (GEAR–1000 SUB–1)
  O0200  (GEAR–1000 SUB–2)
  O2000  (GEAR–1000 SUB–3)




>_
EDIT **** *** *** ***    16:52:25
[ PRGRM ] [ DIR ] [       ] [       ] [ (OPRT) ]
```

[Group–unit program list screen displayed when a search is made for “GEAR–1000*”]

When the program list consists of two or more pages, the pages can be changed by using a page key.

Explanations

- *** and ?**

In the above example, the asterisk (*) must not be omitted. The asterisk indicates an arbitrary character string (wild card specification).

“GEAR–1000*” indicates that the first nine characters of the target program names must be “GEAR–1000,” followed by an arbitrary character string. If only “GEAR–1000” is entered, a search is made only for those CNC programs having the nine–character name “GEAR–1000.”

A question mark (?) can be used to specify a single arbitrary character. For example, entering “????–1000” enables a search to be made for programs having names which start with four arbitrary characters, followed by “–1000”.

[Example of using wild cards]

(Entered character string)		(Group for which the search will be made)
(a)	“*”	CNC programs having any name
(b)	“*ABC”	CNC programs having names which end with “ABC”
(c)	“ABC*”	CNC programs having names which start with “ABC”
(d)	“*ABC*”	CNC programs having names which include “ABC”
(e)	“?A?C”	CNC programs having four–character names, the second and fourth characters of which are A and C, respectively
(f)	“??A?C”	CNC programs having five–character names, the third and fifth characters of which are A and C, respectively
(g)	“123*456”	CNC programs having names which start with “123” and which end with “456”

- **When the specified character string cannot be found**

If no program is located as a result of a search for an entered character string, warning message “DATA NOT FOUND” is displayed on the program list screen.

- **Holding the group for which a search is made**

A group–unit program list, generated by a search, is held until the power is turned off or until another search is performed.

- **Group for which previous search was made**

After changing the screen from the group–unit program list to another screen, pressing the **[PR–GRP]** operation soft key (displayed in step 6) redisplays the group–unit program list screen, on which the program names for the previously searched group are listed. Using this soft key eliminates the need to enter the relevant character string again to redisplay the search results after changing the screen.

Examples

Assume that the main programs and subprograms for machining gear part number 1000 all have names which include character string “GEAR–1000.” The numbers and names of those programs can be listed by searching through the names of all CNC programs for character string “GEAR–1000.” This function facilitates the management of the CNC programs stored in large–capacity memory.

11.4 SCREENS DISPLAYED BY FUNCTION KEY OFFSET SETTING

Press function key OFFSET SETTING to display or set tool compensation values and other data.
This section describes how to display or set the following data:

1. Tool offset value
2. Settings
3. Run time and part count
4. Workpiece origin offset value
5. Custom macro common variables
6. Pattern menu and pattern data
7. Software operator's panel
8. Tool life management data

This section also describes measurement of tool length and the sequence number comparison and stop function.
The pattern menu, pattern data, software operator's panel, and tool life management data depend on the specifications of the machine tool builder. See the manual issued by the machine tool builder for details.

11.4.1 Setting and Displaying the Tool Offset Value

Tool offset values, tool length offset values, and cutter compensation values are specified by D codes or H codes in a program. Compensation values corresponding to D codes or H codes are displayed or set on the screen.

Procedure for setting and displaying the tool offset value

Procedure

1 Press function key

.

2 Press chapter selection soft key **[OFFSET]** or press

several times until the tool compensation screen is displayed.
The screen varies according to the type of tool offset memory.

```
OFFSET                                    O0001 N00000
   NO.      DATA          NO.      DATA
   001        .000        009        0.000
   002      –2.000        010      –7.500
   003       0.000        011       12.000
   004       5.000        012     –20.000
   005       0.000        013       0.000
   006       0.000        014       0.000
   007       0.000        015       0.000
   008       0.000        016       0.000
ACTUAL POSITION (RELATIVE)
      X      0.000          Y        0.000
      Z      0.000
>_
MDI **** *** ***                  16:05:59
[ OFFSET ] [ SETING ] [ WORK ] [         ] [ (OPRT) ]
```

Tool offset memory A

```
OFFSET                    O0001 N00000
   NO.   GEOM(H)   WEAR(H)   GEOM(D)   WEAR(D)
   001             0.000     0.000     0.000
   002    –1.000   0.000     0.000     0.000
   003     0.000   0.000     0.000     0.000
   004    20.000   0.000     0.000     0.000
   005     0.000   0.000     0.000     0.000
   006     0.000   0.000     0.000     0.000
   007     0.000   0.000     0.000     0.000
   008     0.000   0.000     0.000     0.000
ACTUAL POSITION (RELATIVE)
      X      0.000          Y        0.000
      Z      0.000
>_
MDI **** *** ***                  16:05:59
[ OFFSET ] [ SETING ] [         ] [         ] [ (OPRT) ]
```

Tool offset memory C

3 Move the cursor to the compensation value to be set or changed using page keys and cursor keys, or enter the compensation number for the compensation value to be set or changed and press soft key **[NO.SRH]**.

4 To set a compensation value, enter a value and press soft key **[INPUT]**. To change the compensation value, enter a value to add to the current value (a negative value to reduce the current value) and press soft key **[+INPUT]**. Or, enter a new value and press soft key **[INPUT]**.

Explanations

- **Decimal point input**

A decimal point can be used when entering a compensation value.

- **Other setting method**

An external input/output device can be used to input or output a tool offset value. See III–8. A tool length offset value can be set by measuring the tool length as described in the next subsection.

- **Tool offset memory**

There are tool offset memories A, B, and C, which are classified as follows:

Tool offset memory A
D codes and H codes are treated the same. Tool geometry compensation and tool wear compensation are treated the same.

Tool offset memory B
D codes and H codes are treated the same. Tool geometry compensation and tool wear compensation are treated differently.

Tool offset memory C
D codes and H codes are treated differently. Tool geometry compensation and tool wear compensation are treated differently.

- **Disabling entry of compensation values**

The entry of compensation values may be disabled by setting bit 0 (WOF) and bit 1 (GOF) of parameter 3290 (not applied to tool offset memory A). And then, the input of tool compensation values from the MDI can be inhibited for a specified range of offset numbers. The first offset number for which the input of a value is inhibited is set in parameter No. 3294. The number of offset numbers, starting from the specified first number, for which the input of a value is inhibited is set in parameter No. 3295. Consecutive input values are set as follows:

1) When values are input for offset numbers, starting from one for which input is not inhibited to one for which input is inhibited, a warning is issued and values are set only for those offset numbers for which input is not inhibited.
2) When values are input for offset numbers, starting from one for which input is inhibited to one for which input is not inhibited, a warning is issued and no values are set.

- **12 soft keys display unit**

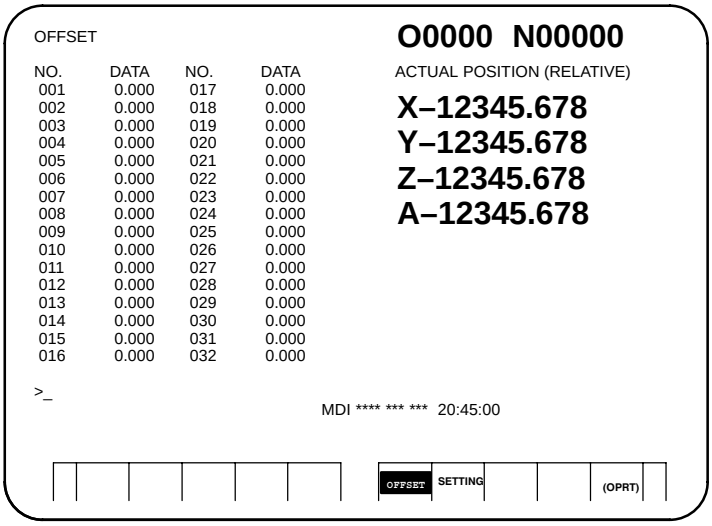

Tool offset memory A

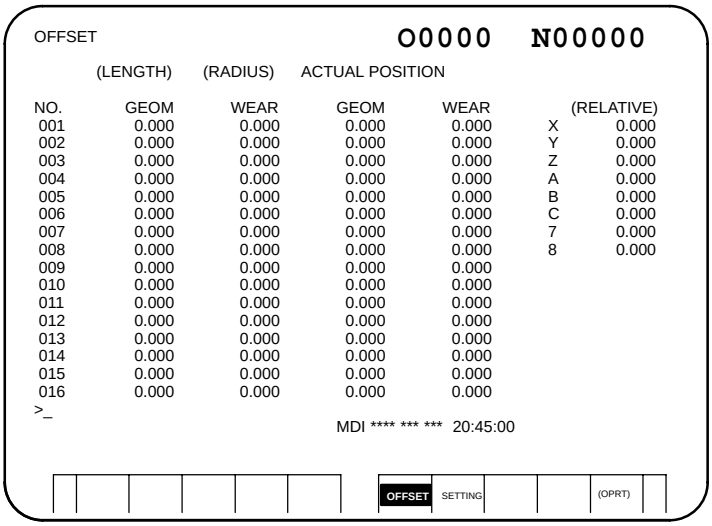

Tool offset memory C

11.4.2 Tool Length Measurement

The length of the tool can be measured and registered as the tool length offset value by moving the reference tool and the tool to be measured until they touch the specified position on the machine.
The tool length can be measured along the X–, Y–, or Z–axis.

Procedure for tool length measurement

Procedure

1 Use manual operation to move the reference tool until it touches the specified position on the machine (or workpiece.)

2 Press function key [POS] several times until the current position display screen with relative coordinates is displayed.

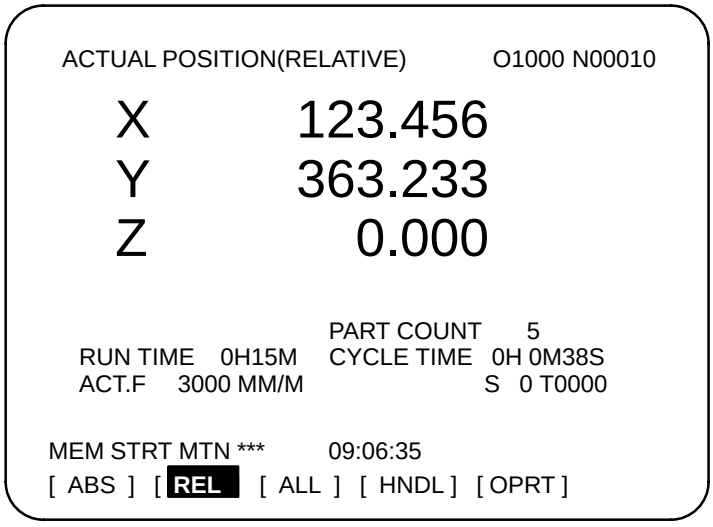

3 Reset the relative coordinate for the Z–axis to 0 (see III–11.1.2 for details).

4 Press function key [OFFSET SETTING] several times until the tool compensation screen is displayed.

5 Use manual operation to move the tool to be measured until it touches the same specified position. The difference between the length of the reference tool and the tool to be measured is displayed in the relative coordinates on the screen.

6 Move the cursor to the compensation number for the target tool (the cursor can be moved in the same way as for setting tool compensation values).

7 Press the address key [Z].

If either [X] or [Y] key is depressed instead of [Z] key, the X or Y axis relative coordinate value is input as an tool length compensation value.



8 Press the soft key **[INP.C.]**. The Z axis relative coordinate value is input and displayed as an tool length offset value.

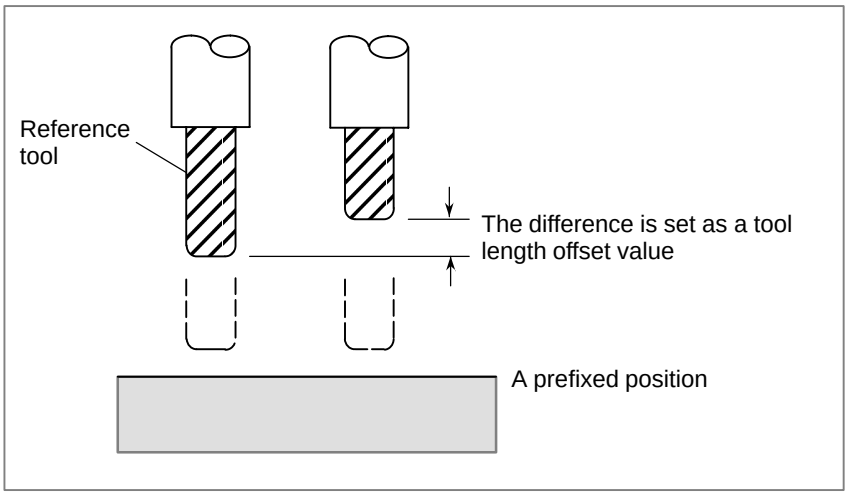

11.4.3 Displaying and Entering Setting Data

Data such as the TV check flag and punch code is set on the setting data screen. On this screen, the operator can also enable/disable parameter writing, enable/disable the automatic insertion of sequence numbers in program editing, and perform settings for the sequence number comparison and stop function.
See III–10.2 for automatic insertion of sequence numbers.
See III–11.4.4 for the sequence number comparison and stop function.
This subsection describes how to set data.

Procedure for setting the setting data

Procedure

1 Select the **MDI** mode.

2 Press function key [OFFSET SETTING] .

3 Press soft key **[SETING]** to display the setting data screen.
This screen consists of several pages.
Press page key [PAGE ↑] or [PAGE ↓] until the desired screen is displayed.
An example of the setting data screen is shown below.

```
SETTING (HANDY)                                O0001 N00000

  PARAMETER WRITE   =  1 (0:DISABLE 1:ENABLE)
  TV CHECK          =  0 (0:OFF  1:ON)
  PUNCH CODE        =  1 (0:EIA  1:ISO)
  INPUT UNIT        =  0 (0:MM   1:INCH)
  I/O CHANNEL       =  0 (0–3:CHANNEL NO.)
  SEQUENCE NO.      =  0 (0:OFF  1:ON)
  TAPE FORMAT       =  0 (0:NO CNV  1:F15)
  SEQUENCE STOP     =          0 (PROGRAM NO.)
  SEQUENCE STOP     =          0 (SEQUENCE NO.)
>_
MDI **** *** ***                          16:05:59
[ OFFSET ] [ SETING ] [ WORK ] [        ] [ (OPRT) ]
```

```
SETTING (HANDY)                                O0001 N00000

  MIRROR IMAGE          X  =  0 (0:OFF  1:ON)
  MIRROR IMAGE          Y  =  0 (0:OFF  1:ON)
  MIRROR IMAGE          Z  =  0 (0:OFF  1:ON)




>_
MDI **** *** ***                          16:05:59
[ OFFSET ] [ SETING ] [ WORK ] [        ] [ (OPRT) ]
```

4 Move the cursor to the item to be changed by pressing cursor keys [↑], [↓], [←], or [→].

5 Enter a new value and press soft key **[INPUT]**.

Contents of settings

- **PARAMETER WRITE**

  Setting whether parameter writing is enabled or disabled.
  0 : Disabled
  1 : Enabled

- **TV CHECK**

  Setting to perform TV check.
  0 : No TV check
  1 : Perform TV check

- **PUNCH CODE**

  Setting code when data is output through reader puncher interface.
  0 : EIA code output
  1 : ISO code output

- **INPUT UNIT**

  Setting a program input unit, inch or metric system
  0 : Metric
  1 : Inch

- **I/O CHANNEL**

  Using channel or interface of reader/puncher interface.
  0 : Channel 0
  1 : Channel 1
  2 : Channel 2
  3 : Channel 3
  4 : Memory card interface

- **SEQUENCE STOP**

  Setting of whether to perform automatic insertion of the sequence number or not at program edit in the EDIT mode.
  0 : Does not perform automatic sequence number insertion.
  1 : Perform automatic sequence number insertion.

- **TAPE FORMAT**

  Setting the F15 tape format conversion.
  0 : Tape format is not converted.
  1 : Tape format is converted.
  See II. PROGRAMMING for the F15 tape format.

- **SEQUENCE STOP**

  Setting the sequence number with which the operation stops for the sequence number comparison and stop function and the number of the program to which the sequence number belongs

- **MIRROR IMAGE**

  Setting of mirror image ON/OFF for each axes.
  0 : Mirror image off
  1 : Mirror image on

- **Others**

  Page key [PAGE ↑] or [PAGE ↓] can also be pressed to display the SETTING (TIMER) screen. See III–11.4.5 for this screen.

11.4.4 Sequence Number Comparison and Stop

If a block containing a specified sequence number appears in the program being executed, operation enters single block mode after the block is executed.

Procedure for sequence number comparison and stop

Procedure

1 Select the **MDI** mode.

2 Press function key [OFFSET SETTING] .

3 Press chapter selection soft key **[SETING]**.

4 Press page key [PAGE ↑] or [PAGE ↓] several times until the following screen is displayed.

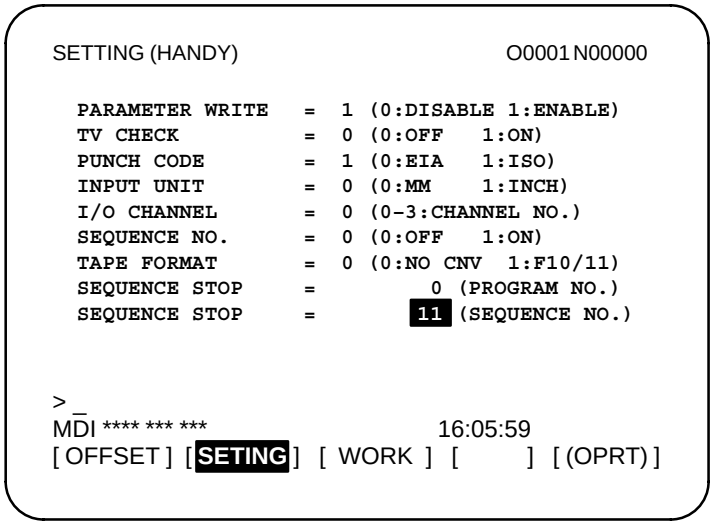

5 Enter in (PROGRAM NO.) for SEQUENCE STOP the number (1 to 9999) of the program containing the sequence number with which operation stops.

6 Enter in (SEQUENCE NO.) for SEQUENCE STOP (with five or less digits) the sequence number with which operation is stopped.

7 When automatic operation is executed, operation enters single block mode at the block containing the sequence number which has been set.

Explanations

- **Sequence number after the program is executed**

After the specified sequence number is found during the execution of the program, the sequence number set for sequence number compensation and stop is decremented by one. When the power is turned on, the setting of the sequence number is 0.

- **Exceptional blocks**

If the predetermined sequence number is found in a block in which all commands are those to be processed within the CNC control unit, the execution does not stop at that block.

Example

```
N1 #1=1 ;
N2 IF [#1 EQ 1] GOTO 08 ;
N3 GOTO 09 ;
N4 M98 P1000 ;
N5 M99 ;
```

In the example shown above, if the predetermined sequence number is found, the execution of the program does not stop.

- **Stop in the canned cycle**

If the predetermined sequence number is found in a block which has a canned–cycle command, the execution of the program stops after the return operation is completed.

- **When the same sequence number is found several times in the program**

If the predetermined sequence number appears twice or more in a program, the execution of the program stops after the block in which the predetermined sequence number is found for the first time is executed.

- **Block to be repeated a specified number of times**

If the predetermined sequence number is found in a block which is to be executed repeatedly, the execution of the program stops after the block is executed specified times.

11.4.5 Displaying and Setting Run Time, Parts Count, and Time

Various run times, the total number of machined parts, number of parts required, and number of machined parts can be displayed. This data can be set by parameters or on this screen (except for the total number of machined parts and the time during which the power is on, which can be set only by parameters).
This screen can also display the clock time. The time can be set on the screen.

Procedure for Displaying and Setting Run Time, Parts Count and Time

Procedure

1 Select the MDI mode.

2 Press function key

.

3 Press chapter selection soft key **[SETING]**.

4 Press page key

or

several times until the following screen is displayed.

```
SETTING (TIMER)                                O0001 N00000

     PARTS TOTAL     =    14
     PARTS REQUIRED  =     0
     PARTS COUNT     =    23

     POWER ON                    =   4H  31M
     OPERATING TIME      =   0H   0M     0S
     CUTTING TIME        =   0H  37M      5S
     FREE PURPOSE            =   0H   0M     0S
     CYCLE TIME              =   0H   0M     0S
          DATE    =       2001/07/05
          TIME=           11:32:52

> _
MDI **** *** ***                          16:05:59
[ OFFSET ] [ SETING ] [  WORK  ] [       ] [ (OPRT) ]
```

5 To set the number of parts required, move the cursor to PARTS REQUIRED and enter the number of parts to be machined.

6 To set the clock, move the cursor to DATE or TIME, enter a new date or time, then press soft key **[INPUT]**.

Display items

- **PARTS TOTAL**

This value is incremented by one when M02, M30, or an M code specified by parameter 6710 is executed. This value cannot be set on this screen. Set the value in parameter 6712.

- **PARTS REQUIRED**

It is used for setting the number of machined parts required.
When the “0” is set to it, there is no limitation to the number of parts. Also, its setting can be made by the parameter (NO. 6713).

- **PARTS COUNT**

  This value is incremented by one when M02, M30, or an M code specified by parameter 6710 is executed. The value can also be set by parameter 6711. In general, this value is reset when it reaches the number of parts required. Refer to the manual issued by the machine tool builder for details.

- **POWER ON**

  Displays the total time which the power is on. This value cannot be set on this screen but can be preset in parameter 6750.

- **OPERATING TIME**

  Indicates the total run time during automatic operation, excluding the stop and feed hold time.
  This value can be preset in parameter 6751 or 6752.

- **CUTTING TIME**

  Displays the total time taken by cutting that involves cutting feed such as linear interpolation (G01) and circular interpolation (G02 or G03). This value can be preset in parameter 6753 or 6754.

- **FREE PURPOSE**

  This value can be used, for example, as the total time during which coolant flows. Refer to the manual issued by the machine tool builder for details.

- **CYCLE TIME**

  Indicates the run time of one automatic operation, excluding the stop and feed hold time. This is automatically preset to 0 when a cycle start is performed at reset state. It is preset to 0 even when power is removed.

- **DATA and TIME**

  Displays the current date and time. The date and time can be set on this screen.

Limitations

- **Usage**

  When the command of M02 or M30 is executed, the total number of machined parts and the number of machined parts are incremented by one. Therefore, create the program so that M02 or M30 is executed every time the processing of one part is completed. Furthermore, if an M code set to the parameter (NO. 6710) is executed, counting is made in the similar manner. Also, it is possible to disable counting even if M02 or M30 is executed (parameter PCM (No. 6700#0) is set to 1). For details, see the manual issued by machine tool builders.

Restrictions

- **Run time and part count settings**

  Negative value cannot be set. Also, the setting of “M” and “S” of run time is valid from 0 to 59.
  Negative value may not be set to the total number of machined parts.

- **Time settings**

  Neither negative value nor the value exceeding the value in the following table can be set.

Item	Maximum value	Item	Maximum value
Year	2085	Hour	23
Month	12	Minute	59
Day	31	Second	59

11.4.6 Displaying and Setting the Workpiece Origin Offset Value

Displays the workpiece origin offset for each workpiece coordinate system (G54 to G59, G54.1 P1 to G54.1 P48 and G54.1 P1 to G54.1 P300) and external workpiece origin offset. The workpiece origin offset and external workpiece origin offset can be set on this screen.

Procedure for Displaying and Setting the Workpiece Origin Offset Value

Procedure

1 Press function key

.

2 Press chapter selection soft key **[WORK]**.
The workpiece coordinate system setting screen is displayed.

```
WORK COORDINATES                    O0001 N00000

(G54)
 NO.   DATA                          NO.   DATA
 00    X  0.000                      02    X 152.580
(EXT)  Y  0.000                     (G55)  Y 234.000
       Z  0.000                            Z 112.000

 01    X  20.000                     03    X 300.000
(G54)  Y  50.000                    (G56)  Y 200.000
       Z  30.000                           Z 189.000

>_                                  S  0 T0000
MDI **** *** ***                      16:05:59
[ OFFSET ] [ SETING ] [ WORK ] [        ] [ (OPRT) ]
```

3 The screen for displaying the workpiece origin offset values consists of two or more pages. Display a desired page in either of the following two ways:

- Press the page up

or page down

key.
- Enter the workpiece coordinate system number (0 : external workpiece origin offset, 1 to 6: workpiece coordinate systems G54 to G59, P1 to P48 : workpiece coordinate systems G54.1 P1 to G54.1 P48, P1 to P300 : workpiece coordinate systems G54.1 P1 to G54.1 P300) and press operation selection soft key **[NO.SRH]**.

4 Turn off the data protection key to enable writing.

5 Move the cursor to the workpiece origin offset to be changed.

6 Enter a desired value by pressing numeric keys, then press soft key **[INPUT]**. The entered value is specified in the the workpiece origin offset value. Or, by entering a desired value with numeric keys and pressing soft key **[+INPUT]**, the entered value can be added to the previous offset value.

7 Repeat **5** and **6** to change other offset values.

8 Turn on the data protection key to disable writing.

11.4.7 Direct Input of Measured Workpiece Origin Offsets

This function is used to compensate for the difference between the programmed workpiece coordinate system and the actual workpiece coordinate system. The measured offset for the origin of the workpiece coordinate system can be input on the screen such that the command values match the actual dimensions.
Selecting the new coordinate system matches the programmed coordinate system with the actual coordinate system.

Procedure for Direct Inputting of Measured Workpiece Origin Offsets

Procedure

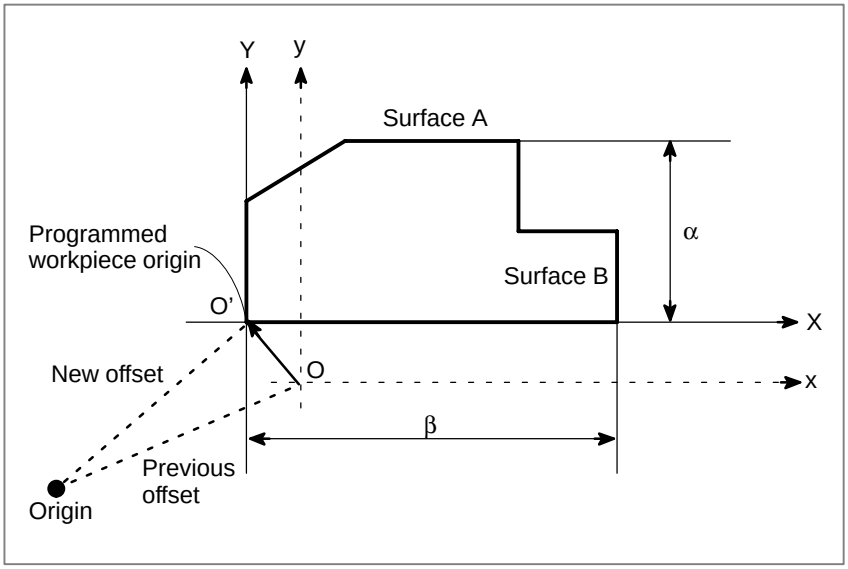

1 When the workpiece is shaped as shown above, position the reference tool manually until it touches surface A of the workpiece.

2 Retract the tool without changing the Y coordinate.

3 Measure distance α between surface A and the programmed origin of the workpiece coordinate system as shown above.

4 Press function key OFFSET SETTING .

5 To display the workpiece origin offset setting screen, press the chapter selection soft key **[WORK]**.

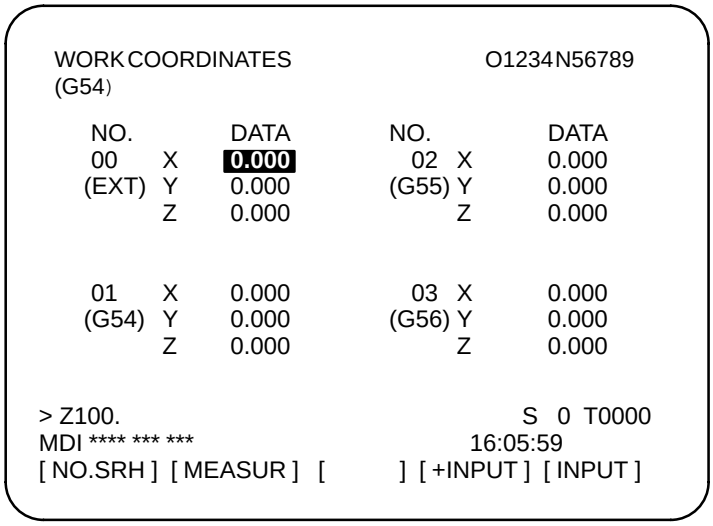

6 Position the cursor to the workpiece origin offset value to be set.

7 Press the address key for the axis along which the offset is to be set (Y–axis in this example).

8 Enter the measured value (α) then press the **[MEASUR]** soft key.

9 Move the reference tool manually until it touches surface B of the workpiece.

10 Retract the tool without changing the X coordinate.

11 Measure distance β then enter the distance at X on the screen in the same way as in steps 7 and 8.

Limitations

- **Consecutive input** — Offsets for two or more axes cannot be input at the same time.
- **During program execution** — This function cannot be used while a program is being executed.

11.4.8 Displaying and Setting Custom Macro Common Variables

Displays common variables (#100 to #149 or #100 to #199, and #500 to #531 or #500 to #999) on the screen. When the absolute value for a common variable exceeds 99999999, ******** is displayed. The values for variables can be set on this screen. Relative coordinates can also be set to valiables.

Procedure for displaying and setting custom macro common variables

Procedure

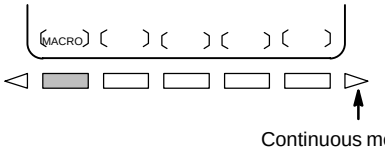

1 Press function key OFFSET SETTING .

2 Press the continuous menu key ▷ , then press chapter selection soft key **[MACRO]**.The following screen is displayed:

```
VARIABLE                                        O0001 N00000
NO.    DATA        NO.    DATA
100     1000.000          108        0.000
101        0.000          109    40000.000
102   –50000.000          110    153020.00
103        0.000          111     0001.000
104    1238501.0          112        0.000
105        0.000          113    20000.000
106        0.000          114        0.000
107        0.000          115        0.000
ACTUAL POSITION (RELATIVE)
  X    0.000          Y    0.000
  Z    0.000
> _                                        S  0  T0000
MDI **** *** ***                      16:05:59
[ NO.SRH ] [       ] [ INP.C. ] [       ] [ INPUT ]
```

3 Move the cursor to the variable number to set using either of the following methods:
– Enter the variable number and press soft key **[NO.SRH]**.
– Move the cursor to the variable number to set by pressing page keys PAGE ↑ and/or PAGE ↓ and cursor keys ↑ , ↓ , ← , and/or → .

4 Enter data with numeric keys and press soft key **[INPUT]**.

5 To set a relative coordinate in a variable, press address key X , Y , or Z , then press soft key **[INP.C.]**.

6 To set a blank in a variable, just press soft key **[INPUT]**. The value field for the variable becomes blank.

11.4.9 Displaying Pattern Data and Pattern Menu

This subsection uses an example to describe how to display or set machining menus (pattern menus) created by the machine tool builder. Refer to the manual issued by the machine tool builder for the actual pattern menus and pattern data. See II. PROGRAMMING for the pattern data entry function.

Procedure (example) for displaying the pattern data and the pattern menu

Procedure

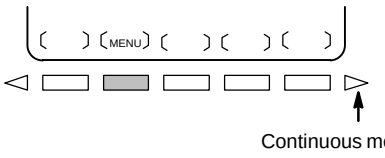

1 Press function key [OFFSET SETTING].

2 Press the continuous menu key [▷], then press chapter selection soft key **[MENU]**.
The following screen (pattern menu screen) is displayed:

```
MENU : HOLE PATTERN                    O0000 N00000
      1. TAPPING
      2. DRILLING
      3. BORING
      4. POCKET
      5. BOLT HOLE
      6. LINE ANGLE
      7. GRID
      8. PECK
      9.
     10.

>_
MDI **** *** ***     16:05:59
[ MACRO ] [ MENU ] [ OPR ] [      ] [ (OPRT) ]
```

3 Enter a pattern number and press soft key **[SELECT]**.
In this example, press [5], then press **[SELECT]**.
The following screen (pattern data screen) is displayed:

```
VAR. : BOLT HOLE                        O0001 N00000
  NO.     NAME              DATA      COMMENT
  500     TOOL              0.000
  501     STANDARD X        0.000     *BOLT HOLE
  502     STANDARD Y        0.000     CIRCLE*
  503     RADIUS            0.000     SET PATTERN
  504     S. ANGL           0.000     DATA TO VAR.
  505     HOLES NO          0.000     NO.500–505.
  506                       0.000
  507                       0.000

 ACTUAL POSITION (RELATIVE)
    X     0.000                  Y     0.000
>_  Z     0.000
MDI **** *** ***                    16:05:59
[ OFFSET ] [SETING] [      ] [      ] [ (OPRT) ]
```

4 Enter necessary pattern data and press INPUT.

5 After entering all necessary data, enter the **MEMORY** mode and press the cycle start button to start machining.

Explanations

- **Explanation of the pattern menu screen**

HOLE PATTERN : Menu title
An optional character string can be displayed within 12 characters.

BOLE HOLE : Pattern name
An optional character string can be displayed within 10 characters.

The machine tool builder should program character strings of menu title and pattern name by custom macro, and load them into the program memory.

- **Explanation of the pattern data screen**

BOLT HOLE : Pattern data title
An optional character string can be displayed within 12 characters.

TOOL : Variable name
An optional character string can be displayed within 10 characters.

BOLT HOLE CIRCLE : Comment statement
An optional character string comment can be displayed up to 12 characters/line by 8 lines.

The machine tool builder should program the character strings of variable name and comment statement by custom macro, and load them into the program memory.

11.4.10 Displaying and Setting the Software Operator's Panel

With this function, functions of the switches on the machine operator's panel can be controlled from the CRT/MDI panel.
Jog feed can be performed using numeric keys.

Procedure for displaying and setting the software operator's panel

Procedure

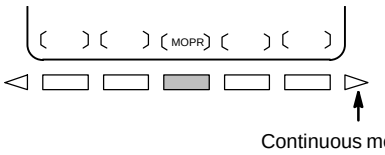

1 Press function key [OFFSET SETTING].

2 Press the continuous menu key [▷], then press chapter selection soft key **[OPR]**.

3 The screen consists of several pages.
Press page key [PAGE ↑] or [PAGE ↓] until the desired screen is displayed.

```
OPERATOR'S PANEL                          O0000 N00000

MODE : MDI  MEM    EDIT   HNDL   JOG   REF

 STEP MULTI.  :   *1      *10     *100
 RAPID OVRD.  :  100%    50%     25%     F0
 JOG FEED     :   2.0%
                  **********
 FEED OVRD.   : 100%
                  ***
 ACTUAL POSITION (ABSOLUTE)
      X       0.000       Y       0.000
      Z       0.000

>_
MDI **** *** ***     16:05:59
[ MACRO ] [       ] [ OPR ] [TOOLLF]  [ (OPRT) ]
```

```
OPERATOR'S PANEL          O0000 N00000

BLOCK SKIP       :        OFF ■ ON
SINGLE BLOCK     :   ■    OFF   ON
MACHINE LOCK     :        OFF ■ ON
PROTECT KEY      :   ■    PROTECT      RELEASE
FEED HOLD        :   ■    OFF

ACTUAL POSITION (ABSOLUTE)
      X       0.000       Y       0.000
      Z       0.000


                    S   0  T0000
MDI **** *** ***     16:05:59
[ MACRO ] [       ] [ OPR ] [ TOOLLF ]  [ (OPRT)  ]
```

4 Move the cursor to the desired switch by pressing cursor key ↑ or ↓ .

5 Push the cursor move key ← or → to match the mark ■ to an arbitrary position and set the desired condition.

6 On a screen where jog feed is enabled, pressing a desired arrow key, shown below, performs jog feed. Press the 5 key together with an arrow key to perform jog rapid traverse.

8↑ 9↗
4← 5 6→
1↙ 2↓

Explanations

- **Valid operations**

The valid operations on the software operator's panel are shown below. Whether to use the MDI panel or machine operator's panel for each group of operations can be selected by parameter 7200.

Group1 : Mode selection
Group2 : Selection of jog feed axis, jog rapid traverse
Group3 : Selection of manual pulse generator feed axis, selection of manual pulse magnification x1, x10, x100
Group4 : Jog federate, federate override, rapid traverse override
Group5 : Optional block skip, single block, machine lock, dry run
Group6 : Protect key
Group7 : Feed hold

- **Display**

The groups for which the machine operator's panel is selected by parameter 7200 are not displayed on the software operator's panel.

- **Screens on which jog feed is valid**

When the screen indicates other than the software operator's panel screen and diagnostic screen, jog feed is not conducted even if the arrow key is pushed.

- **Jog feed and arrow keys**

The feed axis and direction corresponding to the arrow keys can be set with parameters (Nos. 7210 to 7217).

- **General purpose switches**

Eight optionally definable switches are added as an extended function of the software operator's panel. The name of these switches can be set by parameters (Nos. 7220 to 7283) as character strings of max. 8 characters. For the meanings of these switches, refer to the manual issued by machine tool builder.

11.4.11 Displaying and Setting Tool Life Management Data

Tool life data can be displayed to inform the operator of the current state of tool life management. Groups which require tool changes are also displayed.The tool life counter for each group can be preset to an arbitrary value. Tool data (execution data) can be reset or cleared. To register or modify tool life management data, a program must be created and executed. See Explanations in this section for details.
When bit 6 (EXT) of parameter 6801 is 1, extended tool life management applies. See III–11.4.12.

Procedure for display and setting the tool life management data

Procedure

1 Press function key [OFFSET SETTING].

2 Press the continuous menu key [▷] to display chapter selection soft key **[TOOLLF]**.

3 Press softkey **[TOOLLF]**.

4 One page displays data on two groups. Pressing page key [PAGE ↓] or [PAGE ↑] successively displays data on the following groups. Up to four group Nos., for which the Tool Change signal is being issued, are displayed at the bottom of each page. An arrow shown in the figure is displayed for five or more groups, if exists.

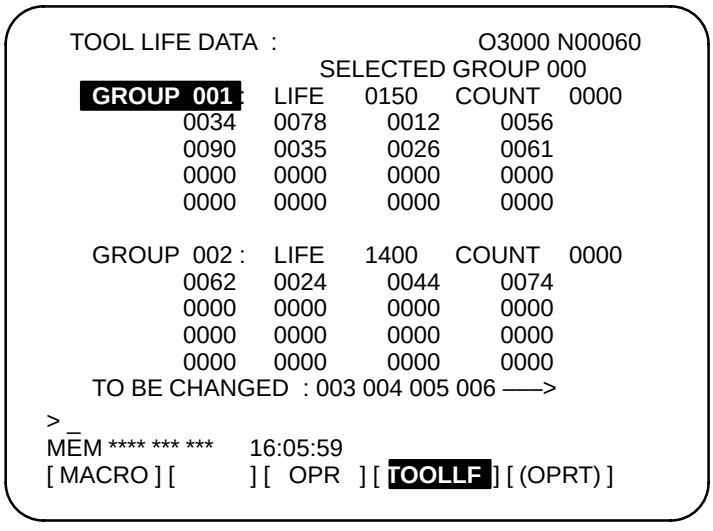

5 To display the page containing the data for a group, enter the group number and press soft key **[NO.SRH]**.
The cursor can be moved to an arbitrary group by pressing cursor key ↑ or ↓ .

6 To change the value in the life counter for a group, move the cursor to the group, enter a new value (four digits), and press **[INPUT]**. The life counter for the group indicated by the cursor is preset to the entered value. Other data for the group is not changed.

7 To reset the tool data, move the cursor on the group to reset, then press the **[(OPRT)]**, **[CLEAR]**, and **[EXEC]** soft keys in this order.
All execution data for the group indicated by the cursor is cleared together with the marks (@, #, or *).

Explanations

- **Display contents**

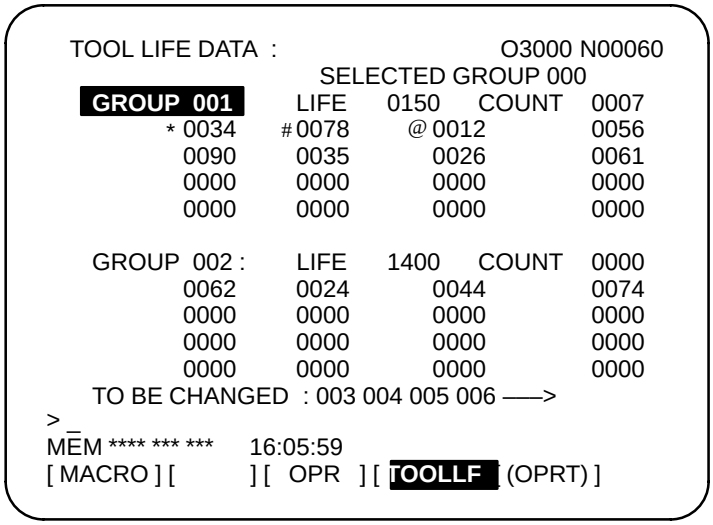

- The first line is the title line.
- In the second line the group number of the current command is displayed.
  When there is no group number of the current command, 0 is displayed.
- In lines 3 to 7 the tool life data of the group is displayed.
  The third line displays group number, life and the count used.
  The life count is chosen by parameter LTM (No. 6800#2) as either minutes(or hours) or number of times used.
  In lines 4 to 5, tool numbers are displayed. In this case, the tool is selected in the order, 0034 → 0078 → 0012 → 056 → 0090 ...
  The meaning of each mark before the tool numbers is :
  * : Shows the life has finished.
  # : Shows that the skip command has been accepted.
  @ : Shows that the tool is currently being used.
  The life counter counts for tool with @.
  "*" is displayed when the next command is issued by the group to which it belongs.
- Lines 8 to 12 are next group life data to the group displayed in lines 3 to 7.
- In the thirteenth line the group number when the tool change signal is being emitted is displayed. The group number display appears in ascending order. When it cannot be completely displayed, "——>" is displayed.

11.4.12 Displaying and Setting Extended Tool Life Management

The extended tool life management function provides more detailed data display and more data editing functions than the ordinary tool life management function.
Moreover, if the tool life is specified in units of time, the time which has been set can be increased or reduced (life count override).
When bit 6 (EXT) of parameter 6801 is set to 0, the ordinary tool life management function applies. See III–11.4.11.

Procedure for displaying and Setting extended tool life management

Procedure

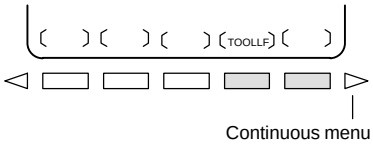

1 Press function key [OFFSET SETTING].

2 Press the continuous menu key [▷] to display chapter selection soft key **[TOOLLF]**.

3 Press soft key **[TOOLLF]** to display the tool life management data screen.
On this screen, place the cursor on a group of items to be edited.

4 Press soft key **[(OPRT)]**.

5 Press soft key **[EDIT]**.
The extended tool life management data editing screen for the group indicated by the cursor is the displayed.

```
LIFE DATA    EDIT   GROUP : 001  O0010 N00001
 TYPE    : 1 (1:C 2:M)        NEXT GROUP:  ***
 LIFE    : 9800               USE GROUP  :  ***
 COUNT   : 6501               SELECTED GROUP :  001
  NO.    STATE      T–CODE      H–CODE      D–CODE
  01       *          0034        011         005
  02       #          0078        000         033
  03       @          0012        004         018
  04       *          0056        000         000
  05                  0090        000         000
  06       *          0076        023         012


 >_
 MDI **** *** ***              16:05:59
 [ INSERT ] [ DELETE ] [ STATE ] [ END ] [ INPUT ]
```

Tool life management data can be edited as follows:

6 Select the **MDI** mode.

7 Stop, pause, or reset the CNC by the feed hold, single block stop, or reset operation (tool life management data cannot be edited while data is set by a program.).
The following editing can be performed. See each step for details:
- Setting the life count type, life value, current life count, and tool data (T, H, or D code) : **7–1**
- Adding a tool group : **7–2**
- Adding a tool number (T code) : **7–3**

· Deleting a tool group : **7–4**
· Deleting tool data (T, H, or D code) : **7–5**
· Skipping a tool : **7–6**
· Clearing the life count (resetting the life) : **7–7**

7–1 Setting the life count type, life value, current life count, and tool data (T, H, or D code)

(1) Position the cursor on the data item to be changed.

(2) Enter a desired value.

(3) Press the softkey **[INPUT]**.

7–2 Adding a tool group

(1) In step 3, select a group for which no data is set and display the editing screen.

(2) Enter tool numbers.

(3) Press soft key **[INSERT]**.

· In this case, the type of the life counter is determined by the setting of LTM (No. 6800#2), and 0 is set in both the life expectancy and life counter.

· 0 is set in both the H code and D code.

· The cursor remains on the tool number until the T code is specified.

7–3 Adding a tool number

(1) Move the cursor to the tool data (T, H, or D code) after which a new number is to be added.

(2) Enter the tool number.

(3) Press soft key **[INSERT]**.

Example),Inserting tool No. 1500 between No. 1 and No. 2.

NO.	STATE	T–CODE	H–CODE	D–CODE
01	*	0034	11	**5**
02	#	0078	0	33

Move the cursor to 5 in D–CODE column and press soft key **[INSERT]**.

NO.	STATE	T–CODE	H–CODE	D–CODE
01	*	0034	11	5
02		**1500**	0	0
03	#	0078	0	33

7–4 Deleting a tool group

(1) In step 3, position the cusor on a group to be deleted and display the editing screen.

(2) Press soft key **[DELETE]**.

(3) Press soft key **[GROUP]**.

(4) Press soft key **[EXEC]**.

7–5 Deleting tool data (T, H, or D code)

(1) Position the cursor on the data item (T, H, or D code) to be deleted.

(2) Press soft key **[DELETE]**.

(3) Press soft key **[<CRSR>]**.

· The line containing the cursor is deleted.

· When a tool with mark @ (being used) is deleted, mark @ shifts to the tool whose life has expired most recently or which has been skipped.
In this case, marks * and # are displayed in reverse video. # *

7–6 Skipping a tool

(1) Position the cursor on the data item (T, H, or D code) for the tool to be skipped.

(2) Press soft key **[STATE]**.

(3) Press soft key **[SKIP]**.

7–7 Clearing the life count (resetting the life)

(1) Position the cursor on the data item (T, H, or D code) of the tool to be cleared.

(2) Press soft key **[STATE]**.

(3) Press soft key **[CLEAR]**.

8 To complete the edit operation, press soft key **[END]**.
The tool life management screen is displayed again.

Explanations

- **Displays**

```
LIFE DATA  EDIT      GROUP  :  001  O0010 N00001
 TYPE      :  1 (1:C 2:M)      NEXT GROUP:  ***
 LIFE      :  9800             USE GROUP  :  ***
 COUNT     :  6501             SELECTED GROUP :  001
  NO.   STATE    T–CODE      H–CODE      D–CODE
  01      *        0034        011         005
  02      #        0078        000         033
  03      @        0012        004         018
  04      *        0056        000         000
  05               0090        000         000
  06      *        0076        023         012


>_
MDI **** *** ***     16:05:59
[ INSERT ] [ DELETE ] [ STATE ] [  END  ]  [ INPUT ]
```

NEXT GROUP :
Number of the tool group whose life is to be calculated by the next M06 command
USE GROUP :
Number of the tool group whose life is being calculated
SELECTED GROUP :
Number of the tool group whose life is being calculated or was calculated last
TYPE: 1: Life count is represented in units of cycles.
TYPE: 2 : Life count is represented in units of minutes.
LIFE : Life expectancy
COUNT : Life counter
STATE : State of the tool

Tool state	In use	Not in use
Available	@	_(Space)
Skip	#	#
Skipped	w / ＊ (Note)	＊

NOTE
When bit 3 (EMD) of parameter 6801 is set to 0, @ is displayed until the next tool is selected.

T–CODE : Tool number
H–CODE : H code
D–CODE : D code

● Tool life management screen

When the extended tool life management function is provided, the following items are added to the tool life management screen:

- NEXT: Tool group to be used next
- USE: Tool group in use
- Life counter type for each tool group (C: Cycles, M: Minutes)

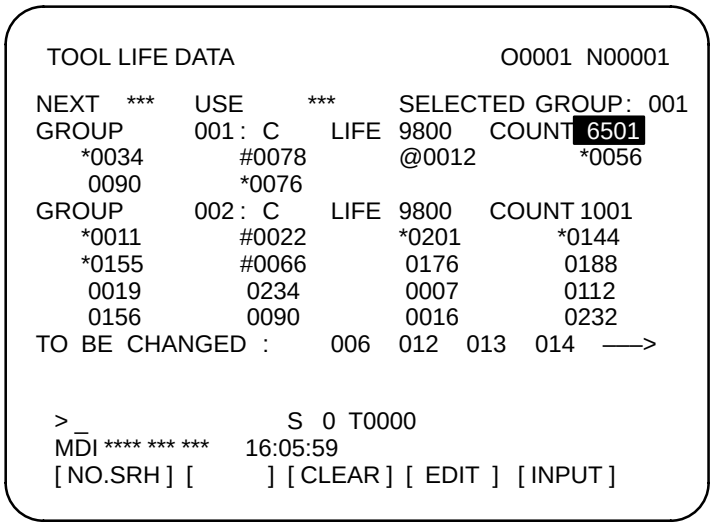

● Life count override

The tool life count can be overridden provided that the life counter is indicated in units of minutes and LFV (bit 2 of parameter 6801) is 1.
Override values can be specified using the override switch on the operator's panel within the range from 0 to 99.9. If 0 is specified, tool life is not counted. If the count of actual cutting time is less than 4 seconds, the override value is invalid.

Example

When cutting is performed for 10 minutes with an override of 0.1, the tool life counter counts one minute.

● Display of the mark indicating that the life of a tool has expired

The symbol * for indicating that the life of a tool has expired can be displayed either when the machine starts using the next tool or when the life of the tool actually expires. Either of these methods can be selected using EMD (bit 3 of parameter 6801).

● Influence of changes in data

- Modification of the life expectancy or life counter does not affect the tool states or tool change signal.
- When the type of the life counter is changed, be sure to change the life expectancy and life count as well.

11.5 SCREENS DISPLAYED BY FUNCTION KEY SYSTEM

When the CNC and machine are connected, parameters must be set to determine the specifications and functions of the machine in order to fully utilize the characteristics of the servo motor or other parts.
This chapter describes how to set parameters on the MDI panel. Parameters can also be set with external input/output devices such as the Handy File (see III–8).
In addition, pitch error compensation data used for improving the precision in positioning with the ball screw on the machine can be set or displayed by the operations under function key SYSTEM .

See III–7 for the diagnostic screens displayed by pressing function key SYSTEM .

11.5.1 Displaying and Setting Parameters

When the CNC and machine are connected, parameters are set to determine the specifications and functions of the machine in order to fully utilize the characteristics of the servo motor. The setting of parameters depends on the machine. Refer to the parameter list prepared by the machine tool builder.
Normally, the user need not change parameter setting.

Procedure for displaying and setting parameters

Procedure

1 Set 1 for **PARAMETER WRITE** to enable writing. See the procedure for enabling/disabling parameter writing described below.

2 Press function key [SYSTEM] .

3 Press chapter selection soft key **[PARAM]** to display the parameter screen.

```
PARAMETER (SETTING)                    O0010    N00002

0000      SEQ                          INI  ISO   TVC
          0    0    0    0    0    0    0
0001                                         FCV
          0    0    0    0    0    0    0    0
0012                                         MIR
  X       0    0    0    0    0    0    0    0
  Y       0    0    0    0    0    0    0    0
  Z       0    0    0    0    0    0    0    0
0020 I/O CHANNEL                             0
0022                                         0

>_
THND **** *** ***     16:05:59
[ PARAM ] [ DGNOS ] [ PMC ] [ SYSTEM ] [ (OPRT) ]
```

4 Move the cursor to the parameter number to be set or displayed in either of the following ways:

- Enter the parameter number and press soft key **[NO.SRH]** .
- Move the cursor to the parameter number using the page keys, [PAGE ↑] and [PAGE ↓], and cursor keys, [↑], [↓], [←], and [→] .

5 To set the parameter, enter a new value with numeric keys and press soft key **[INPUT]**. The parameter is set to the entered value and the value is displayed.

6 Set 0 for **PARAMETER WRITE** to disable writing.

Procedure for enabling/displaying parameter writing

1 Select the **MDI** mode or enter state emergency stop.

2 Press function key [OFFSET SETTING] .

3 Press soft key **[SETING]** to display the setting screen.

```
SETTING (HANDY)                              O0001 N00000

  PARAMETER WRITE   =  1  (0:DISABLE 1:ENABLE)
  TV CHECK          =  0  (0:OFF  1:ON)
  PUNCH CODE        =  1  (0:EIA  1:ISO)
  INPUT UNIT        =  0  (0:MM   1:INCH)
  I/O CHANNEL       =  0  (0–3:CHANNEL NO.)
  SEQUENCE NO.      =  0  (0:OFF  1:ON)
  TAPE FORMAT       =  0  (0:NO CNV  1:F10/11)
  SEQUENCE STOP     =     0   (PROGRAM NO.)
  SEQUENCE STOP     =     11(SEQUENCE NO.)


>_                                          S  0  T0000
MDI **** *** ***                 16:05:59
[ OFFSET ] [ SETING ] [ WORK ] [        ] [ (OPRT) ]
```

4 Move the cursor to **PARAMETER WRITE** using cursor keys.

5 Press soft key **[(OPRT)]**, then press **[1: ON]** to enable parameter writing.
At this time, the CNC enters the P/S alarm state (No. 100).

6 After setting parameters, return to the setting screen. Move the cursor to **PARAMETER WRITE** and press soft key **[(OPRT)]** , then press **[0: OFF]**.

7 Depress the [RESET] key to release the alarm condition. If P/S alarm No. 000 has occurred, however, turn off the power supply and then turn it on, otherwise the P/S alarm is not released.

Explanations

- **Setting parameters with external input/output devices**

  See III–8 for setting parameters with external input/output devices such as the Handy File.

- **Parameters that require turning off the power**

  Some parameters are not effective until the power is turned off and on again after they are set. Setting such parameters causes P/S alarm 000. In this case, turn off the power, then turn it on again.

- **Parameter list**

  Refer to the FANUC Series 21*i*/210*i*–A Parameter Manual (B–63090EN) for the parameter list.

- **Setting data**

  Some parameters can be set on the setting screen if the parameter list indicates ”Setting entry is acceptable”. Setting 1 for **PARAMETER WRITE** is not necessary when three parameters are set on the setting screen.

11.5.2 Displaying and Setting Pitch Error Compensation Data

If pitch error compensation data is specified, pitch errors of each axis can be compensated in detection unit per axis.
Pitch error compensation data is set for each compensation point at the intervals specified for each axis. The origin of compensation is the reference position to which the tool is returned.
The pitch error compensation data is set according to the characteristics of the machine connected to the NC. The content of this data varies according to the machine model. If it is changed, the machine accuracy is reduced.
In principle, the end user must not alter this data.
Pitch error compensation data can be set with external devices such as the Handy File (see III–8). Compensation data can also be written directly with the MDI panel.
The following parameters must be set for pitch error compensation. Set the pitch error compensation value for each pitch error compensation point number set by these parameters.
In the following example, 33 is set for the pitch error compensation point at the reference position.

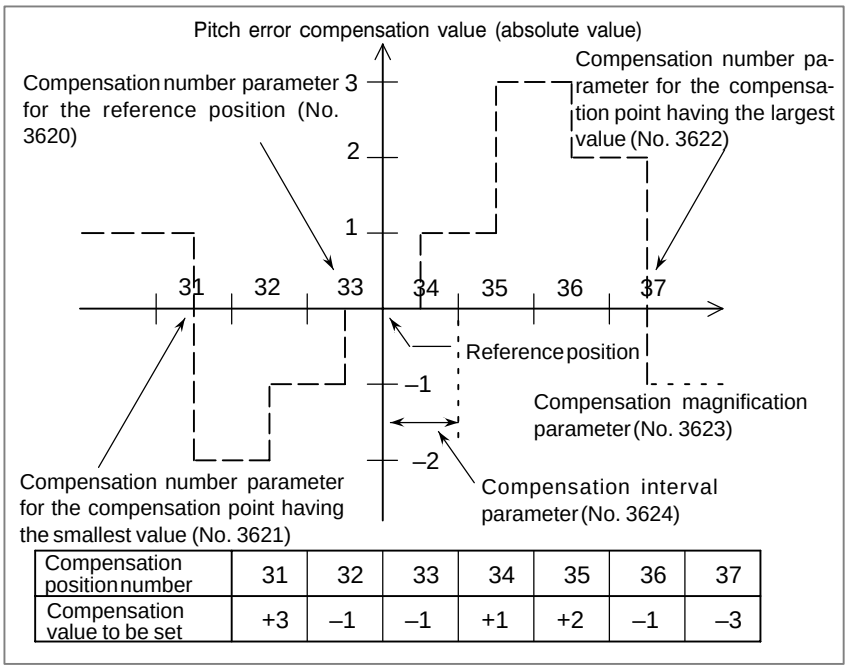

Compensation position number	31	32	33	34	35	36	37
Compensation value to be set	+3	–1	–1	+1	+2	–1	–3

- Number of the pitch error compensation point at the reference position (for each axis): Parameter 3620
- Number of the pitch error compensation point having the smallest value (for each axis): Parameter 3621
- Number of the pitch error compensation point having the largest value (for each axis): Parameter 3622
- Pitch error compensation magnification (for each axis): Parameter 3623
- Interval of the pitch error compensation points (for each axis): Parameter 3624
- Travel distance per revolution of pitch error compensation of the rotary axis type (for each axis): Parameter 3625

Bidirectional pitch error compensation

The bidirectional pitch error compensation function allows independent pitch error compensation in different travel directions. (When the movement is reversed, compensation is automatically carried out as in a backlash.)

To use this function, specify pitch error compensation for each travel direction, that is, separately for the positive and negative directions of a movement.

When using bidirectional pitch error compensation (setting the BDP bit (bit 0 of parameter 3605) to 1), specify the following parameters in addition to the pitch error compensation parameter.

- Number of the pitch error compensation point at the negative end (for travel in the positive direction, for each axis): Parameter 3620
- Number of the pitch error compensation point at the positive end (for travel in the positive direction, for each axis): Parameter 3621
- Number of the pitch error compensation point at the negative end (for travel in the negative direction, for each axis): Parameter 3626
- Number of the pitch error compensation point at the positive end (for travel in the negative direction, for each axis): Parameter 3627

Procedure for displaying and setting the pitch error compensation data

Procedure

1 Set the following parameters:

- Number of the pitch error compensation point at the reference position (for each axis): Parameter 3620
- Number of the pitch error compensation point having the smallest value (for each axis): Parameter 3621
- Number of the pitch error compensation point having the largest value (for each axis): Parameter 3622
- Pitch error compensation magnification (for each axis): Parameter 3623
- Interval of the pitch error compensation points (for each axis): Parameter 3624
- Travel distance per revolution of pitch error compensation of the rotary axis type (for each axis): Parameter 3625

When using bidirectional pitch error compensation (setting the BDP bit (bit 0 of parameter 3605) to 1), specify the following parameters in addition to the pitch error compensation parameter.

- Number of the pitch error compensation point at the negative end (for travel in the positive direction, for each axis): Parameter 3620
- Number of the pitch error compensation point at the positive end (for travel in the positive direction, for each axis): Parameter 3621
- Number of the pitch error compensation point at the negative end (for travel in the negative direction, for each axis): Parameter 3626
- Number of the pitch error compensation point at the positive end (for travel in the negative direction, for each axis): Parameter 3627

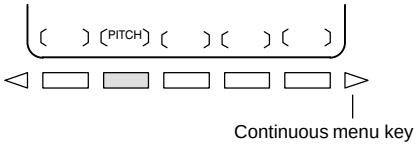

2 Press function key SYSTEM .

3 Press the continuous menu key ▷, then press chapter selection soft key **[PITCH]**.
The following screen is displayed:

```
PIT−ERROR SETTING                                  O0000 N00000

    NO.   DATA   NO.   DATA   NO.   DATA
    0000     0   0010     0   0020     0
    0001     0   0011     0   0021     0
    0002     0   0012     0   0022     0
    0003     0   0013     0   0023     0
(X) 0004     0   0014     0   0024     0
    0005     0   0015     0   0025     0
    0006     0   0016     0   0026     0
    0007     0   0017     0   0027     0
    0008     0   0018     0   0028     0
    0009     0   0019     0   0029     0

>_
MEM **** *** ***                          16:05:59
[ NO.SRH ] [ ON:1 ] [ OFF:0 ] [ +INPUT ] [ –INPUT ]
```

4 Move the cursor to the compensation point number to be set in either of the following ways:

- Enter the compensation point number and press the **[NO.SRH]** soft key.
- Move the cursor to the compensation point number using the page keys, PAGE ↑ and PAGE ↓, and cursor keys, ↑, ↓, ←, and →.

5 Enter a value with numeric keys and press the **[INPUT]** soft key.

11.6 DISPLAYING THE PROGRAM NUMBER, SEQUENCE NUMBER, AND STATUS, AND WARNING MESSAGES FOR DATA SETTING OR INPUT/OUTPUT OPERATION

The program number, sequence number, and current CNC status are always displayed on the screen except when the power is turned on, a system alarm occurs, or the PMC screen is displayed.
If data setting or the input/output operation is incorrect, the CNC does not accept the operation and displays a warning message.
This section describes the display of the program number, sequence number, and status, and warning messages displayed for incorrect data setting or input/output operation.

11.6.1 Displaying the Program Number and Sequence Number

The program number and sequence number are displayed at the top right on the screen as shown below.

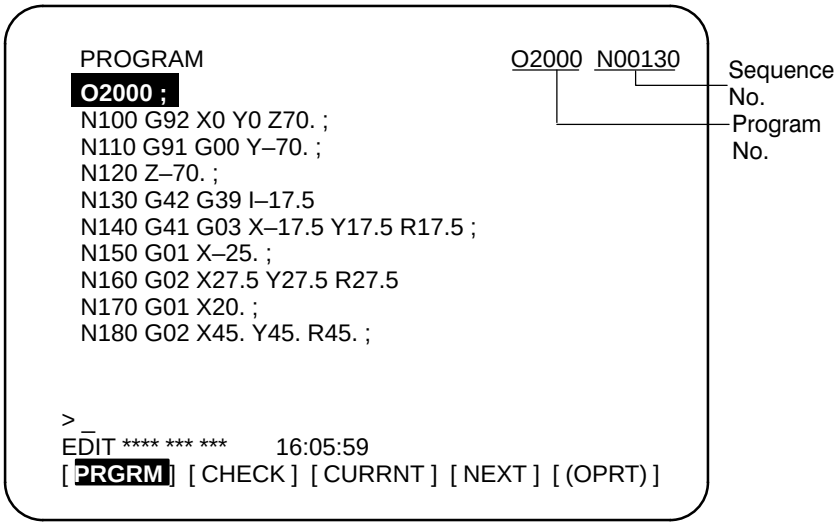

The program number and sequence number displayed depend on the screen and are given below:

On the program screen in the EDIT mode on Background edit screen :
The program No. being edited and the sequence number just prior to the cursor are indicated.

Other than above screens :

The program No. and the sequence No. executed last are indicated.

Immediately after program number search or sequence number search :

Immediately after the program No. search and sequence No. search, the program No. and the sequence No. searched are indicated.

11.6.2 Displaying the Status and Warning for Data Setting or Input/Output Operation

The current mode, automatic operation state, alarm state, and program editing state are displayed on the next to last line on the screen allowing the operator to readily understand the operation condition of the system. If data setting or the input/output operation is incorrect, the CNC does not accept the operation and a warning message is displayed on the next to last line of the screen. This prevents invalid data setting and input/output errors.

Explanations

Description of each display

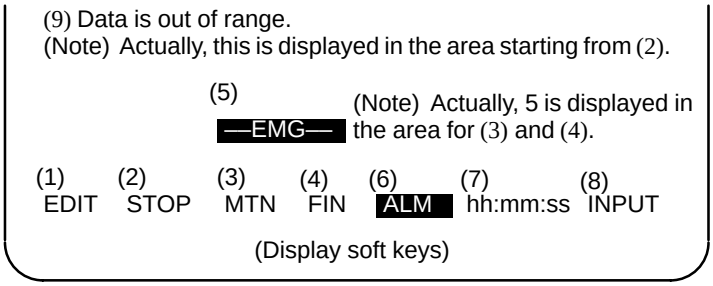

NOTE
Actually, (10) is displayed at the position where (8) is now displayed.

(1) Current mode

MDI : Manual data input, MDI operation
MEM : Automatic operation (memory operation)
RMT : Automatic operation (DNC operation, or such like)
EDIT : Memory editing
HND : Manual handle feed
JOG : Jog feed
TJOG : TEACH IN JOG
THND : TEACH IN HANDLE
INC : Manual incremental feed
REF : Manual reference position return

(2) Automatic operation status

**** : Reset (When the power is turned on or the state in which program execution has terminated and automatic operation has terminated.)
STOP : Automatic operation stop (The state in which one block has been executed and automatic operation is stopped.)
HOLD : Feed hold (The state in which execution of one block has been interrupted and automatic operation is stopped.)
STRT : Automatic operation start–up (The state in which the system operates automatically)

(3) Axis moving status/dwell status

MTN : Indicates that the axis is moving.
DWL : Indicates the dwell state.
*** : Indicates a state other than the above.

(4) State in which an auxiliary function is being executed

FIN : Indicates the state in which an auxiliary function is being executed. (Waiting for the complete signal from the PMC)
*** : Indicates a state other than the above.

(5) Emergency stop or reset status

—EMG— : : Indicates emergency stop.(Blinks in reversed display.)
—RESET— : Indicates that the reset signal is being received.

(6) Alarm status

ALM : Indicates that an alarm is issued. (Blinks in reversed display.)
BAT : Indicates that the battery is low. (Blinks in reversed display.)
Space : Indicates a state other than the above.

(7) Current time

hh:mm:ss – Hours, minutes, and seconds

(8) Program editing status

INPUT : Indicates that data is being input.
OUTPUT : Indicates that data is being output.
SRCH : Indicates that a search is being performed.
EDIT : Indicates that another editing operation is being performed (insertion, modification, etc.)
LSK : Indicates that labels are skipped when data is input.
RSTR : Indicates that the program is being restarted
Space : Indicates that no editing operation is being performed.

(9) Warning for data setting or input/output operation

When invalid data is entered (wrong format, value out of range, etc.), when input is disabled (wrong mode, write disabled, etc.), or when input/output operation is incorrect (wrong mode, etc.), a warning message is displayed. In this case, the CNC does not accept the setting or input/output operation (retry the operation according to the message). The following are examples of warning messages:

Example 1)
When a parameter is entered

```
> 1
EDIT   WRONG MODE

                    (Display sof tkeys)
```

Example 2)
When a parameter is entered

```
> 999999999
MDI   TOO MANY DIGITS

                    (Display soft keys)
```

Example 3)
When a parameter is output to an external input/output device

```
> _
MEM   WRONG MODE

                    (Display soft keys)
```

11.7 SCREENS DISPLAYED BY FUNCTION KEY

By pressing the function key , data such as alarms, alarm history data, and external messages can be displayed.
For information relating to alarm display, see Section III.7.1. For information relating to alarm history display, see Section III.7.2.
For information relating to external message display, see the relevant manual supplied by the machine tool builder.

11.7.1 External Operator Message History Display

External operator messages can be preserved as history data.
Preserved history data can be displayed on the external operator message history screen.

Procedure for external operator message history display

Procedure

1 Press the function key.

2 Press the continuous menu key, then press the chapter selection soft key **[MSGHIS]**. The screen shown below appears.

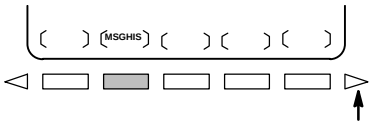

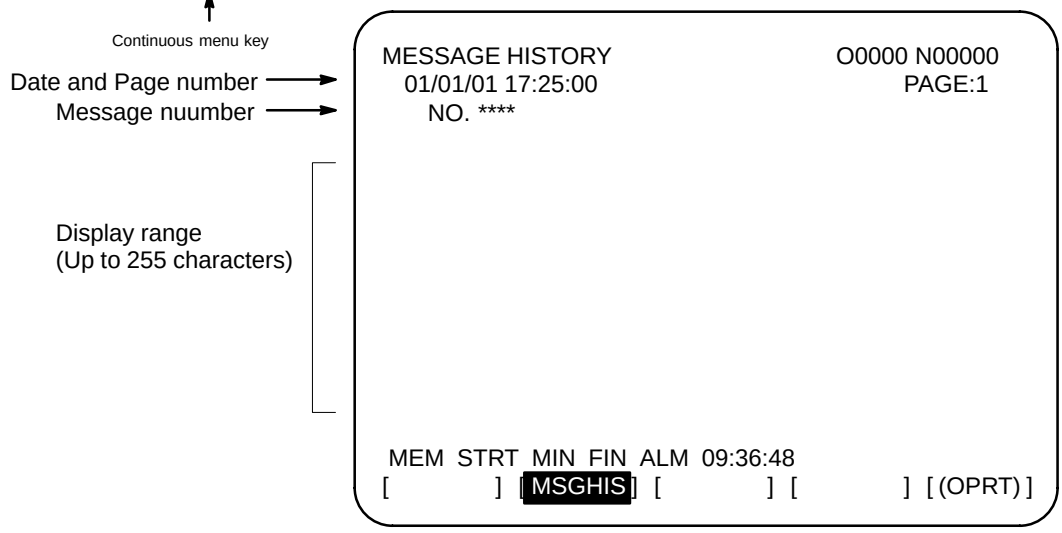

NOTE
Up to 255 characters can be specified for an external operator message. By setting MS1 and MS0 (bits 7 and 6 of parameter No. 3113), however, the number of characters that can be preserved as external operator message history data can be restricted, and the number of history data items selected.

Explanations

- **Updating external operator message history data**

When an external operator message number is specified, updating of the external operator message history data is started; this updating is continued until a new external operator message number is specified or deletion of the external operator message history data is specified.

- **Clearing external operator message history data**

To clear external operator message history data, press the **[CLEAR]** soft key. This clears all external operator message history data. (Set MSGCR (bit 0 of parameter No. 3113) to 1.)
Note that when MS1 and MS0 (bits 7 and 6 of parameter No. 3113), used to specify the number of external operator message history data items to be displayed, are changed, all existing external operator message history data is cleared.

Limitations

- **Option**

Before this function can be used, the external data input function or optional external message function must be selected.

11.8 CLEARING THE SCREEN

When screen indication isn't necessary, the life of the back light for LCD can be put off by turning off the back light.
The screen can be cleared by pressing specific keys. It is also possible to specify the automatic clearing of the screen if no keys are pressed during a period specified with a parameter.
But, the life of the back light may be contracted all the more when the clearing of screen and re–indication of screen are repeated beyond the necessity. This effect can be expected when a screen is cleared for more than one hour.

11.8.1 Erase Screen Display

Holding down the CAN key and pressing an arbitrary function key clears the screen.

Procedure for erase screen display

Procedure

- **Clearing the screen**

  Hold down the CAN key and press an arbitrary function key (such as POS and PROG).

- **Restoring the screen**

  Press an arbitrary function key.

11.8.2 Automatic Erase Screen Display

The CNC screen is automatically cleared if no keys are pressed during the period (in minutes) specified with a parameter. The screen is restored by pressing any key.

Procedure for automatic erase screen display

- **Clearing the screen**

The CNC screen is cleared once the period (minutes) specified with parameter No. 3123 has elapsed, provided the following conditions are satisfied:

Conditions for clearing the CNC screen

- Parameter No. 3123 is set to other than 0.
- None of the following keys have been pressed:
  MDI keys
  Soft keys
  External input keys
- No alarm has been issued.

- **Restoring the screen**

The cleared CNC screen is restored once at least one of the following conditions is satisfied:

Conditions for restoring the CNC screen

- Any of the following keys has been pressed:
  MDI keys
  Soft keys
  Externally input keys
- An alarm has been issued.

Some machines feature a special key for restoring the screen. For an explanation of the location and use of this key, refer to the corresponding manual, supplied by the machine tool builder.

Explanations

- **Clearing the screen using CAN + function key**

If parameter No. 3123 is set to 0, clearing of the screen using the CAN key and a function key (III–11.8.1) is disabled.

CAUTION
Pressing any key while the screen is being cleared restores the screen. In such a case, however, the function assigned to the pressed key is initiated. Do not press the DELET, INSERT, or ALTER key to restore the screen, therefore.

12 GRAPHICS FUNCTION

Two graphic functions are available. One is a graphic display function, and the other is a dynamic graphic display function.

The graphic display function can draw the tool path specified by a program being executed on a screen. The graphic display function also allows enlargement and reduction of the display.

The dynamic graphic display function can draw a tool path and machining profile.
In tool path drawing, automatic scaling and solid drawing are possible. In machining profile drawing, the status of machining in progress can be drawn through simulation. Blank figures can also be drawn.

The background drawing function enables drawing to be performed by one program while machining is performed by another program.

This chapter mainly explains drawing procedures and drawing parameters for the following:

1. Drawing the tool path specified by a program being executed, with the graphic display function
2. Drawing the tool path with the dynamic graphic display function

12.1 GRAPHICS DISPLAY

It is possible to draw the programmed tool path on the screen, which makes it possible to check the progress of machining, while observing the path on the screen.
In addition, it is also possible to enlarge/reduce the screen.
Before drawing, graphic parameters must be set.
When the dynamic graphics function is used, the graphics function described in this section cannot be used. See Section 12.2 for the dynamic graphics function.

Graphics display procedure

Procedure

1 Press function key GRAPH. Press CUSTOM GRAPH for a small MDI unit.

The graphic parameter screen shown below appears. (If this screen does not appear, press soft key **[PARAM]**.)

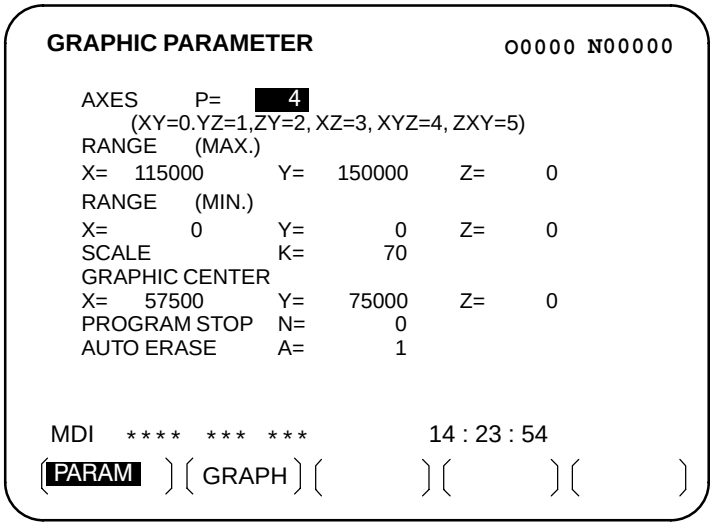

2 Move the cursor with the cursor keys to a parameter to set.

3 Enter data, then press the INPUT key.

4 Repeat steps 2 and 3 until all required parameters are specified.

5 Press soft key **[GRAPH]**.

6 Automatic operation is started and machine movement is drawn on the screen.

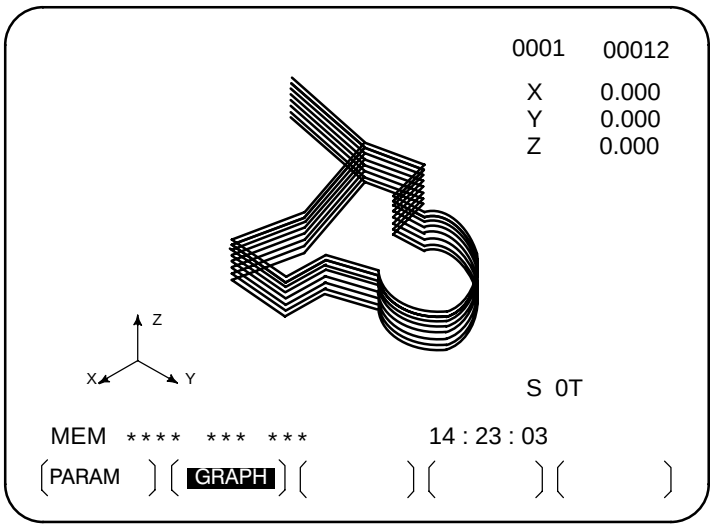

Explanation

- **RANGE (Actual graphic range)**

The size of the graphic screen will be as follows:

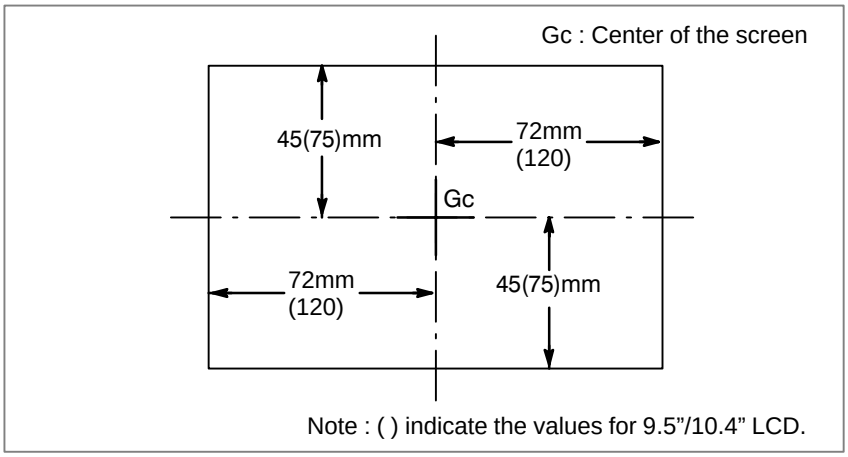

Fig.12.1 (a) Graphic range

As shown in Fig.12.1 (a), the maximum graphics range is an area of approx. 144 mm (width) × 90 mm (height) for 7.2″/8.4″ LCD and approx. 240 mm (width) ×150 mm (height) for 9.5″/10.4″ LCD.

- **Setting the graphics range**

To draw a section of the program within the actual graphics range, set the graphics range using one of the following two methods:

1 . Set the center coordinates of the range and the magnification.

2 . Set the maximum and minimum coordinates for the range in the program.

Whether 1 or 2 is used depends on which parameters are set last. A graphics range which has been set is retained when the power is turned off.

1. Setting the center coordinate of the graphics range and graphics magnification

Set the center of the graphic range to the center of the screen. If the drawing range in the program can be contained in the above actual graphics range, set the magnification to 1 (actual value set is 100).

When the drawing range is larger than the maximum graphics range or much smaller than the maximum graphics range, the graphics magnification should be changed. The graphics magnification is 0.01 to 100.00 times, which is usually determined as follows;

Graphics magnification=Graphics magnification (**H**), or graphics magnifications (**V**), whichever is smaller

Graphics magnification **H** =α/(length on program to horizontal direction axis)

Graphics magnification **V**=β/(length on program to vertical direction axis)

α:144mm(for seven soft key type LCD)

β:90mm

α:240mm(for twelve soft key type LCD)

β:150mm

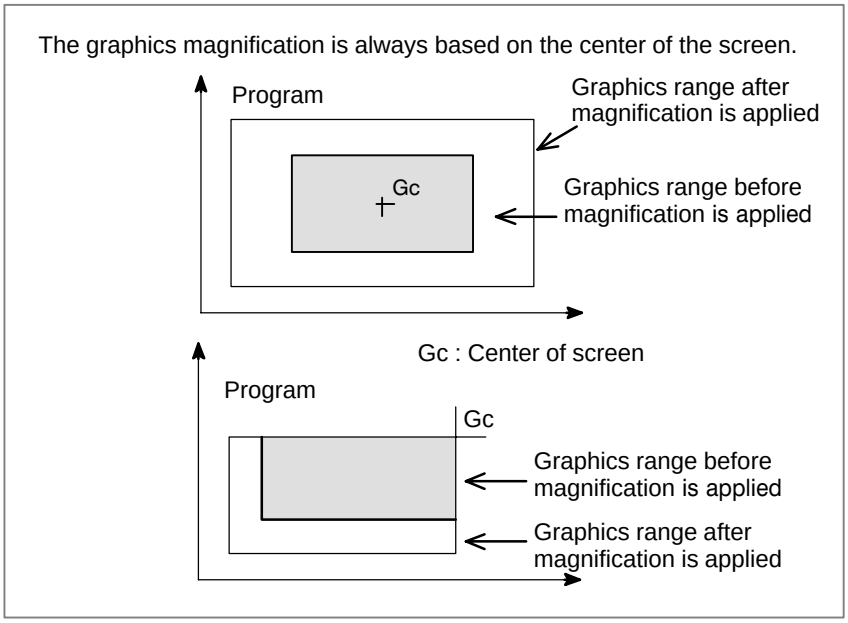

Fig.12.1 (b) Applying graphics magnification (Example of enlargement)

2. Setting the maximum and minimum coordinates for the drawing range in the program

When the actual tool path is not near the center of the screen, method 1 will cause the tool path to be drawn out of the geaphics range if graphics magnification is not set properly.
To avoid such cases, the following six graphic parameters are prepared;

Graphic range (Max.) X
Graphic range (Max.) Y
Graphic range (Max.) Z
Graphic range (Min.) X
Graphic range (Min.) Y
Graphic range (Min.) Z

With the above parameters, the center of screen (Gcx, Gcy, Gcz) is determined by the CNC as follows;

Gcx = (X (MAX.) + X (MIN.)) /2
Gcy = (Y (MAX.) + Y (MIN.)) /2
Gcz = (Z (MAX.) + Z (MIN.)) / 2

The unit of the value will be 0.001 mm or 0.0001 inch depending on the input unit.
Graphics magnification is applied automatically. When the graphics range is specified, the center coordinates and magnification do not need to be calculated.

- **Work coordinate system and graphics**

The graphic origin and graphic center point will not be changed even if the workpiece coordinate origin is changed.
In other words, the workpiece coordinate origin is always consistent with the graphic origin.

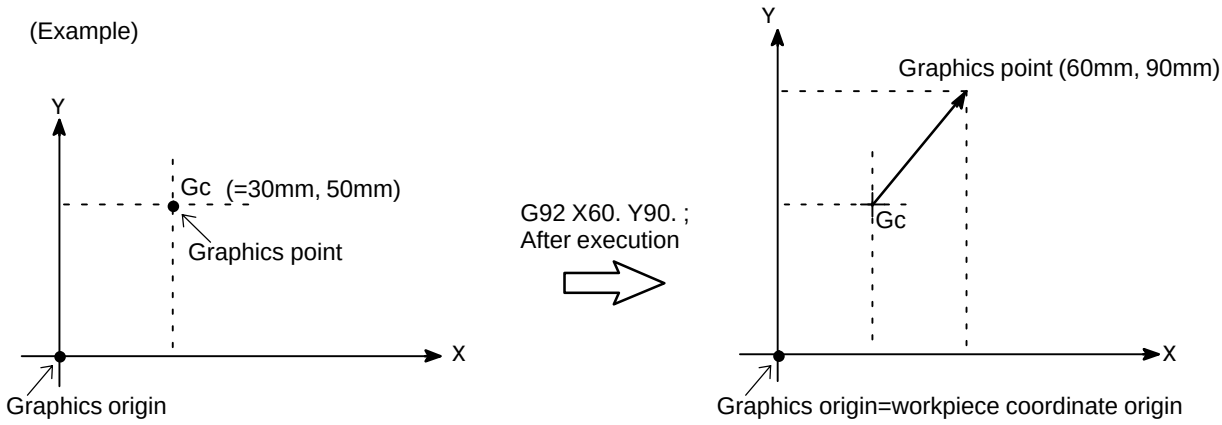

As shown in the above example, when the command of G92 is specified, the drawing is moved as indicated by ⟶. The position of the graphics origin or graphics center does not change.

Fig.12.1 (c) Workpiece coordinate origin and graphics origin

● **Graphics parameter**

· **AXES**

Specify the plane to use for drawing. The user can choose from the following six coordinate systems.
With two–path control, a different drawing coordinate system can be selected for each tool post.

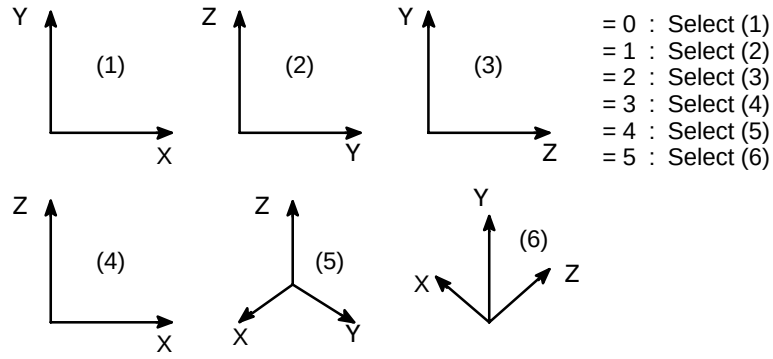

The rotating angle (horizontal, vertical) for isometric display of 5) and 6) is fixed at 45°in both cases.

Fig12.1 (d) Coordinate system

· **RANGE (Max., Min.)**

Set the graphic range displayed on the screen by specifying maximum and minimum values along each axis.

X=Maximum value X=Minimum value
Y=Maximum value Y=Minimum value
Z=Maximum value Z=Minimum value
Valid range: 0 to ±9999999

NOTE

1 The units are 0.001 mm or 0.0001 inch. Note that the maximum value must be greater than the minimum value for each axis.
2 When setting the graphics range with the graphics parameters for the maximum and minimum values, do not set the parameters for the magnification and screen center coordinates afterwards. Only the parameters set last are effective.

· **SCALE**

Set the graphic magnification
The setting range is 0 to 10000 (unit:0.01 time).

· **GRAPHIC CENTER**
X=_
Y=_
Z=_
Set the coordinate value on the workpiece coordinate system at graphic center.

NOTE
1 When MAX. and MIN. of RANGE are set, the values will be set automatically once drawing is executed
2 When setting the graphics range with the graphics parameters for the magnification and screen center coordinates, do not set the parameters for the maximum and minimum values afterward. Only the parameters set last are effective.

· **PROGRAM STOP**
N=_
Set the sequence No. of the end block when necessary to partially display.
This value is automatically cancelled and set to –1 once drawing is executed.

· **AUTO ERASE**
1 : Erase the previous drawing automatically when the automatic operation is started under reset condition.
2 : Not erase automatically.

- **Executing drawing only**

Since the graphic drawing is done when coordinate value is renewed during automatic operation, etc., it is necessary to start the program by automatic operation. To execute drawing without moving the machine, therefore, enter the machine lock state.

- **Deleting the previous drawing**

When the AUTO operation is started under reset condition, the program is executed after deleting the previous drawing automatically (Automatic deleting=1). It is possible not to delete the previous drawing by graphic parameter (Automatic deleting=0).

- **Drawing a part of a program**

When necessary to display a part of a program, search the starting block to be drawn by the sequence No. search, and set the sequence No. of the end block to the PROGRAM STOP N= of the graphic parameter before starting the program under cycle operation mode.

- **Drawing using dashed lines and solid lines**

The tool path is shown with a dashed line (- - - -) for rapid traverse and with a solid line (——) for cutting feed.

Limitations

- **Feedrate**

In case the feed rate is considerably high, drawing may not be executed correctly, decrease the speed by dry–run, etc. to execute drawing.

12.2 DYNAMIC GRAPHIC DISPLAY

There is the following function in Dynamic Graphics.

Path graphic	This is used to draw the path of tool center commanded by the part program.

The path graphic function is used to precisely check the part program for drawing the tool path with a line. Thus, it is easy to recognize roughly the part program.

12.2.1 Path Drawing

The path graphic feature calls a program from memory and draws the tool path specified by the program. This feature provides the following functions.

1. Drawing plane

The user can choose the drawing plane from four types of plane views, two types of isometric projection views, and biplane view.

2. Drawing rotation

When an isometric projection view is used, the drawing can be rotated horizontally and vertically.

3. Drawing enlargement and reduction

A drawing can be enlarged or reduced by specifying a magnification from 0.01 to 100 with respect to the actual size. In addition, a drawing can be automatically enlarged or reduced by setting maximum and minimum values.

4. Partial drawing

A range of the program can be drawn by specifying a starting sequence number and ending sequence number.

5. Programmed path and tool path drawing

The user can specify whether to apply tool length offset and cutter compensation to drawing. This way, either the actual programmed path or the tool path can be drawn.

6. Color

When a tool path is drawn on a screen, the colors used can be chosen from seven colors including white. The color of the tool path can be changed according to the T code.

7. Automatic scaling

The CNC automatically determines the maximum and minimum drawing coordinates for each program. This means that drawing can be performed with a magnification automatically determined according to these maximum and minimum values.

8. Partial enlargement drawing

Except for biplane views the user can enlarge all types of drawings by a factor of up to 100 while looking at the drawing that has been made.

9. Indicating the current tool position with a mark

The current tool position can be displayed on the screen.

10. Indicating the coordinates of the current position

The current position can also be indicated using coordinates.

11. Displaying coordinate axes and actual size dimensions lines

Coordinate axes and actual size dimension lines are displayed together with the drawing so that actual size can be referenced.

The first six functions above (**1.** to **6.**) are available by setting the graphic parameters. The seventh to ninth functions (**7.** to **9.**) are mainly executed using soft keys after drawing has been setup. The tenth function (**10.**) is enabled by setting a parameter. The eleventh function (**11.**) can be used at any time.

Path drawing procedure

Procedure

1 To draw a tool path, necessary data must be set beforehand.
So press the function button GRAPH some times (CUSTOM GRAPH for the small MDI).The “PATH GRAPHIC (PARAMETER)” is displayed.

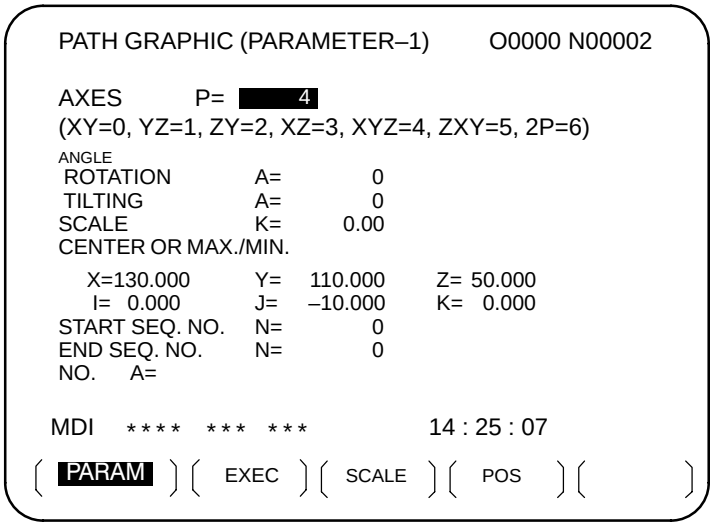

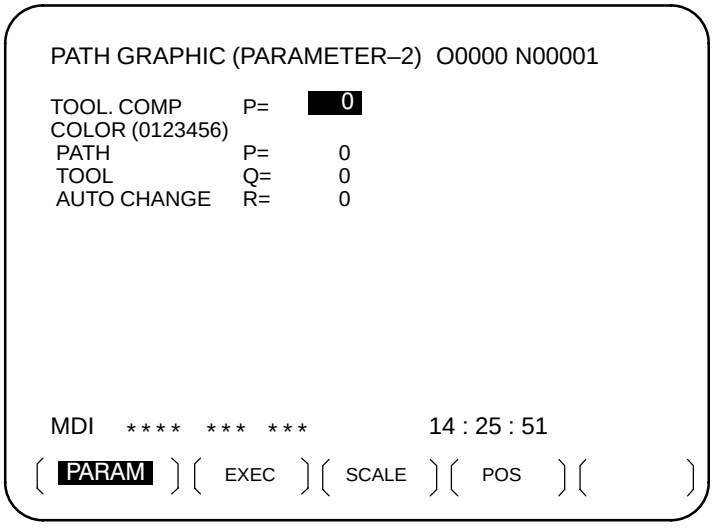

2 There are two screens for setting drawing parameters.
Press the page key according to the setting items for selecting screens.

3 Set the cursor to an item to be set by cursor keys.

4 Input numerics by numeric keys.

5 Press the INPUT key.

The input numerics are set by these operations and the cursor automatically moves to the next setting items. The set data is held even after the power is turned off.

6 Set the operation mode to the memory mode, press function key PROG , and call the part program which should be drawn.

7 Press function key GRAPH (CUSTOM GRAPH for a small MDI) several times to redisplay the PATH GRAPHIC (PARAMETER) screen, then press soft key **[EXEC]** to display the PATH GRAPHIC (EXECUTION) screen.

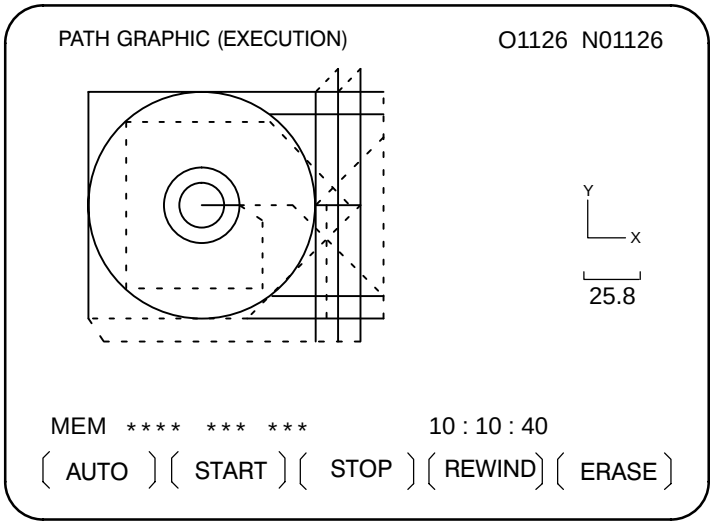

8 Press soft key **[(OPRT)],** then press soft key **[AUTO]** or **[START]**. Pressing **[AUTO]** enables automatic scaling. See item **7** in introduction of path drawing and the description of soft key **[AUTO]** in Explanations for details. Drawing is now started. During drawing, the message ”DRAWING” blinks at the lower–right corner of the CRT screen.

9 Press soft key **[STOP]** to pause drawing. The indication of “STOP” blinks at the lower right corner on the CRT screen. Press soft key **[START]** to start drawing. In addition, press soft key **[REWIND]** to redraw from the top of program before pressing soft key **[START]**.

10 Execute the last of part program (M02/M30) to end drawing. This will cause, blinking of the “DRAWING” light to turn off. The tool path view drawn can be retained until the power is turned off unless a new tool path view is drawn.

Partial enlargement

11 **For partial drawing enlargement,** display the PATH GRAPHIC (SCALE) screen by pressing the soft key **[ZOOM]** on the PATH GRAPHIC (PARAMETER) screen of **step 1** above. The tool path is displayed. Next, press soft key **[(OPRT)]**.

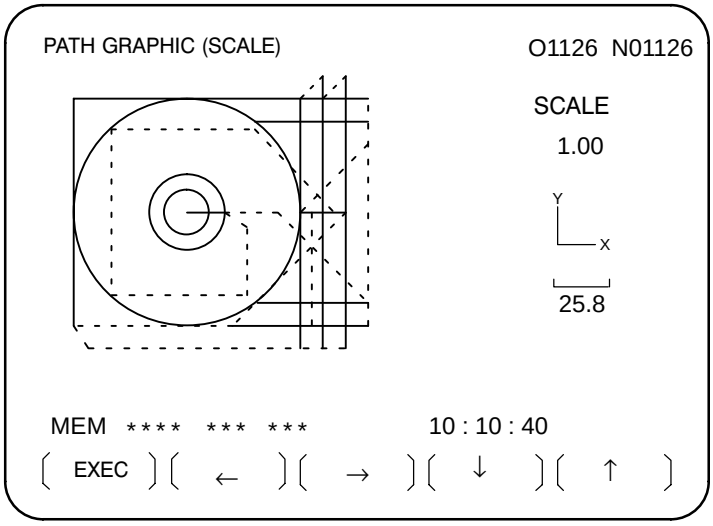

12 Perform positioning of marks displayed at the center of the screen to the center of the part enlarged using soft keys [←], [→], [↓], and [↑].

13 Set the relative magnification rate for the tool path view which is being drawn using the address keys “P” and “M”. When you press address key P or M, the following results:

Address key	Function
P	The relative magnification rate increases by 0.1.
M	The relative magnification rate decreases by 0.1.

The relative magnification rate is continuously changed by keeping the address keys depressed. It is possible to magnify up to 100 times in reference to the actual dimensions.

14 Press the soft key **[EXEC]** after setting the relative magnification rate. Then, the screen automatically changes to “TOOL PATH (EXECUTION)” and the drawing of set partial enlargement view starts. The set partial enlargement status is valid until soft key **[AUTO]** or **[ERASE]** is pressed.

Mark display

15 **To display a mark at the current tool position,** display the PATH GRAPHIC (POSITION) screen by pressing soft key **[POS]** on the PATH GRAPHIC (PARAMETER) screen of **step 1** above. This mark blinks at the current tool center position on the tool path.

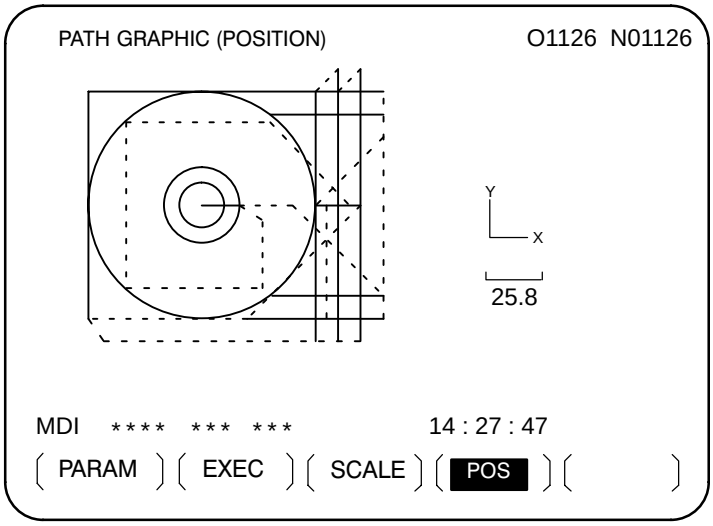

Explanations

- **AXES**

The relationship between the setting value and drawing screen is as shown below:

Setting value	Drawing screen
0	Plane view (XY)
1	Plane view (YZ)
2	Plane view (ZY)
3	Plane view (XZ)
4	Isometric projection (XYZ)
5	Isometric projection (ZXY)
6	Biplane view (XY,XZ)

- **Plane view (XY,YZ,ZY,XZ)**

The following coordinate systems are selected.

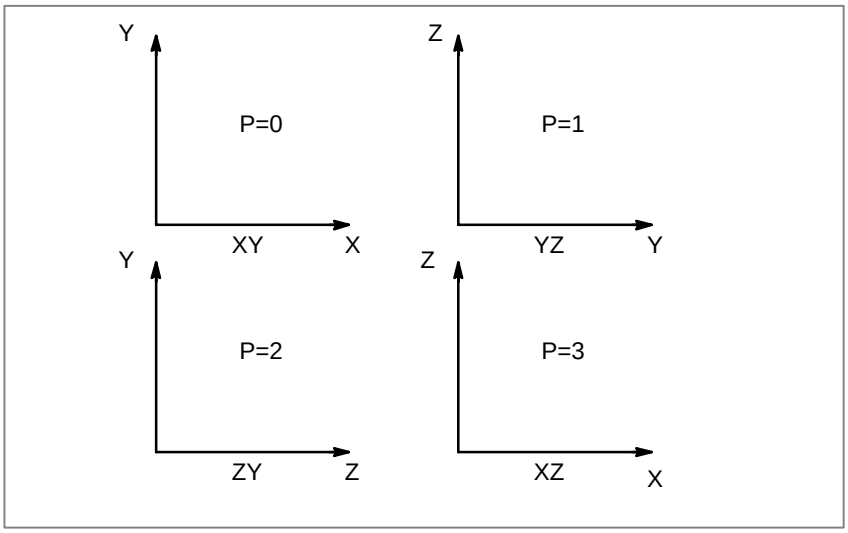

Fig. 12.2.1 (a) Coordinate systems for the plane view

- **Isometric projection (XYZ,ZXY)**

Projector view by isometric can be drawn.

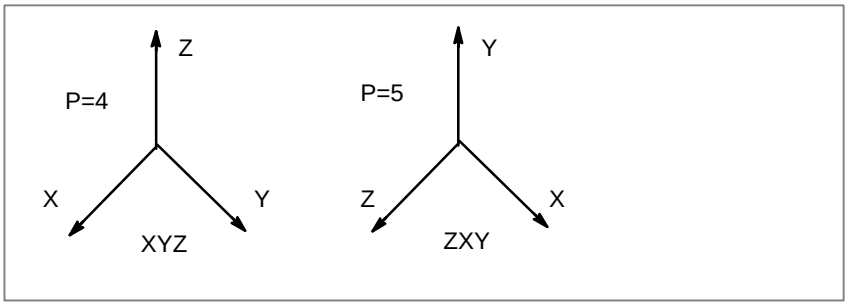

Fig.12.2.1(b) Coordinate systems for the isometric projection

- **Biplane view**

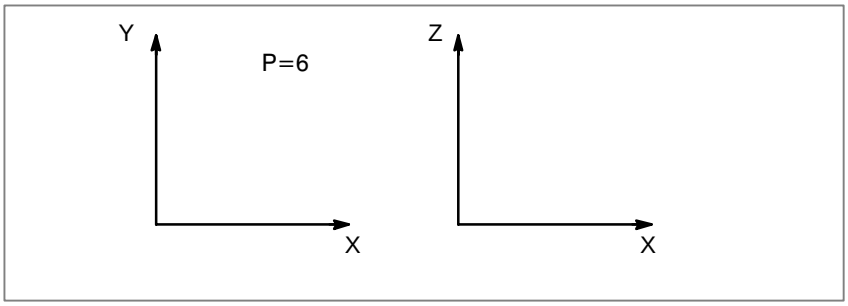

Fig.12.2.1 (c) Coordinate systems for the biplane view

Biplanes (XY and XZ) can be drawn simultaneously. The maximum and minimum coordinate values must be set to draw the biplane view. The maximum and minimum coordinate values can also be set by performing automatic scaling

- **ANGLE**

The direction of the coordinate axis is set when the isometric projection is the setting of the drawing screen. The direction is set by horizontal and vertical rotation angles. The unit is expressed in degrees.

- **ROTATION**

The horizontal rotation angle is set in the range of –180°to +180°in reference to the vertical axis. Set a positive value for clockwise rotation of the coordinate axis. Thus, the direction of projection (visual arrow) becomes counterclockwise.

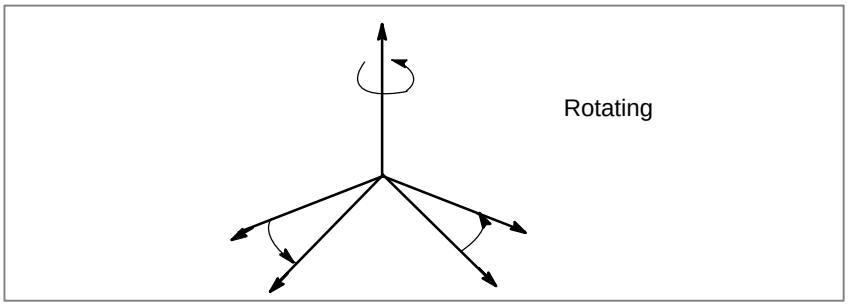

Fig.12.2.1 (d) Rotating

- **TILTING**

The tilting angle of the vertical axis is set in the range of –90°to +90°in reference to the horizontal axis crossing the vertical axis at a right angle. When a positive value is set, the vertical axis slants to the other side of the graphic screen. Thus, the projection direction (arrow direction) becomes the horizontal direction.

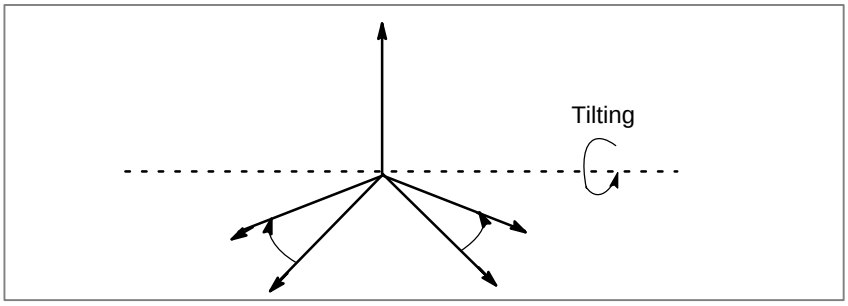

Fig.12.2.1 (e) Tilting

- **SCALE**

Set the magnification rate of drawing from 0.01 to 100.00. When 1.0 is set, drawing is carried out in actual dimensions. When 0 is set, the drawing magnification rate is automatically set based on the setting of maximum and minimum coordinate values of drawing.

- **CENTER OR MAX./MIN.**

When a graphics (drawing) magnification of 0 is set, maximum coordinates on the X–axis, Y–axis, and Z–axis in the workpiece coordinate system must be set in addresses X, Y, and Z, and minimum coordinates must be set in addresses I, J, and K, to specify the graphics (drawing) range. For biplane view drawing, maximum and minimum coordinates for drawing must be specified.
When a drawing magnification other than 0 is set, the X, Y, and Z coordinates of the drawing center in the workpiece coordinate system must be set in addresses X, Y, and Z. Addresses I, J, and K are not used. The table below summarizes the setting requirements described above.

Setting the drawing magnification rate	Setting	
	Address X/Y/Z	Address I/J/K
Other than 0	Drawing center coordinate value of X, Y, and Z axes	Ignored
0 or biplane view drawing	Drawing maximum coordinate value of X, Y, and Z axes	Drawing minimum coordinate value of X, Y, and Z axes

- **START SEQ. NO. and END SEQ. NO.**

Set the start and end sequence numbers of drawing in five digits each. The part program for drawing is executed from the head and only the part enclosed by the start sequence and end sequence numbers is drawn. When 0 is commanded as the start sequence number, drawing is performed from the head of the program. In addition, when 0 is commanded as the end sequence number, drawing is performed up to the end of program. The sequence number is referred to regardless of either main program or subprogram.

- **TOOL COMP.**

It is possible to set whether the tool path is drawn by making the tool length offset or cutter compensation valid or invalid.

Setting value	Tool length offset or cutter compensation
0	Perform drawing by making tool compensation valid (An actual tool path is drawn.)
1	Perform drawing by making tool compensation invalid (A programmed path is drawn.)

Always set 0 before drawing when indicating the mark of the current tool position.

- **COLOR**

Specify the color of the tool path. In the case of monochrome it is not required to set it. The relationship between the setting value and color is as shown below:

Setting value	Color
0	White
1	Red
2	Green
3	Yellow
4	Blue
5	Purple
6	Light blue

· **PATH** Specify the color of the tool path.
· **TOOL** Specify the color of the current position mark of the tool.
· **AUTO CHANGE** Set if for changing the color of the tool path automatically according to the T –code command.

Setting value	Function
0	The color of the tool path is not changed.
1	The color of the tool path is changed automatically.

When 1 is set, the setting value of the color designation of PATH is incremented by 1 every time the T code is commanded. At the same time, the color of the tool path changes. If the setting value exceeds 6, it returns to 0.

- **Soft key functions on the “PATH GRAPHIC [EXECUTION]”screen**

Software key	Function
[AUTO]	Automatic scaling is performed. Obtain the maximum and minimum coordinates of the part program before performing drawing, specify them for the maximum and minimum values of drawing parameters, and set the drawing magnification rate to 0 before starting drawing. Thus, the tool path view is properly laid out on the screen.
[START]	Drawing starts. When the **[START]** is pressed while the drawing is not in STOP, the part program starts from the top of the part program. Press the **[START]** while the drawing is in stop to allow drawing to be carried out continuously.
[STOP]	Stop drawing. (Single block stop)
[REWIND]	Press this key to start drawing from the top of part program. Searches for the beginning of a part program.
[ERASE]	Erase the tool path view which has been drawn.

- **Graphic program**

No part program which has not been registered in memory can be drawn. Also, it is necessary that the M02 or M30 should be commanded at the end of the part program.

- **Mark for the tool current position**

The period of mark blinking is short when the tool is moving and becomes longer when the tool stops.
The mark indicating the current position of tool is displayed on the XY plane view when the biplane drawing is performed.

- **Position mark**

Parameter 6501 (CSR, bit 5) is used to specify whether to use ■ or x as the mark for indicating the current tool position and the center of a partially enlarged drawing.

- **Display of the coordinate value**

Parameter 6500 (DPO, bit 5) is used to specify whether to display the coordinates of the current position on the tool path drawing screen.

- **Changing the coordinate system**

If a program specifies a coordinate system change, parameter 6501 (ORG, bit 0) is used to specify whether to draw without changing the coordinate system or to draw by regarding the current drawing position as the current position in the new coordinate system.

Restrictions

- **Graphic condition**

If machine operation is not allowed, no drawing can be carried out. No drawing can be made during machine operation. The setting data and switches required for drawing are as shown below:

Setting data and switch	Status
Tool offset amount	Set it properly when performing drawing while the tool offset amount becomes valid.
Single block	Off
Optional block skip	Set it properly.
Feed hold	Off

- **Partial enlargement**

The partial enlargement can be carried out on the plane view and isometric projection view. No partial enlargement can be made in the drawing of the biplane view.

- **Tool current position**

In dynamic graphics display, drawing cannot be executed while the machine is operating even though this is possible in ordinary graphics display (see III–12.1). However, after drawing is executed, the operator can see how the tool moves along the tool path by operating the machine while displaying the mark for the current position of the tool.
It is necessary that the setting data and switches related to the machine operation should be the same status between drawing operation and machining operation for properly displaying the current position of tool on the drawn tool path.

13 HELP FUNCTION

The help function displays on the screen detailed information about alarms issued in the CNC and about CNC operations. The following information is displayed.

- **Detailed information of alarms**

  When the CNC is operated incorrectly or an erroneous machining program is executed, the CNC enters the alarm state. The help screen displays detailed information about the alarm that has been issued and how to reset it. The detailed information is displayed only for a limited number of P/S alarms. These alarms are often misunderstood and are rather difficult to understand.

- **Operation method**

  If you are not sure about a CNC operation, refer to the help screen for information about each operation.

- **Parameter table**

  When setting or referring to a system parameter, if you are not sure of the number of the parameter, the help screen displays a list of parameter Nos. for each function.

Help Function Procedure

Procedure

1 Press the HELP key on the MDI panel. HELP (INITIAL MENU) screen is displayed.

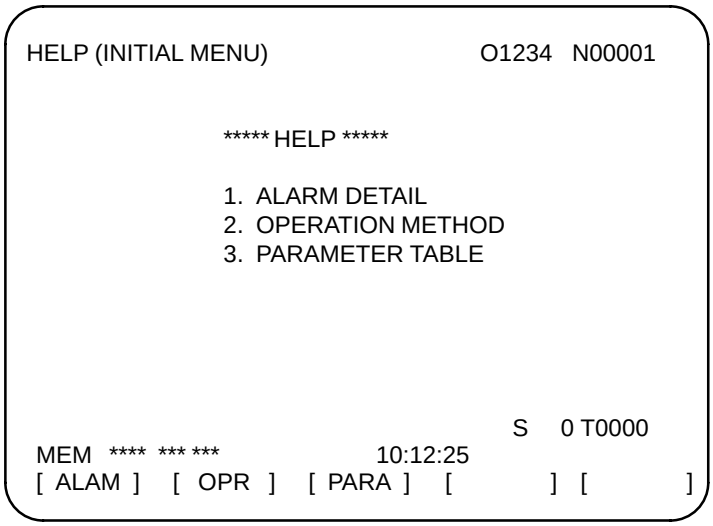

Fig.13(a) HELP (INITIAL MENU) screen

The user cannot switch the screen display from the PMC screen or CUSTOM screen to the help screen. The user can return to the normal CNC screen by pressing the HELP key or another function key.

ALARM DETAIL screen

2 Press soft key **[ALAM]** on the HELP (INITIAL MENU) screen to display detailed information about an alarm currently being raised.

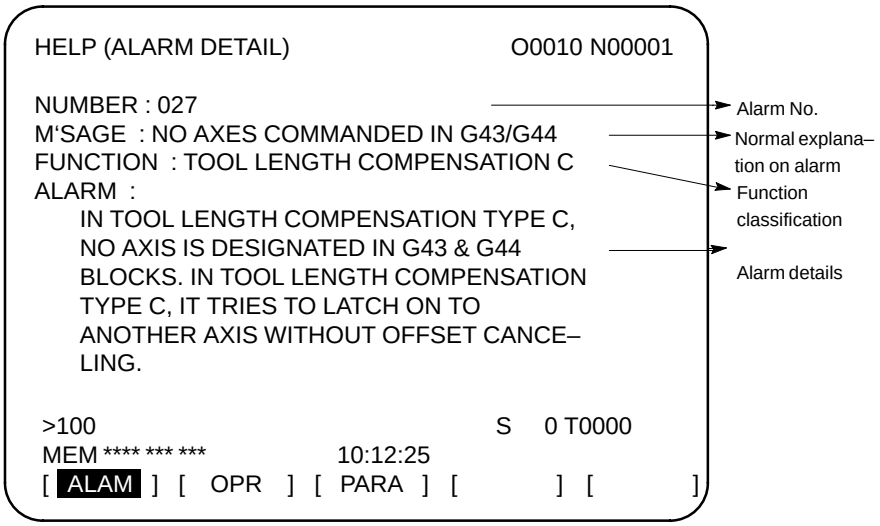

Fig.13(b) ALARM DETAIL screen when alarm P/S 027 is issued

Note that only details of the alarm identified at the top of the screen are displayed on the screen.
If the alarms are all reset while the help screen is displayed, the alarm displayed on the ALARM DETAIL screen is deleted, indicating that no alarm is issued.

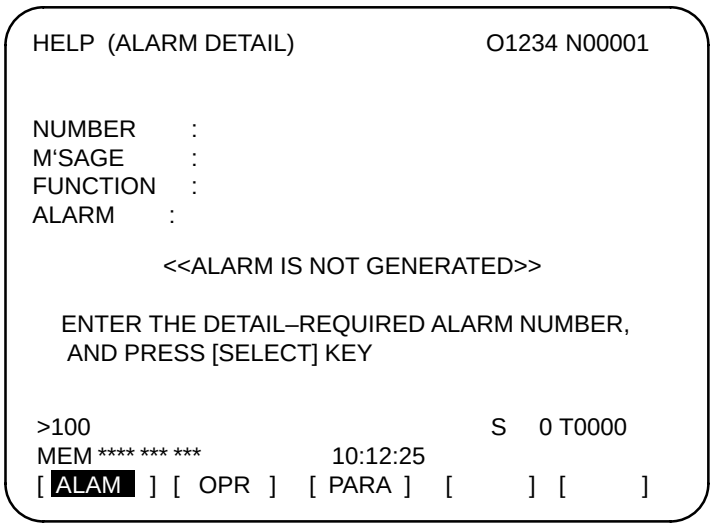

Fig.13(c) ALARM DETAIL screen when no alarm is issued

3 To get details on another alarm number, first enter the alarm number, then press soft key **[SELECT]**. This operation is useful for investigating alarms not currently being raised.

```
>100                                        S    0 T0000
MEM **** *** ***              10:12:25
[        ] [        ] [        ] [        ]   [ SELECT ]
```

Fig.13(d) How to select each ALARM DETAILS

The following is the screen when P/S alarm 100 is selected as example.

```
HELP (ALARM DETAIL)                          O1234 N00001


NUMBER     : 100
M'SAGE     : PARAMETER WRITE ENABLE
FUNCTION   :
ALARM      :

                <<ALARM IS NOT GENERATED>>




>100                                         S    0 T0000
MEM **** *** ***              10:12:25
[       ]  [       ] [        ] [       ]   [ SELECT ]
```

Fig.13(e) ALARM DETAIL screen when P/S 100 is selected

OPERATION METHOD screen

4 To determine an operating procedure for the CNC, press the soft key **[OPR]** key on the HELP (INITIAL MENU) screen. The OPERATION METHOD menu screen is then displayed.

```
HELP (OPERATION METHOD) O1234   N00001


  1. PROGRAM EDIT
  2. SEARCH
  3. RESET
  4. DATA INPUT WITH MDI
  5. DATA INPUT WITH TAPE
  6. OUTPUT
  7. INPUT WITH FANUC CASSETTE
  8. OUTPUT WITH FANUC CASSETTE
  9. MEMORY CLEAR

                                          S     0   T0000
 MEM   ****  ***  ***           00 : 00 : 00
[ ALAM ][ OPR ][ PARA ][        ][ (OPRT) ]
```

Fig.13(f) OPERATION METHOD menu screen

To select an operating procedure, enter an item No. from the keyboard then press the **[SELECT]** key.

```
>1                                        S    0 T0000
MEM  **** *** ***            10:12:25
[        ] [        ] [        ] [        ] [ SELECT ]
```

Fig.13(g) How to select each OPERATION METHOD screen

When “1. PROGRAM EDIT” is selected, for example, the screen in Figure 13 (h) is displayed.
On each OPERATION METHOD screen, it is possible to change the displayed page by pressing the PAGE key. The current page No. is shown at the upper right corner on the screen.

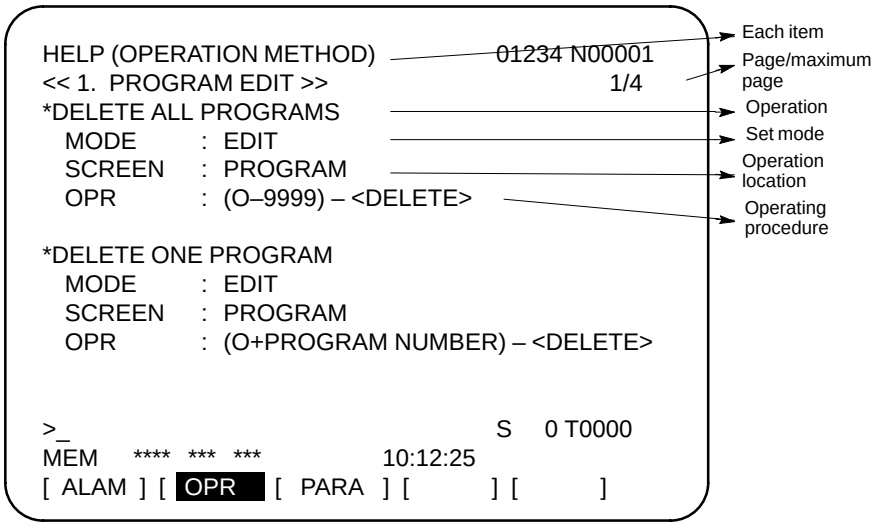

Fig.13(h) Selected OPERATION METHOD screen

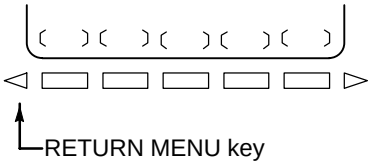

5 To return to the OPERATION METHOD menu screen, press the RETURN MENU key to display “**[OPR]**” again, and then press the **[OPR]** key again.
To directly select another OPERATION METHOD screen on the screen shown in Figure 13 (h), enter an item No. from the keyboard and press the **[SELECT]** key.

```
>3                                        S    0 T0000
MEM   **** *** ***           10:12:25
[        ] [        ] [        ] [        ] [ SELECT ]
```

Fig.13(i) How to select another OPERATION METHOD screen

PARAMETER TABLE screen

6 If you are not sure of the No. of a system parameter to be set, or to refer to a system parameter, press the **[PARA]** key on the HELP (INITIAL MENU) screen. A list of parameter Nos. for each function is displayed. (See Figure 13 (j).)
It is possible to change the displayed page on the parameter screen.

The current page No. is shown at the upper right corner on the screen.

```
HELP (PARAMETER TABLE)                    01234  N00001
                                                  1/4

* SETTEING                                    (No. 0000~)
* READER/PUNCHER INTERFACE                    (No. 0100~)
* AXIS CONTROL
  /SETTING UNIT                               (No. 1000~)
* COORDINATE SYSTEM                           (No. 1200~)
* STROKE LIMIT                                (No. 1300~)
* FEED RATE                                   (No. 1400~)
* ACCEL/DECELERATION CTRL                     (No. 1600~)
* SERVORELATED                                (No. 1800~)
* DI/DO                                       (No. 3000~)

>_                                        S      0 T0000
MEM  ****  ***  ***              10:12:25
[ ALAM ] [  OPR  ] [ PARA ] [         ] [          ]
```

Fig. 13(j) PARAMETER TABLE screen

7 To exit from the help screen, press the HELP key or another function key.

Explanation

- **Configuration of the Help Screen**

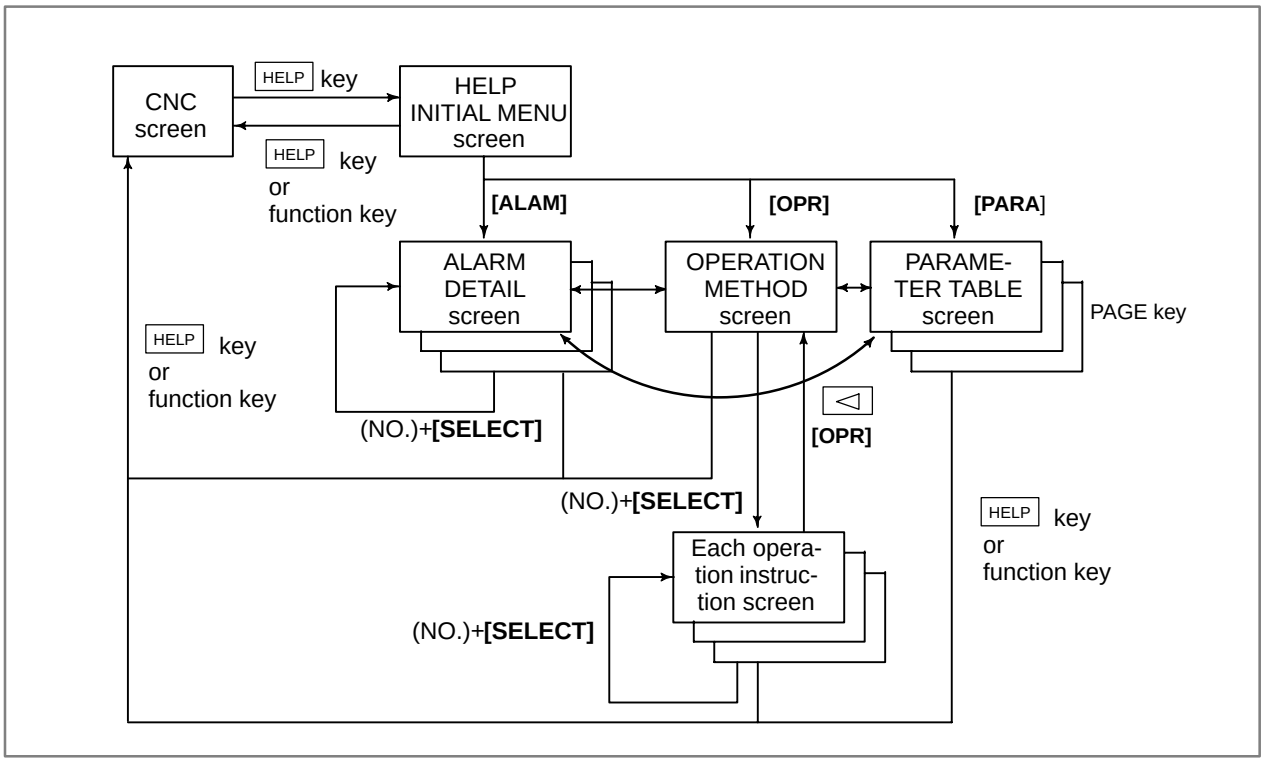

14 SCREEN HARDCOPY

The screen hardcopy function outputs the information displayed on the CNC screen as 640*480–dot bitmap data. This function makes it possible to produce a hard copy of a still image displayed on the CNC.
The created bitmap data can be displayed on a PC.

Screen Hardcopy Procedure

1 Check the parameter settings. To use the screen hardcopy function, set bit 7 of parameter 3301 to 1 and parameter 20 (I/O channel selection) to 4 (memory card I/F). Set other relative parameters (bits 0, 2, and 3 of parameter 3301) as needed. In a multipath system, set the parameters for each path.

2 Insert a memory card.

3 To start the function, set hardcopy start signal HDREQ (G67#7) to 1. Alternatively, hold down the **[SHIFT]** key for five seconds.

4 To end the function, press the **[CAN]** key. Alternatively, set hard copy stop signal HDABT (G67#6) to 1.

5 While the screen hardcopy operation is in progress, the hardcopy in progress signal (F061#3) is tied to 1. For several tens of seconds (or several seconds, for a monochrome LCD) before the hardcopy operation ends, the screen image stands still.

6 When the screen hardcopy operation is completed, the hardcopy in progress signal (F061#3) goes 0.

Supplementary explanation

While the screen hardcopy operation is in progress, the screen image keeps still. This means that the clock displayed on the screen indicates the beginning and end of the operation. When the clock stops counting seconds, the hard copy operation starts. The clock resumes counting seconds when the screen hard copy operation ends.

NOTE
1 During the screen hardcopy operation, key input is disabled for several tens of seconds. Until the screen hardcopy operation ends, the screen image lies still. During this period, the hardcopy in progress signal (F061#3) is tied to 1. No other signal is output. Avoid turning off the power indiscriminately during that period.
2 If the **[SHIFT]** or **[CAN]** key is customized by C executor, for instance, the screen hardcopy operation may disable the **[SHIFT]** or **[CAN]** key.
3 A normal hard copy may not be produced while the screen image is moving.

Limitations

A hard copy of the following screens cannot be produced.

1 Screen of the FS–210*i* (CNC with personal computer function)

2 System alarm screen

3 Screen while RS–232–C is being used

4 Screen during automatic or manual operation (A hard copy can be produced in a rest of the operation.)

File name

The bitmap files created by the screen hardcopy function are named as follows, in order in which they are created after power–up:

'HDCPY000.BMP' (Name of the first hardcopy file created after power–up)
'HDCPY001.BMP' (Name of the second hardcopy file created after power–up)
:
:
'HDCPY099.BMP'

NOTE
1 A screen hardcopy file produced after the file HDCPY099. BMP is output will be named as HDCPY000.BMP.
2 If a BMP file output by the screen hardcopy function has the same name as a file present on a memory card, the file on the memory card is overwritten unconditionally.
3 When the hardcopy function is carried out after power is turned off and on again, the first output file is named as HDCPY000.BMP again. If the inserted memory card has a file having the same name, the file is unconditionally overwritten. Note this when continuously producing hard copies of various screens.

Colors of data

The number of colors used in created bitmap data depend on the display control card, the LCD hardware, and the display mode of the CNC screen. Table 14 (a) indicates the relationships.

Table 14 (a) Colors of BMP data created by the screen hardcopy function

	LCD hardware	CNC screen display mode	Colors displayed on CNC	Colors used in created BMP data	Remarks
VGA card	Monochrome LCD	—	2 colors	2 colors	Shades of gray are not supported.
	Color LCD	VGA–compatible mode	Character: 16 colors Graphic: 16 colors	When bit 0 of parameter 3301 is set to 0: 256 colors When bit 0 of parameter 3301 is set to 1: 16 colors	Most CNC screens use this mode. Note that colors may not be normally displayed in the 16–color mode.
		VGA mode	256 colors	256 colors	A special screen can be prepared by C executor, for instance.

Data size

Table 14 (b) indicates the sizes of bitmap data created by the screen hardcopy function.

Table 14 (b) Sizes of bitmap data created by the screen hardcopy function

Bitmap colors	File size (bytes)
Monochrome (2 colors)	38,462
Color (16 colors)	153,718
Color (256 colors)	308,278

Alarm message

If bit 2 of parameter 3301 is set to 1, an alarm message can be output when the hardcopy operation ends in failure.
(P/S alarm Nos. 5212 to 5214)

IV. MAINTENANCE

1 METHOD OF REPLACING BATTERY

This chapter describes how to replace the CNC backup battery and absolute pulse coder battery. This chapter consists of the following sections:

1.1 REPLACING BATTERY FOR LCD–MOUNTED TYPE *i* SERIES

1.2 REPLACING THE BATTERY FOR STAND–ALONE TYPE *i* SERIES

1.3 BATTERY IN THE PANEL *i* (3 VDC)

1.4 BATTERY FOR SEPARATE ABSOLUTE PULSE CODERS (6 VDC)

1.5 BATTERY FOR ABSOLUTE PULSE CODER BUILT INTO THE MOTOR (6 VDC)

Battery for memory backup

Part programs, offset data, and system parameters are stored in CMOS memory in the control unit. The power to the CMOS memory is backed up by a lithium battery mounted on the front panel of the control unit. Therefore, the above data is not lost even if the main battery fails. The backup battery is installed in the control unit prior to being shipped from the factory. This battery can provide backup for the memory contents for about a year.

When the battery voltage falls, alarm message “BAT” blinks on the LCD display and the battery alarm signal is output to the PMC. When this alarm is displayed, replace the battery as soon as possible. In general, the battery can be replaced within one or two weeks of the alarm first being issued. This, however, depends on the system configuration.

If the battery voltage subsequently drops further, backup of memory can no longer be provided. Turning on the power to the control unit in this state causes system alarm 910 (SRAM parity alarm) to be issued because the contents of memory are lost. Replace the battery, clear the entire memory, then reenter the data.
Replace the memory backup battery whithin a few minutes while the control unit is brought off.
The following two kinds of batteries can be used.

- Lithium battery, incorporated into the CNC control unit.
- Two alkaline dry cells (size D) in an external battery case.

NOTE
A lithium battery is installed as standard at the factory.

1.1 REPLACING BATTERY FOR LCD–MOUNTED TYPE *i* SERIES

- **Replacement procedure**

When a lithium battery is used

Prepare a new lithium battery (ordering code: A02B–0200–K102 (FANUC specification: A98L–0031–0012)).

1) Turn on the power to the CNC. After about 30 seconds, turn off the power.
2) Remove the old battery from the top of the CNC control unit.
   First, unplug the battery connector, then take the battery out of its case.
   The battery case of a control unit without option slots is located at the top end of the unit as shown in the figure of the previous page. The battery case of a control unit with 2 slots or 4 slots is located in the central area of the top of the unit (between fans).
3) Insert a new battery and reconnect the connector.

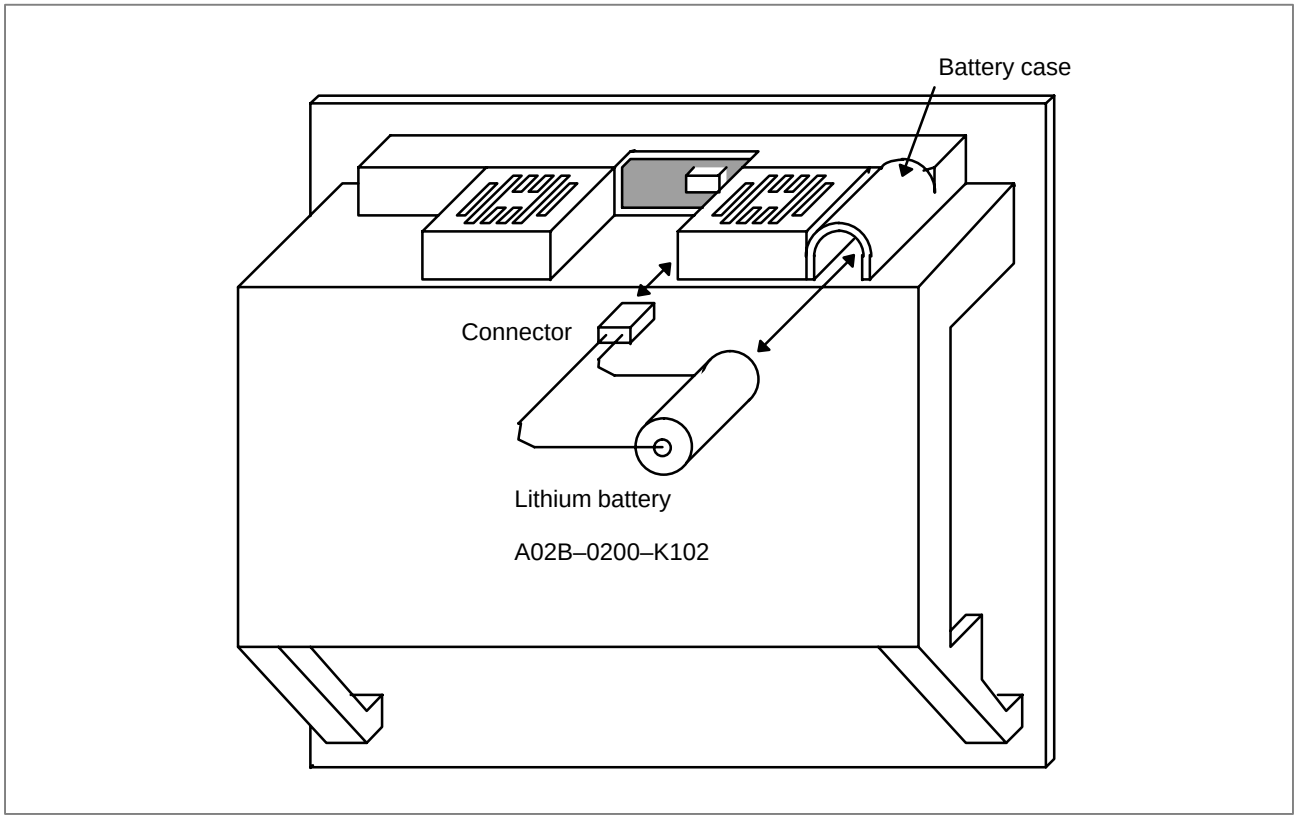

WARNING

Using other than the recommended battery may result in the battery exploding. Replace the battery only with the specified battery (A02B–0200–K102).

CAUTION

Steps 1) to 3) should be completed within 30 minutes (or within 5 minutes for the 160*i*/180*i* with the PC function). Do not leave the control unit without a battery for any longer than the specified period. Otherwise, the contents of memory may be lost.

If steps 1) to 3) may not be completed within 30 minutes, save all contents of the CMOS memory to the memory card beforehand. Thus, if the contents of the CMOS memory are lost, the contents can be restored easily.

For the method of operation, refer to Maintenance manual (B–63525EN).

When discarding a battery, observe the applicable ordinances or other rules of your local government. Also, cover the terminals of the battery with vinyl tape or the like to prevent a short–circuit.

Replacing commercial alkaline dry cells (size D)

1) Prepare two alkaline dry cells (size D) commercially available.
2) Turn on the power to the Series 16*i*/18*i*/160*i*/180*i*.
3) Remove the battery case cover.
4) Replace the cells, paying careful attention to their orientation.
5) Reinstall the cover onto the battery case.

CAUTION
When replacing the alkaline dry cells while the power is off, use the same procedure as that for lithium battery replacement described above.

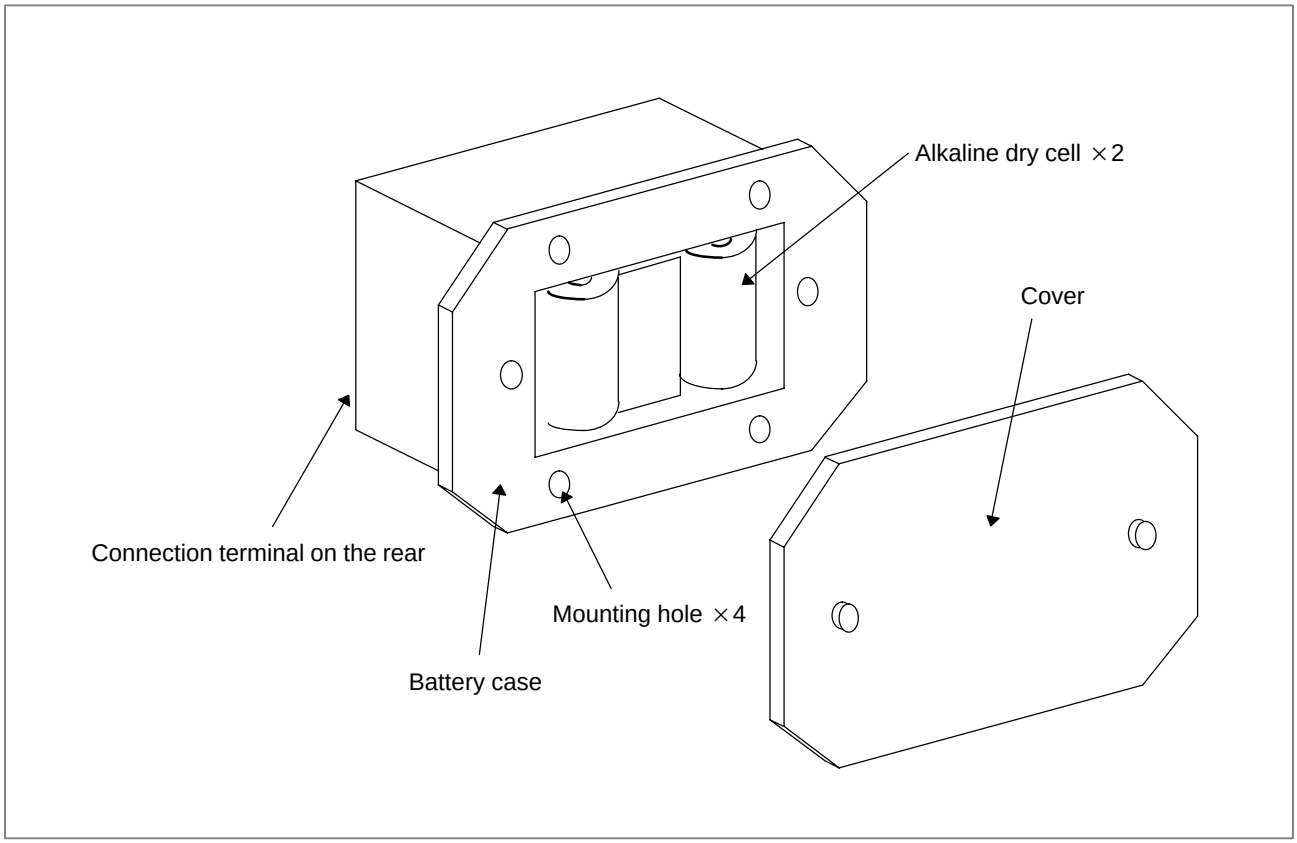

1.2 REPLACING THE BATTERY FOR STAND–ALONE TYPE *i* SERIES

- **Replacing the battery**

If a lithium battery is used, have A02B–0200–K102 (FANUC internal code: A98L–0031–0012) handy.

(1) Turn the CNC on. About 30 seconds later, turn the CNC off.

(2) Remove the battery from the top area of the CNC unit.
Disconnect the connector first. Then, remove the battery from the battery case.
The battery case is provided in the top area of the face plate of the main CPU board.

(3) Replace the battery, then connect the connector.

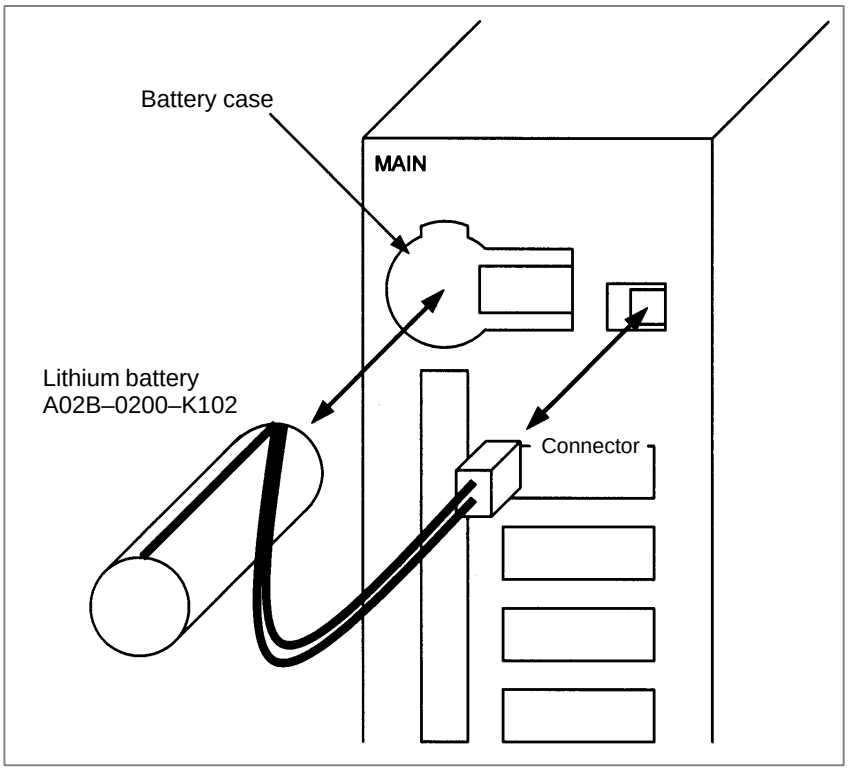

WARNING
The incorrect mounting of the battery may cause an explosion. Avoid using any battery other than the one specified here (A02B–0200–K102).

NOTE

Complete steps (1) to (3) within 30 minutes. (or, for the 210*i* with the PC functions, within 5 minutes)
If the battery is left removed for a long time, the memory would lose the contents.
If there is a danger that the replacement cannot be completed within 30 minutes, save the whole contents of the CMOS memory to a memory card. The contents of the memory can be easily restored with the memory card in case the memory loses the contents.

Discard the dead battery, observing appropriate municipal rules and regulations. When discarding the battery, insulate the terminal with a tape so that no short–circuit would occur.

When using commercial D–size alkaline dry cells

- **Replacing the battery**

(1) Have commercial D–size alkaline dry cells handy.
(2) Turn the CNC on.
(3) Remove the lid from the battery case.
(4) Replace the old dry cells with new ones. Mount the dry cells in a correct orientation.
(5) Replace the lid on the battery case.

NOTE
In the power–off state, the battery should be replaced as in the case of the lithium battery, which is descried above.

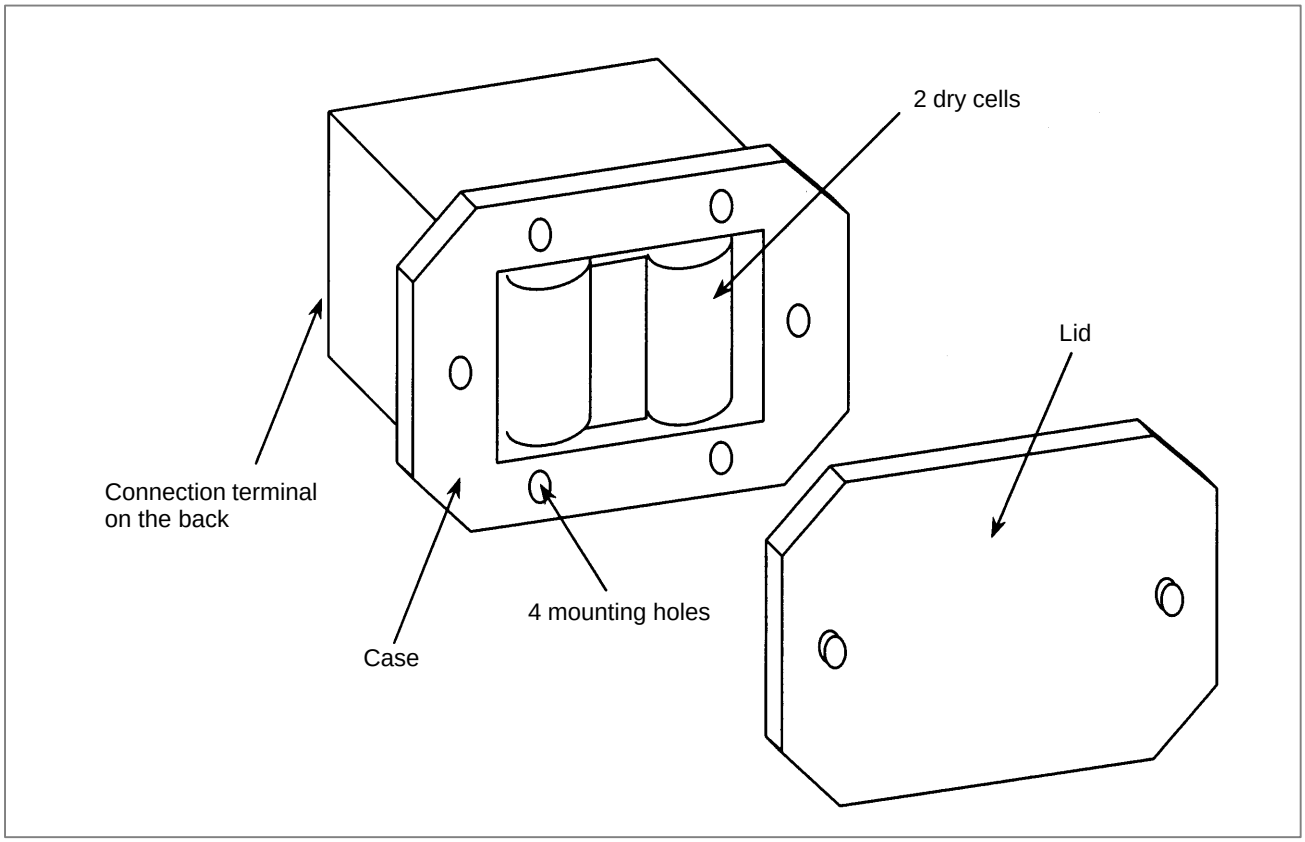

1.3 BATTERY IN THE PANEL *i* (3 VDC)

A lithium battery is used to back up BIOS data in the PANEL *i*. This battery is factory–set in the PANEL *i*. This battery has sufficient capacity to retain BIOS data for one year.

When the battery voltage becomes low, the LCD screen blinks. (The LCD screen also blinks if a fan alarm is issued.) If the screen blinks, replace the battery as soon as possible (within one week). FANUC recommends that the battery be replaced once per year regardless of whether a battery alarm is issued.

Replacing the battery

(1) To guard against the possible loss or destruction of BIOS parameters, write down the BIOS parameter values.

(2) Obtain a new lithium battery (A02B–0200–K102).

(3) After power has been supplied for at least five seconds, turn off the power to PANEL *i*. Remove the PANEL *i* from the panel so that replacement work can be done from the rear of the intelligent terminal.

(4) Detach the connector of the lithium battery, and remove the battery from the battery holder.

(5) Run the cable for the new lithium battery as shown in the Fig.1.3.

(6) Attach the connector, and place the battery in the battery holder.

(7) Install PANEL *i* again.

(8) Turn on the power, and check that the BIOS parameters are maintained (BIOS setup is not activated forcibly).

Between removing an old battery and inserting new battery, no more than five minutes must be allowed to elapse.

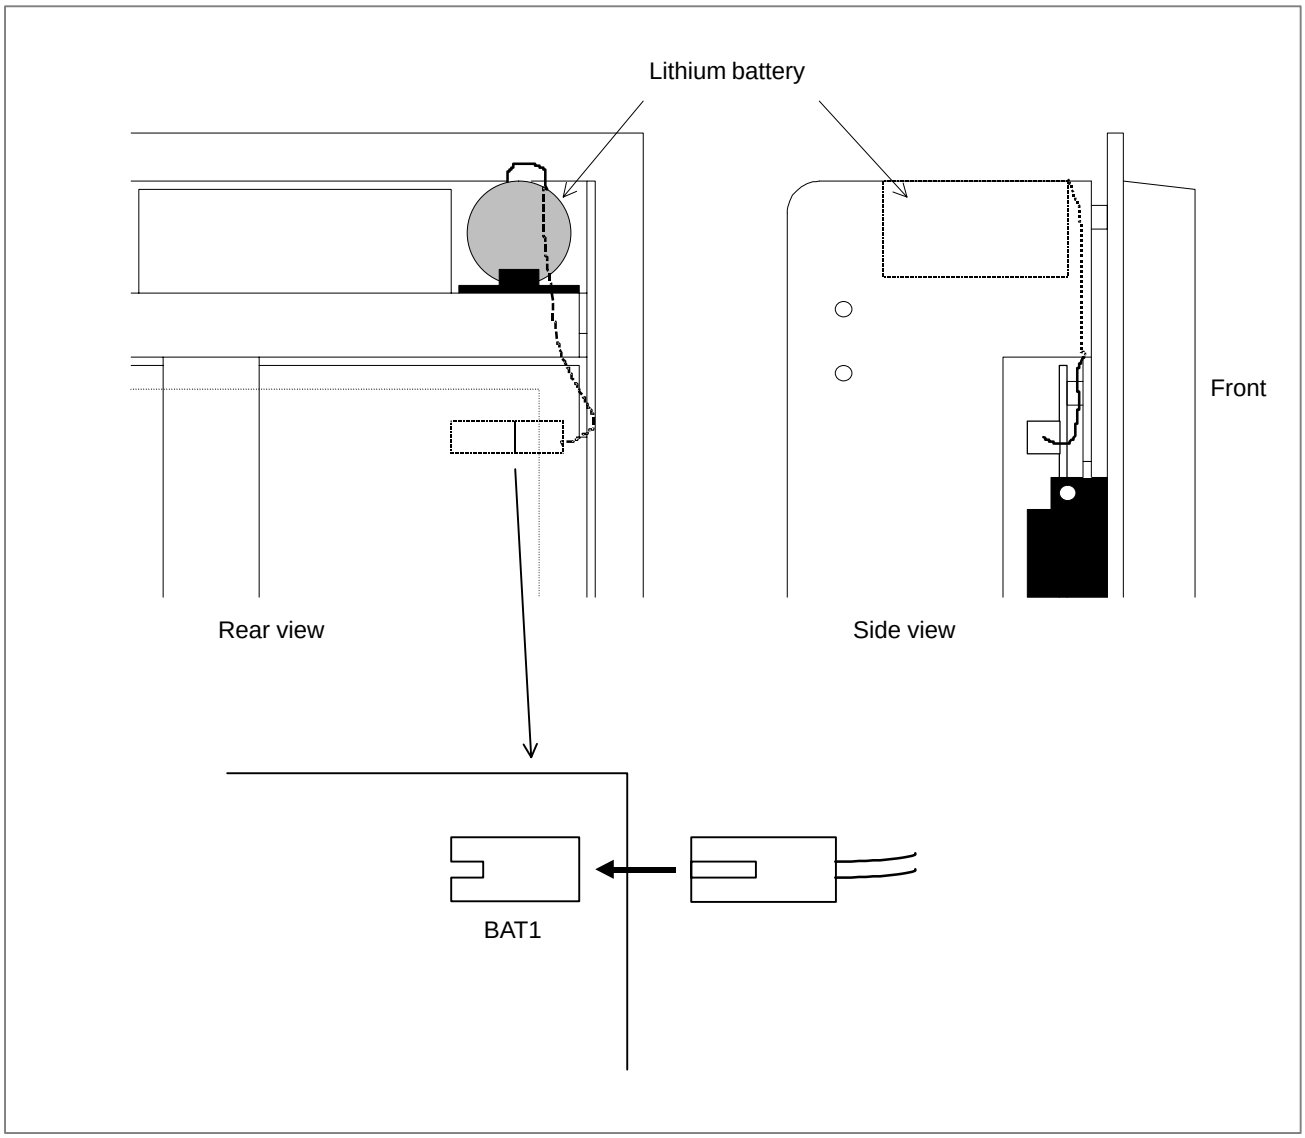

Fig.1.3 Lithium battery connection on the PANEL *i*

1.4 BATTERY FOR SEPARATE ABSOLUTE PULSE CODERS (6 VDC)

One battery unit can maintain current position data for six absolute pulse coders for a year.
When the voltage of the battery becomes low, APC alarms 306 to 308 (+ axis number) are displayed on the CRT display. When APC alarm 3n7 is displayed, replace the battery as soon as possible. In general, the battery should be replaced within two or three weeks, however, this depends on the number of pulse coders used.
If the voltage of the battery becomes any lower, the current positions for the pulse coders can no longer be maintained. Turning on the power to the control unit in this state causes APC alarm 300 (reference position return request alarm) to occur. Return the tool to the reference position after replacing the battery.
See Section 7.1.3 for details of connecting the battery to separate absolute pulse coders. The battery for the built–in absolute pulse coder is installed in the servo amplifier. For an explanation of the replacement procedure, refer to the FANUC SERVO MOTOR α Series Maintenance Manual.

Replacing batteries

Obtain four commercially available alkaline batteries (size D).

(1) Turn on the power to the machine (*i* Series CNC).

(2) Loosen the screws on the battery case connected to the interface unit of the detector separately installed, and remove the cover.

(3) Replace the dry batteries in the case.
Note the polarity of the batteries as shown in the figure below (orient two batteries one way and the other two in the opposite direction).

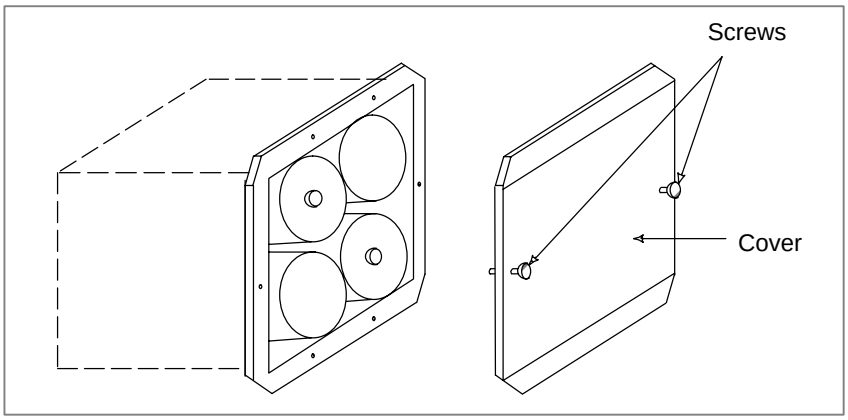

(4) After installing the new batteries, replace the cover.

(5) Turn off the power to the machine (*i* Series CNC).

WARNING
If the batteries are installed incorrectly, an explosion may occur. Never use batteries other than the specified type (Size D alkaline batteries).

CAUTION
Replace batteries while the power to the *i* Series CNC is on. Note that, if batteries are replaced while no power is supplied to the CNC, the recorded absolute position is lost.

1.5 BATTERY FOR BUILT–IN ABSOLUTE PULSE CODERS (DC6V)

When the battery voltage falls, APC alarms 306 to 308 are displayed on the screen. When APC alarm 307 is displayed, replace the battery as soon as possible. In general, the battery should be replaced within one or two weeks of the alarm first appearing. This, however, depends on the number of pulse coders being used.
If the battery voltage drops any further, the current positions for the pulse coders will be lost. Turning on the power to the control unit in this state results in APC alarm 300 (reference position return request alarm) being issued. Return the tool to the reference position after replacing the battery.
So, FANUC recommends replacing the battery every year concerning without the alarm occurring.
The battery for the built–in absolute pulse coder is connected with the servo amplifier.
Note that the attachment methods of the battery and ordering specifications of battery are different from SERVO AMPLIFIER α series (SVM) to SERVO AMPLIFIER β series.

Replacement procedure

Replace the battery only while the power to the servo unit is on. If the battery is replaced while the power is off, all of the absolute position settings will be lost.
Replacement procedure is as follows.

1. Turn the servo unit (machine) on.
2. Place the machine in the emergency stop state.
3. Confirm that the servo motors are not active.
4. In case of SERVO AMPLIFIER α series, confirm that the LED that indicates DC link charging status is not light.
5. Remove the battery and replace the battery.
6. The replacement is complete. Turn the servo unit (machine) off.

WARNING

- The power magnetic cabinet in which the servo units are mounted has a high–voltage section. Don’t touch this section that presents a severe risk of the electric shock.
- In case of SERVO AMPLIFIER α series, replace the battery after confirm that the LED that indicates DC link charging status is not light. Charged DC link has a high–voltage.
- Ensure that the replacement battery is of the correct type. Otherwise, heat, explosion or ignition will occur. Always use the specified battery.
- Pay careful attention to the polarity of the battery. Fault polarity may be the cause of heat, explosion or ignition. Also, it may be the cause of lost of the absolute position in the pulse coder.
- Attach the socket to unused connector of CX5X or CX5Y. These sockets that protect the connectors are attached to these connectors in shipping from FANUC. If connector pins of CX5X or CX5Y will short, heat, explosion or ignition will occur. Also, it may be the cause of lost of the absolute position in the pulse coder.

SERVO AMPLIFIER α series (SVM)

The battery is connected in either of 2 ways as follows.

Method 1: Attach the lithium battery to the SVM.
Use the battery: A06B–6073–K001.
Method 2: Use the battery case (A06B–6050–K060).
Use the battery: A06B–6050–K061 or D–size alkaline battery.

Method	Item	Ordering specification
Method 1	Battery (Lithium battery)	A06B–6073–K001
Method 2	Battery (4 pieces of D–size alkaline battery)	A06B–6050–K061

- Attach the lithium battery to the SVM. (Method 1)
  Built the lithium (A06B–6073–K001) battery in the SVM.
  [Attachment procedure]
  (1) Check the item 1 to 4 of ”Replacement procedure”.
  (2) Remove a battery cover from SVM.
  (3) Attach the battery as shown below.
  (4) Re–attach the cover.
  (5) Connect the connector of battery with CX5X or CX5Y of SVM.

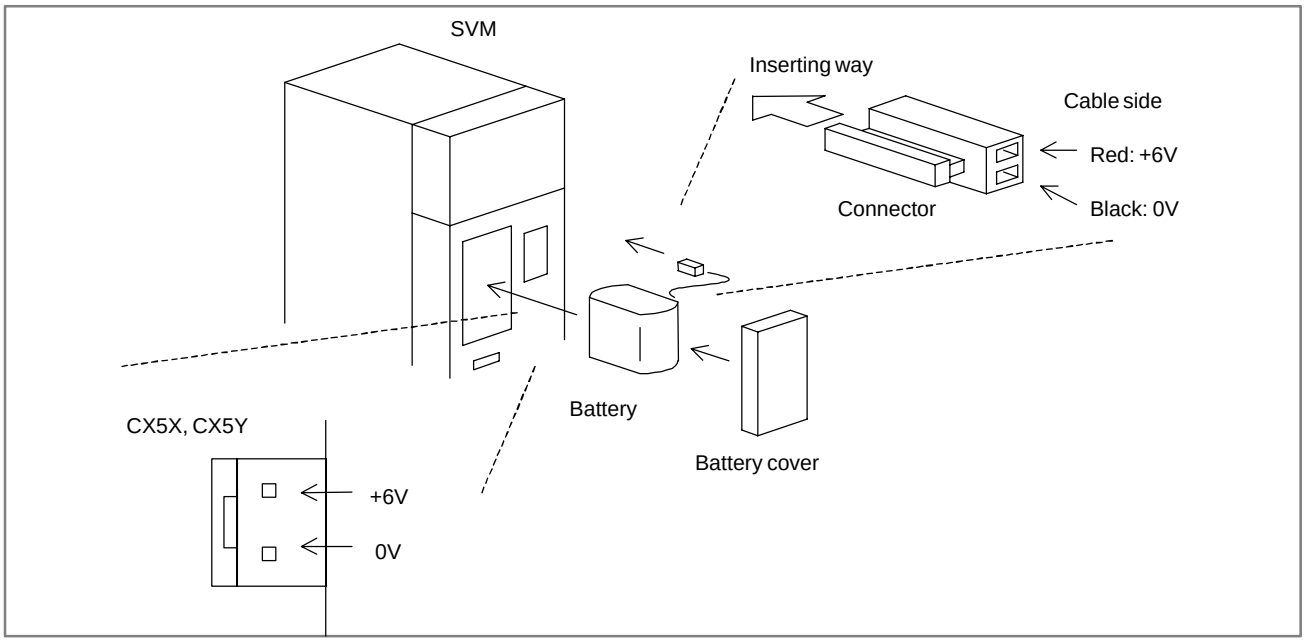

CAUTIONS
- The connector of the battery can be connected with either of CX5X and CX5Y.
- Pay attention that the battery cable doesn’t have a stretch condition. If this cable is connected on a stretch condition, a bad conductivity may be occurred.

- Replacement of batteries in the battery case. (Method 2)
  Replace four D–size alkaline batteries in the battery case installed in the machine.

[Attachment procedure]

(1) Check the item 1 to 4 of ”Replacement procedure”.

(2) Have four D–size alkaline batteries on hand.

(3) Loosen the screws on the battery case. Remove the cover.

(4) Replace the alkaline batteries in the case. Pay careful attention to the polarity of the alkaline batteries.

(5) Attach the cover.

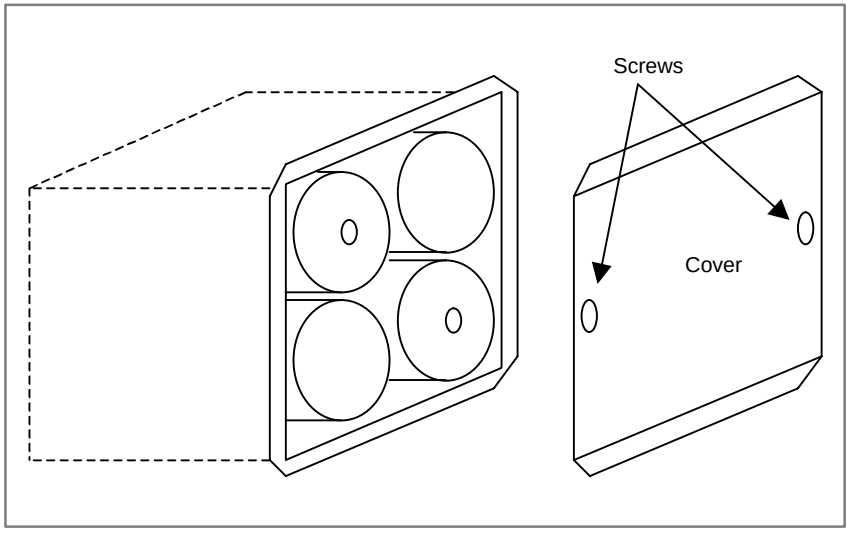

SERVO AMPLIFIER β series

The battery is connected in either of 2 ways as follows.

Method 1: Attach the lithium battery to the SVM.
Use the battery: A06B–6093–K001.
Method 2: Use the battery case (A06B–6050–K060).
Use the battery: A06B–6050–K061 or D–size alkaline battery.

Method	Item	Ordering specification
Method 1	Battery (Lithium battery)	A06B–6093–K001
Method 2	Battery (4 pieces of D–size alkaline battery)	A06B–6050–K061

- Attach the lithium battery to the amplifier. (Method 1)
  Attach the lithium (A06B–6093–K001) battery to the amplifier.

  [Attachment procedure]

  (1) Check the item 1 to 3 of ”Replacement procedure”.

  (2) In case of SVU–12 or SVU–20, remove the battery cover under the servo unit grasping its left and right sides. In case of SVU–40 or SVU–80, remove the cover attached on right side of the servo unit grasping its upper and lower sides.

  (3) Remove the battery from the servo unit.

  (4) Replace the battery and connect the battery cable with the connector CX5X or CX5Y of the servo unit.

  (5) Mount the battery cover.

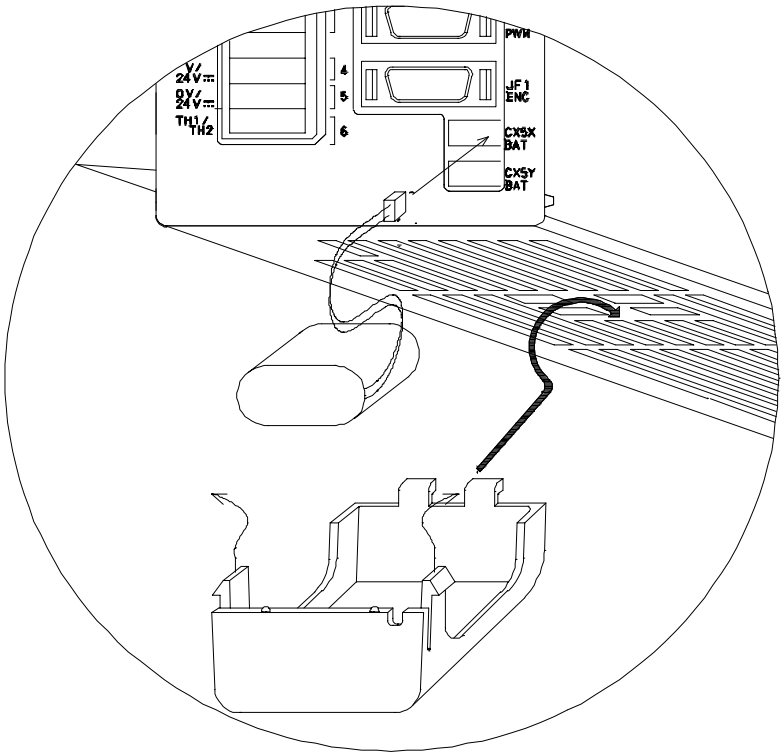

SVU–12, SVU–20

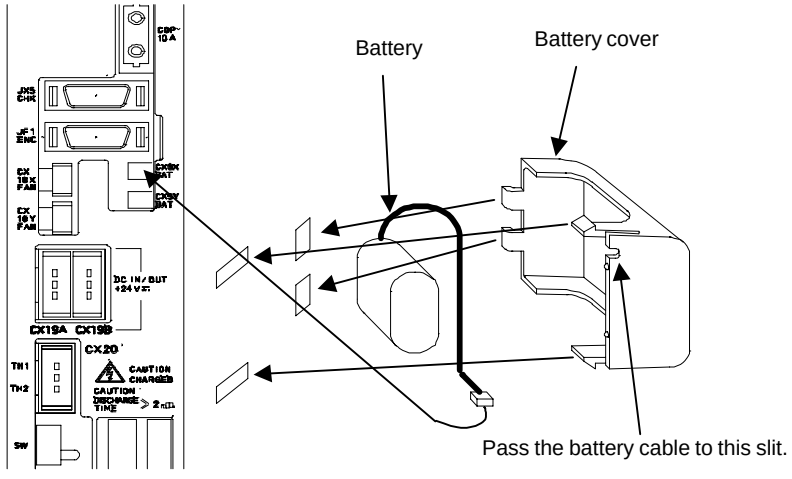

SVU–40, SVU–80

CAUTIONS
- The connector of the battery can be connected with either of CX5X and CX5Y.

- Replacement of batteries in the battery case. (Method 2)
  Replace four D–size alkaline batteries in the battery case installed in the machine.

[Attachment procedure]

(1) Check the item 1 to 3 of ”Replacement procedure”.
(2) Have four D–size alkaline batteries on hand.
(3) Loosen the screws on the battery case. Remove the cover.
(4) Replace the alkaline batteries in the case. Pay careful attention to the polarity of the alkaline batteries.
(5) Attach the cover.

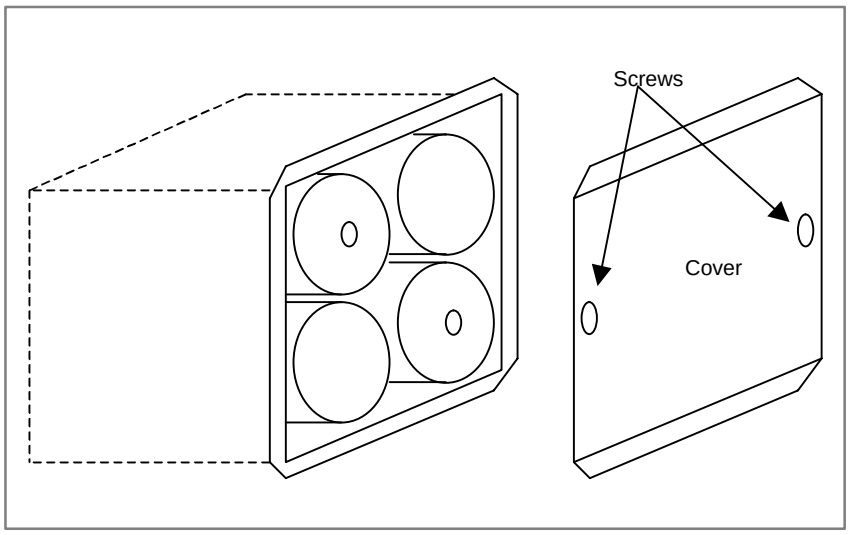

Used batteries

Old batteries should be disposed as ”INDUSTRIAL WASTES” according to the regulations of the country or autonomy where your machine has been installed.

APPENDIX

A TAPE CODE LIST

ISO code										EIA code										Meaning		
Character	8	7	6	5	4		3	2	1	Character	8	7	6	5	4		3	2	1		Without CUSTOM MACRO B	With CUSTOM MACRO B
0			○	○		○				0			○			○				Number 0		
1	○		○	○		○			○	1						○			○	Number 1		
2	○		○	○		○		○		2						○		○		Number 2		
3			○	○		○		○	○	3				○		○		○	○	Number 3		
4	○		○	○		○	○			4						○	○			Number 4		
5			○	○		○	○		○	5				○		○	○		○	Number 5		
6			○	○		○	○	○		6				○		○	○	○		Number 6		
7	○		○	○		○	○	○	○	7						○	○	○	○	Number 7		
8	○		○	○	○	○				8					○	○				Number 8		
9			○	○	○	○			○	9				○	○	○			○	Number 9		
A		○				○			○	a		○	○			○			○	Address A		
B		○				○		○		b		○	○			○		○		Address B		
C	○	○				○		○	○	c		○	○	○		○		○	○	Address C		
D		○				○	○			d		○	○			○	○			Address D		
E	○	○				○	○		○	e		○	○	○		○	○		○	Address E		
F	○	○				○	○	○		f		○	○	○		○	○	○		Address F		
G		○				○	○	○	○	g		○	○			○	○	○	○	Address G		
H		○			○	○				h		○	○		○	○				Address H		
I	○	○			○	○			○	i		○	○	○	○	○			○	Address I		
J	○	○			○	○		○		j		○		○		○		○	○	Address J		
K		○			○	○		○	○	k		○		○		○		○		Address K		
L	○	○			○	○	○			l		○				○		○	○	Address L		
M		○			○	○	○		○	m		○		○		○	○			Address M		
N		○			○	○	○	○		n		○				○	○		○	Address N		
O	○	○			○	○	○	○	○	o		○				○	○	○		Address O		
P		○		○		○				p		○		○		○	○	○	○	Address P		
Q	○	○		○		○			○	q		○		○	○	○				Address Q		
R	○	○		○		○		○		r		○			○	○			○	Address R		
S		○		○		○		○	○	s			○	○		○		○		Address S		
T	○	○		○		○	○			t			○			○		○	○	Address T		
U		○		○		○	○		○	u			○	○		○	○			Address U		
V		○		○		○	○	○		v			○			○	○		○	Address V		
W	○	○		○		○	○	○	○	w			○			○	○	○		Address W		
X	○	○		○	○	○				x			○	○		○	○	○	○	Address X		
Y		○		○	○	○			○	y			○	○	○	○				Address Y		
Z		○		○	○	○		○		z			○		○	○			○	Address Z		

ISO code										EIA code										Meaning		
Character	8	7	6	5	4		3	2	1	Character	8	7	6	5	4		3	2	1		Without CUSTOM MACRO B	With CUSTOM MACRO B
DEL	○	○	○	○	○	○	○	○	○	Del		○	○	○	○	○	○	○	○		×	×
NUL						○				Blank						○					×	×
BS	○				○	○				BS			○		○	○		○			×	×
HT					○	○			○	Tab			○	○	○	○	○	○			×	×
LF or NL					○	○		○		CR or EOB	○					○						
CR	○				○	○	○		○	___											×	×
SP	○		○			○				SP				○		○					□	□
%	○		○			○	○		○	ER					○	○		○	○			
(			○		○	○				(2–4–5)				○	○	○		○				
)	○		○		○	○			○	(2–4–7)		○			○	○		○				
+			○		○	○		○	○	+		○	○	○		○					Δ	
–			○		○	○	○		○	–		○				○						
:			○	○	○	○		○		___												
/	○		○		○	○	○	○	○	/			○	○		○			○			
.			○		○	○	○	○		.		○	○		○	○		○	○			
#	○		○			○		○	○	Parameter (No. 6012)												
$			○			○	○			___											Δ	○
&	○		○			○	○	○		&					○	○	○	○			Δ	○
∇			○			○	○	○	○	___											Δ	○
*	○		○		○	○		○		Parameter (No. 6010)											Δ	
,	○		○		○	○	○			,			○	○	○	○		○	○			
;	○		○	○	○	○		○	○	___											Δ	Δ
<			○	○	○	○	○			___											Δ	Δ
=	○		○	○	○	○	○		○	Parameter (No. 6011)											Δ	
>	○		○	○	○	○	○	○		___											Δ	Δ
?			○	○	○	○	○	○	○	___											Δ	○
@	○	○				○				___											Δ	○
”			○					○		___											Δ	Δ
[	○	○		○	○	○		○	○	Parameter (No. 6013)											Δ	
]	○	○		○	○	○	○		○	Parameter (No. 6014)											Δ	

NOTE

1 The symbols used in the remark column have the following meanings.

(Space) : The character will be registered in memory and has a specific meaning.
It it is used incorrectly in a statement other than a comment, an alarm occurs.

× : The character will not be registered in memory and will be ignored.

Δ : The character will be registered in memory, but will be ignored during program execution.

○ : The character will be registered in memory. If it is used in a statement other than a comment, an alarm occurs.

□ : If it is used in a statement other than a comment, the character will not be registered in memory. If it is used in a comment, it will be registered in memory.

2 Codes not in this table are ignored if their parity is correct.

3 Codes with incorrect parity cause the TH alarm. But they are ignored without generating the TH alarm when they are in the comment section.

4 A character with all eight holes punched is ignored and does not generate TH alarm in EIA code.

B LIST OF FUNCTIONS AND TAPE FORMAT

Some functions cannot be added as options depending on the model.
In the tables below, IP _:presents a combination of arbitrary axis addresses using X,Y,Z,A,B and C (such as X_Y_Z_A_).
x = 1st basic axis (X usually)
y = 2nd basic axis (Y usually)
z = 3rd basic axis (Z usually)

Functions	Illustration	Tape format
Positioning (G00)		G00 IP_ ;
Linear interpolation (G01)		G01 IP_ F_;
Circular interpolation (G02, G03)	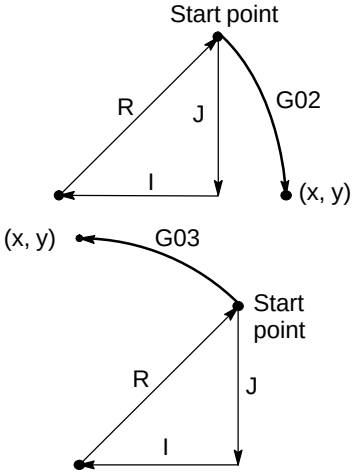	G17 {G02 / G03} X_ Y_ {R_ / I_ J_} F_ ; G18 {G02 / G03} X_ Z_ {R_ / I_ K_} F_ ; G19 {G02 / G03} Y_ Z_ {R_ / J_ K_} F_ ;
Helical interpolation (G02, G03)	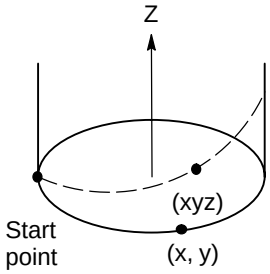 (In case of X–Y plane)	G17 {G02 / G03} X_ Y_ {R_ / I_ J_} α_ F_ ; G18 {G02 / G03} X_ Z_ {R_ / I_ K_} α_ F_ ; G19 {G02 / G03} Y_ Z_ {R_ / J_ K_} α_ F_ ; α : Any axis other than circular interpolation axes.
Dwell (G04)		G04 {X_ / P_} ;

Functions	Illustration	Tape format
AI advanced preview control (G05.1)		G05.1 Q1; AI advanced preview control mode on G05.1 Q0 ; AI advanced preview control mode off
Cylindrical interpolation (G07.1)		G07.1 IP_r_; Cylindrical interpolation mode G07.1 IP0 ; Cylindrical interpolation mode cancel r: Radius of cylinder
Advanced preview control (G08)		G08 P1: Advanced preview control mode on G08 P0: Advanced preview control mode off
Exact stop (G09)	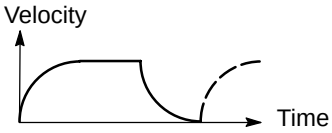	G09 { G01 / G02 / G03 } IP_;
Change of offset value by program (G10)		Tool offset memory A G10 L11 P_R_; Tool offset memory B G10 L10 P_R_;(Geomerty offset value) G10 L11 P_R_;(Wear offset value) Tool offset memory C G10 L10 P_R_;(Geomerty offset value/H) G10 L11 P_R_;(Wear offset value/H) G10 L12 P_R_;(Geomerty offset value/D) G10 L13 P_R_;(Wear offset value/D)
Polar coordinate (G15, G16)	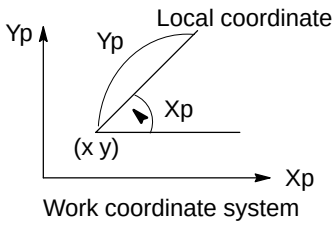	G17 G16 Xp_ Yp_ . ; G18 G16 Zp_ Xp_ . ; G19 G16 Yp_ Zp_ . ; G15 ; Cancel
Plane selection (G17, G18, G19)		G17 ; G18 ; G19 ;
Inch/millimeter conversion (G20, G21)		G20 : Inch input G21 : Millimeter input
Stored stroke check (G22, G23)	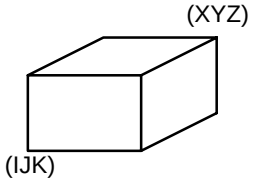	G22 X_Y_Z_I_J_K_; G23 Cancel;
Reference position return check (G27)		G27 IP_ ;

Functions	Illustration	Tape format
Reference position return (G28) 2nd, reference position return (G30)	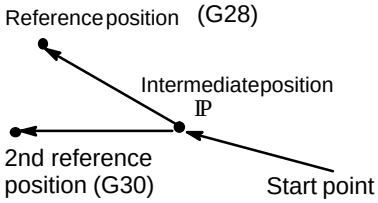	G27 IP_ ;
Return from reference position to start point (G29)	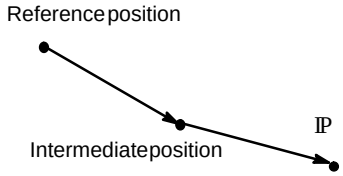	G29 IP_ ;
Skip function (G31)	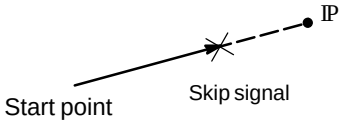	G31 IP_ F_;
Thread cutting (G33)	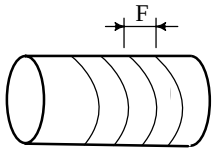	G33 IP_ F_; F : lead
Cutter compensation C (G40 – G42)	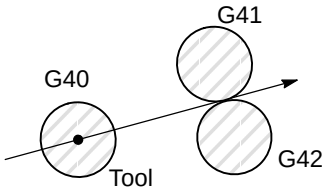	{ G17 / G18 / G19 } { G41 / G42 } D_ ; D : Tool offset G40 : Cancel
Normal direction control (G40.1, G41.1, G42.1) (G150, G151, G152)		G41.1 (G151) Normal direction control left G42.1 (G152) Normal direction control right G40.1 (G150) Normal direction control cancel
Tool length offset A (G43, G44, G49)	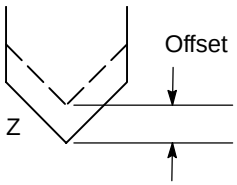	{ G43 / G44 } Z_ H_ ; { G43 / G44 } H_ ; H : Tool offset G49 : Cancel
Tool length offset B (G43, G44, G49)		{ G17 / G18 / G19 } { G43 / G44 } { Z_ / Y_ / X_ } H_ ; { G17 / G18 / G19 } { G43 / G44 } H_ ; H : Tool offset G49 : Cancel

Functions	Illustration	Tape format
Tool length offset C (G43, G44, G49)		{ G43 G44 } α_ H_ ; α : An optional address of one axis H : Tool offset number G49 : Cancel
Tool offset (G45 – G48)	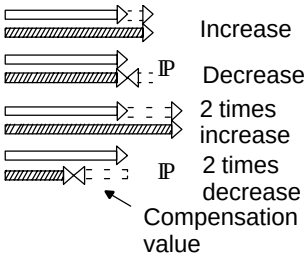	{ G45 G46 G47 G48 } IP_ D_; D : Tool offset number
Scaling (G50, G51)	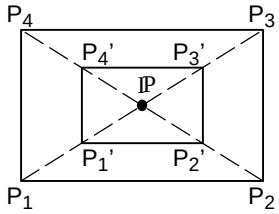	{ G45 G46 G47 G48 } IP_ D_; D : Tool offset number
Programmable mirror image (G50.1, G51.1)		G51.1 IP _ ; G50.1 ; . . . . Cancel
Setting of local coordinate system (G52)	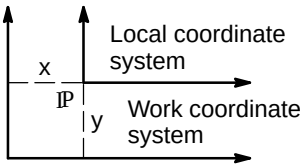	G52 IP_ ;
Command in machine coordinate system (G53)		G53 IP_ ;
Selection of work coordinate system (G54 – G59)	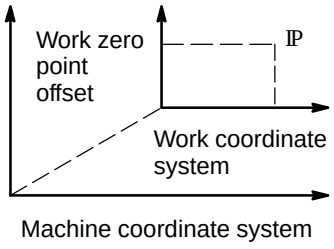	{ G54 : G59 } IP_ ;
Single direction positioning (G60)		G60 IP_ ;

Functions	Illustration	Tape format
Cutting mode (G64) Exact stop mode (G61) Tapping mode (G63) Automatic corner override (G62)	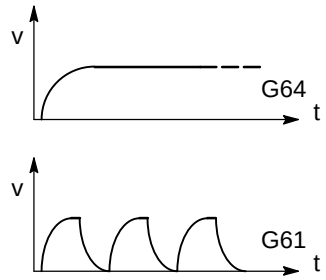	G64_ ; Cutting mode G61_ ; Exact stop mode G63_ ; Tapping mode G62_ ; Automatic corner override
Custom macro (G65, G66, G67)	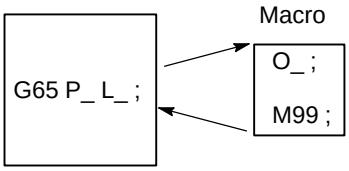	One–shot call G65 P_ L_ <Argument assignment> ; P : Program No. L : Number of repeatition Modal call G66 P_L_ <Argument G67 ; Cancel assignment>;
Coordinate system rotation (G68, G69)	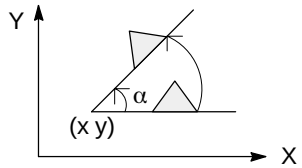 (In case of X–Y plane)	G68 { G17 X_ Y_ / G18 Z_ X_ / G19 Y_ Z_ } R α ; G69 ; Cancel
Canned cycles (G73, G74, G76, G80 – G89)	Refer to II.13. FUNCTIONS TO SIMPLIFY PROGRAMMING	G80 ; Cancel G73 / G74 / G76 / G81 / : / G89 } X_ Y_ Z_ P_ Q_ R_ F_ K_ ;
Absolute/incremental programming (G90/G91)		G90_ ; Absolute command G91_ ; Incremental command G90_ G91_ ; Combined use
Change of workpiece coordinate system (G92) Maximum spindle speed clump (G92)	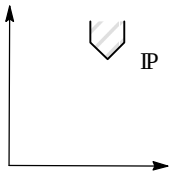	G92 IP_ ; Change of workpiece coordinate system G92S_ ; Maximum spindle speed clump
Workpiece coordinate system preset (G92.1)		G92.1 IP 0;
Feed per minute, Feed per revolution (G94, G95)	mm/min inch/min mm/rev inch/rev	G94 F_ ; Feed per minute G95 F_ ; Feed per revolution

Functions	Illustration	Tape format
Constant surface speed control (G96, G97)	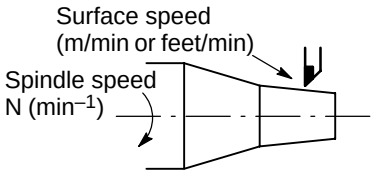	G96 S_ ; Starts constant surface speed control (Surface speed command) G97 S_ ; Constant surface speed is cancelled (Maximum spindle speed command)
Initial point return / R point return (G98, G99)	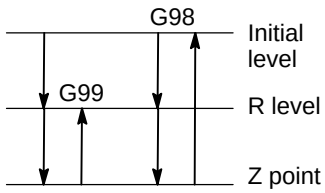	G98_ ; G99_ ;

C RANGE OF COMMAND VALUE

Linear axis

- **In case of millimeter input, feed screw is millimeter**

	Increment system	
	IS–B	**IS–C**
Least input increment	0.001 mm	0.0001 mm
Least command increment	0.001 mm	0.0001 mm
Max. programmable dimension	±99999.999 mm	±9999.9999 mm
Max. rapid traverse **Note**	240000 mm/min	100000 mm/min
Feedrate range **Note**	1 to 240000 mm/min	1 to 100000 mm/min
Incremental feed	0.001, 0.01, 0.1, 1 mm/step	0.0001, 0.001, 0.01, 0.1 mm/step
Tool compensation	0 to ±999.999 mm	0 to ±999.9999 mm
Dwell time	0 to 99999.999 sec	0 to 99999.999 sec

- **In case of inch input, feed screw is millimeter**

	Increment system	
	IS–B	**IS–C**
Least input increment	0.0001 inch	0.00001 inch
Least command increment	0.001 mm	0.0001 mm
Max. programmable dimension	±9999.9999 inch	±393.70078 inch
Max. rapid traverse **Note**	240000 mm/min	100000 mm/min
Feedrate range **Note**	0.01 to 9600 inch/min	0.01 to 4000 inch/min
Incremental feed	0.0001, 0.001, 0.01, 0.1 inch/step	0.00001, 0.0001, 0.001, 0.01 inch/step
Tool compensation	0 to ±99.9999 inch	0 to ±99.9999 inch
Dwell time	0 to 99999.999 sec	0 to 9999.9999 sec

- **In case of inch input, feed screw is inch**

	Increment system	
	IS–B	**IS–C**
Least input increment	0.0001 inch	0.00001 inch
Least command increment	0.0001 inch	0.00001 inch
Max. programmable dimension	±9999.9999 inch	±9999.9999 inch
Max. rapid traverse **Note**	9600 inch/min	4000 inch/min
Feedrate range **Note**	0.01 to 9600 inch/min	0.01 to 4000 inch/min
Incremental feed	0.0001, 0.001, 0.01, 0.1 inch/step	0.00001, 0.0001, 0.001, 0.01 inch/step
Tool compensation	0 to ±99.9999 inch	0 to ±99.9999 inch
Dwell time	0 to 99999.999 sec	0 to 9999.9999 sec

- **In case of millimeter input, feed screw is inch**

	Increment system	
	IS–B	**IS–C**
Least input increment	0.001 mm	0.0001 mm
Least command increment	0.0001 inch	0.00001 inch
Max. programmable dimension	±99999.999 mm	±9999.9999 mm
Max. rapid traverse **Note**	9600 inch/min	4000 inch/min
Feedrate range **Note**	1 to 240000 mm/min	1 to 100000 mm/min
Incremental feed	0.001, 0.01, 0.1, 1 mm/step	0.0001, 0.001, 0.01, 0.1 mm/step
Tool compensation	0 to ±999.999 mm	0 to ±999.9999 mm
Dwell time	0 to 99999.999 sec	0 to 9999.9999 sec

Rotation axis

	Increment system	
	IS–B	**IS–C**
Least input increment	0.001 deg	0.0001 deg
Least command increment	0.001 deg	0.0001 deg
Max. programmable dimension	±99999.999 deg	±9999.9999 deg
Max. rapid traverse **Note**	240000 deg/min	100000 deg/min
Feedrate range **Note**	1 to 240000 deg/min	1 to 100000 deg/min
Incremental feed	0.001, 0.01, 0.1, 1 deg/step	0.0001, 0.001, 0.01, 0.1 deg/step

NOTE
The feedrate range shown above are limitations depending on CNC interpolation capacity. As a whole system, limitations depending on servo system must also be considered.

D NOMOGRAPHS

D.1 INCORRECT THREADED LENGTH

The leads of a thread are generally incorrect in δ_1 and δ_2, as shown in Fig. D.1 (a), due to automatic acceleration and deceleration.
Thus distance allowances must be made to the extent of δ_1 and δ_2 in the program.

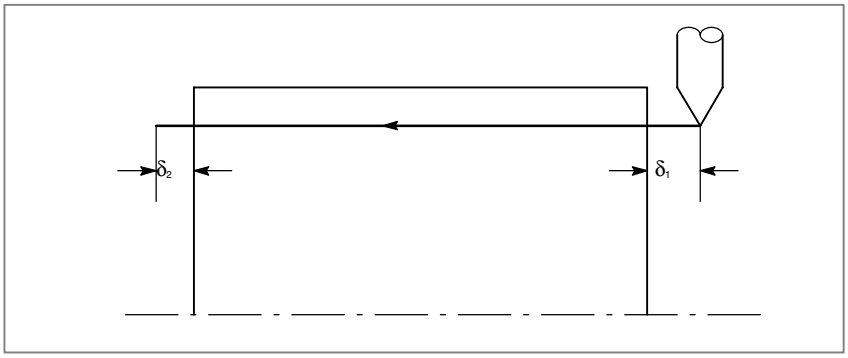

Fig.D.1(a) Incorrect thread position

Explanations

- **How to determine δ_2**

$$\delta_2 = T_1 V \text{ (mm)} \quad \cdots\cdots\cdots (1)$$

$$V = \frac{1}{60} RL$$

T_1 : Time constant of servo system (sec)
V : Cutting speed (mm/sec)
R : Spindle speed (min^{-1})
L : Thread feed (mm)

Time constant T_1 (sec) of the servo system: Usually 0.033 s.

- **How to determine δ_1**

$$\delta_1 = \{t - T_1 + T_1 \exp(-\frac{t}{T_1})\} V \quad \cdots\cdots\cdots (2)$$

$$a = \exp(-\frac{t}{T_1}) \quad \cdots\cdots\cdots (3)$$

T_1 : Time constant of servo system (sec)
V : Cutting speed (mm/sec)

Time constant T_1 (sec) of the servo system: Usually 0.033 s.

The lead at the beginning of thread cutting is shorter than the specified lead L, and the allowable lead error is ΔL. Then as follows.

$$a = \frac{\Delta L}{L}$$

When the value of HαI is determined, the time lapse until the thread accuracy is attained. The time HtI is substituted in (2) to determine δ_1: Constants V and T_1 are determined in the same way as for δ_2. Since the calculation of δ_1 is rather complex, a nomography is provided on the following pages.

- **How to use nomograph**

First specify the class and the lead of a thread. The thread accuracy, α, will be obtained at (1), and depending on the time constant of cutting feed acceleration/ deceleration, the δ_1 value when V = 10mm / s will be obtained at (2). Then, depending on the speed of thread cutting, δ_1 for speed other than 10mm/ s can be obtained at (3).

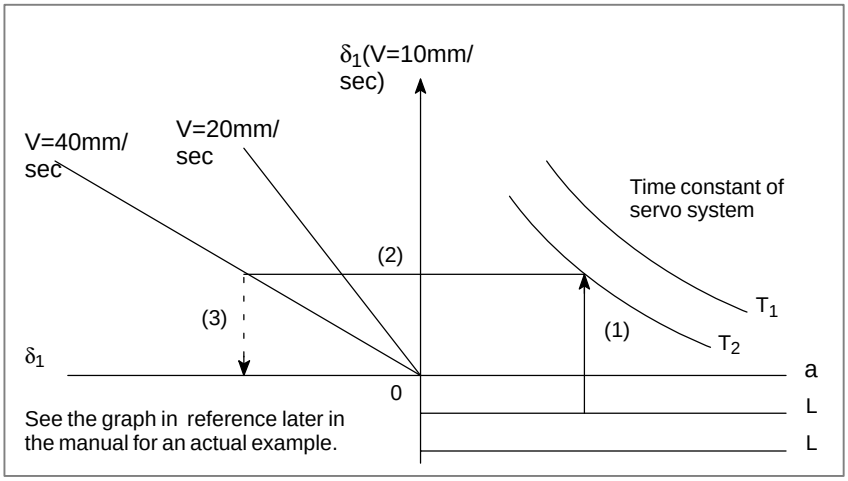

Fig.D.1(b) Nomograph

NOTE
The equations for δ_1, and δ_2 are for when the acceleration/ deceleration time constant for cutting feed is 0.

D.2 SIMPLE CALCULATION OF INCORRECT THREAD LENGTH

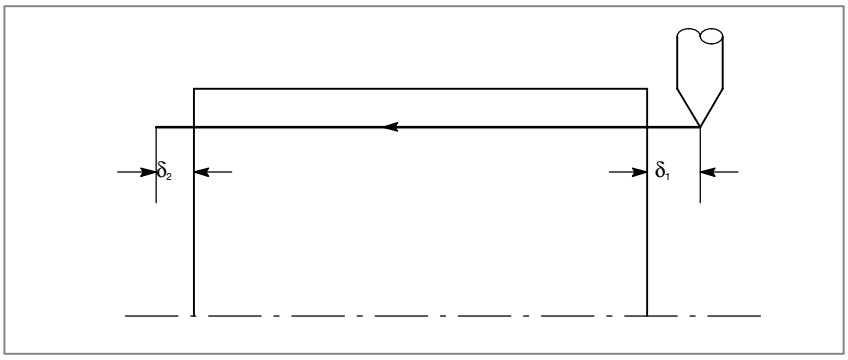

Fig. D.2 (a) Incorrect threaded portion

Explanations

- **How to determine δ_2**

$$\delta_2 = \frac{LR}{1800\,*} \quad \text{(mm)}$$

R : Spindle speed (min^{-1})
L : Thread lead (mm)

* When time constant T of the servo system is 0.033 s.

- **How to determine δ_1**

$$\delta_1 = \frac{LR}{1800\,*}(-1-ln a) \quad \text{(mm)}$$
$$= \delta_2(-1-ln a) \quad \text{(mm)}$$

R : Spindle speed (min^{-1})
L : Thread lead (mm)

* When time constant T of the servo system is 0.033 s.

Following a is a permited value of thread.

a	–1–lna
0.005	4.298
0.01	3.605
0.015	3.200
0.02	2.912

Examples

R=350min^{-1}
L=1mm
a=0.01 then

$$\delta_2 = \frac{350 \times 1}{1800} = 0.194 \quad \text{(mm)}$$

$$\delta_1 = \delta_2 \times 3.605 = 0.701 \text{ (mm)}$$

- **Reference**

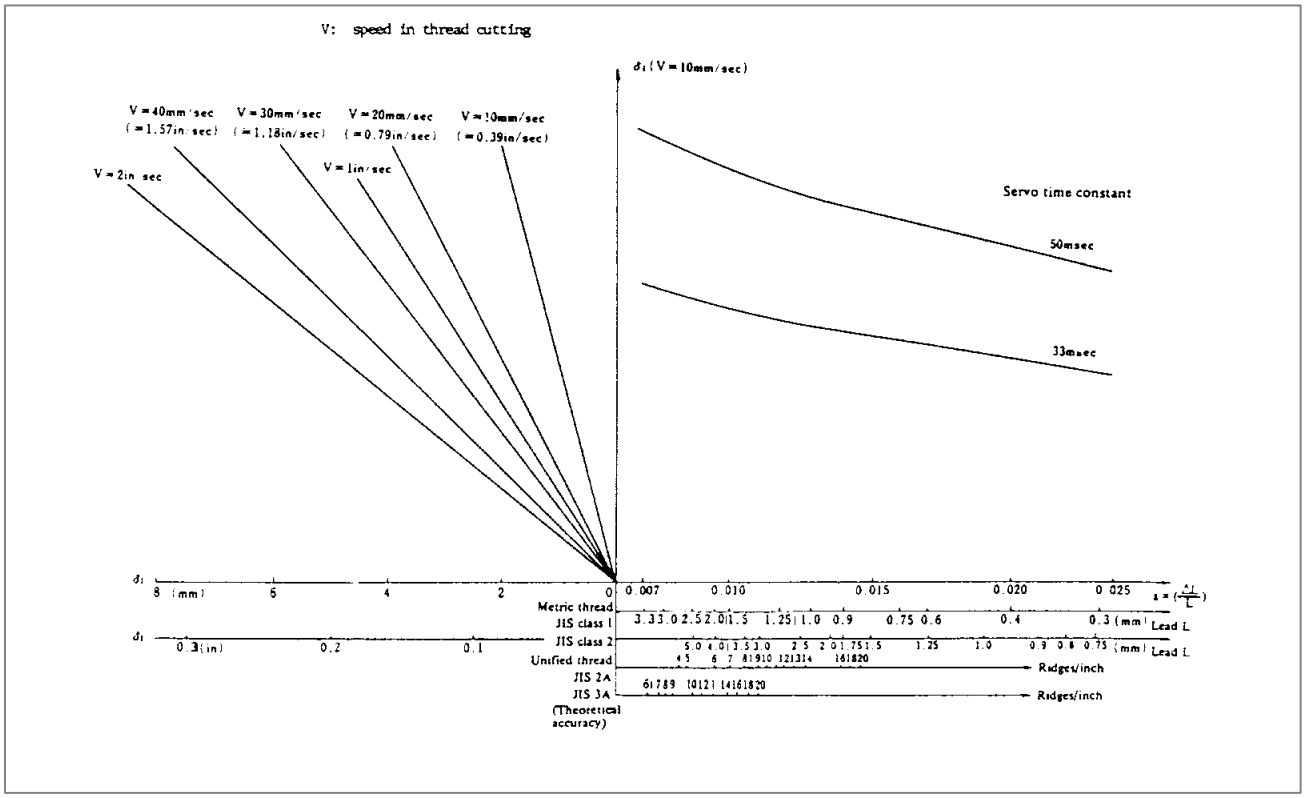

Fig D.2 (b) Nomograph for obtaining approach distance δ_1

D.3 TOOL PATH AT CORNER

When servo system delay (by exponential acceleration/deceleration at cutting or caused by the positioning system when a servo motor is used) is accompanied by cornering, a slight deviation is produced between the tool path (tool center path) and the programmed path as shown in Fig. D.3 (a).
Time constant T_1 of the exponential acceleration/deceleration is fixed to 0.

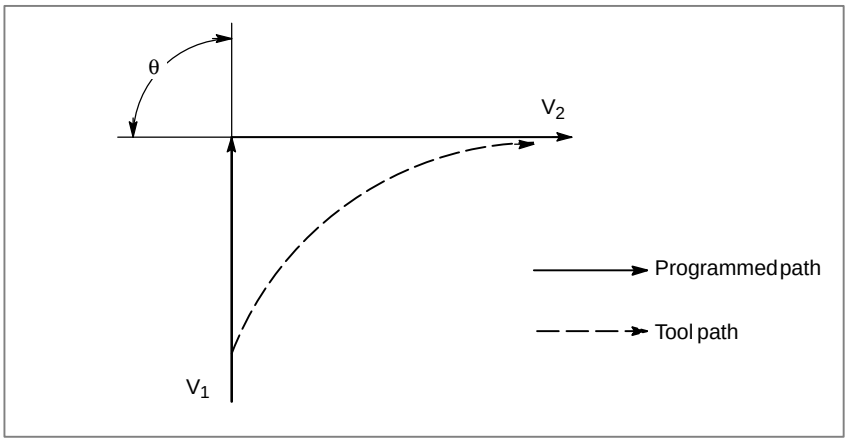

Fig. D.3 (a) Slight deviation between the tool path and the programmed path

This tool path is determined by the following parameters:

- **Feedrate (V_1, V_2)**
- **Corner angle (θ)**
- **Exponential acceleration / deceleration time constant (T_1) at cutting (T_1 = 0)**
- **Presence or absence of buffer register.**

The above parameters are used to theoretically analyze the tool path and above tool path is drawn with the parameter which is set as an example. When actually programming, the above items must be considered and programming must be performed carefully so that the shape of the workpiece is within the desired precision.
In other words, when the shape of the workpiece is not within the theoretical precision, the commands of the next block must not be read until the specified feedrate becomes zero. The dwell function is then used to stop the machine for the appropriate period.

Analysis

The tool path shown in Fig. D.3 (b) is analyzed based on the following conditions:
Feedrate is constant at both blocks before and after cornering.
The controller has a buffer register. (The error differs with the reading speed of the tape reader, number of characters of the next block, etc.)

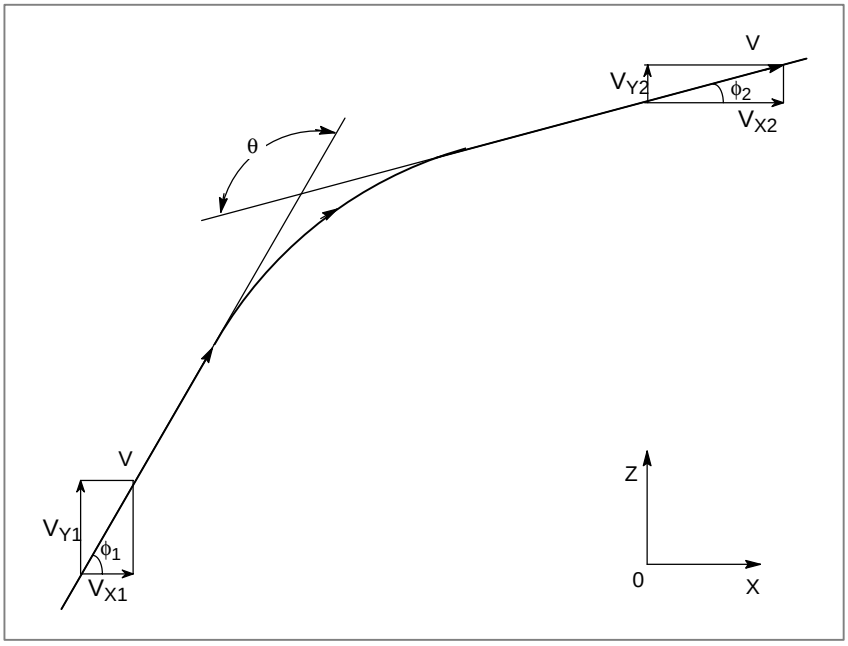

Fig. D.3(b) Example of tool path

• Description of conditions and symbols

$$V_{X1} = V\cos\phi_1$$

$$V_{Y1} = V\sin\phi_1$$

$$V_{X2} = V\cos\phi_2$$

$$V_{Y2} = V\sin\phi_2$$

V : Feedrate at both blocks before and after cornering
V_{X1} : X–axis component of feedrate of preceding block
V_{Y1} : Y–axis component of feedrate of preceding block
V_{X2} : X–axis component of feedrate of following block
V_{Y2} : Y–axis component of feedrate of following block
θ : Corner angle
ϕ_1 : Angle formed by specified path direction of preceding block and X–axis
ϕ_2 : Angle formed by specified path direction of following block and X–axis

- **Initial value calculation**

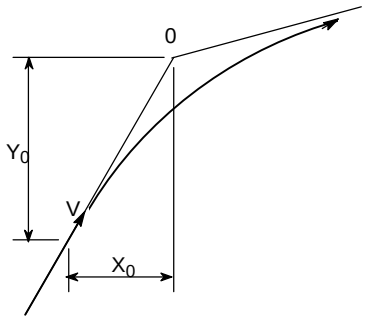

Fig. D.3(c) Initial value

The initial value when cornering begins, that is, the X and Y coordinates at the end of command distribution by the controller, is determined by the feedrate and the positioning system time constant of the servo motor.

$$X_0 = V_{X1}(T_1 + T_2)$$

$$Y_0 = V_{Y1}(T_1 + T_2)$$

T_1:Exponential acceleration / deceleration time constant. (T=0)
T_2:Time constant of positioning system (Inverse of position loop gain)

- **Analysis of corner tool path**

The equations below represent the feedrate for the corner section in X–axis direction and Y–axis direction.

$$V_X(t) = (V_{X2}-V_{X1})[1-\frac{V_{X1}}{T_1-T_2}\{T_1\exp(-\frac{t}{T_1})-T_2\exp(-\frac{t}{T_2})\} + V_{X1}]$$
$$= V_{X2}[1-\frac{V_{X1}}{T_1-T_2}\{T_1\exp(-\frac{t}{T_1})-T_2\exp(-\frac{t}{T_2})\}]$$

$$V_Y(t) = \frac{V_{Y1}-V_{Y2}}{T_1-T_2}\{T_1\exp(-\frac{t}{T_1})-T_2\exp(-\frac{t}{T_2})\} + V_{Y2}$$

Therefore, the coordinates of the tool path at time *t* are calculated from the following equations:

$$X(t) = \int_0^t V_X(t)dt-X_0$$
$$= \frac{V_{X2}-V_{X1}}{T_1-T_2}\{T_1^{\,2}\exp(-\frac{t}{T_1})-T_2^{\,2}\exp(-\frac{t}{T_2})\}-V_{X2}(T_1 + T_2-t)$$

$$Y(t) = \int_0^t V_Y(t)dt-Y_0$$
$$= \frac{V_{Y2}-V_{Y1}}{T_1-T_2}\{T_1^{\,2}\exp(-\frac{t}{T_1})-T_2^{\,2}\exp(-\frac{t}{T_2})\}-V_{Y2}(T_1 + T_2-t)$$

D.4 RADIUS DIRECTION ERROR AT CIRCLE CUTTING

When a servo motor is used, the positioning system causes an error between input commands and output results. Since the tool advances along the specified segment, an error is not produced in linear interpolation. In circular interpolation, however, radial errors may be produced, sepecially for circular cutting at high speeds.
This error can be obtained as follows:

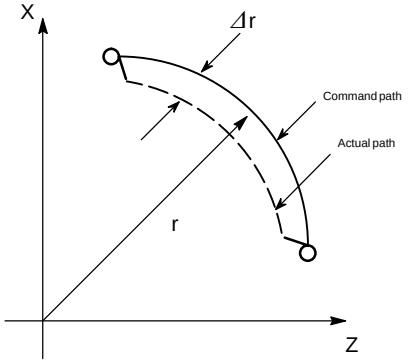

$$\Delta r = \frac{1}{2}(T_1^{\,2} + T_2^{\,2}(1 - \alpha^2))\frac{V^2}{r} \quad \cdots\cdots\cdots \quad (1)$$

Δr : Maximum radius error (mm)
v : Feedrate (mm/s)
r : Circle radius (mm)
T_1 : Exponential acceleration/deceleration time constant (sec) at cutting (T=0)
T_2 : Time constant of positoning system (sec). (Inverse of positon loop gain)
α : Feed forward coefficient (%)

In the case of bell–shaped acceleration/deceleration and linear acceleration/deceleration after cutting feed interpolation, an approximation of this radius error can be obtained with the following expression:

Linear acceleration/deceleration after cutting feed interpolation

$$\Delta r = \left(\frac{1}{24}T_1^{\,2} + \frac{1}{2}T_2^{\,2}(1 - \alpha^2)\right)\frac{V^2}{r}$$

Bell–shaped acceleration/deceleration after cutting feed interpolation

$$\Delta r = \left(\frac{1}{48}T_1^{\,2} + \frac{1}{2}T_2^{\,2}(1 - \alpha^2)\right)\frac{V^2}{r}$$

Thus, the radius error in the case of bell–shaped acceleration/deceleration and linear acceleration/deceleration after interpolation is smaller than in case of exponential acceleration/deceleration by a factor of 12, excluding any error caused by a servo loop time constant.

Since the machining radius r (mm) and allowable error Δr (mm) of the workpiece is given in actual machining, the allowable limit feedrate v (mm /sec) is determined by equation (1).
Since the acceleration/deceleration time constant at cutting which is set by this equipment varies with the machine tool, refer to the manual issued by the machine tool builder.

E STATUS WHEN TURNING POWER ON, WHEN CLEAR AND WHEN RESET

Parameter CLR (No. 3402#6) is used to select whether resetting the CNC places it in the cleared state or in the reset state (0: reset state/1: cleared state).
The symbols in the tables below mean the following :
○:The status is not changed or the movement is continued.
×:The status is cancelled or the movement is interrupted.

Item		When turning power on	Cleared	Reset
Setting data	Offset value	○	○	○
	Data set by the MDI setting operation	○	○	○
	Parameter	○	○	○
Various data	Programs in memory	○	○	○
	Contents in the buffer storage	×	×	○ : MDI mode × : Other mode
	Display of sequence number	○	○ (Note 1)	○ (Note 1)
	One shot G code	×	×	×
	Modal G code	Initial G codes. (The G20 and G21 codes return to the same state they were in when the power was last turned off.)	Initial G codes. (G20/G21 are not changed.)	○
	F	Zero	Zero	○
	S, T, M	×	○	○
	K (Number of repeats)	×	×	×
Work coordinate value		Zero	○	○

Item		When turning power on	Cleared	Reset
Action in operation	Movement	×	×	×
	Dwell	×	×	×
	Issuance of M, S and T codes	×	×	×
	Tool length compensation	×	Depending on parameter LVK(No.5003#6)	○ : MDI mode Other modes depend on parameter LVK(No.5003#6).
	Cutter compensation	×	×	○ : MDI mode × : Other modes
	Storing called subprogram number	×	× (Note 2)	○ : MDI mode × : Other modes (Note 2)
Output signals	CNC alarm signal AL	Extinguish if there is no cause for the alarm	Extinguish if there is no cause for the alarm	Extinguish if there is no cause for the alarm
	Reference position return completion LED	×	○ (× : Emergency stop)	○ (× : Emergency stop)
	S, T and B codes	×	○	○
	M code	×	×	×
	M, S and T strobe signals	×	×	×
	Spindle revolution signal (S analog signal)	×	○	○
	CNC ready signal MA	ON	○	○
	Servo ready signal SA	ON (When other than servo alarm)	ON (When other than servo alarm)	ON (When other than servo alarm)
	Cycle start LED (STL)	×	×	×
	Feed hold LED (SPL)	×	×	×

NOTE
1 When heading is performed, the main program number is displayed.
2 When a reset is performed during execution of a subprogram, control returns the head of main program.
Execution cannot be started from the middle of the subprogram.

F CHARACTER–TO–CODES CORRESPONDENCE TABLE

Char-acter	Code	Comment	Char-acter	Code	Comment
A	065		6	054	
B	066		7	055	
C	067		8	056	
D	068		9	057	
E	069			032	Space
F	070		!	033	Exclamation mark
G	071		”	034	Quotation mark
H	072		#	035	Hash sign
I	073		$	036	Dollar sign
J	074		%	037	Percent
K	075		&	038	Ampersand
L	076		’	039	Apostrophe
M	077		(	040	Left parenthesis
N	078		)	041	Right parenthesis
O	079		*	042	Asterisk
P	080		+	043	Plus sign
Q	081		,	044	Comma
R	082		–	045	Minus sign
S	083		.	046	Period
T	084		/	047	Slash
U	085		:	058	Colon
V	086		;	059	Semicolon
W	087		<	060	Left angle bracket
X	088		=	061	Equal sign
Y	089		>	062	Right angle bracket
Z	090		?	063	Question mark
0	048		@	064	HAtI mark
1	049		[	091	Left square bracket
2	050		^	092	
3	051		]	094	Right square bracket
4	052		_	095	Underscore
5	053				

G ALARM LIST

1) Program errors (P/S alarm)

Number	Message	Contents
000	PLEASE TURN OFF POWER	A parameter which requires the power off was input, turn off power.
001	TH PARITY ALARM	TH alarm (A character with incorrect parity was input). Correct the tape.
002	TV PARITY ALARM	TV alarm (The number of characters in a block is odd). This alarm will be generated only when the TV check is effective.
003	TOO MANY DIGITS	Data exceeding the maximum allowable number of digits was input. (Refer to the item of max. programmable dimensions.)
004	ADDRESS NOT FOUND	A numeral or the sign " – " was input without an address at the beginning of a block. Modify the program .
005	NO DATA AFTER ADDRESS	The address was not followed by the appropriate data but was followed by another address or EOB code. Modify the program.
006	ILLEGAL USE OF NEGATIVE SIGN	Sign " ." input error (Sign " – " was input after an address with which it cannot be used. Or two or more " – " signs were input.) Modify the program.
007	ILLEGAL USE OF DECIMAL POINT	Decimal point " – " input error (A decimal point was input after an address with which it can not be used. Or two decimal points were input.) Modify the program.
009	ILLEGAL ADDRESS INPUT	Unusable character was input in significant area. Modify the program.
010	IMPROPER G–CODE	An unusable G code or G code corresponding to the function not provided is specified. Modify the program.
011	NO FEEDRATE COMMANDED	Feedrate was not commanded to a cutting feed or the feedrate was inadequate. Modify the program.
014	CAN NOT COMMAND G95	A synchronous feed is specified without the option for threading / synchronous feed.
015	TOO MANY AXES COMMANDED	The number of the commanded axes exceeded that of simultaneously controlled axes.
020	OVER TOLERANCE OF RADIUS	In circular interpolation (G02 or G03), difference of the distance between the start point and the center of an arc and that between the end point and the center of the arc exceeded the value specified in parameter No. 3410.
021	ILLEGAL PLANE AXIS COMMANDED	An axis not included in the selected plane (by using G17, G18, G19) was commanded in circular interpolation. Modify the program.
022	NO CIRCULAR RADIUS	When circular interpolation is specified, neither R (specifying an arc radius), nor I, J, and K (specifying the distance from a start point to the center) is specified.
025	CANNOT COMMAND F0 IN G02/G03	F0 (fast feed) was instructed by F1 –digit column feed in circular interpolation. Modify the program.
027	NO AXES COMMANDED IN G43/G44	No axis is specified in G43 and G44 blocks for the tool length offset type C. Offset is not canceled but another axis is offset for the tool length offset type C. Modify the program.
028	ILLEGAL PLANE SELECT	In the plane selection command, two or more axes in the same direction are commanded. Modify the program.

Number	Message	Contents
029	ILLEGAL OFFSET VALUE	The offset values specified by H code is too large. Modify the program.
030	ILLEGAL OFFSET NUMBER	The offset number specified by D/H code for tool length offset or cutter compensation is too large. Modify the program.
031	ILLEGAL P COMMAND IN G10	In setting an offset amount by G10, the offset number following address P was excessive or it was not specified. Alternatively, the additional work coordinate number to be specified in a P code was too large. Modify the program.
032	ILLEGAL OFFSET VALUE IN G10	In setting an offset amount by G10 or in writing an offset amount by system variables, the offset amount was excessive.
033	NO SOLUTION AT CRC	A point of intersection cannot be determined for cutter compensation C. Modify the program.
034	NO CIRC ALLOWED IN ST–UP /EXT BLK	The start up or cancel was going to be performed in the G02 or G03 mode in cutter compensation C. Modify the program.
036	CAN NOT COMMANDED G31	Skip cutting (G31) was specified in cutter compensation mode. Modify the program.
037	CAN NOT CHANGE PLANE IN CRC	G40 is commanded on the plane other than offset plane in cutter compensation B. The plane selected by using G17, G18 or G19 is changed in cutter compensation C mode. Modify the program.
038	INTERFERENCE IN CIRCULAR BLOCK	Overcutting will occur in cutter compensation C because the arc start point or end point coincides with the arc center. Modify the program.
041	INTERFERENCE IN CRC	Overcutting will occur in cutter compensation C. Two or more blocks are consecutively specified in which functions such as the auxiliary function and dwell functions are performed without movement in the cutter compensation mode. Modify the program.
042	G45/G48 NOT ALLOWED IN CRC	Tool offset (G45 to G48) is commanded in cutter compensation. Modify the program.
044	G27–G30 NOT ALLOWED IN FIXED CYC	One of G27 to G30 is commanded in canned cycle mode. Modify the program.
045	NO G COMMAND (G73/G83)	A depth for each cutting (Q) is not commanded in canned cycle G73 or G83. Alternatively, Q was specified. Correct the program.
046	ILLEGAL REFERENCE RETURN COMMAND	Other than P2, P3 and P4 are commanded for 2nd, 3rd and 4th reference position return command.
050	CHF/CNR NOT ALLOWED IN THRD BLK	Chamfering or corner R is commanded in the thread cutting block. Modify the program.
051	MISSING MOVE AFTER CHF/CNR	Improper movement or the move distance was specified in the block next to the chamfering or corner R block. Modify the program.
052	CODE IS NOT G01 AFTER CHF/ CNR	The block next to the chamfering or corner R block is not G01,G02,or G03. Modify the program.
053	TOO MANY ADDRESS COMMANDS	For systems without the arbitary angle chamfering or corner R cutting, a comma was specified. For systems with this feature, a comma was followed by something other than R or C Correct the program.
055	MISSING MOVE VALUE IN CHF/ CNR	In the arbitrary angle chamfering or corner R block, the move distance is less than chamfer or corner R amount.
058	END POINT NOT FOUND	In a arbitrary angle chamfering or corner R cutting block, a specified axis is not in the selected plane. Correct the program.
059	PROGRAM NUMBER NOT FOUND	In an external program number search or external workpiece number search, a specified program number was not found. Otherwise, a program specified for searching is being edited in background processing. Otherwise, a program specified by an one–touch macro call is not registered in memory. Check the program number and external signal. Or discontinue the background editing.

Number	Message	Contents
060	SEQUENCE NUMBER NOT FOUND	Commanded sequence number was not found in the sequence number search. Check the sequence number.
070	NO PROGRAM SPACE IN MEMORY	The memory area is insufficient. Delete any unnecessary programs, then retry.
071	DATA NOT FOUND	The address to be searched was not found. Or the program with specified program number was not found in program number search. Check the data.
072	TOO MANY PROGRAMS	The number of programs to be stored exceeded 63 (basic), 125 (option), 200 (option), or 400 (option). Delete unnecessary programs and execute program registeration again.
073	PROGRAM NUMBER ALREADY IN USE	The commanded program number has already been used. Change the program number or delete unnecessary programs and execute program registeration again.
074	ILLEGAL PROGRAM NUMBER	The program number is other than 1 to 9999. Modify the program number.
075	PROTECT	An attempt was made to register a program whose number was protected.
076	ADDRESS P NOT DEFINED	Address P (program number) was not commanded in the block which includes an M98, G65, or G66 command. Modify the program.
077	SUB PROGRAM NESTING ERROR	The subprogram was called in five folds. Modify the program.
078	NUMBER NOT FOUND	A program number or a sequence number which was specified by address P in the block which includes an M98, M99, M65 or G66 was not found. The sequence number specified by a GOTO statement was not found. Otherwise, a called program is being edited in background processing. Correct the program, or discontinue the background editing.
079	PROGRAM VERIFY ERROR	In memory or program collation,a program in memory does not agree with that read from an external I/O device. Check both the programs in memory and those from the external device.
080	G37 ARRIVAL SIGNAL NOT ASSERTED	In the automatic tool length measurement function (G37), the measurement position reach signal (XAE, YAE, or ZAE) is not turned on within an area specified in parameter 6254 (value ε). This is due to a setting or operator error.
081	OFFSET NUMBER NOT FOUND IN G37	Tool length automatic measurement (G37) was specified without a H code. (Automatic tool length measurement function) Modify the program.
082	H–CODE NOT ALLOWED IN G37	H code and automatic tool compensation (G37) were specified in the same block. (Automatic tool length measurement function) Modify the program.
083	ILLEGAL AXIS COMMAND IN G37	In automatic tool length measurement, an invalid axis was specified or the command is incremental. Modify the program.
085	COMMUNICATION ERROR	When entering data in the memory by using Reader / Puncher interface, an overrun, parity or framing error was generated. The number of bits of input data or setting of baud rate or specification No. of I/O unit is incorrect.
086	DR SIGNAL OFF	When entering data in the memory by using Reader / Puncher interface, the ready signal (DR) of reader / puncher was off. Power supply of I/O unit is off or cable is not connected or a P.C.B. is defective.
087	BUFFER OVERFLOW	When entering data in the memory by using Reader / Puncher interface, though the read terminate command is specified, input is not interrupted after 10 characters read. I/O unit or P.C.B. is defective.

Number	Message	Contents
090	REFERENCE RETURN INCOMPLETE	The reference position return cannot be performed normally because the reference position return start point is too close to the reference position or the speed is too slow. Separate the start point far enough from the reference position, or specify a sufficiently fast speed for reference position return.
091	REFERENCE RETURN INCOMPLETE	In the automatic operation halt state, manual reference position return cannot be performed.
092	AXES NOT ON THE REFERENCE POINT	The commanded axis by G27 (Reference position return check) did not return to the reference position.
094	P TYPE NOT ALLOWED (COORD CHG)	P type cannot be specified when the program is restarted. (After the automatic operation was interrupted, the coordinate system setting operation was performed.) Perform the correct operation according to th operator's manual.
095	P TYPE NOT ALLOWED (EXT OFS CHG)	P type cannot be specified when the program is restarted. (After the automatic operation was interrupted, the external workpiece offset amount changed.)
096	P TYPE NOT ALLOWED (WRK OFS CHG)	P type cannot be specified when the program is restarted. (After the automatic operation was interrupted, the workpiece offset amount changed.)
097	P TYPE NOT ALLOWED (AUTO EXEC)	P type cannot be directed when the program is restarted. (After power ON, after emergency stop or P/S alarm 94 to 97 were reset, no automatic operation is performed.) Perform automatic operation.
098	G28 FOUND IN SEQUENCE RETURN	A command of the program restart was specified without the reference position return operation after power ON or emergency stop, and G28 was found during search. Perform the reference position return.
099	MDI EXEC NOT ALLOWED AFT. SEARCH	After completion of search in program restart, a move command is given with MDI.
100	PARAMETER WRITE ENABLE	On the PARAMETER(SETTING) screen, PWE(parameter writing enabled) is set to 1. Set it to 0, then reset the system.
101	PLEASE CLEAR MEMORY	The power turned off while rewriting the memory by program edit operation. If this alarm has occurred, press <RESET> while pressing <PROG>, and only the program being edited will be deleted. Register the deleted program.
109	FORMAT ERROR IN G08	A value other than 0 or 1 was specified after P in the G08 code, or no value was specified.
110	DATA OVERFLOW	The absolute value of fixed decimal point display data exceeds the allowable range. Modify the program.
111	CALCULATED DATA OVERFLOW	The result of calculation is out of the allowable range (-10^{47} to -10^{-29}, 0, and 10^{-29} to 10^{47}).
112	DIVIDED BY ZERO	Division by zero was specified. (including tan 90°)
113	IMPROPER COMMAND	A function which cannot be used in custom macro is commanded. Modify the program.
114	FORMAT ERROR IN MACRO	There is an error in other formats than <Formula>. Modify the program.
115	ILLEGAL VARIABLE NUMBER	A value not defined as a variable number is designated in the custom macro. Modify the program.
116	WRITE PROTECTED VARIABLE	The left side of substitution statement is a variable whose substitution is inhibited. Modify the program.
118	PARENTHESIS NESTING ERROR	The nesting of bracket exceeds the upper limit (quintuple). Modify the program.
119	ILLEGAL ARGUMENT	The SQRT argument is negative, BCD argument is negative, or other values than 0 to 9 are present on each line of BIN argument. Modify the program.

Number	Message	Contents
122	QUADRUPLICATE MACRO MODAL–CALL	A total of four macro calls and macro modal calls are nested. Correct the program.
123	CAN NOT USE MACRO COMMAND IN DNC	Macro control command is used during DNC operation. Modify the program.
124	MISSING END STATEMENT	DO – END does not correspond to 1 : 1. Modify the program.
125	FORMAT ERROR IN MACRO	<Formula> format is erroneous. Modify the program.
126	ILLEGAL LOOP NUMBER	In DOn, 1≦ n ≦3 is not established. Modify the program.
127	NC, MACRO STATEMENT IN SAME BLOCK	NC and custom macro commands coexist. Modify the program.
128	ILLEGAL MACRO SEQUENCE NUMBER	The sequence number specified in the branch command was not 0 to 9999. Or, it cannot be searched. Modify the program.
129	ILLEGAL ARGUMENT ADDRESS	An address which is not allowed in <Argument Designation > is used. Modify the program.
130	ILLEGAL AXIS OPERATION	An axis control command was given by PMC to an axis controlled by CNC. Or an axis control command was given by CNC to an axis controlled by PMC. Modify the program.
131	TOO MANY EXTERNAL ALARM MESSAGES	Five or more alarms have generated in external alarm message. Consult the PMC ladder diagram to find the cause.
132	ALARM NUMBER NOT FOUND	No alarm No. concerned exists in external alarm message clear. Check the PMC ladder diagram.
133	ILLEGAL DATA IN EXT. ALARM MSG	Small section data is erroneous in external alarm message or external operator message. Check the PMC ladder diagram.
135	ILLEGAL ANGLE COMMAND	The index table indexing positioning angle was instructed in other than an integral multiple of the value of the minimum angle. Modify the program.
136	ILLEGAL AXIS COMMAND	In index table indexing, another control axis was instructed together with the B axis. Modify the program.
139	CAN NOT CHANGE PMC CONTROL AXIS	An axis is selected in commanding by PMC axis control. Modify the program.
141	CAN NOT COMMAND G51 IN CRC	G51 (Scaling ON) is commanded in the tool offset mode. Modify the program.
142	ILLEGAL SCALE RATE	Scaling magnification is commanded in other than 1 – 999999. Correct the scaling magnification setting (G51 Pp . . or parameter 5411 or 5421).
143	SCALED MOTION DATA OVERFLOW	The scaling results, move distance, coordinate value and circular radius exceed the maximum command value. Correct the program or scaling mangification.
144	ILLEGAL PLANE SELECTED	The coordinate rotation plane and arc or cutter compensation C plane must be the same. Modify the program.
148	ILLEGAL SETTING DATA	Automatic corner override deceleration rate is out of the settable range of judgement angle. Modify the parameters (No.1710 to No.1714)
149	FORMAT ERROR IN G10L3	A code other than Q1,Q2,P1 or P2 was specified as the life count type in the extended tool life management.
150	ILLEGAL TOOL GROUP NUMBER	Tool Group No. exceeds the maximum allowable value. Modify the program.
151	TOOL GROUP NUMBER NOT FOUND	The tool group commanded in the machining program is not set. Modify the value of program or parameter.
152	NO SPACE FOR TOOL ENTRY	The number of tools within one group exceeds the maximum value registerable. Modify the number of tools.

Number	Message	Contents
153	T–CODE NOT FOUND	In the registration of tool life data, a T code was not specified in a block where it is required. Alternatively, only M06 was specified in a block for tool change type D. Correct the program.
154	NOT USING TOOL IN LIFE GROUP	When the group is not commanded, H99 or D99 was commanded. Correct the program.
155	ILLEGAL T–CODE IN M06	In the machining program, M06 and T code in the same block do not correspond to the group in use. Correct the program.
156	P/L COMMAND NOT FOUND	P and L commands are missing at the head of program in which the tool group is set. Correct the program.
157	TOO MANY TOOL GROUPS	The number of tool groups to be set exceeds the maximum allowable value. See parameter GS1, GS2 (No. 6800 bit 0 and 1). Modify the program.
158	ILLEGAL TOOL LIFE DATA	The tool life to be set is too excessive. Modify the setting value.
159	TOOL DATA SETTING INCOMPLETE	During executing a life data setting program, power was turned off. Set again.
175	ILLEGAL G107 COMMAND	Conditions when performing cylindrical interpolation start or cancel not correct. To change the mode to the cylindrical interpolation mode, specify the command in a format of “G07.1 rotation–axis name radius of cylinder.”
176	IMPROPER G–CODE IN G107	Any of the following G codes which cannot be specified in the cylindrical interpolation mode was specified. 1) G codes for positioning, such as G28,, G73, G74, G76, G81 – G89, including the codes specifying the rapid traverse cycle 2) G codes for setting a coordinate system: G52,G92, 3) G code for selecting coordinate system: G53 G54–G59 Modify the program.
177	CHECK SUM ERROR (G05 MODE)	Check sum error Modify the program.
178	G05 COMMANDED IN G41/G42 MODE	G05 was commanded in the G41/G42 mode. Correct the program.
179	PARAM. (PRM NO. 7510) SETTING ERROR	The number of controlled axes set by the parameter 7510 exceeds the maximum number. Modify the parameter setting value.
180	COMMUNICATION ERROR (REMOTE BUF)	Remote buffer connection alarm has generated. Confirm the number of cables, parameters and I/O device.
190	ILLEGAL AXIS SELECT	In the constant surface speed control, the axis specification is wrong. (See parameter No. 3770.) The specified axis command (P) contains an illegal value. Correct the program.
194	SPINDLE COMMAND IN SYNCHRO–MODE	A contour control mode, spindle positioning (Cs–axis control) mode, or rigid tapping mode was specified during the serial spindle synchronous control mode. Correct the program so that the serial spindle synchronous control mode is released in advance.
197	C–AXIS COMMANDED IN SPINDLE MODE	The program specified a movement along the Cs–axis when the signal CON(DGN=G027#7) was off. Correct the program, or consult the PMC ladder diagram to find the reason the signal is not turned on.
199	MACRO WORD UNDEFINED	Undefined macro word was used. Modify the custom macro.
200	ILLEGAL S CODE COMMAND	In the rigid tap, an S value is out of the range or is not specified. The maximum value for S which can be specified in rigid tapping is set in parameter (No.5241 to 5243). Change the setting in the parameter or modify the program.
201	FEEDRATE NOT FOUND IN RIGID TAP	In the rigid tapping, no F value is specified. Correct the program.
202	POSITION LSI OVERFLOW	In the rigid tapping, spindle distribution value is too large.

Number	Message	Contents
203	PROGRAM MISS AT RIGID TAPPING	In the rigid tapping, position for a rigid M code (M29) or an S command is incorrect. Modify the program.
204	ILLEGAL AXIS OPERATION	In the rigid tapping, an axis movement is specified between the rigid M code (M29) block and G84 (G74) block. Modify the program.
205	RIGID MODE DI SIGNAL OFF	Rigid tapping signal (DGNG061 #1) is not 1 when G84 (G88) is executed though the rigid M code (M29) is specified. Consult the PMC ladder diagram to find the reason the signal is not turned on.
206	CAN NOT CHANGE PLANE (RIGID TAP)	Plane changeover was instructed in the rigid mode. Correct the program.
207	RIGID DATA MISMATCH	The specified distance was too short or too long in rigid tapping.
210	CAN NOT COMAND M198/M99	1) M198 and M99 are executed in the schedule operation. Or M198 is executed in the DNC operation. 2) In a multiple repetitive pocketing canned cycle, an interrupt macro was specified, and M99 was executed.
212	ILLEGAL PLANE SELECT	The arbitrary angle chamfering or a corner R is commanded or the plane including an additional axis. Correct the program.
213	ILLEGAL COMMAND IN SYNCHRO–MODE	Any of the following alarms occurred in the operation with the simple synchronization control. 1) The program issued the move command to the slave axis. 2) The program issued the manual continuous feed/manual handle feed/incremental feed command to the slave axis. 3) The program issued the automatic reference position return command without executing the manual reference position return after the power was turned on. 4) The difference between the position error amount of the master and slave axes exceeded the value specified in parameter No. 8313.
214	ILLEGAL COMMAND IN SYNCHRO–MODE	Coordinate system is set or tool compensation of the shift type is executed in the synchronous control. Correct the program.
224	RETURN TO REFERENCE POINT	Reference position return has not been performed before the automatic operation starts. Perform reference position return only when parameter ZRN_X (No.1005#0) is 0.
231	ILLEGAL FORMAT IN G10 OR L50	Any of the following errors occurred in the specified format at the programmable–parameter input. 1) Address N or R was not entered. 2) A number not specified for a parameter was entered. 3) The axis number was too large. 4) An axis number was not specified in the axis–type parameter. 5) An axis number was specified in the parameter which is not an axis type. 6) An attempt was made to reset bit 4 of parameter 3202 (NE9) or change parameter 3210 (PSSWD) when they are protected by a password. Correct the program.
232	TOO MANY HELICAL AXIS COMMANDS	Three or more axes (in the normal direction control mode two or more axes) were specified as helical axes in the helical interpolation mode.
233	DEVICE BUSY	When an attempt was made to use a unit such as that connected via the RS–232–C interface, other users were using it.
239	BP/S ALARM	While punching was being performed with the function for controlling external I/O units ,background editing was performed.
240	BP/S ALARM	Background editing was performed during MDI operation.
253	G05 IS NOT AVAIRABLE	Binary–input operation with a high–speed remote buffer (G05) or high–speed cycle machining (G05) has been specified in look–ahead control mode (G08P1). Before attempting to specify these commands, first specify G08P0; to cancel look–ahead control mode.

Number	Message	Contents
5010	END OF RECORD	The end of record (%) was specified.
5020	PARAMETER OF RESTART ERROR	The parameter for specifying program restart is not set correctly.
5046	ILLEGAL PARAMETER (ST.COMP)	An illegal parameter has been specified for straightness compensation. Possible reasons are as follows: 1 There is no axis corresponding to the axis number specified in the move axis or compensation axis parameter. 2 More than 128 pitch error compensation points are not sequentially numbered. 3 The straightness compensation points are not sequentially numbered. 4 A specified straightness compensation point is outside the range between the pitch error compensation points having the maximum positive and negative coordinates. 5 The compensation value specified for each compensation point is too large or too small.
5073	NO DECIMAL POINT	A decimal point is not specified for a command for which a decimal point must be specified.
5074	ADDRESS DUPLICATION ERROR	The same address appears more than once in a block. Alternatively, a block contains two or more G codes belonging to the same group.
5110	IMPROPER G–CODE (G05.1 Q1 MODE)	An illegal G code was specified in AI look–ahead control mode.
5111	IMPROPER MODAL G–CODE (G05.1 Q1)	An illegal G code is left modal when AI look–ahead control mode was specified.
5112	G08 CAN NOT BE COMMANDED (G05.1 Q1)	Look–ahead control (G08) was specified in AI look–ahead control mode.
5114	NOT STOP POSITION (G05.1 Q1)	At the time of restart after manual intervention, the coordinates at which the manual intervention occurred have not been restored.
5134	FSSB : OPEN READY TIME OUT	The FSSB did not become ready to open during initialization.
5135	FSSB : ERROR MODE	The FSSB entered an error mode.
5136	FSSB : NUMBER OF AMPS IS SMALL	The number of amplifiers recognized by the FSSB is insufficient, compared with the number of controlled axes.
5137	FSSB : CONFIGURATION ERROR	The FSSB detected a configuration error.
5138	FSSB : AXIS SETTING NOT COMPLETE	Axis setting has not been performed in automatic setting mode. Perform axis setting using the FSSB setting screen.
5139	FSSB : ERROR	Servo initialization did not terminate normally. The optical cable may be defective, or there may be an error in connection to the amplifier or another module. Check the optical cable and the connection status.
5156	ILLEGAL AXIS OPERATION (AICC)	In AI look–ahead control mode, the controlled axis selection signal (PMC axis control) changes. In AI look–ahead control mode, the simple synchronous axis selection signal changes.
5157	PARAMETER ZERO (AICC)	Zero is set in the parameter for the maximum cutting feedrate (parameter No. 1422 or 1432). Zero is set in the parameter for the acceleration/deceleration before interpolation (parameter No. 1770 or 1771).
5197	FSSB : OPEN TIME OUT	The FSSB did not open when the CNC had allowed the FSSB to open.
5198	FSSB : ID DATA NOT READ	The initial ID information for the amplifier cannot be read because of a failure in the temporary assignment.

Number	Message	Contents
5212	SCREEN COPY : PARAMETER ERROR	There is a parameter setting error. Check that 4 is set as the I/O channel (parameter No.0020).
5213	SCREEN COPY : COMMUNICATION ERROR	The memory card cannot be used. Check the memory card. (Check whether the memory card is write–protected or defective.)
5214	SCREEN COPY : DATA TRANSFER ERROR	Data transfer to the memory card failed. Check whether the memory card space is insufficient and whether the memory card was removed during data transfer.
5220	REFERENCE POINT ADJUSTMENT MODE	A parameter for automatically set a reference position is set. (Bit 2 of parameter No. 1819 = 1) Perform automatic setting. (Position the machine at the reference position manually, then perform manual reference position return.) Supplementary: Automatic setting sets bit 2 of parameter No. 1819 to 0.
5222	SRAM CORRECTABLE ERROR	The SRAM correctable error cannot be corrected. Cause: A memory problem occurred during memory initialization. Action: Replace the master printed circuit board (SRAM module).
5227	FILE NOT FOUND	A specified file is not found during communication with the built–in Handy File.
5228	SAME NAME USED	There are duplicate file names in the built–in Handy File.
5229	WRITE PROTECTED	A floppy disk in the built–in Handy File is write protected.
5231	TOO MANY FILES	The number of files exceeds the limit during communication with the built–in Handy File.
5232	DATA OVER–FLOW	There is not enough floppy disk space in the built–in Handy File.
5235	COMMUNICATION ERROR	A communication error occurred during communication with the built–in Handy File.
5237	READ ERROR	A floppy disk in the built–in Handy File cannot be read from. The floppy disk may be defective, or the head may be dirty. Alternatively, the Handy File is defective.
5238	WRITE ERROR	A floppy disk in the built–in Handy File cannot be written to. The floppy disk may be defective, or the head may be dirty. Alternatively, the Handy File is defective.
5257	G41/G42 NOT ALLOWED IN MDI MODE	G41/G42 (cutter compensation C: M series, tool–nose radius compensation: T series) was specified in MDI mode. (Depending on the setting of bit 4 of parameter No. 5008)
5303	TOUCH PANEL ERROR	A touch panel error occurred. Cause: 1. The touch panel is kept pressed. 2. The touch panel was pressed when power was turned on. Remove the above causes, and turn on the power again.
5306	MODE CHANGE ERROR	In an one–touch macro call, the mode is not normally switched at the beginning.
5311	FSSB : ILLEGAL CONNECTION	1. This alarm is issued if, in a pair of axes in which one axis has an odd servo axis number (parameter No. 1023) and the other has an even servo axis number that is adjacent to the odd servo axis number, one of the axes is assigned to an amplifier connected to an FSSB in a system different from that for the other axis. 2. This alarm is issued if the system does not satisfy a constraint for performing high–speed HRV control, current control periods for two FSSBs are different, and it is specified that pulse modules connected to an FSSB in different paths are to be used.

2) Background edit alarm

Number	Message	Contents
???	BP/S alarm	BP/S alarm occurs in the same number as the P/S alarm that occurs in ordinary program edit. (P/S alarm No. 070, 071, 072, 073, 074, 085 to 087) Modify the program.
140	BP/S alarm	It was attempted to select or delete in the background a program being selected in the foreground. **(Note)** Use background editing correctly.

NOTE
Alarm in background edit is displayed in the key input line of the background edit screen instead of the ordinary alarm screen and is resettable by any of the MDI key operation.

3) Absolute pulse coder (APC) alarm

Number	Message	Contents
300	nth–axis origin return	Manual reference position return is required for the nth–axis (n=1 – 4).
301	APC alarm: nth–axis communication	nth–axis (n=1 – 4) APC communication error. Failure in data transmission Possible causes include a faulty APC, cable, or servo interface module.
302	APC alarm: nth–axis over time	nth–axis (n=1 – 4) APC overtime error. Failure in data transmission. Possible causes include a faulty APC, cable, or servo interface module.
303	APC alarm: nth–axis framing	nth–axis (n=1 – 4) APC framing error. Failure in data transmission. Possible causes include a faulty APC, cable, or servo interface module.
304	APC alarm: nth–axis parity	nth–axis (n=1 – 4) APC parity error. Failure in data transmission. Possible causes include a faulty APC, cable, or servo interface module.
305	APC alarm: nth–axis pulse error	nth–axis (n=1 – 4) APC pulse error alarm. APC alarm.APC or cable may be faulty.
306	APC alarm: nth–axis battery voltage 0	nth–axis (n=1 – 4) APC battery voltage has decreased to a low level so that the data cannot be held. APC alarm. Battery or cable may be faulty.
307	APC alarm: nth–axis battery low 1	nth–axis (n=1 – 4) axis APC battery voltage reaches a level where the battery must be renewed. APC alarm. Replace the battery.
308	APC alarm: nth–axis battery low 2	nth–axis (n=1 – 4) APC battery voltage has reached a level where the battery must be renewed (including when power is OFF). APC alarm .Replace battery.
309	APC ALARM : n AXIS ZRN IMPOSSIBL	An attempt was made to perform reference position return without rotating the motor through one or more turns. Rotate the motor through one or more turns, turn off the power then on again, then perform reference position return.

4) Serial pulse coder (SPC) alarms

No.	Message	Description
360	n AXIS : ABNORMAL CHECKSUM (INT)	A checksum error occurred in the built–in pulse coder.
361	n AXIS : ABNORMAL PHASE DATA (INT)	A phase data error occurred in the built–in pulse coder.
362	n AXIS : ABNORMAL REV.DATA (INT)	A rotation speed count error occurred in the built–in pulse coder.
363	n AXIS : ABNORMAL CLOCK (INT)	A clock error occurred in the built–in pulse coder.
364	n AXIS : SOFT PHASE ALARM (INT)	The digital servo software detected invalid data in the built–in pulse coder.
365	n AXIS : BROKEN LED (INT)	An LED error occurred in the built–in pulse coder.
366	n AXIS : PULSE MISS (INT)	A pulse error occurred in the built–in pulse coder.
367	n AXIS : COUNT MISS (INT)	A count error occurred in the built–in pulse coder.
368	n AXIS : SERIAL DATA ERROR (INT)	Communication data from the built–in pulse coder cannot be received.
369	n AXIS : DATA TRANS. ERROR (INT)	A CRC or stop bit error occurred in the communication data being received from the built–in pulse coder.
380	n AXIS : BROKEN LED (EXT)	The separate detector is erroneous.
381	n AXIS : ABNORMAL PHASE (EXT LIN)	A phase data error occurred in the separate linear scale.
382	n AXIS : COUNT MISS (EXT)	A pulse error occurred in the separate detector.
383	n AXIS : PULSE MISS (EXT)	A count error occurred in the separate detector.
384	n AXIS : SOFT PHASE ALARM (EXT)	The digital servo software detected invalid data in the separate detector.
385	n AXIS : SERIAL DATA ERROR (EXT)	Communication data from the separate detector cannot be received.
386	n AXIS : DATA TRANS. ERROR (EXT)	A CRC or stop bit error occurred in the communication data being received from the separate detector.
387	n AXIS : ABNORMAL ENCODER (EXT)	An error occurs in the separate detector. For details, contact the manufacturer of the scale.

- **The details of serial pulse coder alarm**

	#7	#6	#5	#4	#3	#2	#1	#0
202		CSA	BLA	PHA	PCA	BZA	CKA	SPH

#6 (CSA) : Check sum alarm has occurred.
#5 (BLA) : Battery low alarm has occurred.
#4 (PHA) : Phase data trouble alarm has occurred.
#3 (PCA) : Speed count trouble alarm has occurred.
#2 (BZA) : Battery zero alarm has occurred.
#1 (CKA) : Clock alarm has occurred.
#0 (SPH) : Soft phase data trouble alarm has occurred.

	#7	#6	#5	#4	#3	#2	#1	#0
203	DTE	CRC	STB	PRM				

#7 (DTE) : Data error has occurred.
#6 (CRC) : CRC error has occurred.
#5 (STB) : Stop bit error has occurred.
#4 (PRM) : Parameter error alarm has occurred. In this case, a servo parameter error alarm (No. 417) is also output.

5) Servo alarms (1/2)

Number	Message	Contents
401	SERVO ALARM: n–TH AXIS VRDY OFF	The n–th axis (axis 1–8) servo amplifier READY signal (DRDY) went off.
402	SERVO ALARM: SV CARD NOT EXIST	The axis control card is not provided.
403	SERVO ALARM: CARD/SOFT MISMATCH	The combination of the axis control card and servo software is illegal. The possible causes are as follows: · A correct axis control card is not provided. · Correct servo software is not installed on flash memory.
404	SERVO ALARM: n–TH AXIS VRDY ON	Even though the n–th axis (axis 1–8) READY signal (MCON) went off, the servo amplifier READY signal (DRDY) is still on. Or, when the power was turned on, DRDY went on even though MCON was off. Check that the servo interface module and servo amp are connected.
405	SERVO ALARM: (ZERO POINT RETURN FAULT)	Position control system fault. Due to an NC or servo system fault in the reference position return, there is the possibility that reference position return could not be executed correctly. Try again from the manual reference position return.
407	SERVO ALARM: EXCESS ERROR	The following error occurred during simple synchronous control: The difference in machine coordinates between the synchronized axes exceeds the value set in parameter No. 8314.
409	SERVO ALARM: n AXIS TORQUE ALM	Abnormal servo motor load has been detected. Alternatively, abnormal spindle motor load has been detected in Cs mode.
410	SERVO ALARM: n–TH AXIS – EXCESS ERROR	The position deviation value when the n–th axis (axis 1–8) stops is larger than the set value. Refer to procedure of trouble shooting.
411	SERVO ALARM: n–TH AXIS – EXCESS ERROR	The position deviation value when the n–th axis (axis 1–8) moves is larger than the set value. Refer to procedure of trouble shooting.
413	SERVO ALARM: n–th AXIS – LSI OVERFLOW	The contents of the error register for the n–th axis (axis 1–8) exceeded $\pm 2^{31}$ power. This error usually occurs as the result of an improperly set parameters.

Number	Message	Contents
415	SERVO ALARM: n–TH AXIS – EXCESS SHIFT	A speed higher than 524288000 units/s was attempted to be set in the n–th axis (axis 1–8). This error occurs as the result of improperly set CMR.
417	SERVO ALARM: n–TH AXIS – PARAMETER INCORRECT	This alarm occurs when the n–th axis (axis 1–8) is in one of the conditions listed below. (Digital servo system alarm) 1) The value set in Parameter No. 2020 (motor form) is out of the specified limit. 2) A proper value (111 or –111) is not set in parameter No.2022 (motor revolution direction). 3) Illegal data (a value below 0, etc.) was set in parameter No. 2023 (number of speed feedback pulses per motor revolution). 4) Illegal data (a value below 0, etc.) was set in parameter No. 2024 (number of position feedback pulses per motor revolution). 5) Parameters No. 2084 and No. 2085 (flexible field gear rate) have not been set. 6) A value outside the limit of {1 to the number of control axes} or a non–continuous value (Parameter 1023 (servo axis number) contains a value out of the range from 1 to the number of axes, or an isolated value (for example, 4 not prceded by 3).was set in parameter No. 1023 (servo axisnumber).
420	SERVO ALARM: n AXIS SYNC TORQUE	During simple synchronous control, the difference between the torque commands for the master and slave axes exceeded the value set in parameter No. 2031.
421	SERVO ALARM: n AXIS EXCESS ER (D)	The difference between the errors in the semi–closed loop and closed loop has become excessive during dual position feedback. Check the values of the dual position conversion coefficients in parameters No. 2078 and 2079.
422	SERVO ALARM: n AXIS	In torque control of PMC axis control, a specified allowable speed has been exceeded.
423	SERVO ALARM: n AXIS	In torque control of PMC axis control, the parameter–set allowable cumulative travel distance has been exceeded.
430	n AXIS : SV. MOTOR OVERHEAT	A servo motor overheat occurred.
431	n AXIS : CNV. OVERLOAD	1) PSM: Overheat occurred. 2) β series SVU: Overheat occurred.
432	n AXIS : CNV. LOW VOLT CONTROL	1) PSMR: The control power supply voltage has dropped. 2) α series SVU: The control power supply voltage has dropped.
433	n AXIS : CNV. LOW VOLT DC LINK	1) PSM: The DC link voltage has dropped. 2) PSMR: The DC link voltage has dropped. 3) α series SVU: The DC link voltage has dropped. 4) β series SVU: The DC link voltage has dropped.
434	n AXIS : INV. LOW VOLT CONTROL	SVM: The control power supply voltage has dropped.
435	n AXIS : INV. LOW VOLT DC LINK	SVM: The DC link voltage has dropped.
436	n AXIS : SOFTTHERMAL (OVC)	The digital servo software detected the soft thermal state (OVC).
437	n AXIS : CNV. OVERCURRENT POWER	PSM: Overcurrent flowed into the input circuit.
438	n AXIS : INV. ABNORMAL CURRENT	1) SVM: The motor current is too high. 2) α series SVU: The motor current is too high. 3) β series SVU: The motor current is too high.
439	n AXIS : CNV. OVER VOLT DC LINK	1) PSM: The DC link voltage is too high. 2) PSMR: The DC link voltage is too high. 3) α series SVU: The C link voltage is too high. 4) β series SVU: The link voltage is too high.

Number	Message	Contents
440	n AXIS : CNV. EX DECELERATION POW.	1) PSMR: The regenerative discharge amount is too large. 2) α series SVU: The regenerative discharge amount is too large. Alternatively, the regenerative discharge circuit is abnormal.
441	n AXIS : ABNORMAL CURRENT OFFSET	The digital servo software detected an abnormality in the motor current detection circuit.
442	n AXIS : CNV. CHARGE FAILURE	1) PSM: The spare discharge circuit of the DC link is abnormal. 2) PSMR: The spare discharge circuit of the DC link is abnormal.
443	n AXIS : CNV. COOLING FAN FAILURE	1) PSM: The internal stirring fan failed. 2) PSMR: The internal stirring fan failed. 3) β series SVU: The internal stirring fan failed.
444	n AXIS : INV. COOLING FAN FAILURE	SVM: The internal stirring fan failed.
445	n AXIS : SOFT DISCONNECT ALARM	The digital servo software detected a broken wire in the pulse coder.
446	n AXIS : HARD DISCONNECT ALARM	A broken wire in the built–in pulse coder was detected by hardware.
447	n AXIS : HARD DISCONNECT (EXT)	A broken wire in the separate detector was detected by hardware.
448	n AXIS : UNMATCHED FEEDBACK ALARM	The sign of feedback data from the built–in pulse coder differs from that of feedback data from the separate detector.
449	n AXIS : INV. IPM ALARM	1) SVM: IPM (intelligent power module) detected an alarm. 2) α series SVU: IPM (intelligent power module) detected an alarm.
453	n AXIS : SPC SOFT DISCONNECT ALARM	Software disconnection alarm of the α pulse coder. Turn off the power to the CNC, then remove and insert the pulse coder cable. If this alarm is issued again, replace the pulse coder.
456	n AXIS : ILLEGAL CURRENT LOOP	An illegal current control period was specified. The amplifier pulse module in use does not match high–speed HRV. Alternatively, the system does not satisfy a constraint for performing high–speed HRV control.
457	n AXIS : ILLEGAL HI HRV (250US)	It is specified that, when the current control period is 250 ms, high–speed HRV control is to be used.
458	n AXIS : CURRENT LOOP ERROR	The specified current control period dose not match the actual current control period.
459	n AXIS : HI HRV SETTING ERROR	In a pair of axes in which one axis has an odd servo axis number (parameter No. 1023) and the other has an even servo axis number that is adjacent to the odd servo axis number, high–speed HRV control is supported for one of the axes and not supported for the other axis.
460	n AXIS : FSSB DISCONNECT	FSSB communication was disconnected suddenly. The possible causes are as follows: 1) The FSSB communication cable was disconnected or broken. 2) The power to the amplifier was turned off suddenly. 3) A low–voltage alarm was issued by the amplifier.
461	n AXIS : ILLEGAL AMP INTERFACE	The axes of the 2–axis amplifier were assigned to the fast type interface.
462	n AXIS : SEND CNC DATA FAILED	Because of an FSSB communication error, a slave could not receive correct data.
463	n AXIS : SEND SLAVE DATA FAILED	Because of an FSSB communication error, the servo system could not receive correct data.
464	n AXIS : WRITE ID DATA FAILED	An attempt was made to write maintenance information on the amplifier maintenance screen, but it failed.
465	n AXIS : READ ID DATA FAILED	At power–up, amplifier initial ID information could not be read.
466	n AXIS : MOTOR/AMP COMBINATION	The maximum current rating for the amplifier does not match that for the motor.

Number	Message	Contents
467	n AXIS : ILLEGAL SETTING OF AXIS	The servo function for the following has not been enabled when an axis occupying a single DSP (corresponding to two ordinary axes) is specified on the axis setting screen. 1. Learning control (bit 5 of parameter No. 2008 = 1) 2. High–speed current loop (bit 0 of parameter No. 2004 = 1) 3. High–speed interface axis (bit 4 of parameter No. 2005 = 1)
468	n AXIS : HI HRV SETTING ERROR (AMP)	This alarm is issued if it is specified that high–speed HRV control is to be used for a controlled axis connected to an amplifier for which high–speed HRV control cannot be used.

- **Details of servo alarm**

The details of servo alarm are displayed in the diagnosis display (No. 200 and No.204) as shown below.

	#7	#6	#5	#4	#3	#2	#1	#0
200	OVL	LV	OVC	HCA	HVA	DCA	FBA	OFA

#7 (OVL) : An overload alarm is being generated.
#6 (LV) : A low voltage alarm is being generated in servo amp.
#5 (OVC) : A overcurrent alarm is being generated inside of digital servo.
#4 (HCA) : An abnormal current alarm is being generated in servo amp.
#3 (HVA) : An overvoltage alarm is being generated in servo amp.
#2 (DCA) : A regenerative discharge circuit alarm is being generated in servo amp.
#1 (FBA) : A disconnection alarm is being generated.
#0 (OFA) : An overflow alarm is being generated inside of digital servo.

	#7	#6	#5	#4	#3	#2	#1	#0
201	ALD			EXP				

When OVL equal 1 in diagnostic data No.200 (servo alarm No. 400 is being generated):

#7 (ALD) 0 : Motor overheating
1 : Amplifier overheating

When FBAL equal 1 in diagnostic data No.200 (servo alarm No. 416 is being generated):

ALD	EXP	Alarm details
1	0	Built–in pulse coder disconnection (hardware)
1	1	Separately installed pulse coder disconnection (hardware)
0	0	Pulse coder is not connected due to software.

	#7	#6	#5	#4	#3	#2	#1	#0
204		OFS	MCC	LDA	PMS			

#6 (OFS) : A current conversion error has occured in the digital servo.
#5 (MCC) : A magnetic contactor contact in the servo amplifier has welded.
#4 (LDA) : The LED indicates that serial pulse coder C is defective.
#3 (PMS) : A feedback pulse error has occured because the feedback cable is defective.

6) Over travel alarms

Number	Message	Contents
500	OVER TRAVEL : +n	Exceeded the n–th axis + side stored stroke limit I. (Parameter No.1320 or 1326 **Notes**)
501	OVER TRAVEL : –n	Exceeded the n–th axis – side stored stroke limit I. (Parameter No.1321 or 1327 **Notes**)
502	OVER TRAVEL : +n	Exceeded the n–th axis + side stored stroke limit II. (Parameter No.1322)
503	OVER TRAVEL : –n	Exceeded the n–th axis – side stored stroke limit II. (Parameter No.1323)
506	OVER TRAVEL : +n	Exceeded the n–th axis + side hardware OT.
507	OVER TRAVEL : –n	Exceeded the n–th axis – side hardware OT.

NOTE
Parameters 1326 and 1327 are effective when EXLM (stroke limit switch signal) is on.

7) Servo alarms

Number	Message	Contents
600	n AXIS : INV. DC LINK OVER CURRENT	SVM: The DC link current is too high. β SVU: The DC link current is too high.
601	n AXIS : INV. RADIATOR FAN FAILURE	SVM: The heat sink cooling fan is defective. β SVU: The heat sink cooling fan is defective.
602	n AXIS : INV. OVERHEAT	SVM: The servo amplifier is overheated.
603	n AXIS : INV. IPM ALARM (OH)	SVM: The IPM (intelligent power module) has detected an overheat alarm condition. β SVU: The IPM (intelligent power module) has detected an overheat alarm condition.
604	n AXIS : AMP. COMMUNICATION ERROR	Communication between the SVM and PSM is abnormal.
605	n AXIS : CNV. EX. DISCHARGE POW.	PSMR: The motor regenerative power is too high.
606	n AXIS : CNV. RADIATOR FAN FAILURE	PSM: The fan for cooling the external heat sink is defective. PSMR: The fan for cooling the external heat sink is defective.
607	n AXIS : CNV. SINGLE PHASE FAILURE	PSM: One of the input power phases is abnormal. PSMR: One of the input power phases is abnormal.

8) Overheat alarms

Number	Message	Contents
700	OVERHEAT: CONTROL UNIT	Control unit overheat Check that the fan motor operates normally, and clean the air filter.
701	OVERHEAT: FAN MOTOR	The fan motor on the top of the cabinet for the contorl unit is overheated. Check the operation of the fan motor and replace the motor if necessary.

9) Rigid tapping alarm

Number	Message	Contents
740	RIGID TAP ALARM : EXCESS ERROR	During rigid tapping, the position deviation of the spindle in the stop state exceeded the setting.
741	RIGID TAP ALARM : EXCESS ERROR	During rigid tapping, the position deviation of the spindle in the stop state exceeded the setting.
742	RIGID TAP ALARM : LSI OVER FLOW	During rigid tapping, an LSI overflow occurred on the spindle side.

10) Spindle alarms

Number	Message	Contents
749	S–SPINDLE LSI ERROR	It is serial communication error while system is executing after power supply on. Following reasons can be considered. 1) Optical cable connection is fault or cable is not connected or cable is cut. 2) MAIN CPU board or option 2 board is fault. 3) Spindle amp. printed board is fault. If this alarm occurs when CNC power supply is turned on or when this alarm can not be cleared even if CNC is reset, turn off the power supply also turn off the power supply in spindle side.
750	SPINDLE SERIAL LINK START FAULT	This alarm is generated when the spindle control unit is not ready for starting correctly when the power is turned on in the system with the serial spindle. The four reasons can be considered as follows: 1) An improperly connected optic cable, or the spindle control unit's power is OFF. 2) When the NC power was turned on under alarm conditions other than SU–01 or AL–24 which are shown on the LED display of the spindle control unit. In this case, turn the spindle amplifier power off once and perform startup again. 3) Other reasons (improper combination of hardware) This alarm does not occur after the system including the spindle control unit is activated. 4) The second spindle (when SP2, bit 4 of parameter No. 3701, is 1) is in one of the above conditions 1) to 3). See diagnostic display No. 409 for details.
752	FIRST SPINDLE MODE CHANGE FAULT	This alarm is generated if the system does not properly terminate a mode change. The modes include the Cs contouring, spindle positioning, rigid tapping, and spindle control modes. The alarm is activated if the spindle control unit does not respond correctly to the mode change command issued by the NC.
754	SPINDLE–1 ABNORMAL TORQUE ALM	Abnormal first spindle motor load has been detected.
762	SECOND SPINDLE MODE CHANGE FAULT	Refer to alarm No. 752. (For 2nd axis)
764	SPINDLE–2 ABNORMAL TORQUE ALM	Same as alarm No. 754 (for the second spindle)

- **The details of spindle alarm No.750**

The details of spindle alarm No. 750 are displayed in the diagnosis display (No. 409) as shown below.

	#7	#6	#5	#4	#3	#2	#1	#0
409					SPE	S2E	S1E	SHE

#3 (SPE) 0 : In the spindle serial control, the serial spindle parameters fulfill the spindle unit startup conditions.

1 : In the spindle serial control, the serial spindle parameters do not fulfill the spindle unit startup conditions.

#2 (S2E) 0 : The second spindle is normal during the spindle serial control startup.

1 : The second spindle was detected to have a fault during the spindle serial control startup.

#1 (S1E) 0 : The first spindle is normal during the spindle serial control startup.

1 : The first spindle was detected to have a fault during the spindle axis serial control startup.

#0 (SHE) 0 : The serial communications module in the CNC is normal.

1 : The serial communications module in the CNC was detected to have a fault.

Alarm List (Serial Spindle)

When a serial spindle alarm occurs, the following number is displayed on the CNC. n is a number corresponding to the spindle on which an alarm occurs. (n = 1: First spindle; n = 2: Second spindle; etc.)

NOTE*1
Note that the meanings of the SPM indications differ depending on which LED, the red or yellow LED, is on. When the red LED is on, the SPM indicates a 2–digit alarm number. When the yellow LED is on, the SPM indicates an error number that designates a sequence problem (for example, when a rotation command is entered with the emergency stop state not released).
→ See Appendix, “Error Codes (Serial Spindle).”

Alarm Numbers and Alarms Displayed on the α Series Spindle Amplifier

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
(750)	SPINDLE SERIAL LINK ERROR	A0 A	1 Replace the ROM on the SPM control printed circuit board. 2 Replace the SPM control printed circuit board.	The program does not start normally. ROM series error or hardware abnormality on the SPM control printed circuit board
(749)	S–SPINDLE LSI ERROR	A1	Replace the SPM control printed circuit board.	An abnormality was detected in the CPU peripheral circuit of the SPM control circuit.
7n01	SPN_n_ : MOTOR OVERHEAT	01	1 Check and correct the peripheral temperature and load status. 2 If the cooling fan stops, replace it.	The thermostat embedded in the motor winding operated. The internal temperature of the motor exceeds the specified level. The motor is used in excess of the continuous rating, or the cooling component is abnormal.
7n02	SPN_n_ : EX SPEED ERROR	02	1 Check and correct the cutting conditions to decrease the load. 2 Correct parameter No. 4082.	The motor speed cannot follow a specified speed. An excessive motor load torque is detected. The acceleration/deceleration time in parameter No. 4082 is insufficient.
7n03	SPN_n_ : FUSE ON DC LINK BLOWN	03	1 Replace the SPM unit. 2 Check the motor insulation status. 3 Replace the interface cable.	The PSM becomes ready (00 is indicated), but the DC link voltage is too low in the SPM. The fuse in the DC link section in the SPM is blown. (The power device is damaged or the motor is ground–fault.) The JX1A/JX1B connection cable is abnormal.
7n04	SPN_n_ : INPUT FUSE/ POWER FAULT	04	Check the state of the input power supply to the PSM.	The PSM found a missing power supply phase. (PSM alarm 5)
7n06	SPN_n_ : THERMAL SENSOR DISCONNECT	06	1 Check and correct the parameter. 2 Replace the feedback cable.	The temperature sensor of the motor is disconnected.

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
7n07	SPN_n_ : OVERSPEED	07	Check for a sequence error. (For example, check whether spindle synchronization was specified when the spindle could not be turned.)	The motor speed has exceeded 115% of its rated speed. When the spindle axis was in position control mode, positional deviations were accumulated excessively (SFR and SRV were turned off during spindle synchronization.)
7n09	SPN_n_ : OVERHEAT MAIN CIRCUIT	09	1 Improve the heat sink cooling status. 2 If the heat sink cooling fan stops, replace the SPM unit.	Abnormal temperature rise of the power transistor radiator
7n11	SPN_n_ : OVERVOLT POW CIRCUIT	11	1 Check the selected PSM. 2 Check the input power voltage and change in power during motor deceleration. If the voltage exceeds 253 VAC (for the 200–V system) or 530 VAC (for the 400–V system), improve the power supply impedance.	Overvoltage of the DC link section of the PSM was detected. (PSM alarm indication: 7) PSM selection error. (The maximum output specification of the PSM is exceeded.)
7n12	SPN_n_ : OVERCURRENT POW CIRCUIT	12	1 Check the motor insulation status. 2 Check the spindle parameters. 3 Replace the SPM unit.	The motor output current is abnormally high. A motor–specific parameter does not match the motor model. Poor motor insulation
7n15	SPN_n_ : SP SWITCH CONTROL ALARM	15	1 Check and correct the ladder sequence. 2 Replace the switching MC.	The switch sequence in spindle switch/output switch operation is abnormal. The switching MC contact status check signal and command do not match.
7n16	SPN_n_ : RAM FAULT	16	Replace the SPM control printed circuit board.	Abnormality in an SPM control circuit component is detected. (RAM for external data is abnormal.)
7n18	SPN_n_ : SUMCHECK ERROR PGM DATA	18	Replace the SPM control printed circuit board.	Abnormality in an SPM control circuit component is detected. (Program ROM data is abnormal.)
7n19	SPN_n_ : EX OFFSET CURRENT U	19	Replace the SPM unit.	Abnormality in an SPM component is detected. (The initial value for the U phase current detection circuit is abnormal.)
7n20	SPN_n_ : EX OFFSET CURRENT V	20	Replace the SPM unit.	Abnormality in an SPM component is detected. (The initial value of the V phase current detection circuit is abnormal.)
7n21	SPN_n_ : POS SENSOR POLARITY ERROR	21	Check and correct the parameters. (No. 4000#0, 4001#4)	The polarity parameter setting of the position sensor is wrong.
7n24	SPN_n_ : SERIAL TRANSFER ERROR	24	1 Place the CNC–to–spindle cable away from the power cable. 2 Replace the cable.	The CNC power is turned off (normal power–off or broken cable). An error is detected in communication data transferred to the CNC.

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
7n26	SPN_n_ : DISCONNECT C–VELO DETECT	26	1 Replace the cable. 2 Re–adjust the pre–amplifier.	The signal amplitude of the detection signal (connector JY2) on the Cs contour control motor side is abnormal. (Unconnected cable, adjustment error, etc.)
7n27	SPN_n_ : DISCONNECT POS–CODER	27	1 Replace the cable. 2 Re–adjust the BZ sensor signal.	1 The spindle position coder (connector JY4) signal is abnormal. 2 The signal amplitude (connector JY2) of the MZ or BZ sensor is abnormal. (Unconnected cable, adjustment error, etc.)
7n28	SPN_n_ : DISCONNECT C–POS DETECT	28	1 Replace the cable 2 Re–adjust the pre–amplifier.	The position detection signal (connector JY5) for Cs contour control is abnormal. (Unconnected cable, adjustment error, etc.)
7n29	SPN_n_ : SHORTTIME OVERLOAD	29	Check and correct the load status.	Excessive load has been applied continuously for a certain period of time. (This alarm is issued also when the motor shaft has been locked in the excitation state.)
7n30	SPN_n_ : OVERCURRENT POW CIRCUIT	30	Check and correct the power supply voltage.	Overcurrent is detected in PSM main circuit input. (PSM alarm indication: 1) Unbalanced power supply. PSM selection error (The maximum PSM output specification is exceeded.)
7n31	SPN_n_ : MOTOR LOCK OR V–SIG LOS	31	1 Check and correct the load status. 2 Replace the motor sensor cable (JY2 or JY5).	The motor cannot rotate at a specified speed. (A level not exceeding the SST level for the rotation command has existed continuously.) Abnormality in the speed detection signal.
7n32	SPN_n_ : RAM FAULT SERIAL LSI	32	Replace the SPM control printed circuit board.	Abnormality in an SPM control circuit component is detected. (The LSI device for serial transfer is abnormal.)
7n33	SPN_n_ : SHORTAGE POWER CHARGE	33	1 Check and correct the power supply voltage. 2 Replace the PSM unit.	Charging of direct current power supply voltage in the power circuit section is insufficient when the magnetic contractor in the amplifier is turned on (such as open phase and defective charging resistor).
7n34	SPN_n_ : PARAMETER SETTING ERROR	34	Correct a parameter value according to the manual. If the parameter number is unknown, connect the spindle check board, and check the indicated parameter.	Parameter data exceeding the allowable limit is set.
7n35	SPN_n_ : EX SETTING GEAR RATIO	35	Correct the value according to the parameter manual.	Gear ratio data exceeding the allowable limit is set.

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
7n36	SPN_n_ : OVERFLOW ERROR COUNTER	36	Check whether the position gain value is too large, and correct the value.	An error counter overflow occurred.
7n37	SPN_n_ : SPEED DETECT PAR. ERROR	37	Correct the value according to the parameter manual.	The setting of the parameter for the number of pulses in the speed detector is incorrect.
7n39	SPN_n_ : 1–ROT Cs SIGNAL ERROR	39	1 Adjust the 1–rotation signal in the pre–amplifier. 2 Check the cable shield status. 3 Replace the cable.	An incorrect relationship between the 1–rotation signal and the number of AB phase pulses was detected during Cs contour control.
7n40	SPN_n_ : NO 1–ROT Cs SIGNAL DETECT	40	1 Adjust the 1–rotation signal in the pre–amplifier. 2 Check the cable shield status. 3 Replace the cable.	The 1–rotation signal is not generated during Cs contour control.
7n41	SPN_n_ : 1–ROT POS–CODER ERROR	41	1 Check and correct the parameter. 2 Replace the cable. 3 Re–adjust the BZ sensor signal.	1 The 1–rotation signal of the spindle position coder (connector JY4) is abnormal. 2 The 1–rotation signal (connector JY2) of the MZ or BZ sensor is abnormal. 3 Parameter setting error
7n42	SPN_n_ : NO 1–ROT. POS–CODER DETECT	42	1 Replace the cable. 2 Re–adjust the BZ sensor signal.	1 The 1–rotation signal of the spindle position coder (connector JY4) is disconnected. 2 The 1–rotation signal (connector JY2) of the MZ or BZ sensor is disconnected.
7n43	SPN_n_ : DISCON. PC FOR DIF. SP. MODE	43	Replace the cable.	The differential speed position coder signal (connector JY8) in SPM type 3 is abnormal.
7n44	SPN_n_ : CONTROL CIRCUIT(AD) ERROR	44	Replace the SPM control printed circuit board.	Abnormality in an SPM control circuit component was detected (A/D converter abnormality).
7n46	SPN_n_ : SCREW 1–ROT POS–COD. ALARM	46	1 Check and correct the parameter. 2 Replace the cable. 3 Re–adjust the BZ sensor signal.	An abnormality equivalent to alarm 41 was detected during thread cutting operation.
7n47	SPN_n_ : POS–CODER SIGNAL ABNORMAL	47	1 Replace the cable. 2 Re–adjust the BZ sensor signal. 3 Correct the cable layout (vicinity of the power line).	1 The A/B phase signal of the spindle position coder (connector JY4) is abnormal. 2 The A/B phase signal (connector JY2) of the MZ or BZ sensor is abnormal. The relationship between the A/B phase and 1–rotation signal is incorrect (Pulse interval mismatch).
7n49	SPN_n_ : HIGH CONV. DIF. SPEED	49	Check whether the calculated differential speed value exceeds the maximum motor speed.	In differential speed mode, the speed of the other spindle converted to the speed of the local spindle has exceeded the allowable limit (the differential speed is calculated by multiplying the speed of the other spindle by the gear ratio).

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
7n50	SPN_n_ : SPNDL CONTROL OVERSPEED	50	Check whether the calculated value exceeds the maximum motor speed.	In spindle synchronization, the speed command calculation value exceeded the allowable limit (the motor speed is calculated by multiplying the specified spindle speed by the gear ratio).
7n51	SPN_n_ : LOW VOLT DC LINK	51	1 Check and correct the power supply voltage. 2 Replace the MC.	Input voltage drop was detected. (PSM alarm indication: 4) (Momentary power failure or poor MC contact)
7n52	SPN_n_ : ITP SIGNAL ABNORMAL I	52	1 Replace the SPM control printed circuit board. 2 Replace the spindle interface printed circuit board in the CNC.	NC interface abnormality was detected (the ITP signal stopped).
7n53	SPN_n_ : ITP SIGNAL ABNORMAL II	53	1 Replace the SPM control printed circuit board. 2 Replace the spindle interface printed circuit board in the CNC.	NC interface abnormality was detected (the ITP signal stopped).
7n54	SPN_n_ : OVERLOAD CURRENT	54	Review the load state.	An overload current was detected.
7n55	SPN_n_ : POWER LINE SWITCH ERROR	55	1 Replace the magnetic contactor. 2 Check and correct the sequence.	The power line state signal of the magnetic contactor for selecting a spindle or output is abnormal.
7n56	SPN_n_ : INNER COOLING FAN STOP	56	Replace the SPM unit.	The cooling fan in the SPM control circuit stopped.
7n57	SPN_n_ : EX DECELERATION POWER	57	1 Decrease the acceleration/deceleration duty. 2 Check the cooling condition (peripheral temperature). 3 If the cooling fan stops, replace the resistor. 4 If the resistance is abnormal, replace the resistor.	An overload was detected in the regenerative resistance. (PSMR alarm indication: 8) Thermostat operation or short–time overload was detected. The regenerative resistor was disconnected, or an abnormal resistance was detected.
7n58	SPN_n_ : OVERLOAD IN PSM	58	1 Check the PSM cooling status. 2 Replace the PSM unit.	The temperature of the radiator of the PSM has increased abnormally. (PSM alarm indication: 3)
7n59	SPN_n_ : COOLING FAN STOP IN PSM	59	Replace the SPM unit.	The cooling fan in the PSM stopped. (PSM alarm indication: 2)
7n62	SPN_n_ : MOTOR VCMD OVERFLOWED	62	Check and correct the parameters. (No. 4021, 4056 to 4059)	The specified motor speed is too large.
7n66	SPN_n_ : AMP MODULE COMMUNICATION	66	1 Replace the cable. 2 Check and correct the connection.	An error was found in communication between amplifiers.
7n73	SPN_n_ : MOTOR SENSOR DISCONNECTED	73	1 Replace the feedback cable. 2 Check the shield processing. 3 Check and correct the connection. 4 Adjust the sensor.	The motor sensor feedback signal is not present.
7n74	SPN_n_ : CPU TEST ERROR	74	Replace the SPM control printed–circuit board.	An error was detected in a CPU test.
7n75	SPN_n_ : CRC ERROR	75	Replace the SPM control printed–circuit board.	An error was detected in a CRC test.

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
7n79	SPN_n_ : INITIAL TEST ERROR	79	Replace the SPM control printed–circuit board.	An error was detected in an initial test operation.
7n81	SPN_n_ : 1–ROT MOTOR SENSOR ERROR	81	1 Check and correct the parameter. 2 Replace the feedback cable. 3 Adjust the sensor.	The one–rotation signal of the motor sensor cannot be correctly detected.
7n82	SPN_n_ : NO 1–ROT MOTOR SENSOR	82	1 Replace the feedback cable. 2 Adjust the sensor.	The one–rotation signal of the motor sensor is not generated.
7n83	SPN_n_ : MOTOR SENSOR SIGNAL ERROR	83	1 Replace the feedback cable. 2 Adjust the sensor.	An irregularity was detected in a motor sensor feedback signal.
7n84	SPN_n_ : SPNDL SENSOR DISCONNECTED	84	1 Replace the feedback cable. 2 Check the shield processing. 3 Check and correct the connection. 4 Check and correct the parameter. 5 Adjust the sensor.	The spindle sensor feedback signal is not present.
7n85	SPN_n_ : 1–ROT SPNDL SENSOR ERROR	85	1 Check and correct the parameter. 2 Replace the feedback cable. 3 Adjust the sensor.	The one–rotation signal of the spindle sensor cannot be correctly detected.
7n86	SPN_n_ : NO 1–ROT SPNDL SENSOR ERROR	86	1 Replace the feedback cable. 2 Adjust the sensor.	The one–rotation signal of the spindle sensor is not generated.
7n87	SPN_n_ : SPNDL SENSOR SIGNAL ERROR	87	The one–rotation signal of the spindle sensor is not generated.	An irregularity was detected in a spindle sensor feedback signal.
7n88	SPN_n_ : COOLING RADIFAN FAILURE	88	Replace the SPM external cooling fan.	The external cooling fan stopped.
7n97	SPN_n_ : OTHER SPINDLE ALARM	97	Replace the SPM.	Another irregularity was detected.
7n98	SPN_n_ : OTHER CONVERTER ALARM	98	Check the PSM alarm display.	A PSM alarm was detected.

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
9n01	SPN_n_ : MOTOR OVERHEAT	01	1 Check and correct the peripheral temperature and load status. 2 If the cooling fan stops, replace it.	The thermostat embedded in the motor winding operated. The internal temperature of the motor exceeds the specified level. The motor is used in excess of the continuous rating, or the cooling component is abnormal.

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
9n02	SPN_n_ : EX SPEED ERROR	02	1 Check and correct the cutting conditions to decrease the load. 2 Correct parameter No. 4082.	The motor speed cannot follow a specified speed. An excessive motor load torque is detected. The acceleration/deceleration time in parameter No. 4082 is insufficient.
9n03	SPN_n_ : FUSE ON DC LINK BLOWN	03	1 Replace the SPM unit. 2 Check the motor insulation status. 3 Replace the interface cable.	The PSM becomes ready (00 is indicated), but the DC link voltage is too low in the SPM. The fuse in the DC link section in the SPM is blown. (The power device is damaged or the motor is ground–fault.) The JX1A/JX1B connection cable is abnormal.
9n04	SPN_n_ : INPUT FUSE/ POWER FAULT	04	Check the state of the input power supply to the PSM.	The PSM found a missing power supply phase. (PSM alarm 5)
9n06	SPN_n_ : THERMAL SENSOR DISCONNECT	06	1 Check and correct the parameter. 2 Replace the feedback cable.	The temperature sensor of the motor is disconnected.
9n07	SPN_n_ : OVERSPEED	07	Check for a sequence error. (For example, check whether spindle synchronization was specified when the spindle could not be turned.)	The motor speed has exceeded 115% of its rated speed. When the spindle axis was in position control mode, positional deviations were accumulated excessively (SFR and SRV were turned off during spindle synchronization.)
9n09	SPN_n_ : OVERHEAT MAIN CIRCUIT	09	1 Improve the heat sink cooling status. 2 If the heat sink cooling fan stops, replace the SPM unit.	Abnormal temperature rise of the power transistor radiator
9n11	SPN_n_ : OVERVOLT POW CIRCUIT	11	1 Check the selected PSM. 2 Check the input power voltage and change in power during motor deceleration. If the voltage exceeds 253 VAC (for the 200–V system) or 530 VAC (for the 400–V system), improve the power supply impedance.	Overvoltage of the DC link section of the PSM was detected. (PSM alarm indication: 7) PSM selection error. (The maximum output specification of the PSM is exceeded.)
9n12	SPN_n_ : OVERCURRENT POW CIRCUIT	12	1 Check the motor insulation status. 2 Check the spindle parameters. 3 Replace the SPM unit.	The motor output current is abnormally high. A motor–specific parameter does not match the motor model. Poor motor insulation
9n15	SPN_n_ : SP SWITCH CONTROL ALARM	15	1 Check and correct the ladder sequence. 2 Replace the switching MC.	The switch sequence in spindle switch/output switch operation is abnormal. The switching MC contact status check signal and command do not match.
9n16	SPN_n_ : RAM FAULT	16	Replace the SPM control printed circuit board.	Abnormality in an SPM control circuit component is detected. (RAM for external data is abnormal.)

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
9n18	SPN_n_ : SUMCHECK ERROR PGM DATA	18	Replace the SPM control printed circuit board.	Abnormality in an SPM control circuit component is detected. (Program ROM data is abnormal.)
9n19	SPN_n_ : EX OFFSET CURRENT U	19	Replace the SPM unit.	Abnormality in an SPM component is detected. (The initial value for the U phase current detection circuit is abnormal.)
9n20	SPN_n_ : EX OFFSET CURRENT V	20	Replace the SPM unit.	Abnormality in an SPM component is detected. (The initial value of the V phase current detection circuit is abnormal.)
9n21	SPN_n_ : POS SENSOR POLARITY ERROR	21	Check and correct the parameters. (No. 4000#0, 4001#4)	The polarity parameter setting of the position sensor is wrong.
9n24	SPN_n_ : SERIAL TRANSFER ERROR	24	1 Place the CNC–to–spindle cable away from the power cable. 2 Replace the cable.	The CNC power is turned off (normal power–off or broken cable). An error is detected in communication data transferred to the CNC.
9n26	SPN_n_ : DISCONNECT C–VELO DETECT	26	1 Replace the cable. 2 Re–adjust the pre–amplifier.	The signal amplitude of the detection signal (connector JY2) on the Cs contour control motor side is abnormal. (Unconnected cable, adjustment error, etc.)
9n27	SPN_n_ : DISCONNECT POS–CODER	27	1 Replace the cable. 2 Re–adjust the BZ sensor signal.	1 The spindle position coder (connector JY4) signal is abnormal. 2 The signal amplitude (connector JY2) of the MZ or BZ sensor is abnormal. (Unconnected cable, adjustment error, etc.)
9n28	SPN_n_ : DISCONNECT C–POS DETECT	28	1 Replace the cable 2 Re–adjust the pre–amplifier.	The position detection signal (connector JY5) for Cs contour control is abnormal. (Unconnected cable, adjustment error, etc.)
9n29	SPN_n_ : SHORTTIME OVERLOAD	29	Check and correct the load status.	Excessive load has been applied continuously for a certain period of time. (This alarm is issued also when the motor shaft has been locked in the excitation state.)
9n30	SPN_n_ : OVERCURRENT POW CIRCUIT	30	Check and correct the power supply voltage.	Overcurrent is detected in PSM main circuit input. (PSM alarm indication: 1) Unbalanced power supply. PSM selection error (The maximum PSM output specification is exceeded.)
9n31	SPN_n_ : MOTOR LOCK OR V–SIG LOS	31	1 Check and correct the load status. 2 Replace the motor sensor cable (JY2 or JY5).	The motor cannot rotate at a specified speed. (A level not exceeding the SST level for the rotation command has existed continuously.) Abnormality in the speed detection signal.

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
9n32	SPN_n_ : RAM FAULT SERIAL LSI	32	Replace the SPM control printed circuit board.	Abnormality in an SPM control circuit component is detected. (The LSI device for serial transfer is abnormal.)
9n33	SPN_n_ : SHORTAGE POWER CHARGE	33	1 Check and correct the power supply voltage. 2 Replace the PSM unit.	Charging of direct current power supply voltage in the power circuit section is insufficient when the magnetic contractor in the amplifier is turned on (such as open phase and defective charging resistor).
9n34	SPN_n_ : PARAMETER SETTING ERROR	34	Correct a parameter value according to the manual. If the parameter number is unknown, connect the spindle check board, and check the indicated parameter.	Parameter data exceeding the allowable limit is set.
9n35	SPN_n_ : EX SETTING GEAR RATIO	35	Correct the value according to the parameter manual.	Gear ratio data exceeding the allowable limit is set.
9n36	SPN_n_ : OVERFLOW ERROR COUNTER	36	Check whether the position gain value is too large, and correct the value.	An error counter overflow occurred.
9n37	SPN_n_ : SPEED DETECT PAR. ERROR	37	Correct the value according to the parameter manual.	The setting of the parameter for the number of pulses in the speed detector is incorrect.
9n39	SPN_n_ : 1–ROT Cs SIGNAL ERROR	39	1 Adjust the 1–rotation signal in the pre–amplifier. 2 Check the cable shield status. 3 Replace the cable.	An incorrect relationship between the 1–rotation signal and the number of AB phase pulses was detected during Cs contour control.
9n40	SPN_n_ : NO 1–ROT Cs SIGNAL DETECT	40	1 Adjust the 1–rotation signal in the pre–amplifier. 2 Check the cable shield status. 3 Replace the cable.	The 1–rotation signal is not generated during Cs contour control.
9n41	SPN_n_ : 1–ROT POS–CODER ERROR	41	1 Check and correct the parameter. 2 Replace the cable. 3 Re–adjust the BZ sensor signal.	1 The 1–rotation signal of the spindle position coder (connector JY4) is abnormal. 2 The 1–rotation signal (connector JY2) of the MZ or BZ sensor is abnormal. 3 Parameter setting error
9n42	SPN_n_ : NO 1–ROT. POS–CODER DETECT	42	1 Replace the cable. 2 Re–adjust the BZ sensor signal.	1 The 1–rotation signal of the spindle position coder (connector JY4) is disconnected. 2 The 1–rotation signal (connector JY2) of the MZ or BZ sensor is disconnected.
9n43	SPN_n_ : DISCON. PC FOR DIF. SP. MODE	43	Replace the cable.	The differential speed position coder signal (connector JY8) in SPM type 3 is abnormal.
9n44	SPN_n_ : CONTROL CIRCUIT(AD) ERROR	44	Replace the SPM control printed circuit board.	Abnormality in an SPM control circuit component was detected (A/D converter abnormality).

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
9n46	SPN_n_ : SCREW 1–ROT POS–COD. ALARM	46	1 Check and correct the parameter. 2 Replace the cable. 3 Re–adjust the BZ sensor signal.	An abnormality equivalent to alarm 41 was detected during thread cutting operation.
9n47	SPN_n_ : POS–CODER SIGNAL ABNORMAL	47	1 Replace the cable. 2 Re–adjust the BZ sensor signal. 3 Correct the cable layout (vicinity of the power line).	1 The A/B phase signal of the spindle position coder (connector JY4) is abnormal. 2 The A/B phase signal (connector JY2) of the MZ or BZ sensor is abnormal. The relationship between the A/B phase and 1–rotation signal is incorrect (Pulse interval mismatch).
9n49	SPN_n_ : HIGH CONV. DIF. SPEED	49	Check whether the calculated differential speed value exceeds the maximum motor speed.	In differential speed mode, the speed of the other spindle converted to the speed of the local spindle has exceeded the allowable limit (the differential speed is calculated by multiplying the speed of the other spindle by the gear ratio).
9n50	SPN_n_ : SPNDL CONTROL OVERSPEED	50	Check whether the calculated value exceeds the maximum motor speed.	In spindle synchronization, the speed command calculation value exceeded the allowable limit (the motor speed is calculated by multiplying the specified spindle speed by the gear ratio).
9n51	SPN_n_ : LOW VOLT DC LINK	51	1 Check and correct the power supply voltage. 2 Replace the MC.	Input voltage drop was detected. (PSM alarm indication: 4) (Momentary power failure or poor MC contact)
9n52	SPN_n_ : ITP SIGNAL ABNORMAL I	52	1 Replace the SPM control printed circuit board. 2 Replace the spindle interface printed circuit board in the CNC.	NC interface abnormality was detected (the ITP signal stopped).
9n53	SPN_n_ : ITP SIGNAL ABNORMAL II	53	1 Replace the SPM control printed circuit board. 2 Replace the spindle interface printed circuit board in the CNC.	NC interface abnormality was detected (the ITP signal stopped).
9n54	SPN_n_ : OVERLOAD CURRENT	54	Review the load state.	An overload current was detected.
9n55	SPN_n_ : POWER LINE SWITCH ERROR	55	1 Replace the magnetic contactor. 2 Check and correct the sequence.	The power line state signal of the magnetic contactor for selecting a spindle or output is abnormal.
9n56	SPN_n_ : INNER COOLING FAN STOP	56	Replace the SPM unit.	The cooling fan in the SPM control circuit stopped.
9n57	SPN_n_ : EX DECELERATION POWER	57	1 Decrease the acceleration/deceleration duty. 2 Check the cooling condition (peripheral temperature). 3 If the cooling fan stops, replace the resistor. 4 If the resistance is abnormal, replace the resistor.	An overload was detected in the regenerative resistance. (PSMR alarm indication: 8) Thermostat operation or short–time overload was detected. The regenerative resistor was disconnected, or an abnormal resistance was detected.

No.	Message	SPM indication(*1)	Faulty location and remedy	Description
9n58	SPN_n_ : OVERLOAD IN PSM	58	1 Check the PSM cooling status. 2 Replace the PSM unit.	The temperature of the radiator of the PSM has increased abnormally. (PSM alarm indication: 3)
9n59	SPN_n_ : COOLING FAN STOP IN PSM	59	Replace the SPM unit.	The cooling fan in the PSM stopped. (PSM alarm indication: 2)
9n62	SPN_n_ : MOTOR VCMD OVER-FLOWED	62	Check and correct the parameters. (No. 4021, 4056~4059)	The specified motor speed is too large.
9n66	SPN_n_ : AMP MODULE COMMUNICATION	66	1 Replace the cable. 2 Check and correct the connection.	An error was found in communication between amplifiers.
9n73	SPN_n_ : MOTOR SENSOR DISCONNECTED	73	1 Replace the feedback cable. 2 Check the shield processing. 3 Check and correct the connection. 4 Adjust the sensor.	The motor sensor feedback signal is not present.
9n74	SPN_n_ : CPU TEST ERROR	74	Replace the SPM control printed–circuit board.	An error was detected in a CPU test.
9n75	SPN_n_ : CRC ERROR	75	Replace the SPM control printed–circuit board.	An error was detected in a CRC test.
9n79	SPN_n_ : INITIAL TEST ERROR	79	Replace the SPM control printed–circuit board.	An error was detected in an initial test operation.
9n81	SPN_n_ : 1–ROT MOTOR SENSOR ERROR	81	1 Check and correct the parameter. 2 Replace the feedback cable. 3 Adjust the sensor.	The one–rotation signal of the motor sensor cannot be correctly detected.
9n82	SPN_n_ : NO 1–ROT MOTOR SENSOR	82	1 Replace the feedback cable. 2 Adjust the sensor.	The one–rotation signal of the motor sensor is not generated.
9n83	SPN_n_ : MOTOR SENSOR SIGNAL ERROR	83	1 Replace the feedback cable. 2 Adjust the sensor.	An irregularity was detected in a motor sensor feedback signal.
9n84	SPN_n_ : SPNDL SENSOR DISCONNECTED	84	1 Replace the feedback cable. 2 Check the shield processing. 3 Check and correct the connection. 4 Check and correct the parameter. 5 Adjust the sensor.	The spindle sensor feedback signal is not present.
9n85	SPN_n_ : 1–ROT SPNDL SENSOR ERROR	85	1 Check and correct the parameter. 2 Replace the feedback cable. 3 Adjust the sensor.	The one–rotation signal of the spindle sensor cannot be correctly detected.
9n86	SPN_n_ : NO 1–ROT SPNDL SENSOR ERROR	86	1 Replace the feedback cable. 2 Adjust the sensor.	The one–rotation signal of the spindle sensor cannot be correctly detected.
9n87	SPN_n_ : SPNDL SENSOR SIGNAL ERROR	87	The one–rotation signal of the spindle sensor is not generated.	An irregularity was detected in a spindle sensor feedback signal.
9n88	SPN_n_ : COOLING RADIFAN FAILURE	88	Replace the SPM external cooling fan.	The external cooling fan stopped.

ERROR CODES (SERIAL SPINDLE)

NOTE*1
Note that the meanings of the SPM indications differ depending on which LED, the red or yellow LED, is on. When the yellow LED is on, an error code is indicated with a 2–digit number. The error code is not displayed on the CNC screen.
When the red LED is on, the SPM indicates the number of an alarm generated in the serial spindle.
→ See, “Alarms (Serial Spindle).”

Errors Displayed on the α Series Spindle Amplifier

SPM indication(*1)	Faulty location and remedy	Description
01	Check the *ESP and MRDY sequence. (For MRDY, pay attention to the parameter setting regarding the use of the MRDY signal (bit 0 of parameter No. 4001).)	Although neither *ESP (emergency stop signal; there are two types of signals including the PMC signal and PSM contact signal(*2)) nor MRDY (machine ready signal) is input, SFR (forward rotation signal)/SRF (reverse rotation signal)/ORCM (orientation command) is input.
02	Check the spindle motor speed detector parameter (bits 2, 1, and 0 of parameter No. 4011).	When the spindle motor has a high–resolution magnetic pulse coder (Cs sensor) (bits 6 and 5 of parameter No. 4001 are set to 0 and 1, respectively), 128 /rev is to be set for the speed detector (bits 2, 1, and 0 of parameter No. 4011 are set to 0, 0, and 1, respectively). However, a value other than 128 /rev is set. In this case, the motor is not excited.
03	Check the parameters for the detector for Cs contour control (bit 5 of parameter No. 4001 and bit 4 of parameter No. 4018).	Although use of a high–resolution magnetic pulse coder (bit 5 of parameter No. 4001 = 1) or use of the Cs contour control function by the sensor (bit 4 of parameter No. 4018 = 1) is not set, a Cs control command is input. In this case, the motor is not excited.
04	Check the position coder signal parameter (bit 2 of parameter No. 4001).	Although use of the position coder signal (bit 2 of parameter No. 4001 = 1) is not set, a servo mode (rigid tapping, spindle positioning) or spindle synchronization command is input. In this case, the motor is not excited.
05	Check the orientation software option.	Although the orientation option is not set, an orientation command (ORCM) is input.
06	Check the spindle output switching software option and power line status signal (RCH).	Although the output switching option is not set, the low–speed winding is selected (RCH = 1).
07	Check the sequence (CON, SFR, SRV).	Although the Cs contour control mode is specified, SFR/SRV is not input.
08	Check the sequence (SFR, SRV).	Although the servo mode (rigid tapping, spindle positioning) is specified, SFR/SRV is not input.
09	Check the sequence (SPSYC, SFR, SRV)	Although spindle synchronization mode is specified, SFR/SRV is not input.
10	During execution of the C–axis control command, do not specify another operation mode. Before entering another mode, cancel the Cs contour control command.	Although Cs contour control mode is set, another operation mode (servo mode, spindle synchronization, or orientation) is specified.
11	During execution of the servo mode command, do not specify another operation mode. Before entering another mode, cancel the servo mode.	Although servo mode (rigid tapping, or spindle positioning) is set, another operation mode (Cs contour control, spindle synchronization, or orientation) is specified.

SPM indication(*1)	Faulty location and remedy	Description
12	During execution of the spindle synchronization command, do not specify another operation mode. Before entering another mode, cancel the spindle synchronization command.	Although spindle synchronization is being performed, another operation mode (Cs contour control, servo mode, or orientation) is specified.
13	During execution of the orientation command, do not specify another operation mode. Before entering another mode, cancel the orientation command.	Although the orientation command is being executed, another operation mode (Cs contour control, servo mode, or synchronization) is specified.
14	Input the SFT or SRV signal.	The SFT and SRV signals are both input at the same time.
15	Check bit 5 of parameter No. 4000 and PMC signal (CON).	When bit 5 of parameter No. 4000 is set to 1 to indicate the presence of the differential speed mode function, Cs contour control is specified.
16	Check bit 5 of parameter No. 4000 and PMC signal (DEFMD).	When bit 5 of parameter No. 4000 is set to 0 to indicate the absence of the differential speed mode function, the differential speed mode command (DEFMD) is input.
17	Check bits 2, 1, and 0 of parameter No. 4011.	Setting of the speed detector parameter (bits 2, 1, and 0 of parameter No. 4011) is invalid. (The corresponding speed detector is not present.)
18	Check bit 2 of parameter No. 4001 and PMC signal (ORCM).	Although bits 2 of parameter No. 4001 is set to 0 not to use the position coder signal, a command for orientation by a position coder (ORCMA) is input.
19	During execution of the orientation command, do not specify another operation mode. Before entering another mode, cancel the orientation command.	Although orientation by a magnetic sensor is being performed, another operation mode is specified.
20	Check bit 5 of parameter No. 4001, bit 5 of parameter No. 4014, and bit 4 of parameter No. 4018.	When the use of the slave operation mode function is set (bit 5 of parameter No. 4014 = 1), the use of a high–resolution magnetic pulse coder (bit 5 of parameter No. 4001 = 1) or the use of the Cs contour control function by the sensor (bit 4 of parameter No. 4018 = 1) is specified. These items cannot be set at the same time.
21	Input the slave operation mode command (SLV) in normal operation mode.	Although position control (such as servo mode or orientation) is being performed, a slave operation mode command (SLV) is input.
22	Input the position control command in normal operation mode	Although slave operation mode is set (SLVS = 1), a position control command (such as servo mode or orientation) is input.
23	Check bit 5 of parameter No. 4014 and PMC signal (SLV).	Although bit 5 of parameter No. 4014 is set to 0 not to use the slave operation mode function, a slave operation mode command (SLV) is input.
24	Check the PMC signal (INCMD). Perform orientation by specifying an absolute position first.	Orientation is performed in incremental operation mode (INCMD = 1) first, then the absolute position command (INCMD = 0) is input.
25	Check the spindle amplifier specifications and parameter setting (bit 4 of parameter No. 4018).	Although the spindle amplifier SPM type 4 is not used, the use of the Cs contour control function by the sensor is set (bit 4 of parameter No. 4018 = 1).

NOTE*2

PSM contact signal

Between ESP1 and ESP2 on the PSM

Contact open: Emergency stop
Contact closed: Normal operation

11) System alarms

(These alarms cannot be reset with reset key.)

Number	Message	Contents
900	ROM PARITY	ROM parity error (CNC/OMM/Servo) Rewrite the flash ROM with the indicated ROM number.
910	SRAM PARITY : (BYTE 0)	RAM parity error in the tape memory SRAM module. Clear the memory or replace the module. After this operation, reset all data including the parameters.
911	SRAM PARITY: (BYTE 1)	RAM parity error in the tape memory SRAM module. Clear the memory or replace the module/mother board. After this operation, reset all data including the parameters.
912	DRAM PARITY: (BYTE 0)	RAM parity error in the DRAM module. Replace the DRAM module.
913	DRAM PARITY : (BYTE 1)	
914	DRAM PARITY : (BYTE 2)	
915	DRAM PARITY : (BYTE 3)	
916	DRAM PARITY : (BYTE 4)	
917	DRAM PARITY : (BYTE 5)	
918	DRAM PARITY : (BYTE 6)	
919	DRAM PARITY : (BYTE 7)	
920	SERVO ALARM (1 to 4 AXIS)	Servo alarm (1st to 4th axis). A watchdog alarm or a RAM parity error in the servo module occurred. Replace the servo control module on the main CPU board.
926	FSSB ALARM	FSSB alarm. Replace the servo control module on the main CPU board.
930	CPU INTERRUPUT	CPU error (abnormal interrupt) The main CPU board is faulty.
935	SRAM ECC ERROR	An error occurred in RAM for part program storage. Action: Replace the master printed circuit board (SRAM module), perform all–clear operation, and set all parameter and other data again.
950	PMC SYSTEM ALARM	Fault occurred in the PMC. The PMC control module on the main CPU board or option board may be faulty.
951	PMC–RC WATCH DOG ALARM	Fault occurred in the PMC–RC (watchdog alarm).Option board may be faulty.
970	NMI OCCURRED IN PMCLSI	With the PMC–SA1, an error occurred in the PMC control LSI device on the motherboard. (I/O RAM parity) Replace the motherboard.
971	NMI OCCURRED IN SLC	With the PMC–SA1, an I/O Link disconnection was detected. Check the I/O Link.
972	NMI OCCURRED IN OTHER MODULE	NMI occurred in a board other than the main CPU board.
973	NON MASK INTERRUPT	NMI occurred for an unknown reason.
974	F–BUS ERROR	BUS error of FANUC BUS. The main CPU board or option boards may be faulty.
975	BUS ERROR (MAIN)	Main CPU board bus error. The main CPU board may be faulty.
976	L–BUS ERROR	BUS error of Local Bus. The main CPU board may be faulty.

Index

[Numbers]

7.2″/8.4″ LCD–Mounted Type CNC Control Unit, 407
9.5″/10.4″ LCD–Mounted Type CNC Control Unit, 407

[A]

Absolute and Incremental Programming (G90, G91), 91
Actual Feedrate Display, 636
Adding Workpiece Coordinate Systems (G54.1 or G54), 85
Advanced Preview Control (G08), 359
AI Advanced Preview Control, 365
Alarm and Self–Diagnosis Functions, 515
Alarm Display, 402, 516
Alarm History Display, 518
Alarm List, 765
Altering a Word, 594
Arithmetic and Logic Operation, 298
Assembling, 497
Automatic Corner Override, 65
Automatic Erase Screen Display, 695
Automatic Insertion of Sequence Numbers, 618
Automatic Operation, 393, 461
Automatic Override for Inner Corners (G62), 65
Automatic Tool Length Measurement (G37), 194
Auxiliary Function, 113
Auxiliary Function (M Function), 114
Axis Control Functions, 381
Axis Name, 29

[B]

Back Boring Cycle (G87), 159
Background Editing, 613
Battery for Built–In Absolute Pulse Coders (DC6V), 733
Battery for Separate Absolute Pulse Coders (6 VDC), 732
Battery in the PANEL *i* (3 VDC), 730
Boring Cycle (G85), 155
Boring Cycle (G86), 157
Boring Cycle (G88), 161
Boring Cycle (G89), 163
Branch and Repetition, 304

[C]

Canned Cycle, 133
Canned Cycle Cancel (G80), 165, 177
Caution for using system variables, 324
Cautions on Reading this Manual, 8
Cautions on Various Kinds of Data, 8
Changing Workpiece Coordinate System, 80
Character–to–Codes Correspondence Table, 764
Characters and Codes to be Used for the Pattern Data Input Function, 352
Check by Running the Machine, 395
Checking by Self–Diagnostic Screen, 519
Circular Interpolation (G02, G03), 43
Clearing the Screen, 694
Command for Machine Operations–Miscellaneous Function, 22
Compensation Function, 185
Conditional Branch (IF Statement), 305
Connecting PCMCIA Card Attachment, 497
Constant Surface Speed Control (G96, G97), 99
Controlled Axes, 28, 29
Coordinate System, 76
Coordinate System on Part Drawing and Coordinate System Specified by CNC – Coordinate System, 16
Coordinate System Rotation (G68, G69), 271
Coordinate Value and Dimension, 90
Copying an Entire Program, 604
Copying Part of a Program, 605
Corner Circular Interpolation (G39), 262
Creating Programs, 616
Creating Programs in Teach in Mode (Playback), 620
Creating Programs Using the MDI Panel, 617
Current Block Display Screen, 643
Current Position Display, 402
Custom Macro, 284
Cutting Feed, 60
Cutting Feedrate Control, 63
Cutting Speed–Spindle Speed Function, 20
Cylindrical Interpolation (G07.1), 48

[D]

Data Input/Output, 404, 522

Data Input/Output On the All IO Screen, 550
Data Input/Output Using a Memory Card, 576
Decimal Point Programming, 96
Deleting a Block, 596
Deleting a Word, 595
Deleting All Programs, 601
Deleting Blocks, 596
Deleting Files, 547
Deleting More Than One Program by Specifying a Range, 602
Deleting Multiple Blocks, 597
Deleting One Program, 601
Deleting Programs, 601
Details of Cutter Compensation C, 209
Details of Functions, 335
Details of NC statements and macro statements execution, 322
Direct Input of Measured Workpiece Origin Offsets, 668
Display, 401
Display of Run Time and Parts Count, 638
Displaying a Program List for a Specified Group, 652
Displaying and Entering Setting Data, 661
Displaying and Setting Custom Macro Common Variables, 670
Displaying and Setting Data, 398
Displaying and Setting Extended Tool Life Management, 678
Displaying and Setting Parameters, 684
Displaying and Setting Pitch Error Compensation Data, 686
Displaying and Setting Run Time, Parts Count, and Time, 665
Displaying and Setting the Software Operator’s Panel, 673
Displaying and Setting the Workpiece Origin Offset Value, 667
Displaying and Setting Tool Life Management Data, 675
Displaying Directory of Floppy Cassette, 541
Displaying Memory Used and a List of Programs, 648
Displaying Pattern Data and Pattern Menu, 671
Displaying the Directory, 542
Displaying the Pattern Menu, 344
Displaying the Program Number and Sequence Number, 689
Displaying the Program Number, Sequence Number, and Status, and Warning Messages for Data Setting or Input/Output Operation, 689
Displaying the Status and Warning for Data Setting or Input/Output Operation, 690
DNC Operation, 469
DNC operation, 494
DNC Operation with Memory Card, 493
Drilling Cycle Counter Boring Cycle (G82), 145
Drilling Cycle, Spot Drilling (G81), 143
Dry Run, 505
Dwell (G04), 69
Dynamic Graphic Display, 703

[E]

Editing a Part Program, 397
Editing of Custom Macros, 612
Editing Programs, 588
Emergency Stop, 509
Erase Screen Display, 694
Exact Stop (G09, G61) Cutting Mode (G64) Tapping Mode (G63), 64
Explanation of the Keyboard, 411
Extended Part Program Editing Function, 603
External I/O Devices, 434
External Motion Function (G81), 181
External Operator Message History Display, 692
External Output Commands, 329

[F]

FANUC FA Card, 437
FANUC Floppy Cassette, 436
FANUC Handy File, 436
FANUC PPR, 437
Feed Functions, 56
Feed–Feed Function, 14
Feedrate Clamping by Arc Radius, 358
Feedrate Override, 503
File Deletion, 527
File Search, 525
Files, 523
Fine Boring Cycle (G76), 141
Function Keys, 414
Function Keys and Soft Keys, 413

Functions to Simplify Programming, 132

[G]

G53, G28, G30, and G30.1 Commands in Tool Length Offset Mode, 191
G53,G28,G30,G30.1 and G29 Commands in Cutter Compensation C Mode, 243
General Flow of Operation of CNC Machine Tool, 6
General Screen Operations, 413
Graphic Display, 403
Graphics Display, 697
Graphics Function, 696

[H]

Heading a Program, 592
Helical Interpolation (G02, G03), 47
Help Function, 712
High Speed Cutting Functions, 357
High Speed Skip Signal (G31), 55
High–speed Peck Drilling Cycle (G73) , 137
High–Speed Remote Buffer, 361
High–speed remote buffer A (G05), 361
High–speed remote buffer B (G05), 364
How to Indicate Command Dimensions for Moving the Tool – Absolute, Incremental Commands, 19
How to use nomograph, 755
How to View the Position Display Change without Running the Machine, 396

[I]

Inch/Metric Conversion (G20,G21), 95
Incorrect Threaded Length, 754
Increment System, 30
Incremental Feed, 447
Index Table Indexing Function, 182
Input Command from MDI, 242
Inputting a Program, 528
Inputting and Outputting Floppy Files, 562
Inputting and Outputting Offset Data, 559
Inputting and Outputting Parameters, 557
Inputting and Outputting Parameters and Pitch Error Compensation Data, 535
Inputting and Outputting Programs, 552
Inputting Custom Macro Common Variables, 539
Inputting Offset Data, 533
Inputting Parameters, 535
Inputting Pitch Error Compensation Data, 537
Inputting/Outputting Custom Macro Common Variables, 539
Inserting a Word, 593
Inserting, Altering and Deleting a Word, 589
Interference Check, 234
Internal Circular Cutting Feedrate Change, 68
Interpolation Functions, 36
Interruption Type Custom Macro, 333

[J]

Jog Feed, 445

[K]

Key Input and Input Buffer, 431

[L]

Left–handed Rigid Tapping Cycle (G74), 172
Left–handed Tapping Cycle (G74), 139
LIMITATION and NOTES, 496
Limitations, 328
Linear Interpolation (G01), 41
List of Function and Tape Format, 744
Local Coordinate System, 87

[M]

Machine Coordinate System, 77
Machine Lock and Auxiliary Function Lock, 501
Macro Call, 309
Macro Call Using an M Code, 317
Macro Call Using G Code, 316
Macro Statements and NC Statements, 303
Manual Absolute On and Off, 451
Manual Handle Feed, 448
Manual Handle Interruption, 486
Manual Intervention and Return, 491
Manual Linear/Circular Interpolation, 456

Manual Operation, 390, 442
Manual Reference Position Return, 443
Maximum Stroke, 30
MDI Operation, 465
Memory Card Input/Output, 567
Memory Operation, 462
Memory Operation Using FS10/11 Tape Format, 356
Merging a Program, 607
Method of Replacing Battery, 723
Mirror Image, 489
Modal Call (G66), 314
Moving Part of a Program, 606
Multiple M Commands in a Single Block, 115

[N]

Next Block Display Screen, 644
Nomographs, 753
Normal Direction Control (G40.1, G41.1, G42.1 or G150, G151, G152), 277

[O]

Offset Data Input and Output, 533
Operating Monitor Display, 639
Operational Devices, 405
Operations, 494
Optional Angle Chamfering and Corner Rounding, 178
Outputting a Program, 531
Outputting a Program List for a Specified Group, 549
Outputting Custom Macro Common Variable, 540
Outputting Custom Macro Common Variables, 561
Outputting Offset Data, 534
Outputting Parameters, 536
Outputting Pitch Error Compensation Data, 538
Outputting Programs, 546
Overall Position Display, 634
Overcutting by Cutter Compensation, 239
Overtravel, 510
Overview of Cutter Compensation C (G40 – G42), 203

[P]

PARAMETER, 496
Part Drawing and Tool Movement, 15
Parts Count Display, Run Time Display, 403
Password Function, 614
Path Drawing, 703
Pattern Data Display, 348
Pattern Data Input Function, 343
Peck Drilling Cycle (G83), 147
Peck Rigid Tapping Cycle (G84 or G74), 175
Plane Selection, 89
Polar Coordinate Command (G15, G16), 92
Portable Tape Reader, 438
Position Display in the Relative Coordinate System, 632
Position Display in the Work Coordinate System, 631
Positioning (G00), 37
Power Disconnection, 441
Power On/Off, 439
Preparatory Function (G Function), 31
Presetting the Workpiece Coordinate System, 635
Processing Macro Statements, 322
Program Check Screen, 645
Program Components other than Program Sections, 119
Program Configuration, 23, 117
Program Contents Display, 642
Program Display, 401
Program Input/Output, 528
Program Number Search, 598
Program Restart, 472
Program Screen for MDI Operation, 647
Program Section Configuration, 122
Programmable Mirror Image (G50.1, G51.1), 282
Programmable Parameter Entry (G10), 354

[R]

Radius Direction Error at Circle Cutting, 761
Range of Command Value, 750
Rapid Traverse, 59
Rapid Traverse Override, 504
Reading Files, 545
Recommended Memory Card, 499
Reference Position, 70

Reference Position (Machine–Specific Position), 15
Reference Position Return, 71
Register, Change and Delete of Tool Life Management Data, 106
Registering Custom Macro Programs, 327
Repetition (While Statement), 306
Replacement of Words and Addresses, 610
Replacing Battery for LCD–Mounted Type *i* Series, 724
Replacing the Battery for Stand–Alone Type *i* Series, 727
Rigid Tapping, 168
Rigid Tapping (G84), 169
Rotary axis roll–over, 385

[S]

Safety Functions, 508
Sample Program, 320
Scaling (G50, G51), 266
Scheduling Function, 479
Screen Displayed at Power–on, 440
Screen Hardcopy, 717
Screens Displayed by Function Key [MESSAGE], 692
Screens Displayed by Function Key [OFFSET SETTING], 655
Screens Displayed by Function Key [POS], 630
Screens Displayed by Function Key [PROG]
(In Memory Mode or MDI Mode), 641
Screens Displayed by Function Key [PROG]
(In the Edit Mode), 648
Screens Displayed by Function Key [SYSTEM], 683
Selecting a Workpiece Coordinate System, 79
Selection of Tool Used for Various Machining–Tool Function, 21
Sequence Number Comparison and Stop, 663
Sequence Number Search, 599
Setting a Workpiece Coordinate System, 78
Setting and Display Units, 406
Setting and Displaying Data, 623
Setting and Displaying the Tool Offset Value, 656
Setting Input/Output–Related Parameters, 551
Setting of the reference position return feedrate, 73
Simple Calculation of Incorrect Thread Length, 756
Simple Call (G65), 310
Simple synchronous control, 382
Single Block, 506
Single Direction Positioning (G60), 39
Skip Function (G31), 53
Small–hole peck drilling cycle (G83), 149
Soft Key Configuration, 433
Soft Keys, 415
Specification, 493
Specification Method, 334
Specification number, 497
Specifying the Spindle Speed Value Directly (S5–Digit Command), 98
Specifying the Spindle Speed with a Code, 98
Spindle Speed Function (S Function), 97
Stand–Alone Type 61 Full–Key MDI Unit, 410
Stand–Alone Type Small MDI Unit, 408
Stand–Alone Type Standard MDI Unit, 409
Status when Turning Power On, when Clear and when Reset, 762
Stored Stroke Check, 511
SUBPROGRAM (M98, M99), 128
Subprogram call (M198), 495
Subprogram Call Function (M198), 484
Subprogram Call Using an M Code, 318
Subprogram Calls Using a T Code, 319
Supplementary Explanation for Copying, Moving and Merging, 608
System Variables, 289

[T]

Tape Code List, 741
Tapping Cycle (G84), 153
Test Operation, 500
Testing a Program, 395
The Second Auxiliary Functions (B Codes), 116
Thread Cutting (G33), 51
Tool Compensation Values, Number of Compensation Values, and Entering Values From the Program (G10), 264
Tool Figure and Tool Motion by Program, 26
Tool Function (T Function), 102

Tool Length Measurement, 659
Tool Length Offset (G43,G44,G49), 186
Tool Life, 112
Tool Life Management Command in a Machining Program, 109
Tool Life Management Data, 105
Tool Life Management Function, 104
Tool Movement Along Workpiece Parts Figure– Interpolation, 12
Tool Movement by Programming – Automatic Operation, 392
Tool Movement in Offset Mode, 214
Tool Movement in Offset Mode Cancel, 228
Tool Movement in Start–up, 210
Tool Movement Range–Stroke, 27
Tool Offset (G45–G48), 198
Tool Path at Corner, 758
Tool Selection Function, 103
Turning on the Power, 439

[U]

Unconditional Branch (GOTO Statement), 304

[V]

Variables, 285

[W]

Warning Messages, 432
Word Search, 590
Workpiece Coordinate System, 78
Workpiece coordinate system preset (G92.1), 83

Revision Record

FANUC Series 21*i*/210*i*–MB OPERATOR'S MANUAL (B–63614EN)

Edition	Date	Contents	Edition	Date	Contents
01	Jul., 2001				

- *No part of this manual may be reproduced in any form.*
- *All specifications and designs are subject to change without notice.*